

INSTALLATION

1. INSTALL CURTAIN SHIELD AIRBAG ASSEMBLY

- Check that the power switch is turned off.
- Check that the battery negative (-) cable is disconnected.

CAUTION:



Wait for 90 seconds after disconnecting the cable to prevent airbag deployment.

- Install 4 new clips and 4 new spacers to the curtain shield airbag assembly as shown in the illustration.

NOTICE:

- Do not push the pin into the clip.
- Make sure that the clips are installed in the correct direction.
- Make sure that the spacers are not damaged, engaged securely, and installed in the correct direction.

- Install the curtain shield airbag assembly with the 5 new bolts.

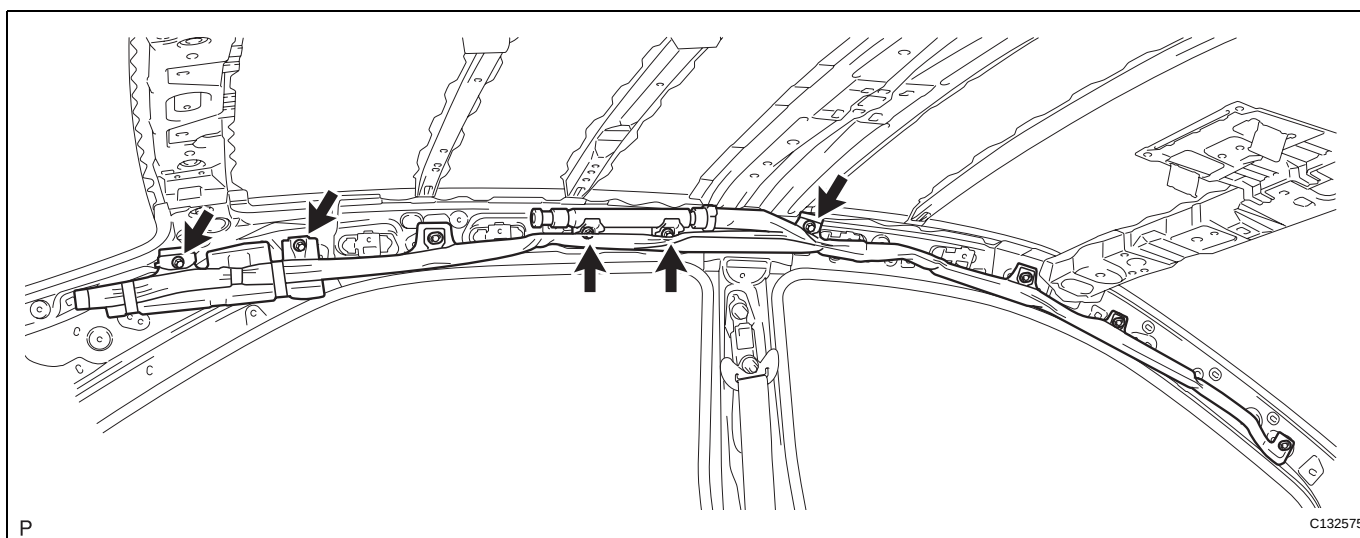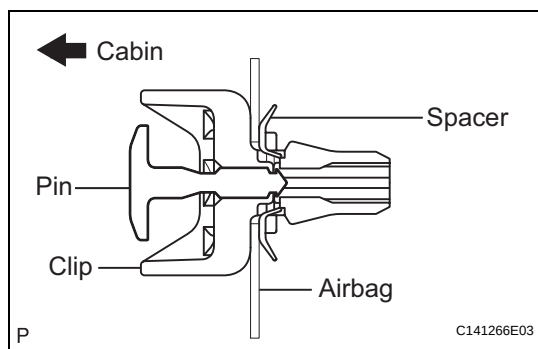

Torque: 11 N*m (112 kgf*cm, 8 ft.*lbf)

NOTICE:

Do not twist the curtain shield airbag assembly when installing it.

- Install the curtain shield airbag assembly to the body with the 4 clips as shown in the illustration.

NOTICE:

Securely push the pin in the clip.

- Mark the clips.


HINT:

Be sure to mark the clips to leave a record of replacement.

- Connect the connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

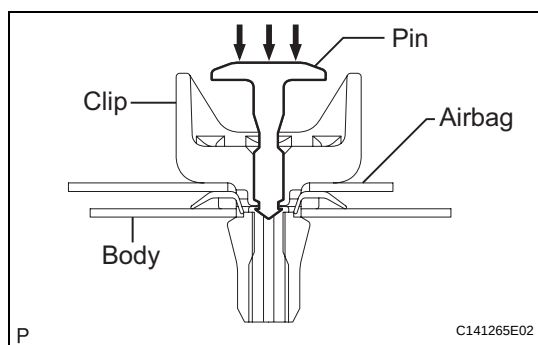

2. INSTALL ROOF HEADLINING ASSEMBLY (w/o Sliding Roof) (See page [IR-33](#))
3. INSTALL ROOF HEADLINING ASSEMBLY (w/ Sliding Roof) (See page [IR-34](#))
4. INSTALL SUN ROOF OPENING TRIM MOULDING (w/ Sliding Roof) (See page [IR-35](#))
5. INSTALL SPOT LIGHT ASSEMBLY (w/ Sliding Roof) (See page [IR-35](#))
6. INSTALL NO. 1 ROOM LIGHT ASSEMBLY (w/o Sliding Roof) (See page [IR-36](#))
7. INSTALL FRONT ASSIST GRIP SUB-ASSEMBLY (See page [IR-36](#))
8. INSTALL REAR ASSIST GRIP SUB-ASSEMBLY (See page [IR-37](#))
9. INSTALL VISOR HOLDER (See page [IR-37](#))
10. INSTALL VISOR ASSEMBLY LH (See page [IR-37](#))
11. INSTALL VISOR ASSEMBLY RH (See page [IR-37](#))
12. INSTALL ROOF CONSOLE BOX ASSEMBLY (See page [IR-38](#))
13. INSTALL FRONT PILLAR GARNISH LH (See page [IR-38](#))
14. INSTALL FRONT PILLAR GARNISH RH (See page [IR-39](#))
15. INSTALL ROOF SIDE INNER GARNISH LH (See page [IR-39](#))
16. INSTALL ROOF SIDE INNER GARNISH RH (See page [IR-39](#))
17. INSTALL UPPER CENTER PILLAR GARNISH LH (See page [IR-40](#))
18. INSTALL LOWER CENTER PILLAR GARNISH LH (See page [IR-40](#))
19. CONNECT FRONT SEAT OUTER BELT ASSEMBLY LH (See page [IR-40](#))
20. INSTALL LAP BELT OUTER ANCHOR COVER (for LH Side) (See page [IR-40](#))
21. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH (See page [IR-41](#))
22. INSTALL COWL SIDE TRIM SUB-ASSEMBLY LH (See page [IR-41](#))
23. INSTALL FRONT DOOR SCUFF PLATE LH (See page [IR-41](#))
24. INSTALL UPPER CENTER PILLAR GARNISH RH (See page [IR-41](#))

25. INSTALL LOWER CENTER PILLAR GARNISH RH
(See page [IR-41](#))
26. CONNECT FRONT SEAT OUTER BELT ASSEMBLY
RH (See page [IR-41](#))
27. INSTALL LAP BELT OUTER ANCHOR COVER (for RH
Side) (See page [IR-41](#))
28. INSTALL FRONT DOOR OPENING TRIM
WEATHERSTRIP RH (See page [IR-42](#))
29. INSTALL COWL SIDE TRIM SUB-ASSEMBLY RH (See
page [IR-42](#))
30. INSTALL FRONT DOOR SCUFF PLATE RH (See page
[IR-42](#))
31. INSTALL REAR DOOR INNER GLASS
WEATHERSTRIP LH (See page [ED-80](#))
32. INSTALL REAR DOOR TRIM BOARD SUB-
ASSEMBLY LH (See page [ED-81](#))
33. INSTALL DOOR ASSIST GRIP COVER LH (See page
[ED-82](#))
34. INSTALL REAR DOOR INSIDE HANDLE BEZEL
PLUG LH (See page [ED-82](#))
35. INSTALL REAR SIDE SEATBACK ASSEMBLY LH
(See page [SE-54](#))
36. INSTALL REAR SIDE SEATBACK ASSEMBLY RH
37. INSTALL SEPARATE TYPE REAR SEATBACK
ASSEMBLY LH (See page [SE-54](#))
38. INSTALL SEPARATE TYPE REAR SEATBACK
ASSEMBLY RH (See page [SE-54](#))
39. INSTALL REAR SEAT CUSHION ASSEMBLY (See
page [SE-55](#))
40. INSTALL REAR CENTER SEAT HEADREST
ASSEMBLY
41. INSTALL REAR SEAT HEADREST ASSEMBLY
42. INSTALL REAR DOOR OPENING TRIM
WEATHERSTRIP LH (See page [IR-43](#))
43. INSTALL REAR DOOR SCUFF PLATE LH (See page
[IR-43](#))
44. INSTALL REAR DOOR OPENING TRIM
WEATHERSTRIP RH (See page [IR-43](#))
45. INSTALL REAR DOOR SCUFF PLATE RH (See page
[IR-43](#))
46. INSTALL FRONT SEAT ASSEMBLY LH (for Power
Seat) (See page [SE-38](#))
47. INSTALL INNER SEAT TRACK BRACKET COVER LH
(for Power Seat) (See page [SE-39](#))

48. INSTALL SEAT TRACK COVER LH (for Power Seat)
(See page [SE-39](#))
49. INSTALL FRONT SEAT HEADREST ASSEMBLY (for Power Seat)
50. INSTALL FRONT SEAT ASSEMBLY RH (for Power Seat) (See page [IR-44](#))
51. INSTALL INNER SEAT TRACK BRACKET COVER RH (for Power Seat) (See page [IR-44](#))
52. INSTALL SEAT TRACK COVER RH (for Power Seat) (See page [IR-44](#))
53. INSTALL FRONT SEAT HEADREST ASSEMBLY (for Power Seat)
54. INSTALL FRONT SEAT ASSEMBLY RH (for Manual Seat) (See page [SE-23](#))
55. INSTALL INNER SEAT TRACK BRACKET COVER RH (for Manual Seat) (See page [SE-24](#))
56. INSTALL SEAT TRACK COVER RH (for Manual Seat) (See page [SE-24](#))
57. INSTALL FRONT SEAT HEADREST ASSEMBLY (for Manual Seat)
58. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL (for Manual Seat)
59. PERFORM INITIALIZATION
 - (a) Perform initialization (See page [IN-43](#)).
NOTICE:
Some systems need initialization after reconnecting the cable to the negative battery terminal.
60. INSPECT SRS WARNING LIGHT
 - (a) Inspect the SRS warning light (See page [RS-33](#)).
61. INSPECT SLIDE ADJUSTER LOCK (for Manual Seat)
62. INSPECT FRONT SEAT ASSEMBLY (for Power Seat) (See page [SE-39](#))