

INSTALLATION

1. INSTALL CENTER AIRBAG SENSOR ASSEMBLY

- (a) Check that the power switch is turned off.
- (b) Check that the battery negative (-) cable is disconnected.

CAUTION:

Wait for 90 seconds after disconnecting the cable to prevent airbag deployment.

- (c) Install the center airbag sensor assembly with the 3 bolts.

Torque: 17.5 N*m (179 kgf*cm, 13 ft.*lbf)

NOTICE:

- If the center airbag sensor assembly has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
- When installing the center airbag sensor assembly, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.

- (d) Check that there is no looseness in the installation parts of the center airbag sensor assembly.
- (e) Connect the holder (with connectors).

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- (f) Check that the water-proof sheet is properly set.

2. INSTALL NO. 1 CONSOLE BOX DUCT (See page [AC-204](#))

3. INSTALL NO. 2 CONSOLE BOX INSERT FRONT (See page [IP-30](#))

4. INSTALL NO. 1 CONSOLE BOX INSERT FRONT (See page [IP-29](#))

5. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY (See page [IP-31](#))

6. INSTALL CONSOLE BOX ASSEMBLY (See page [IP-30](#))

7. INSTALL CONSOLE BOX CARPET (See page [IP-30](#))


8. INSTALL CONSOLE BOX POCKET (See page [IP-30](#))

9. INSTALL LOWER INSTRUMENT PANEL SUB-ASSEMBLY (See page [IP-33](#))

10. INSTALL INSTRUMENT PANEL NO. 2 UNDER COVER SUB-ASSEMBLY (See page [IP-33](#))

11. INSTALL COWL SIDE TRIM SUB-ASSEMBLY RH (See page [IR-42](#))

12. INSTALL FRONT DOOR SCUFF PLATE RH (See page [IR-42](#))

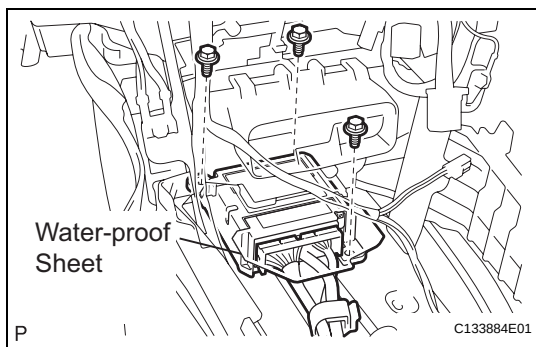

13. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL LH (See page [IP-35](#))
14. INSTALL COWL SIDE TRIM SUB-ASSEMBLY LH (See page [IR-41](#))
15. INSTALL FRONT DOOR SCUFF PLATE LH (See page [IR-41](#))
16. INSTALL UPPER CONSOLE REAR PANEL SUB-ASSEMBLY (See page [IP-31](#))
17. INSTALL FLOOR SHIFT POSITION INDICATOR HOUSING SUB-ASSEMBLY (See page [IP-31](#))
18. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (See page [IP-32](#))
19. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH (See page [IP-32](#))
20. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH (See page [IP-32](#))
21. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL
22. PERFORM INITIALIZATION
 - (a) Perform initialization (See page [IN-43](#)).
NOTICE:
Some systems need initialization after reconnecting the cable to the negative battery terminal.
23. INSPECT SRS WARNING LIGHT
 - (a) Inspect the SRS warning light (See page [RS-33](#)).