

	C-1
SST AND SSM	
	Page
SST (SPECIAL SERVICE TOOLS)	C-2
SSM (SPECIAL SERVICE MATERIALS)	C-9

C

C-2

SST AND SSM — SST (Special Service Tools)

SST (SPECIAL SERVICE TOOLS)

NOTE: Classification

A = SST required for vehicle inspections and minor repairs and multipurpose SST.

B = SST required for major repairs involving disassembly of components.

C = SST required for rather special, less frequent work not classifiable as either A or B.

Section	Classification	Part Name	Part No.	Illustration	EM	FU	CO	LU	ST	CH	Note
			09032-00100	(Oil Pan Seal Cutter)	A	●		●			
			09043-38100	(Hexagon 10 mm Wrench)	A		●				13B-T only
			09201-58010	(Valve Stem Oil Seal Replacer)	B	●					B, 3B only
			09201-58010	(Valve Stem Oil Seal Replacer)	B	●					11B, 13B, 13B-T only
			09201-60011	(Valve Guide Bushing Remover & Replacer)	A	●					
			09202-43013	(Valve Spring Compressor)	A	●					
			09208-48010	(Combustion Chamber Remover)	B	●					B, 3B only
			09213-58011	(Crankshaft Pulley Holding Tool)	A	●					
			09213-60017	(Crankshaft Pulley & Gear Pulley Set)	A	●					
			09215-00012	(Camshaft Bearing Remover & Replacer Set)	C	●					
			09215-00020	(Gate "B")		●					

SST AND SSM — SST (Special Service Tools)

C-3

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	FU	CO	LU	ST	CH	Note
						●					
						●					
					C	●					
						●					
						●					
						●					
						●					
						●					
					A	●				●	
					A	●				●	
					B	●					3B, 13B, 13B-T only
					B	●					B, 11B only
					B				●		3B, 13B-T only
					B	●					13B-T only

C-4

SST AND SSM — SST (Special Service Tools)

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	FU	CO	LU	ST	CH	Note
											
			(09222-01020)	(Remover & Replacer)	●						
			(09222-01030)	(Guide)	●						
			(09222-01040)	(Base)	●						
			09222-66010	 (Connecting Rod Bushing Remover & Replacer)	B	●					B, 3B only
			09222-76012	 (Connecting Rod Bushing Remover & Replacer)	B	●					11B, 13B only
			09223-48011	 (Crankshaft Front Oil Seal Replacer)	B	●					
			09223-56010	 (Crankshaft Rear Oil Seal Replacer)	B	●					
			09228-34010	 (Oil Filter Wrench)	A	●					
			09228-44011	 (Oil Filter Wrench)	A			●			
			09236-00101	 (Water Pump Overhaul Tool Set)	B		●				
			09237-00010	 (Water Pump Bearing Remover & Replacer)			●				
			09237-00020	 (Bearing Stay)			●				
			09237-00030	 (Bearing Stay)			●				
			09237-00050	 (Shaft "B")			●				

SST AND SSM — SST (Special Service Tools)

C-5

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	FU	CO	LU	ST	CH	Note
								•			
								•			
					B			•			
					C	•					
					C	•					B, 38 only
							•				
							•				
							•				
							•				
							•				
							•				
							•				
							•				
					C	•					11B, 13B, 13B-T only

SST (SPECIAL SERVICE TOOLS) (Cont'd)					EM	FU	CO	LU	ST	CH	Note
Section	Classification	Part Name	Part No.	Illustration							
			(09260-78010)	Round Nut Wrench		●					
			(09260-78020)	Screw Plug Wrench		●					
			(09266-78011)	Automatic Timer Set Nut Wrench		●					
			(09267-78011)	Automatic Timer Extractor		●					
			(09267-78020)	Automatic Timer Remover		●					
			(09267-78030)	Camshaft Bushing Remover		●					
			(09270-78010)	Delivery Valve Holder Wrench		●					
			(09272-78011)	Tappet Roller Clamp		●					
			(09273-78011)	Tappet Clamp		●					
			(09274-46011)	Tappet Insert		●					
			(09275-46010)	Plunger Clamp		●					
			(09276-78010)	T Type Box 10 mm Wrench		●					
			(09278-46020)	Spline Shaft Holding Tool		●					
			(09280-46010)	Plunger Spring Holder		●					

SST AND SSM — SST (Special Service Tools)					C-7						
SST (SPECIAL SERVICE TOOLS) (Cont'd)											
Section	Classification	Part Name	Part No.	Illustration	EM	FU	CO	LU	ST	CH	Note
						•					
						•					
						•					
						•					
						•					
						•					
					C	•					B, 3B only
						•					
						•					
						•					
						•					
						•					
						•					
						•					

C-8

SST AND SSM — SST (Special Service Tools)

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	FU	CO	LU	ST	CH	Note
							●				
			09276-76010	(T Type Box 10 mm Wrench)			●				
							●				
			09282-76010	(Idle Adjusting Wrench)			●				
					A	●			●		
			09278-54012	(Drive Shaft Holding Tool)	A	●			●		
					C	●			●		* B, 3B only
			09285-76010	(Injection Pump Camshaft Bearing Cone Replacer)	C	●			●		
					C	●			●		
			09286-46011	(Injection Pump Spline Shaft Puller)	C	●			●		
					C	●					B, 3B only
			09286-76011	(Injection Pump Camshaft Bearing Cup Puller)	C	●					
					C	●					
			09288-46011	(Tapet Adjusting Gauge)	C	●					
					A	●					
			09308-10010	(Oil Seal Puller)	A	●					
					A				●		
			09313-30021	(Detent Ball Plug Socket)	A				●		
					A	●					
			09330-00021	(Companion Flange Holding Tool)	A	●					
					B			●			
			09506-35010	(Differential Drive Pinion Rear Bearing Replacer)	B			●			
					B	●	●				
			09608-12010	(Front Hub & Drive Pinion Bearing Replacer Set)	B	●	●				
						●					
			09608-00020	(Remover & Replacer Handle)		●					
							●				
			09608-00040	(Front Hub Outer Bearing Cup Replacer)			●				

SST AND SSM — SST (Special Service Tools), SSM (Special Service Materials)

C-9

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section	Classification	Part Name	Part No.	Illustration	EM	FU	CO	LU	ST	CH	Note
			09608-35014	Axle Hub & Drive Pinion Bearing Tool Set	B	●		●			
			09608-06040	Front Hub Inner Bearing Cone Replacer		●		●			
			09620-30010	Steering Gear Box Replacer Set	B		●				
			09623-30010	Steering Worm Bearing & Oil Seal Replacer			●				B, 3B only
			09950-20017	(Universal Puller)	A	●	●		●		* B, 3B only
			09992-00023	(Cylinder Compression) Check Gauge Set	A	●					
			09992-00241	(Turbocharger) for Pressure Gauge/2 kg/cm ²	C	●					13B-T only

SSM (SPECIAL SERVICE MATERIALS)

Part Name	Part No.	Sec.	Use etc.
Seal packing or equivalent	08926-00080	EM LU	Push rod cover Oil pan