

Toyota Tercel (L50; 1994-1999) fuses

*In this article, we consider the fifth-generation Toyota Tercel (L50), produced from 1994 to 1999. Here you will find fuse box diagrams of **Toyota Tercel 1994, 1995, 1996, 1997, 1998 and 1999**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).*

Fuse Layout Toyota Tercel 1994-1999





Cigar lighter (power outlet) fuse in the Toyota Tercel is the fuse #21 “CIG&RADIO” in the Instrument panel fuse box.



Passenger Compartment Fuse Box

Fuse Box Location

It is located behind the cover to the left and below the steering wheel. There is also one fuse in the right side mount, and the panel under the steering wheel must be removed to access it.

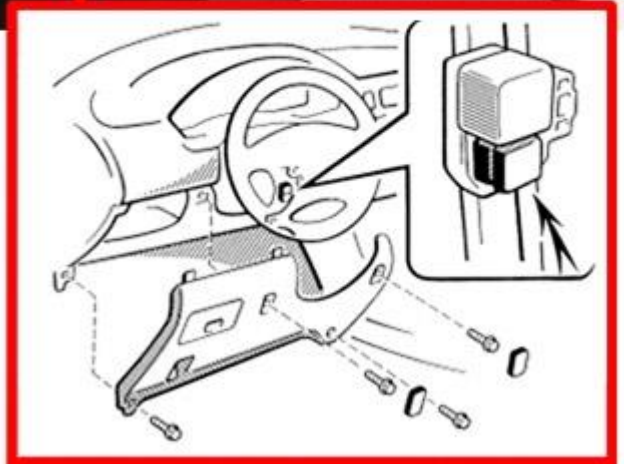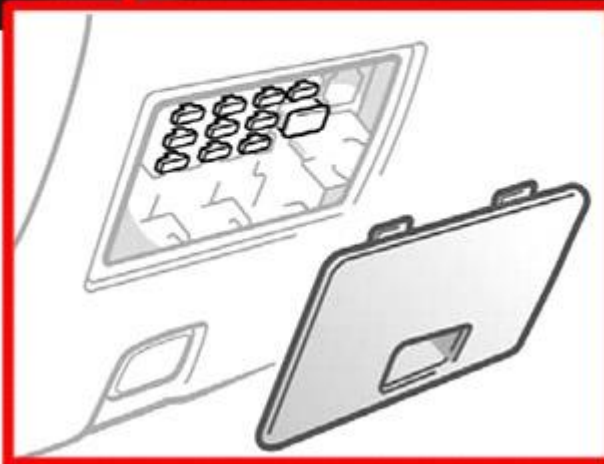

Fuse Box Diagram

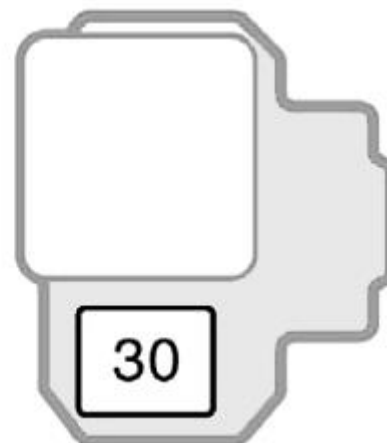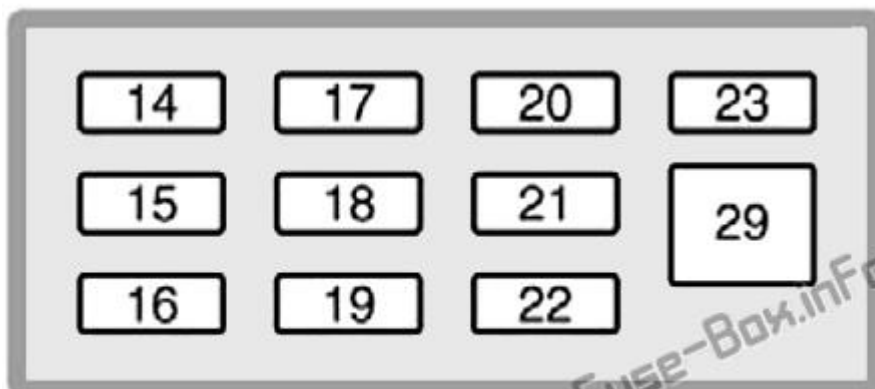



Assignment of the fuses in the instrument panel

№	Name	Amp	Description
14	STOP	10A	Stop lights, high mounted stoplight, anti-lock brake system, shift lock control system
15	A/C	10A	Air conditioning system
16	TAIL	15A	Tail lights, parking lights, license plate lights, instrument panel lights, air conditioning system, emergency flashers, air conditioning system, rear window defogger, car audio system, cigarette lighter, clock
17	GAUGE	10A	Gauge and meters, service reminder indicator (except headlight high beam indicator) and warning buzzers (except discharge, open door and SRS warning lights), back-up lights, rear window defogger, power windows
18	TURN	7.5A	1995-1997: Turn signal lights, emergency flashers; 1998-1999: Turn signal lights
19	WIPER	20A	Windshield wipers and washer
20	ECU-IG	5A	1995-1997: Anti-lock brake system, air conditioning system; 1998-1999: Anti-lock brake system, air conditioning system, shift lock control system, daytime running light system
21	CIG&RADIO	15A	Cigarette lighter, car audio system, clock, theft deterrent system, shift lock control system, SRS airbag system, seat belt pretensioners
22	IGN	5A	Charging system, discharge warning light, multiport fuel injection system/sequential multiport fuel injection system, SRS airbag system, seat belt pretensioners
23	SRS or ECU-B	5A	SRS airbag warning light
29	DEF	30A	Rear window defogger
30	PWR	30A	Power windows, power door lock system


Engine Compartment Fuse Boxes

Fuse Box Location

There are two or three fuse boxes near the battery.

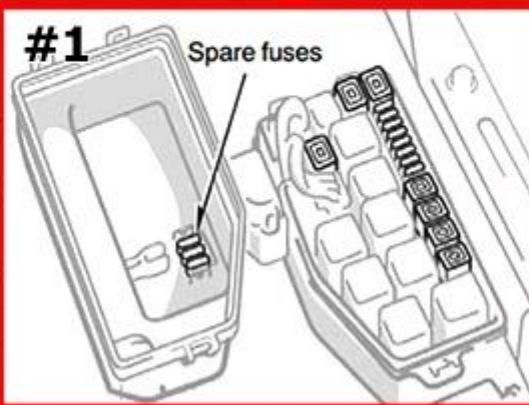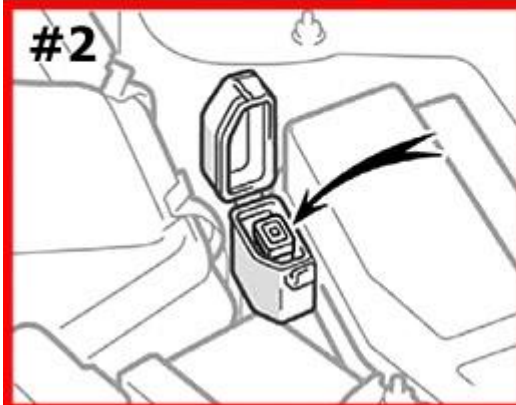

Fuse Box Diagram

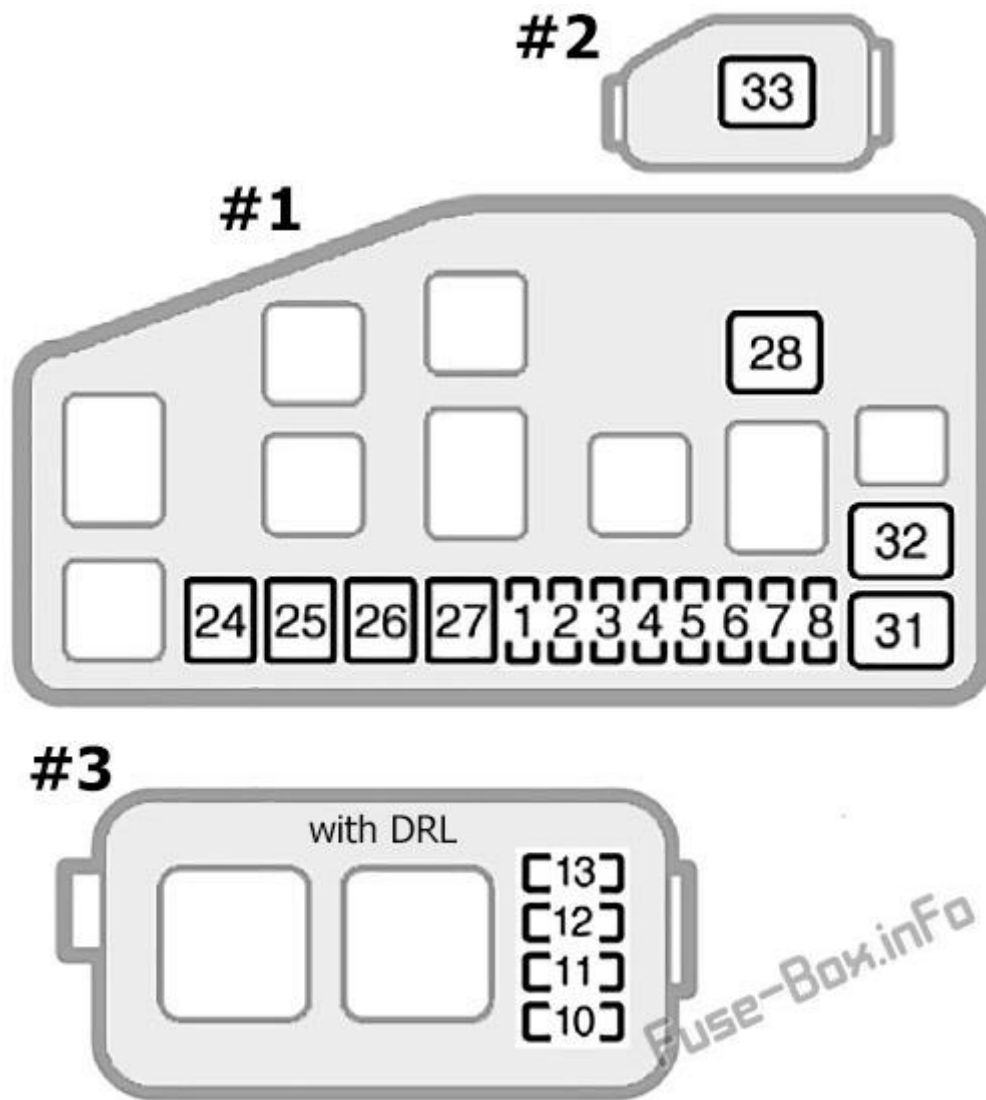

Assignment of the fuses in the engine compartment

№	Name	Amp	Description
1	HEAD (LH)	10A	Without DRL: Left-hand headlight
1	DRL	5A	With DRL: Daytime running light system
2	HEAD (RH)	10A	With DRL: Not Used; Without DRL: Right-hand headlight
3	AM2	15A	Ignition system, charging system, multiport fuel injection system/sequential multiport fuel injection system, SRS airbag system, seat belt pretensioners, starter system

No	Name	Amp	Description
4	HAZ-HORN	15A	1995-1997: Horns, turn signal lights, emergency flashers, theft deterrent system; 1998-1999: Horns, emergency flashers, theft deterrent system
5	EFI	15A	1995-1997: Multiport fuel injection system/sequential multiport fuel injection system, air conditioning system; 1998-1999: Multiport fuel injection system/sequential multiport fuel injection system
6	DOME	10A	Interior lights, open door warning light, clock, car audio system, theft deterrent system, daytime running light system
7	OBD-II	7.5A	On-board diagnosis system
8	ALT-S	5A	Charging system
10	HEAD_(RH-LWR)	10A	With DRL: Right-hand headlight (low beam)
11	HEAD_(LH-LWR)	10A	With DRL: Left-hand headlight (low beam)
12	HEAD_(RH-UPR)	10A	With DRL: Right-hand headlight (high beam)
13	HEAD_(LH-UPR)	10A	With DRL: Left-hand headlight (high beam)
24	CDS FAN	30A	Electric cooling fans
25	RAD FAN	30A	Electric cooling fans
26	HEATER	40A	Air conditioning system, "A/C" fuses
27	DIMMER	30A	With DRL: "HEAD (RH-LWR)", "HEAD (LH-LWR)", "HEAD (RH-UPR)" and "HEAD (LH-UPR)" fuses
28	MAIN	30A	Starter system

No	Name	Amp	Description
31	ABS	60A	Anti-lock brake system
32	AM1	50A	"DEF", "WIPER", "GAUGE", "ECU-IG", "TURN", "IGN", "PWR" and "CIG&RADIO" fuses
33	ALT	100A	"ABS", "STOP", "TAIL", "ECU-B" or "SRS", "DEF", "AM1", "WIPER", "GAUGE", "ECU-IG", "TURN", "PWR" and "CIG&RADIO" fuses