


Dodge Stratus 1995 – 2000 fuse box diagram

Passenger Compartment Fuse Box

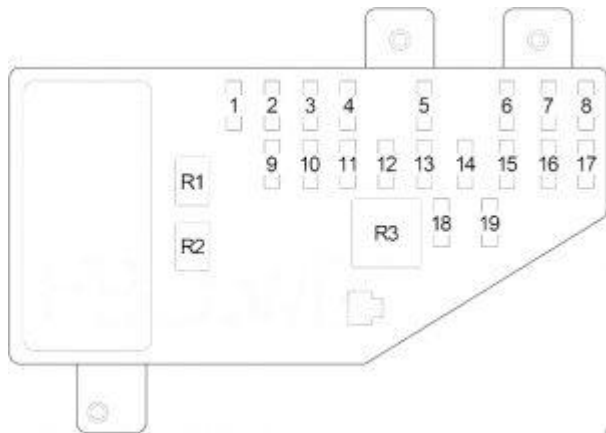

Dodge Stratus – fuse box diagram –


passenger compartment

No.	A	Protected Component
1	30	Blower Motor
2	20	Convertible: Right Headlamp (High Beam), Daytime Running Lamp Module
	10	Right Headlamp (High Beam), Daytime Running Lamp Module
3	20	Convertible: Left Headlamp (High Beam)
	10	Left Headlamp (High Beam)
4	15	Back-Up Lamp (Back-Up Lamp Switch (M/T), Transmission Range Sensor (A/T)), Power Top Relay (Convertible), Daytime Running Lamp Module, Power Door Lock Switch, Power Mirror Switch, Automatic Day/Night Mirror, Steering Proportional Steering Module

5	10	Dome Lamp, Data Link Connector, Power Antenna, Overhead Map Lamp, Trunk Lamp, Traveler, Body Control Module, Radio, Glove Box Lamp, Visor/Vanity Lamp, Universal Garage Door Opener, Automatic Day/Night Mirror, Illuminated Entry Relay, Courtesy Lamp, Power Door Lock Switch, Door Arm/Disarm Switch, Key-In Halo Lamp, Sunroof Control Module
6	10	Heated Mirror, A/C Heater Control
7	20	'98-'00: Instrument Cluster, Headlamp Switch
	15	'95-'97: Headlamp Switch
8	20	Cigar Lighter/Power Outlet, Horn Relay
9	15	Body Control Module
10	20	Rear Fog Lamp Switch, Daytime Running Lamp Module
11	10	Body Control Module, Instrument Cluster, Autostick Switch, Transmission Control Module
12	10	Left Headlamp (Low Beam), Daytime Running Lamp Module
13	20	Right Headlamp (Low Beam), Front Fog Lamp Switch
14	10	Radio
15	10	Combination Flasher, Seat Belt Control Module (Convertible), Intermittent Wiper Relay, Wiper (High/Low) Relay, Rear Window Defogger Relay
16	10	Airbag Control Module

17	10	Airbag Control Module
Circuit Breaker		
18	20	Power Seat Switch, Decklid Release Relay
19	20	Power Window, Master Power Window Switch, Window Timer Module, Sunroof Control module
Relay		
R1	Headlamp Delay	
R2	Horn	
R3	Rear Window Defogger	

Engine Compartment Fuse Box

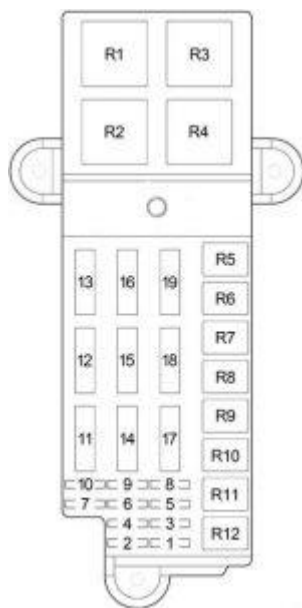

Dodge Stratus – fuse box diagram – engine compartment

No.	A	Protected Component
-----	---	---------------------

1	10	Oxygen Sensor Downstream
2	20	ABS
3	20	Transmission Control Module, Transmission Control Relay
4	20	Stop Lamp Switch, Fuse (Passenger Compartment): "5"
5	20	Automatic Shut Down Relay (Fuel Injectors, Ignition Coil Pack (2.0L and 2.4L), Noise Suppressor (2.0L and 2.4L), Generator, Oxygen Sensor Upstream, Distributor (2.5L) EGR Solenoid, Fuse: "1"), Powertrain Control Module
6	20	Combination Flasher, Sentry Key Immobilizer Module
7	10	Ignition Switch (Fuse (Passenger Compartment): "11")
8	20	Starter Relay, Fuel Pump Relay, Ignition Switch (Body Control Module, Clutch Interlock Switch (M/T), Transmission Control Module (EATX), Fuse (Passenger Compartment): "14", "15", "17", Fuse (Engine Compartment): "9", "10")
9	10	Air Conditioner Compressor Clutch Relay, Radiator Fan (High Speed) Relay, Radiator Fan (Low Speed) Relay, Fuel Pump Module, Instrument Cluster, Sentry Key Immobilizer Module, Brake Shift Interlock Solenoid
10	10	Fuel Pump Relay, Powertrain Control Module, ABS
11	20	Convertible: Seat Belt Control Module
12	40	Rear Window Defogger Relay
13	40	ABS

14	40	Fuse (Passenger Compartment): "7", "8"
15	40	Headlamp Switch, Headlamp Delay Relay (Body Control Module, Headlamp Switch, Fuse (Passenger Compartment): "12", "13"), Fuse (Passenger Compartment): "9", "10"18"
16	40	Ignition Switch (Fuse (Passenger Compartment): "1", "4", "16", "19")
17	40	Convertible: Power Top Up/Down Relays
18	40	Intermittent Wiper Relay (Wiper (High/Low) Relay)
19	40	Air Conditioner Compressor Clutch Relay, Radiator Fan (High Speed) Relay, Radiator Fan (Low Speed) Relay
Relay		
R1	Radiator Fan (High Speed)	
R2	Automatic Shut Down	
R3	Radiator Fan (Low Speed)	
R4	Starter	
R5	–	
R6	Air Conditioner Compressor Clutch	
R7	Convertible: Power Tow	
R8	Intermittent Wiper	

R9	Wiper (High/Low)
R1 0	Fuel Pump
R1 1	Transmission Control
R1 2	–