

Chrysler 200 2014 fuse box diagram

Power Distribution Center (Fuses)

The Power Distribution Center is located in the engine compartment near the battery. A label that identifies each component is printed on the inside of the cover.

Cavity	Blade fuse	Cartridge fuse	Description
F06	—	—	Not Used
F07	—	—	Not Used
F08	25 Amp Clear	—	Engine Control Module (ECM) / Fuel Inj.
F09	—	—	Not used
F10	20 Amp Yellow	—	Power Transfer Unit (PTU) – If Equipped
F11	—	—	Not used
F12	20 Amp Yellow	—	Brake Vacuum Pump – If Equipped
F13	10 Amp Red	—	Engine Control Module (ECM) / VSM (Stop/Start Only)
F14	10 Amp Red	—	Drivetrain Control Module (DTCM) / Power Transfer Unit (PTU) – If Equipped / RDM / Brake System Module (BSM) / Brake Pedal S.

F15	—	—	Not Used
F16	20 Amp Yellow	—	Powertrain / Ignition Coil
F17	—	—	Not Used
F18	—	—	Not Used
F19	—	40 Amp Green	Starter Solenoid
F20	10 Amp Red	—	A/C Compressor Clutch
F21	—	—	Not Used
F22	5 Amp Tan	—	Radiator Fan Enable
F23	70 Amp Tan	—	Body Controller Module (BCM) – Feed 2
	50 Amp Red	—	Voltage Stability Module (VSM) #2 – If Equipped With Stop/Start Engine Option
F24	—	—	Not Used
F25B	20 Amp Yellow	—	Front Washer Pump – If Equipped with Stop/Start Option

F26	—	—	Not Used
F27	—	—	Not Used
F28	15 Amp Blue	—	Transmission Control Module (TCM)
F29	—	—	Not Used
F30	10 Amp Red	—	Engine Control Module (ECM) / EPS
F31	—	—	Not Used
F32	—	—	Not Used
F33	—	—	Not Used
F34	—	—	Not Used
F35	—	—	Not Used
F36	—	—	Not Used
F37	—	50 Amp Red	Radiator Fan PWM Controller
F38	—	—	Not Used
F39	—	40 Amp Green	HVAC Blower Motor

F40	—	—	Not Used
F41	—	50 Amp Red	Voltage Stability Module (VSM) #1 – If Equipped With Stop/Start Engine Option
	—	60 Amp Yellow	Body Controller Module (BCM) – Feed 1
F42	—	—	Not Used
F43	20 Amp Yellow	—	Fuel Pump Motor
F44	—	—	Not Used
F45	—	30 Amp Pink	Passenger Door Module (PDM) – If Equipped
F46	—	25 Amp Clear	Sunroof – If Equipped
F47	—	—	Not used
F48	—	30 Amp Pink	Driver Door Module (DDM)
F49	—	30 Amp Pink	Power Inverter (115V A/C) – If Equipped
F50	—	30 Amp Pink	Windshield Wiper Smart Motor (WWSM)

F51	—	—	Not Used
F52	—	—	Not Used
F53	—	30 Amp Pink	Brake System Module BSM & Valves
F54	—	30 Amp Pink	Body Controller Module (BCM) – Feed 3
F55	10 Amp Red	—	Blind Spot Sensors/Compass/ Rearview Camera – If Equipped
F56	15 Amp Blue	—	Ignition Node Module (IGNM) / RF Hub
F57	—	—	Not Used
F58	10 Amp Red	—	Occupant Classification Module/ Voltage Stability Module (VSM) #2 – If Equipped With Stop/Start Engine Option
F59	—	30 Amp Pink	Drivetrain Control Module (DTCM)
F60	20 Amp Yellow	—	Power Outlet – Center Console
F61	—	—	Not Used
F62	—	—	Not Used

F63	20 Amp Yellow	—	Front Heated Seats – If Equipped
F64	20 Amp Yellow	—	Heated Steering Wheel – If Equipped
F65	10 Amp Red	—	In Car Temperature Sensor/ Humidity Sensor/Driver Assist System Module (DASM)/Park Assist (PAM) – If Equipped With Stop/ Start Engine Option
F66	15 Amp Blue	—	Instrument Panel Cluster (IPC)/ Electronic Climate Control (ECC)
F67	10 Amp Red	—	In Car Temperature Sensor/ Humidity Sensor/Drivers Assist System Module (DASM)/Park Assist (PAM) – If Equipped
F68	—	—	Not Used
F69	10 Amp Red	—	Gear Shift Module (GSM)/Active Grill Shutter (AGS). – If Equipped / EPB SW
F70	5 Amp Tan	—	Intelligent Battery Sensor (IBS) – If Equipped with Stop/Start Option
F71	20 Amp Yellow	—	HID Headlamp Right – If Equipped with Stop/Start Option
F72	10 Amp Red	—	Heated Mirrors – If Equipped
F73	—	—	Not Used

F74	—	30 Amp Pink	Rear Defroster/Defogger
F75	20 Amp Yellow	—	Cigar Lighter
F76	10 Amp Red	—	Drivers Window SW– If Equipped
F77	10 Amp Red	—	UCI Port/Brake Pedal Switch
F78	10 Amp Red	—	Diagnostic Port/Steering Column Control Module (SCCM)
F79	10 Amp Red	—	Integrated Center Stack (ICS)/ Switch Bank/Instrument Panel Cluster (IPC)/EPB SW
F80	20 Amp Yellow	—	radio
F81	—	—	Not Used
F82	—	—	Not Used
F83	—	20 Amp Blue	Engine Control Module (ECM)
F84	—	30 Amp Pink	Electric Park Brake (EPB) – Left
F85	—	—	Not Used

F86	20 Amp Yellow	—	Horns – If Equipped With Stop/ Start Engine Option
F87A	20 Amp Yellow	—	HID Headlamp Left – If Equipped Stop/Start Only
F88	10 Amp Red	—	Collision Mitigation Module (CMM)/Electrochromatic Mirror/ Haptic Lane Feedback Module (Half)/Humidity Sensor– If Equipped
F89	—	—	Not Used
F90	—	—	Not Used
F91	—	—	Not Used
F92	—	—	Not Used
F93	—	40 Amp Green	Brake System Module (BSM) – Pump Motor – If Equipped
F94	—	30 Amp Pink	Electric Park Brake (EPB) – Right
F95	10 Amp Red	—	Electrochromatic Mirror/Rain/Pass. Window SW/Power Outlet Console Illumination/Sensor/Sunroof – If Equipped
F96	10 Amp Red	—	Occupant Restraint Controller (ORC) (Airbag)
F97	10 Amp Red	—	Occupant Restraint Controller (ORC) (Airbag)

F98	25 Amp Clear	—	Audio Amplifier – If Equipped
F99	—	—	Not Used
F100	—	—	Not Used

Interior Fuses

The interior fuse panel is located in the passenger compartment on the left side dash panel under the instrument panel.

Cavity	Blade fuse	Description
F13	15 Amp Blue	Low Beam Left
F32	10 Amp Red	Interior Lighting
F36	10 Amp Red	Intrusion Module / Siren
F37	7.5 Amp Brown	Aux. Switch Bank Module (ASBM)
F38	20 Amp Yellow	All Doors Lock/Unlock
F43	20 Amp Yellow	Washer Pump Front
F48	20 Amp Yellow	Horns
F49	7.5 Amp Brown	Lumbar Support
F51	10 Amp Red	Driver Window Switch / Power Mirrors – If Equipped

F53	7.5 Amp Brown	UCI Port (USB & AUX)
T89	5 Amp Tan	Trunk Lamp
T91	5 Amp Tan	Fog Lamp Front Left
T92	5 Amp Tan	Fog Lamp Front Right
T93	10 Amp Red	Low Beam Right