



Alfa Romeo 159 2005 – 2011 fuse box diagram

Fuse box on the dashboard

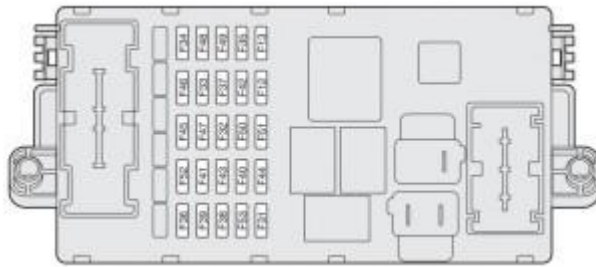

Alfa Romeo 159 – fuse box – dashboard


Fuse box on the battery positive pole

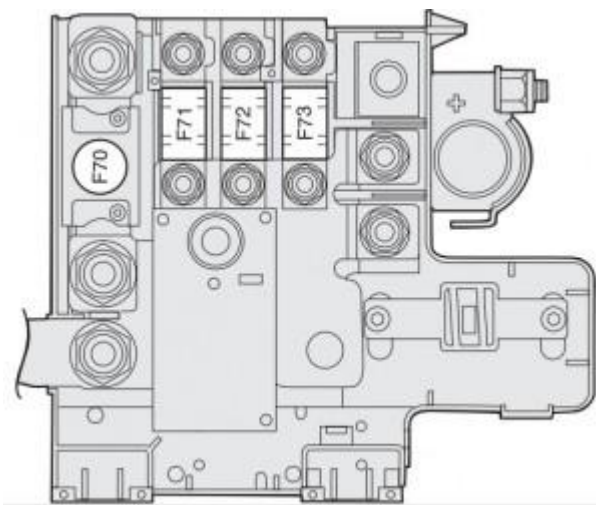

Alfa Romeo 159 – fuse box – battery


positive pole

Fuse box near the battery

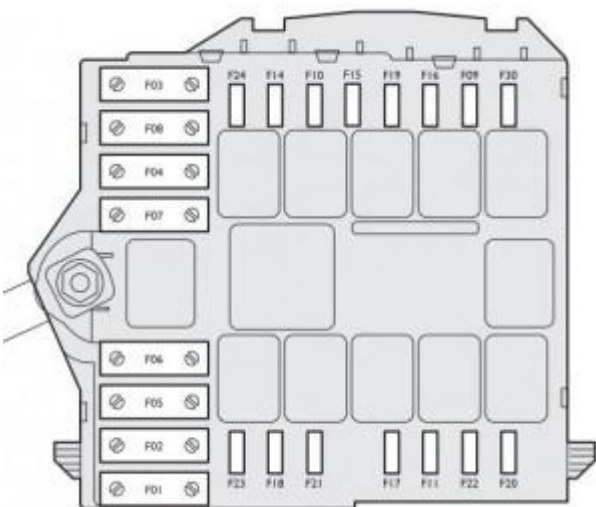

Alfa Romeo 159 – fuse box – battery

Fuse box in the boot (left-hand side)

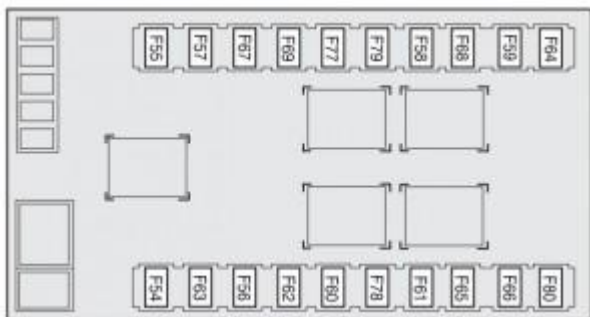

Alfa Romeo 159 – fuse box – boot

Fuse summary table

Light	Fuse	Ampere rating [A]	Location
Right main beam headlight	F14	10	Battery
Left main beam headlight	F15	10	Battery
Right dipped beam headlight	F12	15	Dashboard
Left dipped beam headlight	F13	15	Dashboard
Front fog light	F30	15	Battery
Reversing light	F35	7,5	Dashboard
Third brake light	F37	10	Dashboard
Front/rear ceiling light	F39	10	Dashboard
Front ceiling light	F49	7,5	Dashboard
Direction indicators	F53	10	Dashboard

Hazard lights	F53	10	Dashboard
---------------	-----	----	-----------

Users	Fuse	Ampere rating [A]	Location
Engine compartment control unit	F70 (MEGA-FU SE)	150	Battery (positive pole)
Instrument panel control unit	F71	70	Battery (positive pole)
Fuel pre-heating unit (diesel versions)	F73	60	Battery (positive pole)
Boot control unit	F01 (MAXI-FU SE)	70	Battery
Instrument panel control unit	F01 (MAXI-FU SE)	70	Battery
Climate control system fan	F02 (MAXI-FU SE)	40	Battery
Electric steering lock	F03 (MAXI-FU SE)	20	Battery
Brake branch point (pump)	F04 (MAXI-FU SE)	40	Battery
Brake branch point (solenoid valve)	F05 (MAXI-FU SE)	40	Battery

Radiator fan (low speed)	F06 (MAXI-FUSE)	40	Battery
Radiator fan (high speed)	F07 (MAXI-FUSE)	50	Battery
Headlight washer	F09	20	Battery
Horns	F10	15	Battery
Electronic injection sundry secondary services	F11	15	Battery
+ INT for electronic injection system	F16	7,5	Battery
Electronic injection primary services	F17	10	Battery
Engine control branch point	F18	15	Battery
Climate control system compressor	F19	7,5	Battery
Rear window heating	F20	20	Battery
Fuel pump supply	F21	20	Battery
Ignition coils/injectors (petrol versions)	F22	15	Battery
Electronic injection primary services diesel versions)	F22	20	Battery
Sound system/radionavigation system power	F23	15	Battery

Body Computer branch point/Headlight washer relay coil	F31	7,5	Dashboard
Driver's door branch point/passenger's door branch point/ ignition device	F32	15	Dashboard
Rear left power window	F33	20	Dashboard
Rear right power window	F34	20	Dashboard
Water in diesel fuel filter sensor/flow meter	F35	7,5	Dashboard
Brake light switch/central console control panel	F35	7,5	Dashboard
Cruise Control	F35	7,5	Dashboard
AQS sensor	F35	7,5	Dashboard
Boot branch point/front door branch point power	F36	20	Dashboard
Instrument panel branch point	F37	10	Dashboard
Front headlight control unit/Power to control unit for gas-discharge headlights (Bixenon) (where provided	F37	10	Dashboard
Boot locking/unlocking gearmotor	F38	15	Dashboard
EOBD system diagnostic socket	F39	10	Dashboard
T.P.M.S. control unit	F39	10	Dashboard

Mobile phone presetting	F39	10	Dashboard
Alarm system control unit (where provided)	F39	10	Dashboard
Climate control system	F39	10	Dashboard
Heated rear window	F40	30	Dashboard
Windscreen washer/rear window washer nozzle demister	F41	7,5	Dashboard
Heated mirror demister	F41	7,5	Dashboard
Brake branch point power (ABS/VDC) – Steering angle branch point – Yawing sensor	F42	7,5	Dashboard
Windscreen wiper/washer	F43	30	Dashboard
Front cigar lighter on central console	F44	10	Dashboard
Sunroof control unit (curtain)	F45	20	Dashboard
Sunroof	F46	20	Dashboard
Left front power window	F47	20	Dashboard
Right front power window/ passenger's door control unit	F48	30	Dashboard
Radionavigation system	F49	7,5	Dashboard
Rain sensor control unit	F49	7,5	Dashboard

Steering wheel branch point	F49	7,5	Dashboard
Sunroof	F49	7,5	Dashboard
Control buttons panel	F49	7,5	Dashboard
Volumetric alarm control unit	F49	7,5	Dashboard
Parking sensor branch point	F49	7,5	Dashboard
Central console button panel	F49	7,5	Dashboard
Front seat controls light	F49	7,5	Dashboard
Windscreen services	F49	7,5	Dashboard
Mobile phone presetting	F49	7,5	Dashboard
START/STOP button	F49	7,5	Dashboard
Air Bag system	F50	7,5	Dashboard
Tyer pressure monitoring system control unit	F51	7,5	Dashboard
Sound system presetting	F51	7,5	Dashboard
Rear window washer/wiper	F52	15	Dashboard
Rear cigar lighter	F52	15	Dashboard

Instrument panel branch point	F53	10	Dashboard
Sound system amplifier with DSP	F54	30	Boot
Front left seat movement control	F56	25	Boot
Driver's seat warming left	F57	7,5	Boot
Front right seat movement contro	F60	25	Boot
Amplifier on rear parcel shelf	F61	15	Boot
Front passenger' seat warming right	F67	7,5	Boot
Free	F58	—	Boot
Free	F59	—	Boot
Free	F62	—	Boot
Free	F63	—	Boot
Free	F64	—	Boot
Free	F66	—	Boot
Free	F68	—	Boot
Free	F69	—	Boot

Free	F77	—	Boot
Free	F78	—	Boot
Free	F79	—	Boot
Free	F80	—	Boot