


Suzuki XL7 2007 fuse box diagram

Instrument Panel Fuse Block

The instrument panel fuse block is located on the passenger's side of the center console, to the left of the glove box near the floor.

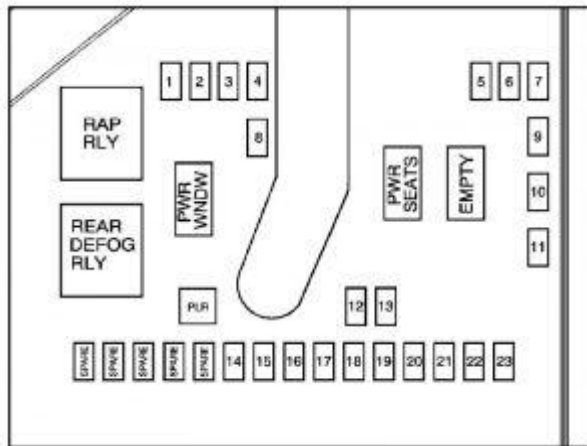

Suzuki XL7 – fuse box diagram –

instrument panel

Fuses	A	Circuit Protected
1	20	Sunroof
2	10	Rear Seat Entertainment
3	20	Rear Wiper
4	15	Liftgate
5		Airbags
6		Heated Seats
7		Driver's Side Turn Signal

8		Door Locks
9		Automatic Occupant Sensing Module
10		Power Mirrors
11		Passenger's Side Turn Signal
12		Amplifier
13		Steering Wheel Illumination
SPARE		Spare
SPARE		Spare
SPARE		Spare
SPARE		Spare
SPARE		Spare
13	2	STR/WHL/ILLUM
14	10	Infotainment
15	10	Climate Control System, Remote Function Actuator
16	10	Canister Vent

17		Radio
18		Cluster
19		Ignition Switch
20		Body Control Module
21		—
22		Center High-Mounted Stoplamp, Dimmer
23		Interior Lights


Relays	Circuit Protected
RAP PLY	Retained Accessory Power Relay
REAR DEFOG RLY	Rear Defogger Relay

Circuit Breaker	Circuit Protected
PWR WNDW	Power Windows
PWR SEATS	Power Seats
EMPTY	Empty

Misc.	Circuit Protected
PLR	Fuse Puller

Engine Compartment Fuse Block

The engine compartment fuse block is located on the driver's side of the engine compartment.

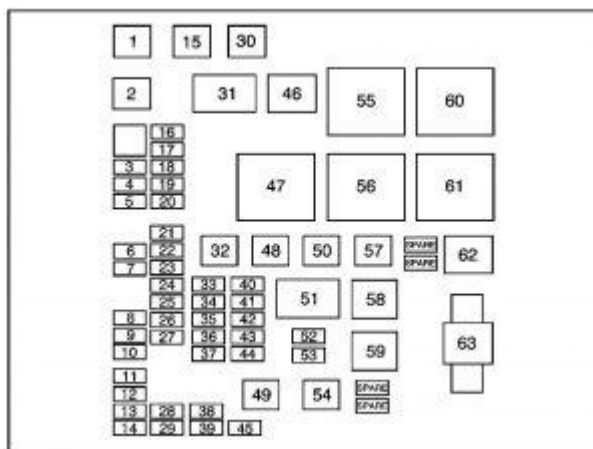

Suzuki XLI7 – fuse box diagram – engine compartment

Fuses	Circuit Protected
1	Cooling Fan 2
2	Cooling Fan 1
3	Auxiliary Power
4	Rear Climate Control
5	Spare

6	Spare
7	Anti-lock Brake System
8	Air Conditioning Clutch
9	Driver's Side Low-Beam
10	Daytime Running Lamp 2
11	Passenger's Side High-Beam
12	Passenger's Side Park Lamp
13	Horn
14	Driver's Side Park Lamp
15	Starter
16	Electronic Throttle Control, Engine Control Module
17	Emission Device 1
18	Even Coils, Injectors
19	Odd Coils, Injectors
20	Emission Device 2

21	Spare
22	Powertrain Control Module, Ignition
23	Transmission
24	Mass Airflow Sensor
25	Airbag Display
26	Spare
27	Stoplamp
28	Passenger's Side Low-Beam
29	Driver's Side High-Beam
30	Battery Main 3
32	Spare
33	Engine Control Module, Battery
34	Transmission Control Module, Battery
35	Trailer Park Lamp
36	Front Wiper

37	Driver's Side Trailer Stoplamp, Turn Signal
38	Spare
39	Fuel Pump
40	Rear Accessory Power Outlet
41	All-Wheel Drive
42	Regulated Voltage Control
43	Passenger's Side Trailer Stoplamp, Turn Signal
44	Spare
45	Front, Rear Washer
48	Rear Defogger
49	Anti-lock Brake System Motor
50	Battery Main 2
52	Daytime Running Lamps
53	Fog Lamps
54	Climate Control System Blower

57	Battery Main 1
63	Electric Power Steering

Relays	Circuit Protected
31	Ignition Main
46	Air Conditioning Compressor Clutch
47	Powertrain
51	Spare
55	Crank
56	Fan 1
58	Passenger's Side Trailer Stoplamp, Turn Signal
59	Driver's Side Trailer Stoplamp, Turn Signal
60	Fan 3
61	Fan 2
62	Fuel Pump