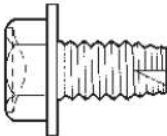
 
 
 
 


REMOVAL

1. BOLT, SCREW AND NUT TABLE

HINT:

All bolts, screws and nuts relevant to installing and removing the instrument panel are shown along with their alphabet codes in the table below.

Code	Shape	Code	Shape	Code	Shape
<A>	 $\varnothing = 8$ (0.31) L = 15 (0.59) 90105-08120		 $\varnothing = 4$ (0.16) L = 14 (0.55) 93560-14014	<C>	 $\varnothing = 5$ (0.20) L = 14 (0.55) 93568-15014
<D>	 $\varnothing = 6$ (0.24) L = 16 (0.63) 90159-60200	<E>	 $\varnothing = 5$ (0.20) L = 16 (0.63) 90159-50068	mm (in.) (L = Length)	

P

B088911E04

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

3. REMOVE FRONT PILLAR GARNISH LH

(a) Using a screwdriver, detach the 2 clips and remove the front pillar garnish.


HINT:

Tape the screwdriver tip before use.

4. REMOVE FRONT PILLAR GARNISH RH


HINT:

Use the same procedures for the RH side and LH side.

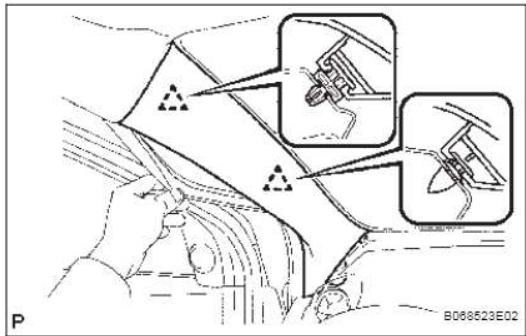

INSTRUMENT PANEL – UPPER INSTRUMENT PANEL

IP-5

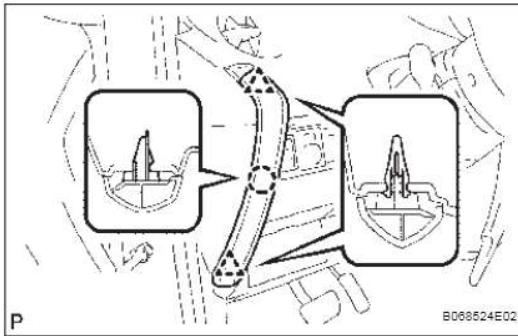

5. REMOVE INSTRUMENT PANEL FINISH LOWER PANEL LH

- (a) Using a screwdriver, detach the 2 clips and claw, and remove the instrument panel finish lower panel.


HINT:

Tape the screwdriver tip before use.

6. REMOVE INSTRUMENT PANEL FINISH LOWER PANEL RH

HINT:

Use the same procedures for the RH side and LH side.

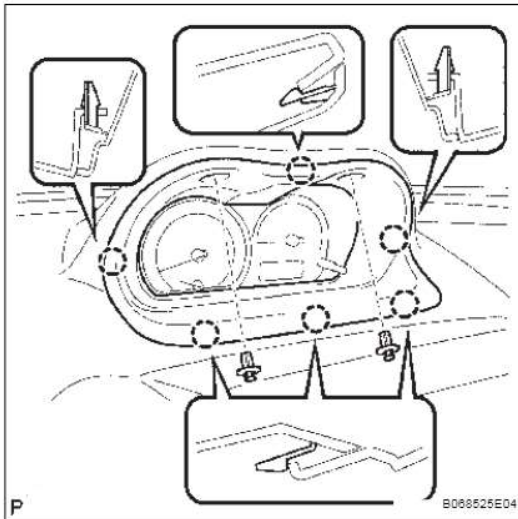


7. REMOVE INSTRUMENT CLUSTER FINISH PANEL

- (a) Remove the 2 clips.

- (b) Using a screwdriver, detach the 6 claws and remove the instrument cluster finish panel.

HINT:


Tape the screwdriver tip before use.

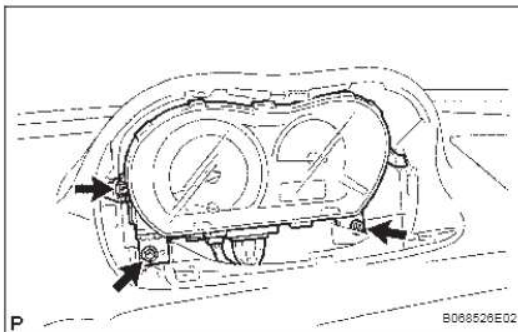

8. REMOVE COMBINATION METER ASSEMBLY

- (a) Remove the 3 screws.

- (b) Disconnect the connectors and remove the combination meter.

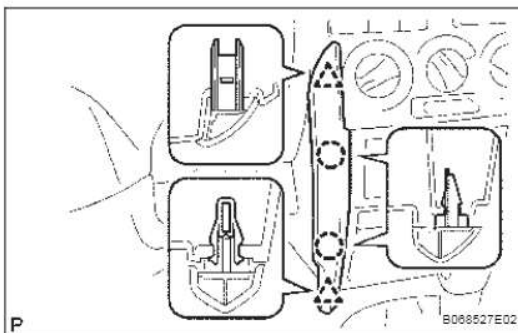

9. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

- (a) Using a screwdriver, detach the 2 clips and 2 claws, and remove the instrument cluster finish panel garnish.

HINT:


Tape the screwdriver tip before use.

10. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH


IP

IP-6


INSTRUMENT PANEL – UPPER INSTRUMENT PANEL

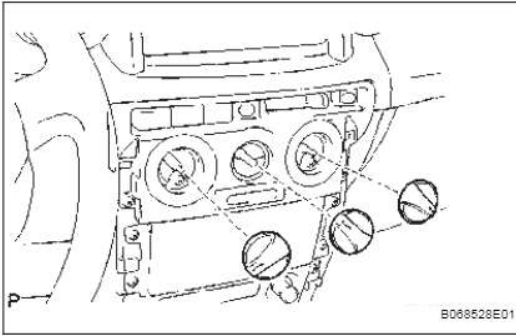**11. REMOVE HEATER CONTROL KNOB**

- (a) Remove the 3 heater control knobs.

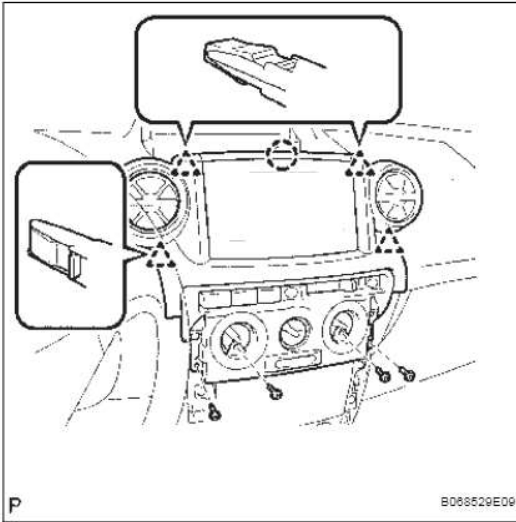**12. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY CENTER**


- (a) Remove the 4 screws.
 (b) Detach the 4 clips and claw, and remove the instrument cluster finish panel.
 (c) Disconnect the connectors.

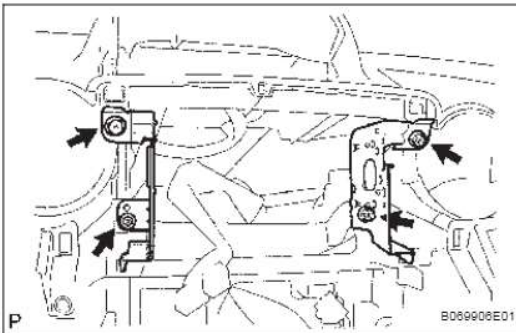**13. REMOVE NO. 1 RADIO BRACKET**

- (a) Remove the 2 screws and radio bracket.

14. REMOVE NO. 2 RADIO BRACKET

- (a) Remove the 2 screws and radio bracket.

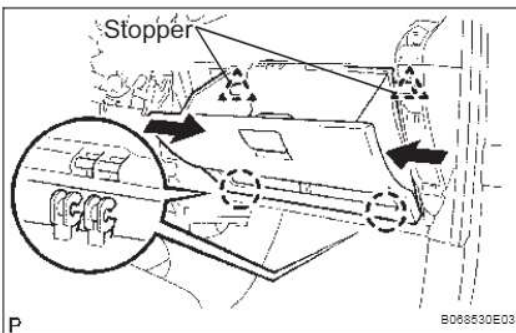**15. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY**


- (a) Push in the sides of the upper part of the glove compartment door to release the stoppers.
 (b) Pull the glove compartment door and remove it.

16. DISCONNECT PASSENGER AIRBAG CONNECTOR**17. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY**

- (a) Remove the 4 screws and bolt.
 (b) Detach the 3 clips and 9 claws.
 (c) Disconnect the connectors.
 (d) Pull the instrument panel and remove it.

INSTRUMENT PANEL – UPPER INSTRUMENT PANEL

IP-7

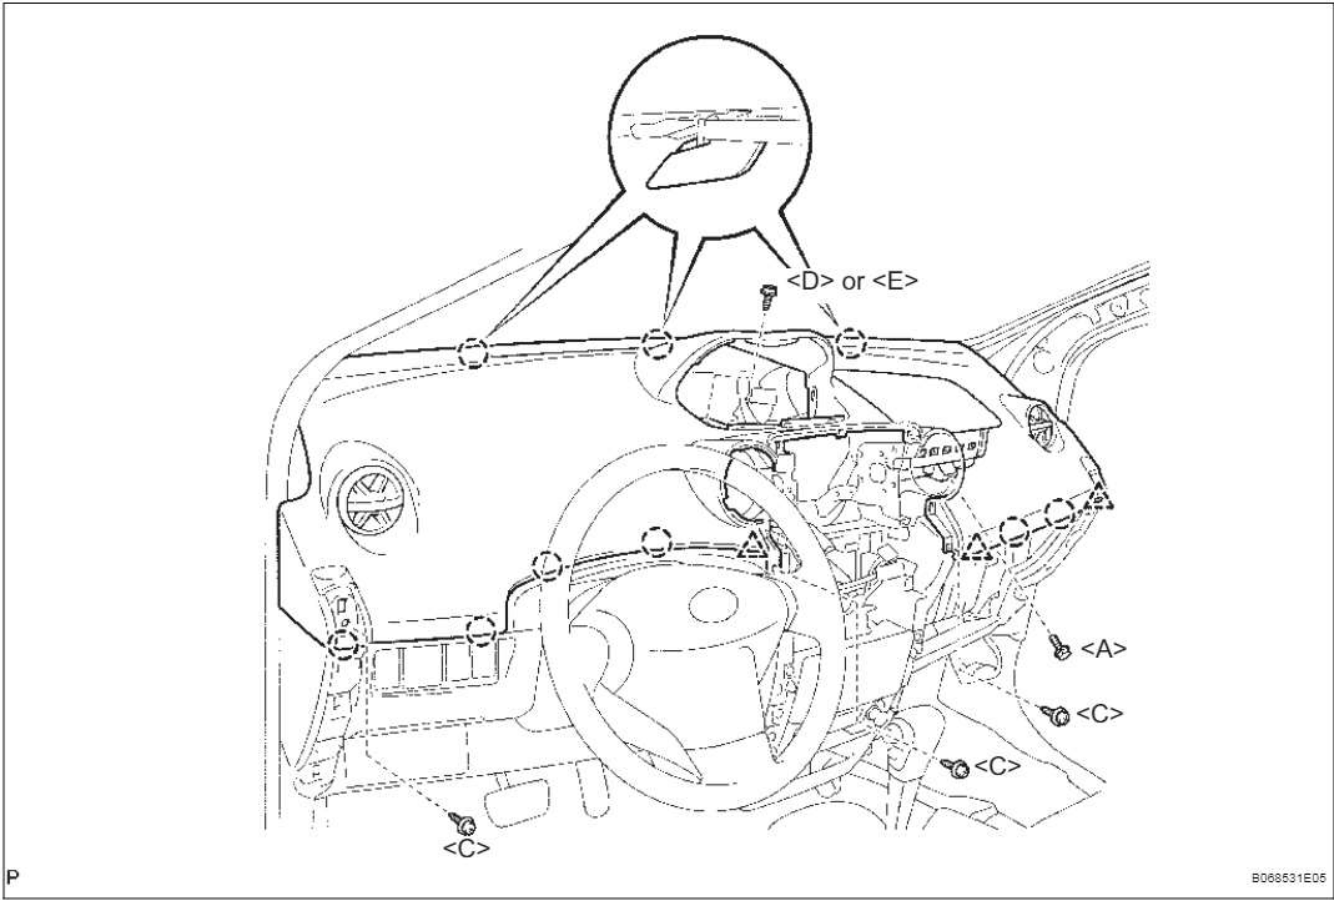

IP

IP-8

INSTRUMENT PANEL – UPPER INSTRUMENT PANEL

DISASSEMBLY

1. **REMOVE FRONT PASSENGER AIRBAG ASSEMBLY**
(See page [RS-302](#))


2. **REMOVE NO. 1 HEATER TO REGISTER DUCT**

(a) Using nippers, cut off the ultrasonic welding portion as shown in the illustration to remove the No. 1 heater to register duct from the instrument panel.

3. **REMOVE NO. 3 HEATER TO REGISTER DUCT**

HINT:


Use the same procedures described for the No. 1 heater to register duct.

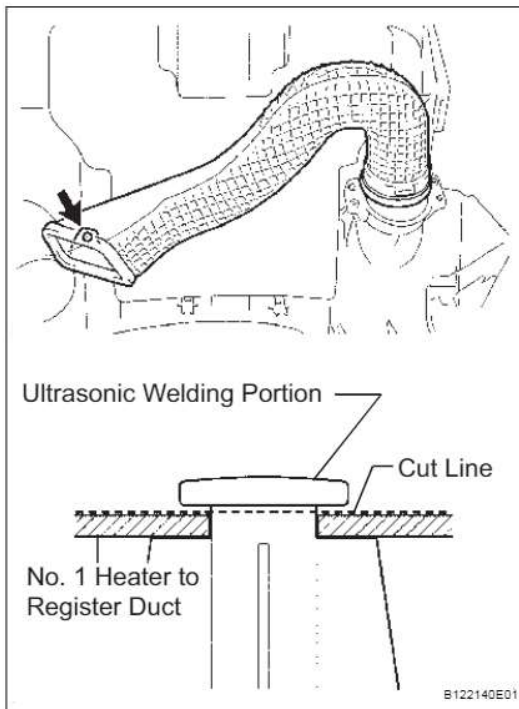

IP


4. **REMOVE NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY**

(a) Using nippers, cut off the ultrasonic welding portion as shown in the illustration to remove the No. 1 instrument panel register assembly from the instrument panel.

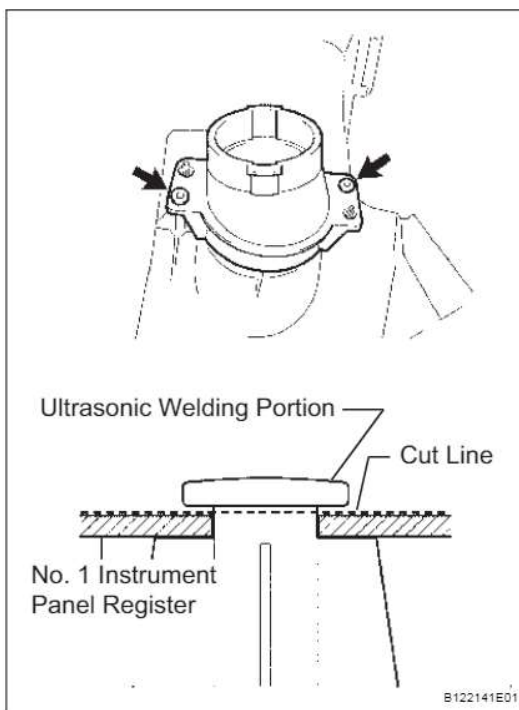


INSTRUMENT PANEL – UPPER INSTRUMENT PANEL

IP-9

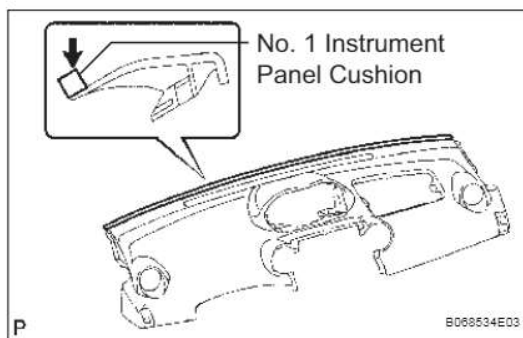

5. REMOVE NO. 1 INSTRUMENT PANEL CUSHION


- (a) Remove the No. 1 instrument panel cushion from the instrument panel.

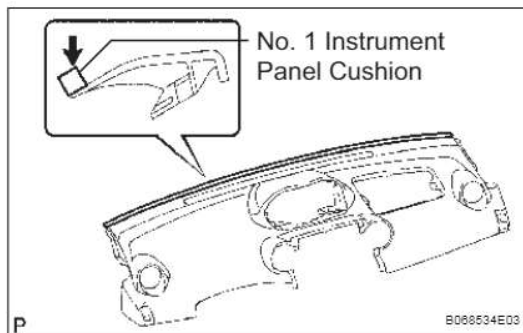

REASSEMBLY

1. INSTALL NO. 1 INSTRUMENT PANEL CUSHION

- (a) Install the No. 1 instrument panel cushion to the instrument panel.

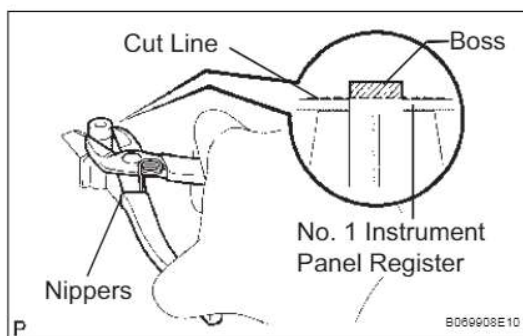


2. INSTALL NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY

- (a) When replacing the instrument panel with a new one:
Cut the boss off using nippers, as shown in the illustration.


IP

- (b) Install the No. 1 instrument panel register to the instrument panel with a screw.

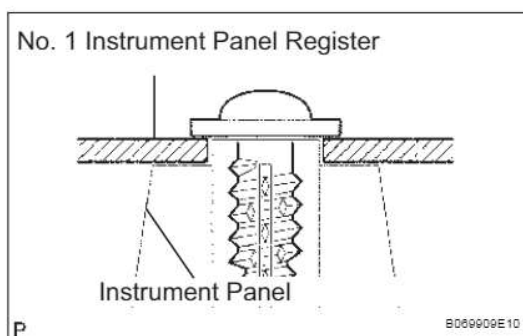


3. INSTALL NO. 1 HEATER TO REGISTER DUCT

- (a) When replacing the instrument panel with a new one:
Cut the boss off using nippers, as shown in the illustration.

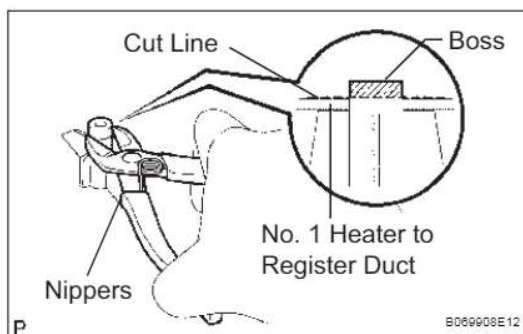

IP-10

INSTRUMENT PANEL – UPPER INSTRUMENT PANEL

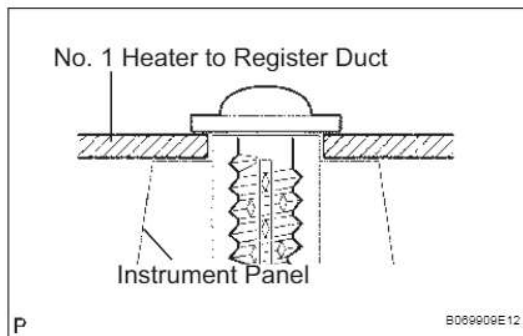

(b) Install the No. 1 heater to register duct to the instrument panel with a screw.

4. INSTALL NO. 3 HEATER TO REGISTER DUCT

HINT:

Use the same procedures described for the No. 1 heater to register duct.

5. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY
(See page [RS-302](#))

INSTRUMENT PANEL – UPPER INSTRUMENT PANEL


IP-11

INSTALLATION

1. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY

- Set the instrument panel.
- Connect the connectors.
- Attach the 3 clips and 9 claws to install the instrument panel.
- Install the 4 screws and bolt.


Torque: 18 N*m (184 kgf*cm, 13 ft.*lbf)

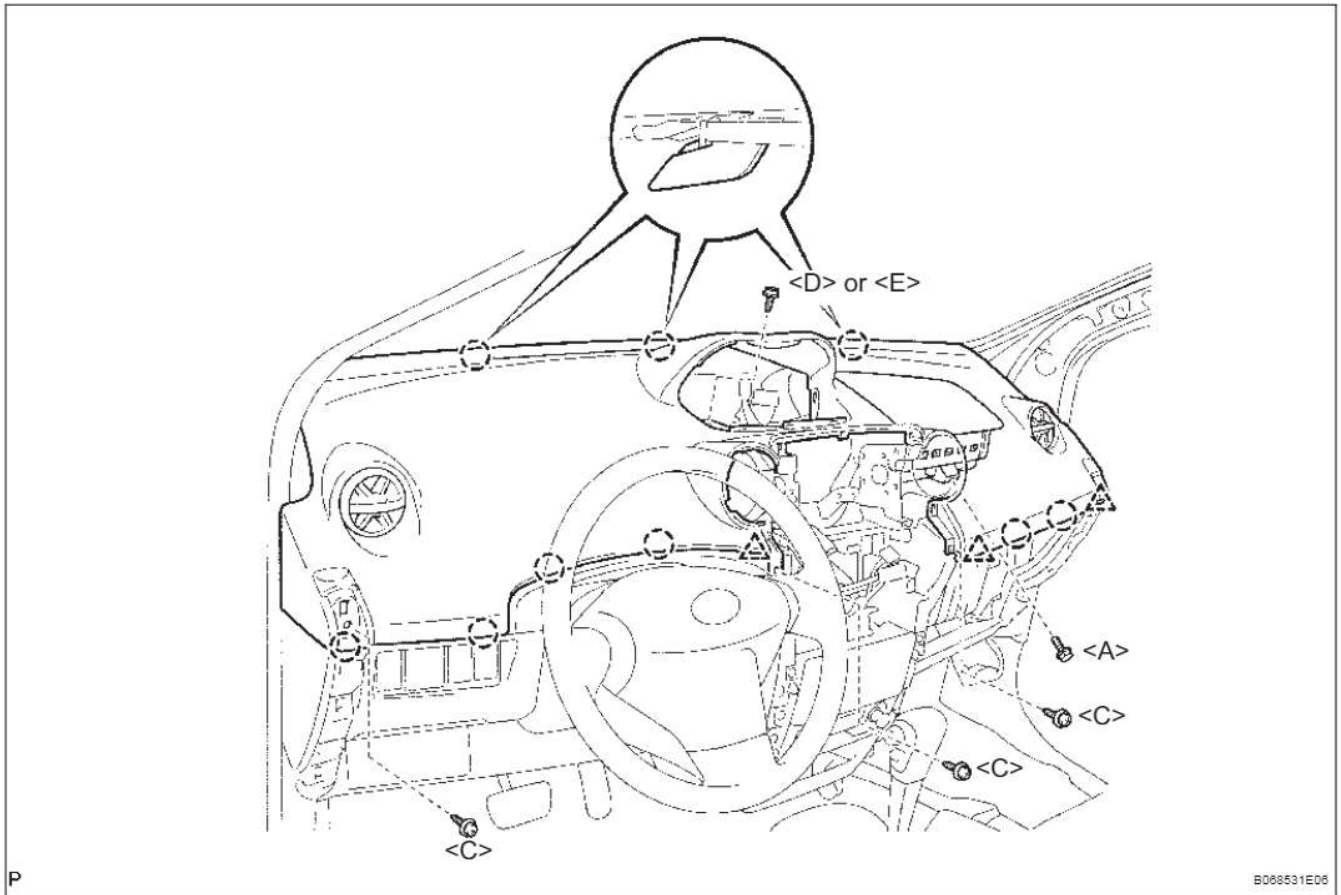

2. CONNECT PASSENGER AIRBAG CONNECTOR


3. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY

- Push in the sides of the glove compartment door, as indicated by the arrows in the illustration. Then close the door to engage it to the 2 stoppers.

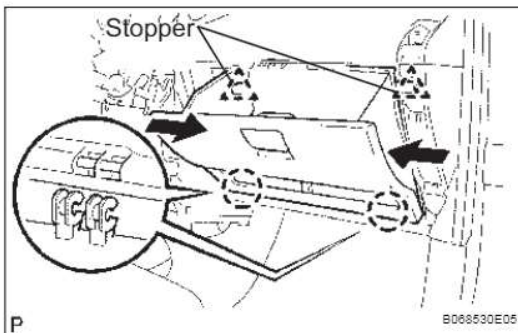

IP-12


INSTRUMENT PANEL – UPPER INSTRUMENT PANEL

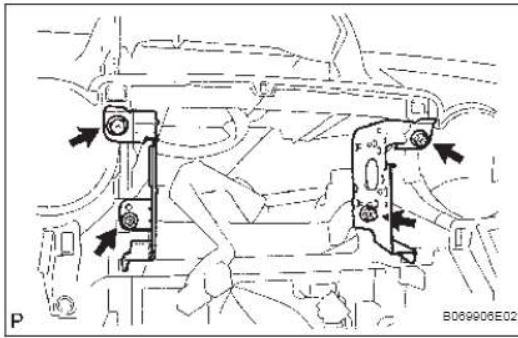**4. INSTALL NO. 1 RADIO BRACKET**

(a) Install the radio bracket with the 2 screws.

5. INSTALL NO. 2 RADIO BRACKET


(a) Install the radio bracket with the 2 screws.

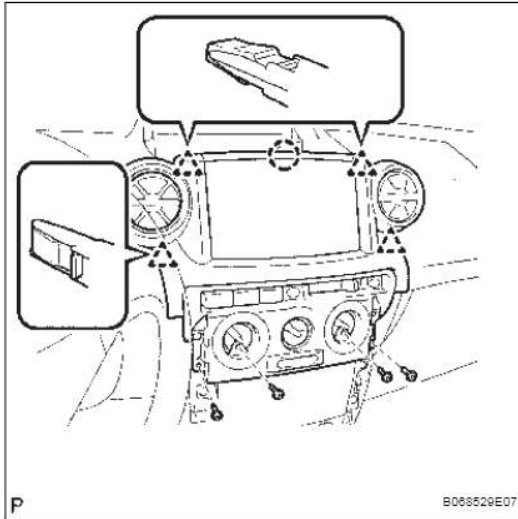**6. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY CENTER**


(a) Connect the connectors.

(b) Attach the 4 clips and claw to install the instrument panel cluster finish panel.

(c) Install the 4 screws.

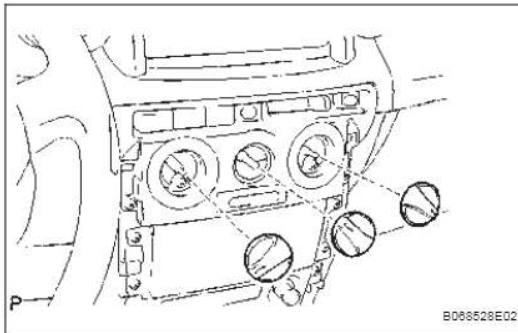**7. INSTALL HEATER CONTROL KNOB**

(a) Install the 3 heater control knobs.

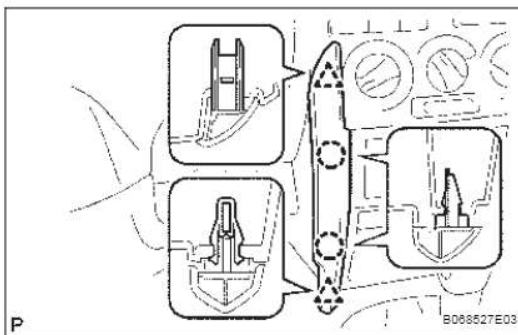**8. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH**


(a) Attach the 2 clips and 2 claws to install the instrument cluster finish panel garnish.

9. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH


IP

INSTRUMENT PANEL – UPPER INSTRUMENT PANEL


IP-13

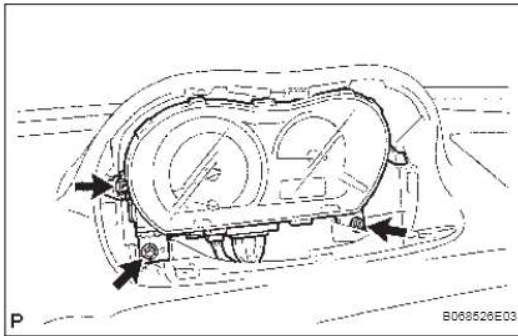**10. INSTALL COMBINATION METER ASSEMBLY**

- (a) Connect the connectors.
- (b) Install the combination meter with the 3 screws.

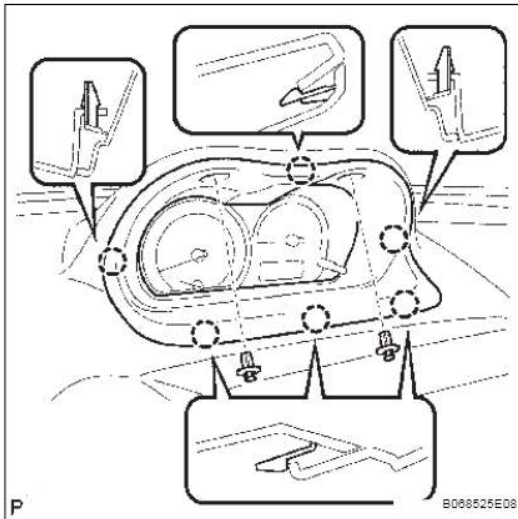**11. INSTALL INSTRUMENT CLUSTER FINISH PANEL**

- (a) Attach the 6 claws to install the instrument cluster finish panel.
- (b) Install the 2 clips.

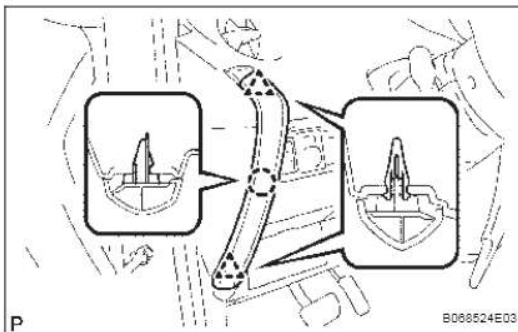
**12. INSTALL INSTRUMENT PANEL FINISH LOWER PANEL LH**

- (a) Attach the 2 clips and claw to install the instrument panel finish lower panel.

13. INSTALL INSTRUMENT PANEL FINISH LOWER PANEL RH

HINT:

Use the same procedures for the RH side and LH side.

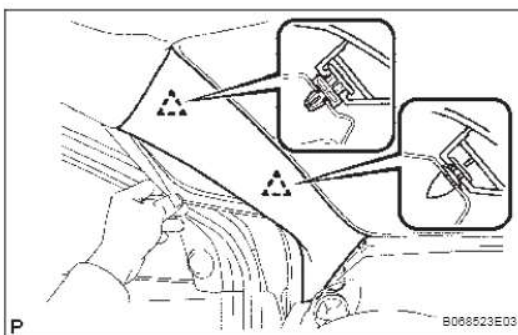**14. INSTALL FRONT PILLAR GARNISH LH**

- (a) Attach the 2 clips to install the front pillar garnish.

15. INSTALL FRONT PILLAR GARNISH RH

HINT:

Use the same procedures for the RH side and LH side.

16. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**17. PERFORM INITIALIZATION**

- (a) Perform initialization (see page [IN-23](#)).

NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.

IP

IP-14**INSTRUMENT PANEL – UPPER INSTRUMENT PANEL**


 
 
 
 

18. CHECK SRS WARNING LIGHT

- (a) Check the SRS warning light (see page [RS-28](#)).

REMOVAL

1. BOLT, SCREW AND NUT TABLE

HINT:
All bolts, screws and nuts relevant to installing and removing the instrument panel are shown along with their alphabet codes in the table below.

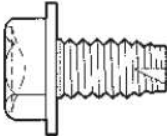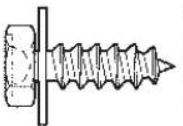mm (in.) (L = Length)					
Code	Shape	Code	Shape	Code	Shape
<A>	 $\varphi = 8$ (0.31) L = 15 (0.59) 90105-08120		 $\varphi = 4$ (0.16) L = 14 (0.55) 93560-14014	<C>	 $\varphi = 5$ (0.20) L = 14 (0.55) 93568-15014
<D>	 $\varphi = 6$ (0.24) L = 16 (0.63) 90159-60200	<E>	 $\varphi = 5$ (0.20) L = 16 (0.63) 90159-50068	<F>	 $\varphi = 6$ (0.24) L = 22 (0.87) 90119-06022
<G>	 $\varphi = 6$ (0.24) L = 19 (0.75) 90159-60431	<H>	 $\varphi = 6$ (0.24) 90179-06115		


P

B069912E03

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
- CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
3. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY
(a) Remove the instrument panel (see page [IP-4](#)).
4. REMOVE STEERING PAD ASSEMBLY (See page [RS-288](#))
5. REMOVE STEERING WHEEL ASSEMBLY (See page [SR-7](#))
6. REMOVE STEERING COLUMN COVER (See page [SR-7](#))
7. REMOVE HEADLIGHT DIMMER SWITCH ASSEMBLY (See page [LI-31](#))

IP-18

INSTRUMENT PANEL – LOWER INSTRUMENT PANEL

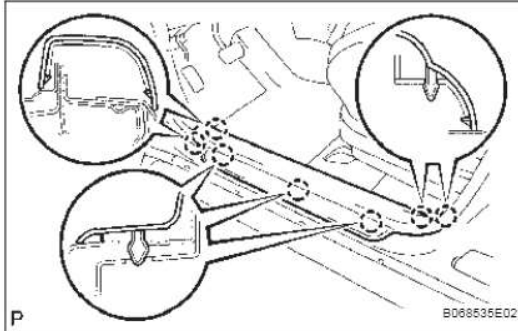

8. **REMOVE WINDSHIELD WIPER SWITCH ASSEMBLY**
(See page [WW-21](#))

9. **REMOVE FRONT DOOR SCUFF PLATE LH**

(a) Using a screwdriver, detach the 7 claws and remove the front door scuff plate.


HINT:

Tape the screwdriver tip before use.

10. **REMOVE FRONT DOOR SCUFF PLATE RH**

HINT:

Use the same procedures for the RH side and LH side.

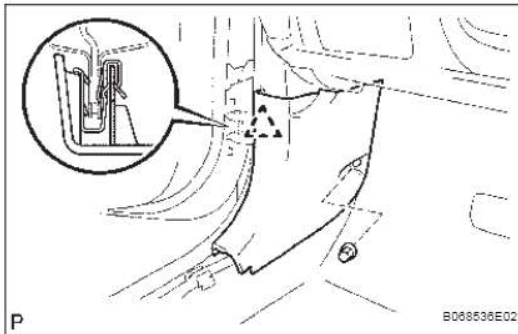

11. **REMOVE COWL SIDE TRIM BOARD LH**

(a) Remove the clip.


(b) Using a screwdriver, detach the clip and remove the cowl side trim board.

12. **REMOVE COWL SIDE TRIM BOARD RH**

HINT:

Use the same procedures for the RH side and LH side.


13. **REMOVE HEATER CONTROL AND ACCESSORY ASSEMBLY** (See page [AC-100](#))

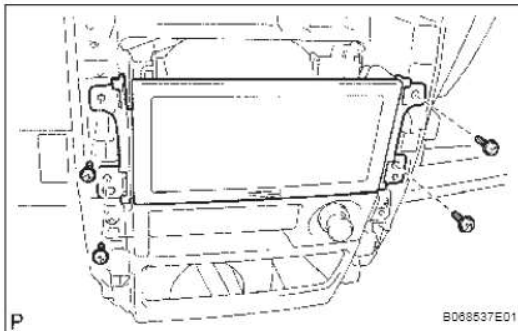

14. **REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY CENTER**

(a) Remove the 4 screws and instrument cluster finish panel assembly center.

(b) Disconnect the connectors.

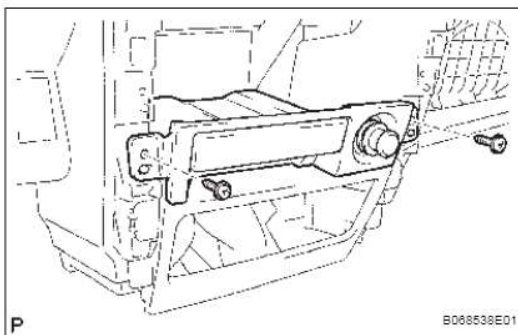

15. **REMOVE FRONT ASH RECEPTACLE ASSEMBLY**


(a) Remove the 2 screws and front ash receptacle.

(b) Disconnect the connectors.

IP

INSTRUMENT PANEL – LOWER INSTRUMENT PANEL


IP-19

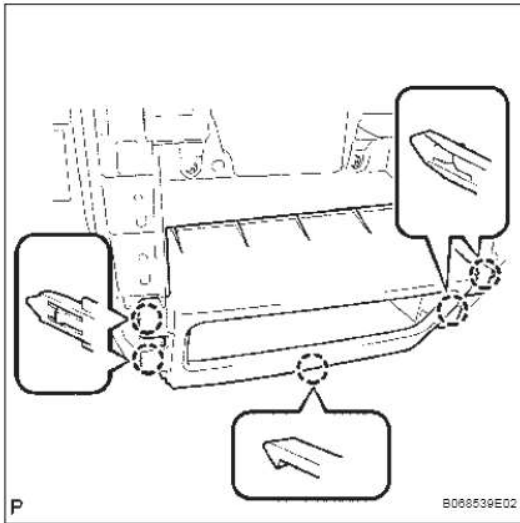**16. REMOVE INSTRUMENT COVER LOWER CENTER**

- (a) Using a screwdriver, detach the 5 claws and remove the instrument cover lower center.

HINT:

Tape the screwdriver tip before use.

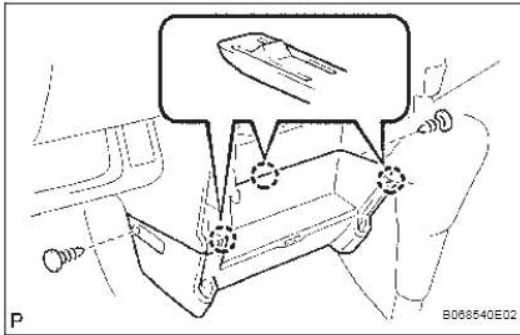**17. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER**

- (a) Using a clip remover, remove the 2 clips.
 (b) Using a screwdriver, detach the 3 claws and remove the instrument panel finish panel lower center.

HINT:

Tape the screwdriver tip before use.

18. REMOVE FUSE BOX OPENING COVER**19. REMOVE LOWER INSTRUMENT PANEL ASSEMBLY**


- (a) Disconnect the hood lock control cable.
 (b) Using a clip remover, remove the 2 clips.
 (c) Remove the 2 bolts, 2 nuts and 2 screws.
 (d) Remove the 2 screws and bolt, and separate the instrument panel junction block.

IP

IP-20

INSTRUMENT PANEL – LOWER INSTRUMENT PANEL

(e) Remove the instrument panel.

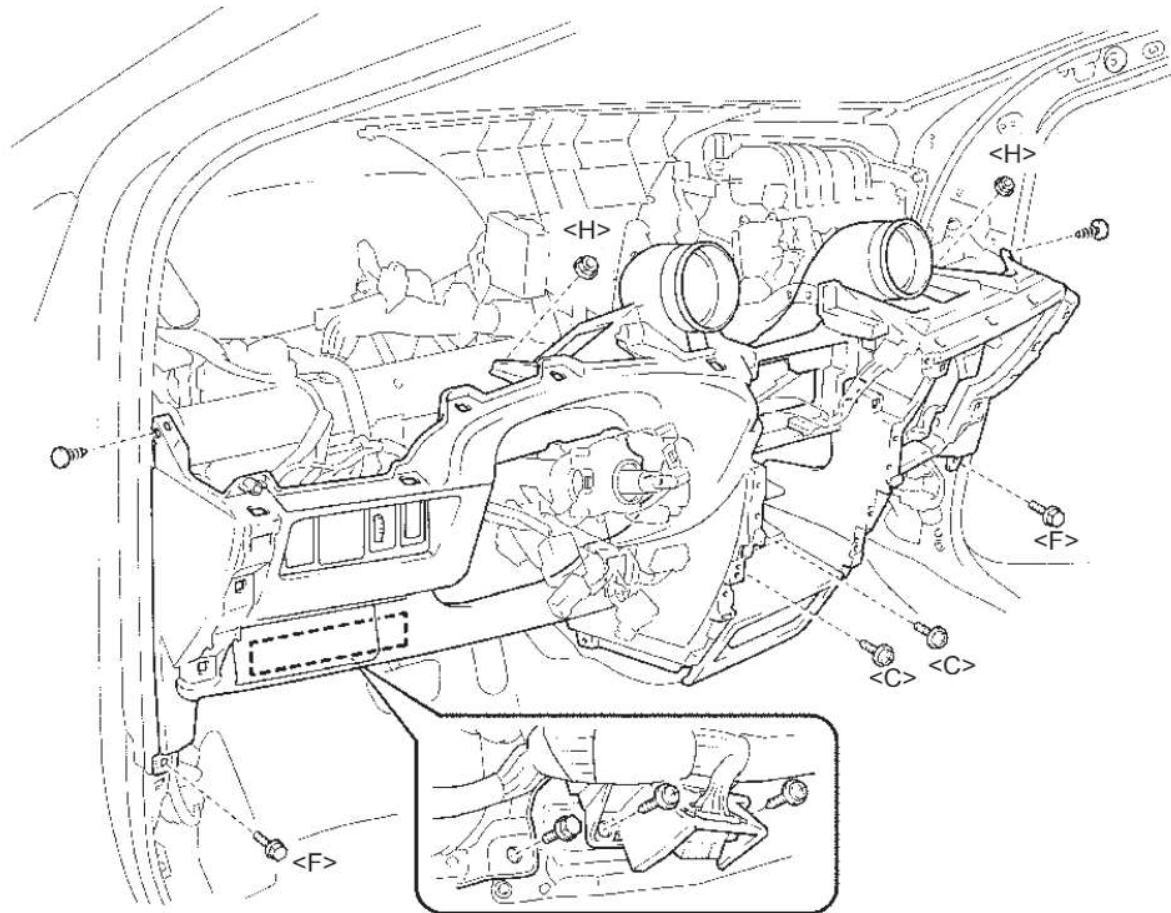

8009322E02

UPPER INSTRUMENT PANEL

PRECAUTION


1. PRECAUTION FOR VEHICLE WITH SRS AIRBAG AND SEAT BELT PRETENSIONER
- (a) Some operations in this section may affect the SRS airbags and seat belt pretensioner. Prior to performing the corresponding operations, read the SRS airbag NOTICE (see pageRS-1).
- NOTICE:
- When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Page
Sliding Roof System	RF-4

IP-2





INSTRUMENT PANEL – UPPER INSTRUMENT PANEL

COMPONENTS

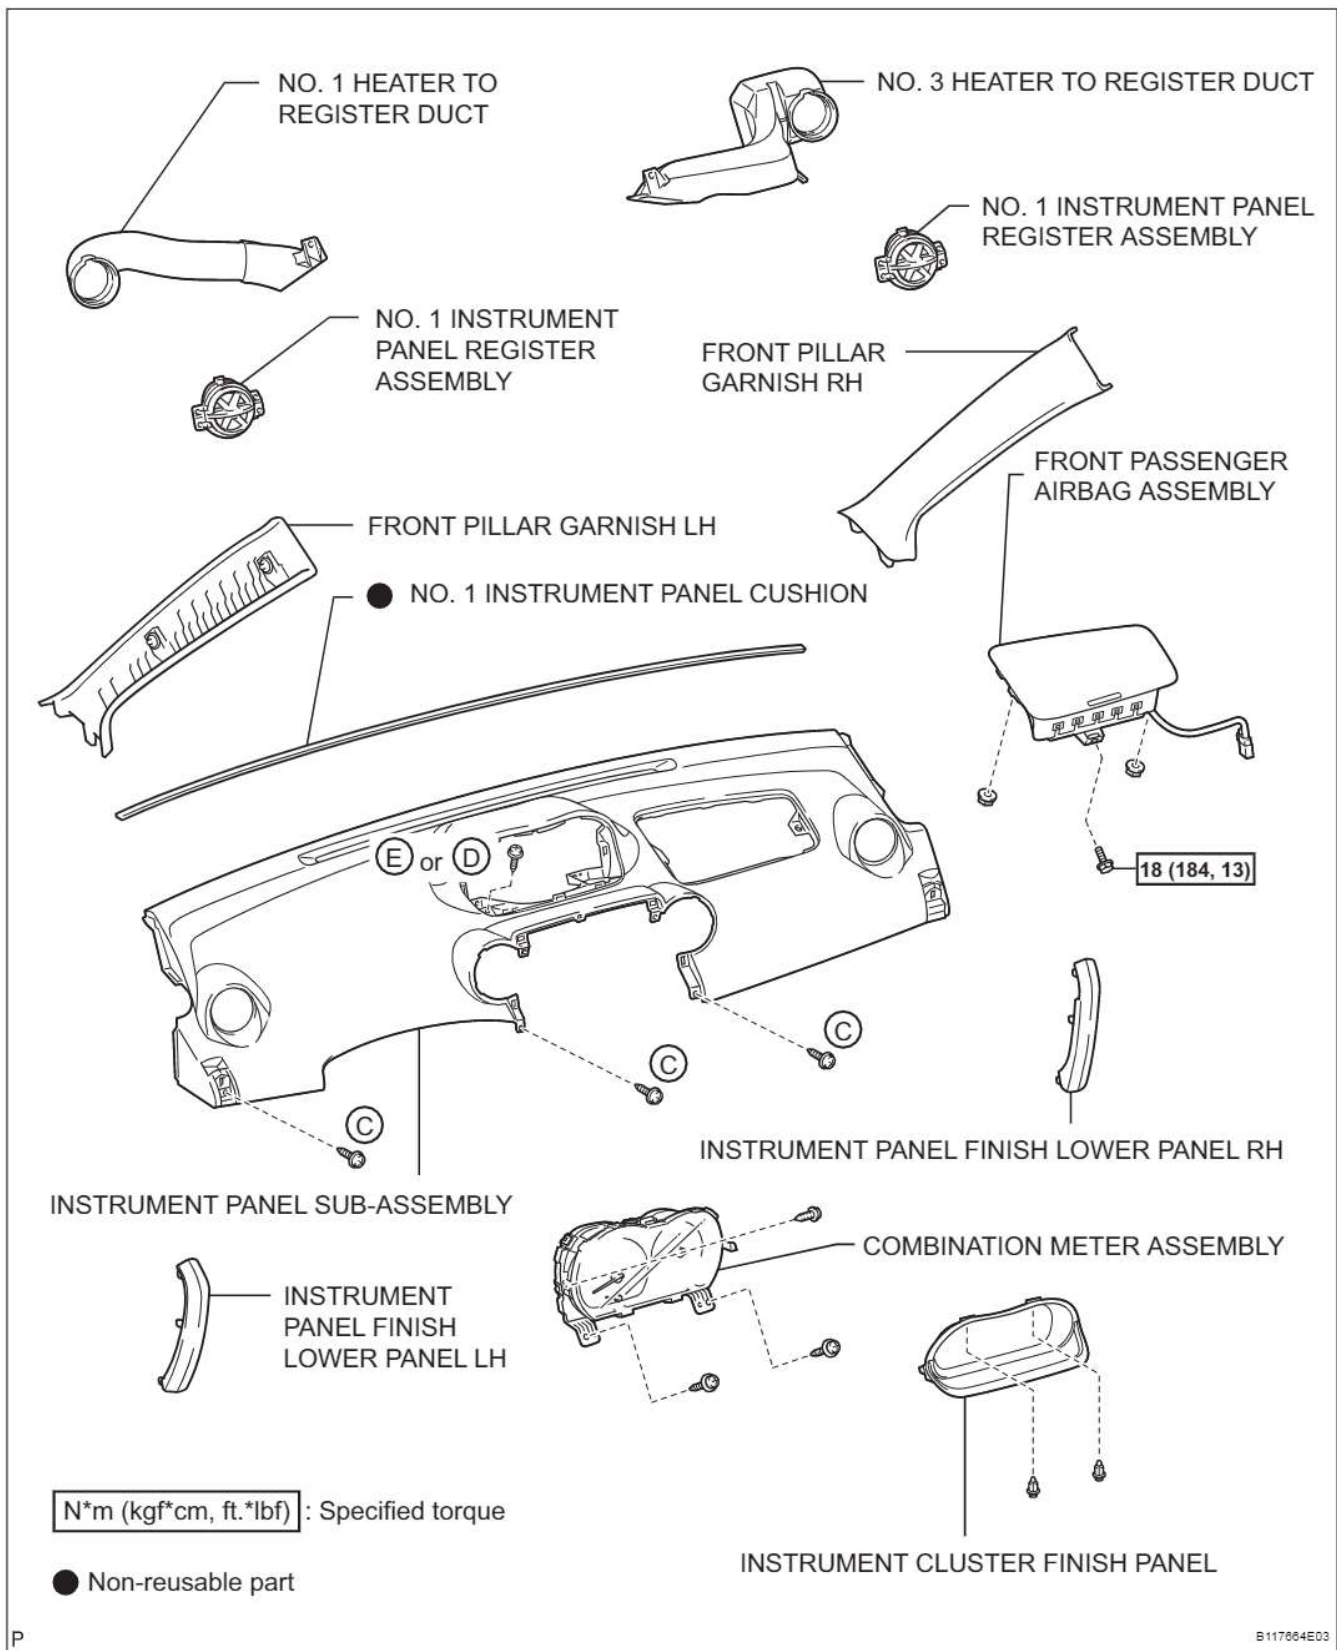

INSTRUMENT PANEL – UPPER INSTRUMENT PANEL

IP-3

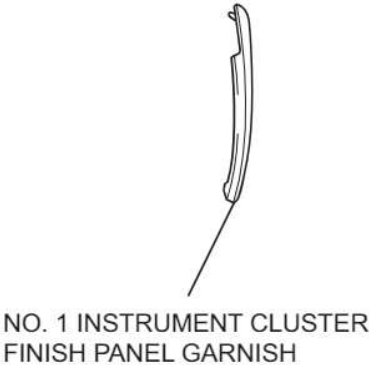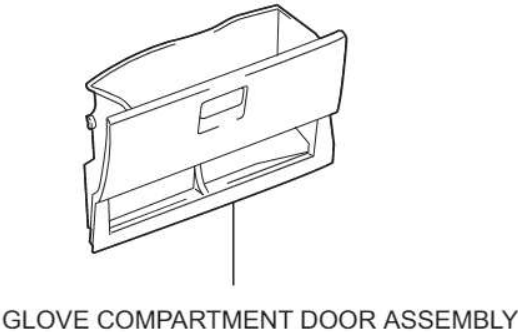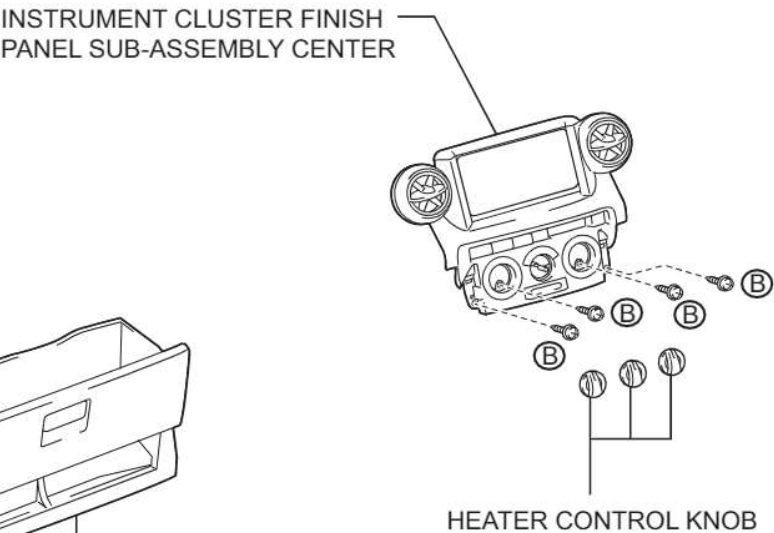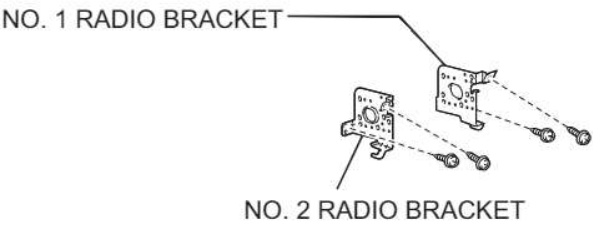


IP

INSTRUMENT PANEL – LOWER INSTRUMENT PANEL


IP-21

DISASSEMBLY**1. REMOVE NO. 2 HEATER TO REGISTER DUCT**


- (a) Using nippers, cut off the ultrasonic welding portion as shown in the illustration to remove the No. 2 heater to register duct from the instrument panel sub-assembly.

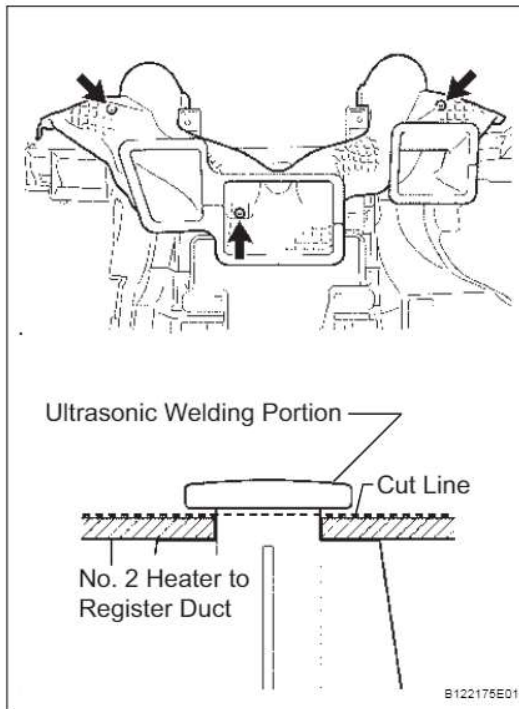**2. REMOVE GLOVE COMPARTMENT DOOR LOCK MOUNTING BRACKET**


- (a) Remove the screw and glove compartment door lock mounting bracket.

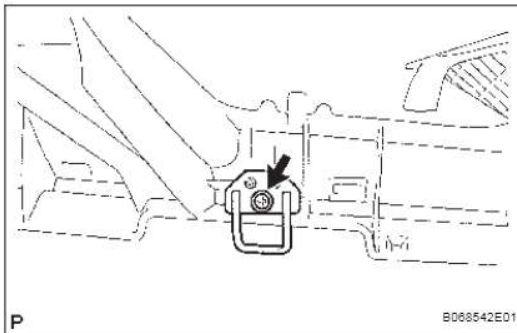**REASSEMBLY****1. INSTALL GLOVE COMPARTMENT DOOR LOCK MOUNTING BRACKET**

- (a) Install the glove compartment door lock mounting bracket with the screw.

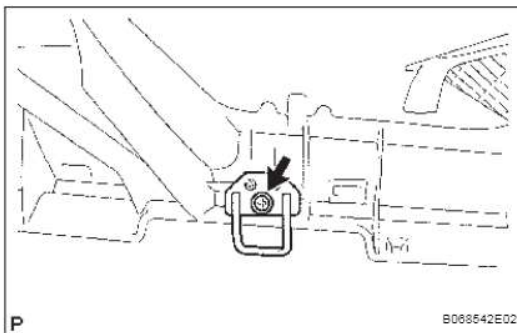
**2. INSTALL NO. 2 HEATER TO REGISTER DUCT**

- (a) When replacing the lower instrument panel with a new one:
Cut the boss off using nippers, as shown in the illustration.

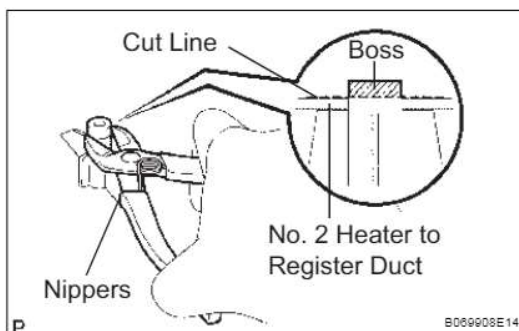

IP-22

INSTRUMENT PANEL – LOWER INSTRUMENT PANEL

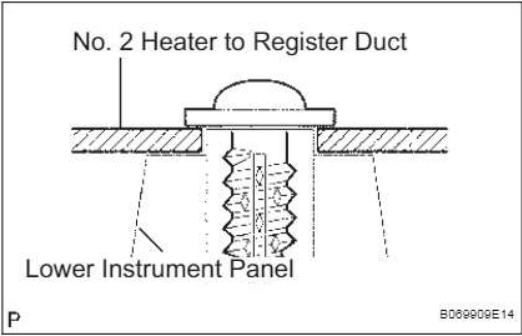

- (b) Using a screw, install the No. 2 heater to register duct.


LOWER INSTRUMENT PANEL

PRECAUTION

1. PRECAUTION FOR VEHICLE WITH SRS AIRBAG AND SEAT BELT PRETENSIONER
- (a) Some operations in this section may affect the SRS airbags and seat belt pretensioner. Prior to performing the corresponding operations, read the SRS airbag NOTICE (see page [RS-1](#)).
- NOTICE:
- When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.


System Name	See Page
Sliding Roof System	RF-4

COMPONENTS

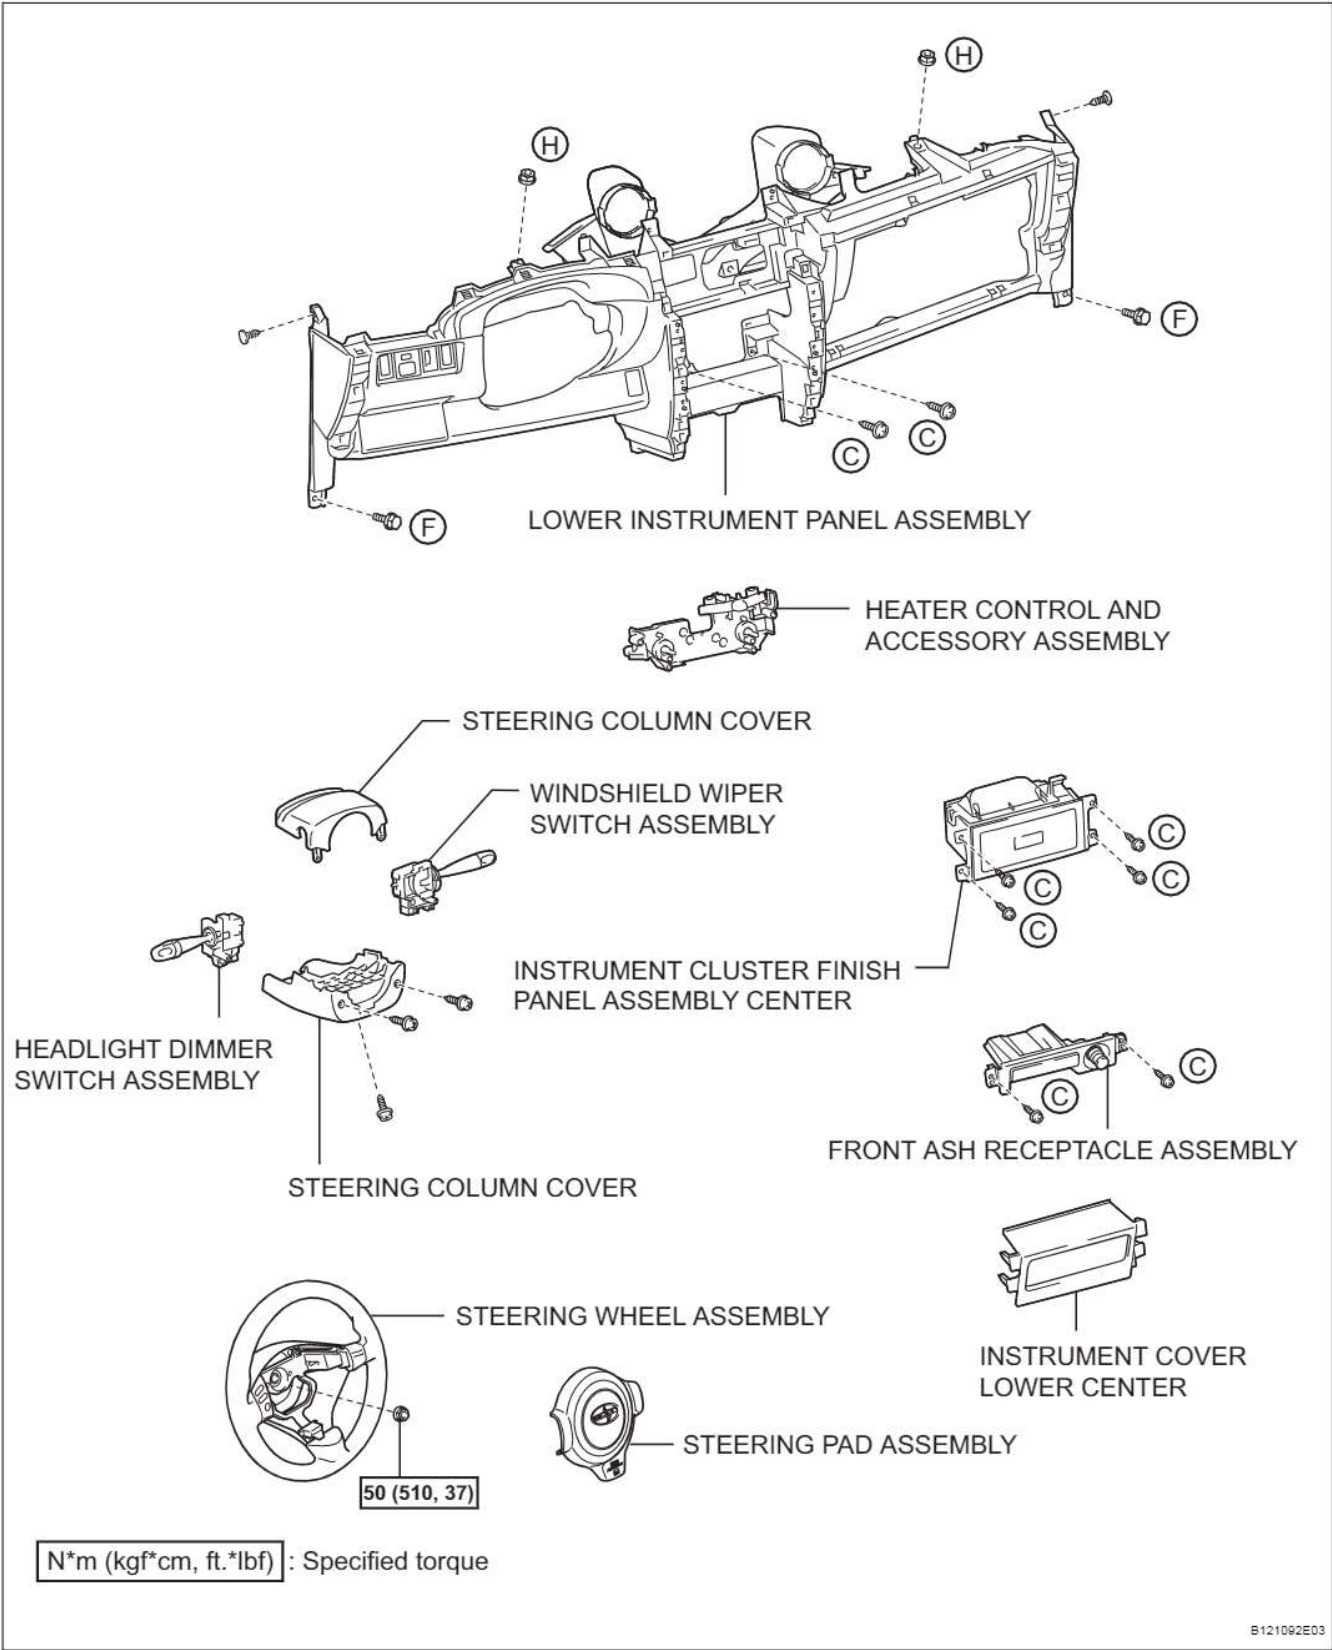

IP-16

INSTRUMENT PANEL – LOWER INSTRUMENT PANEL

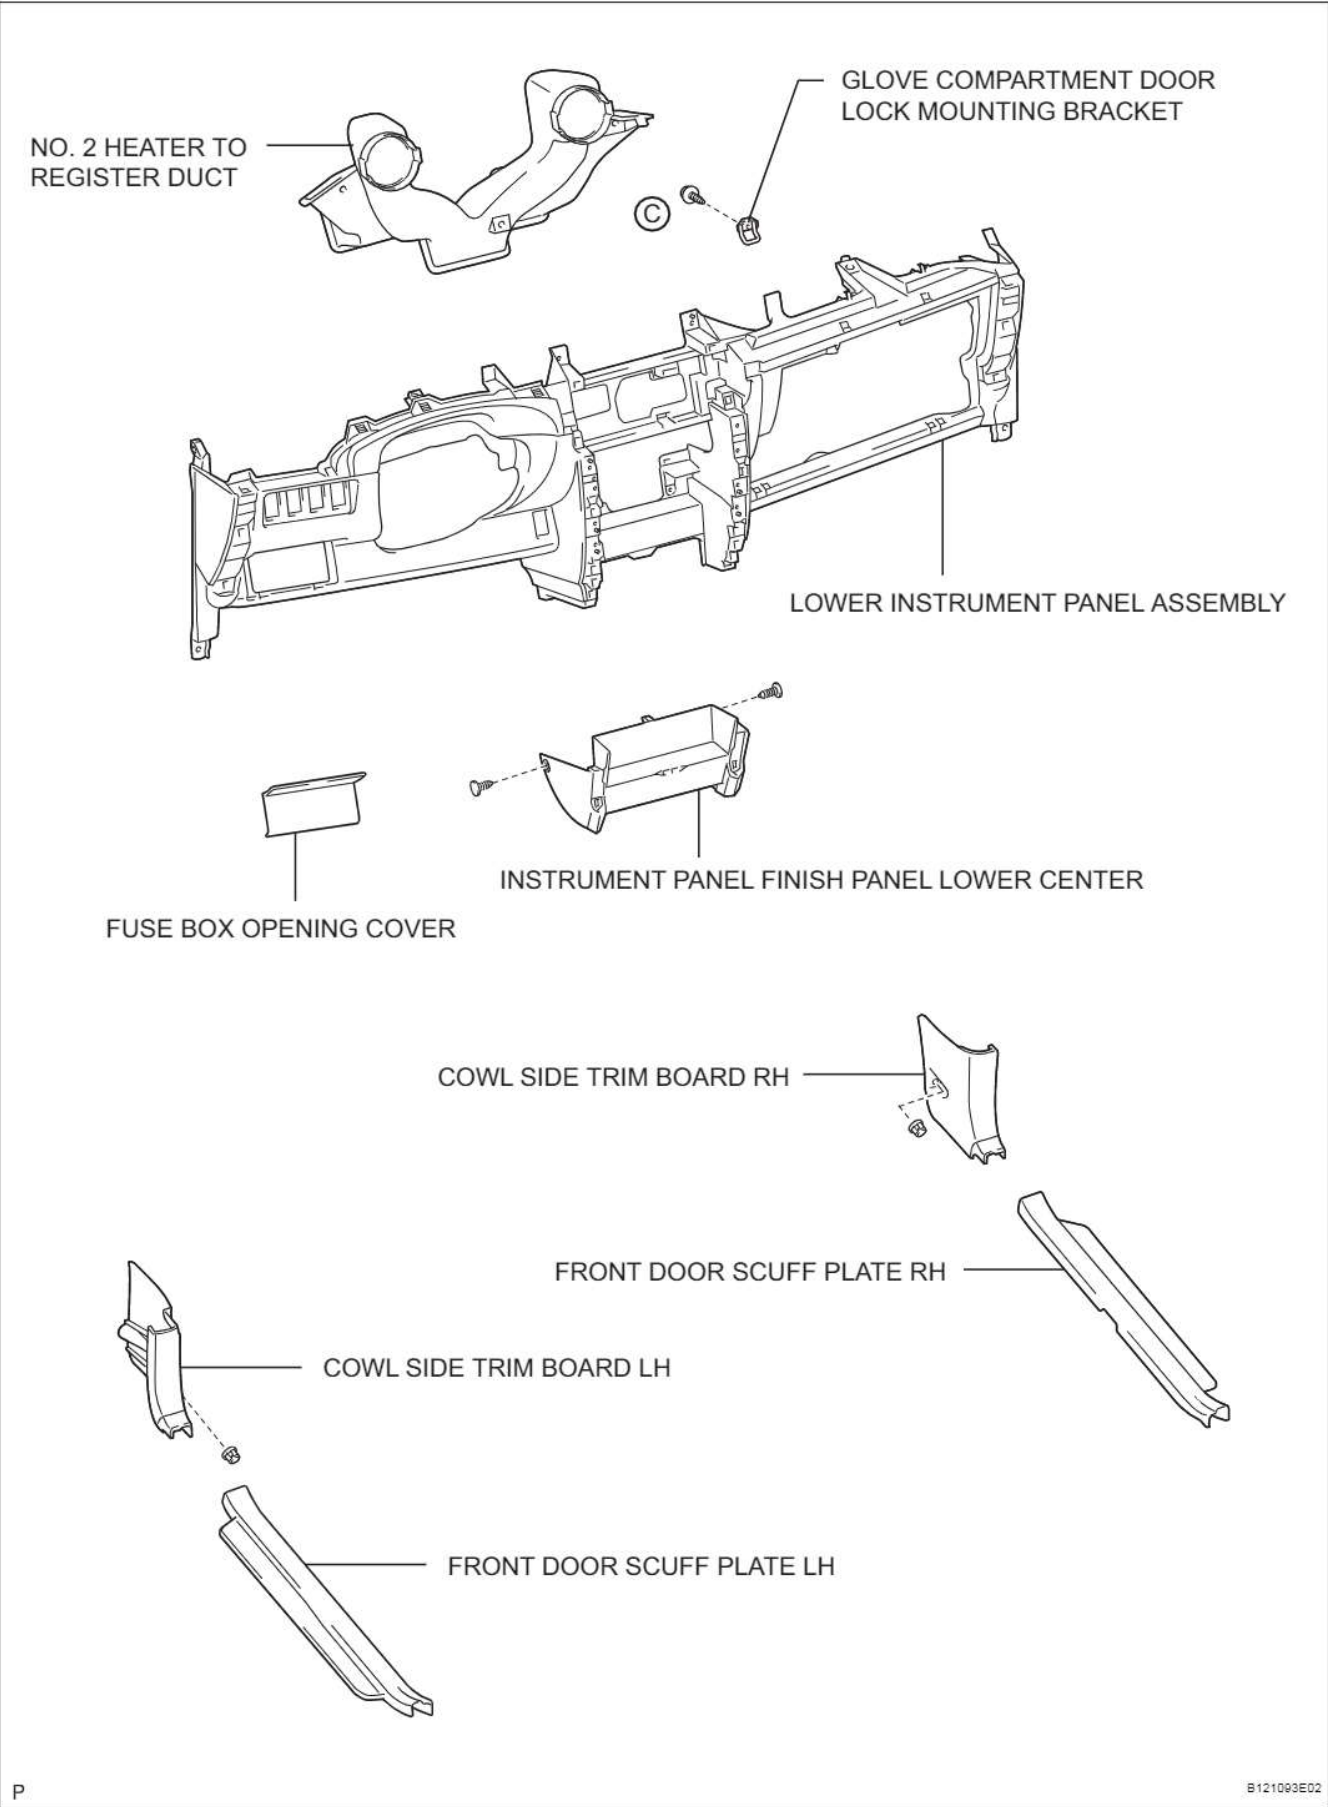


INSTRUMENT PANEL – LOWER INSTRUMENT PANEL

IP-23


INSTALLATION

- 1. INSTALL LOWER INSTRUMENT PANEL ASSEMBLY**
 - (a) Install the instrument panel.
 - (b) Install the instrument panel junction block assembly with the 2 screws and bolt.
 - (c) Install the 2 bolts, 2 nuts and 2 screws.
 - (d) Install the 2 clips.
 - (e) Connect the hood lock control cable.

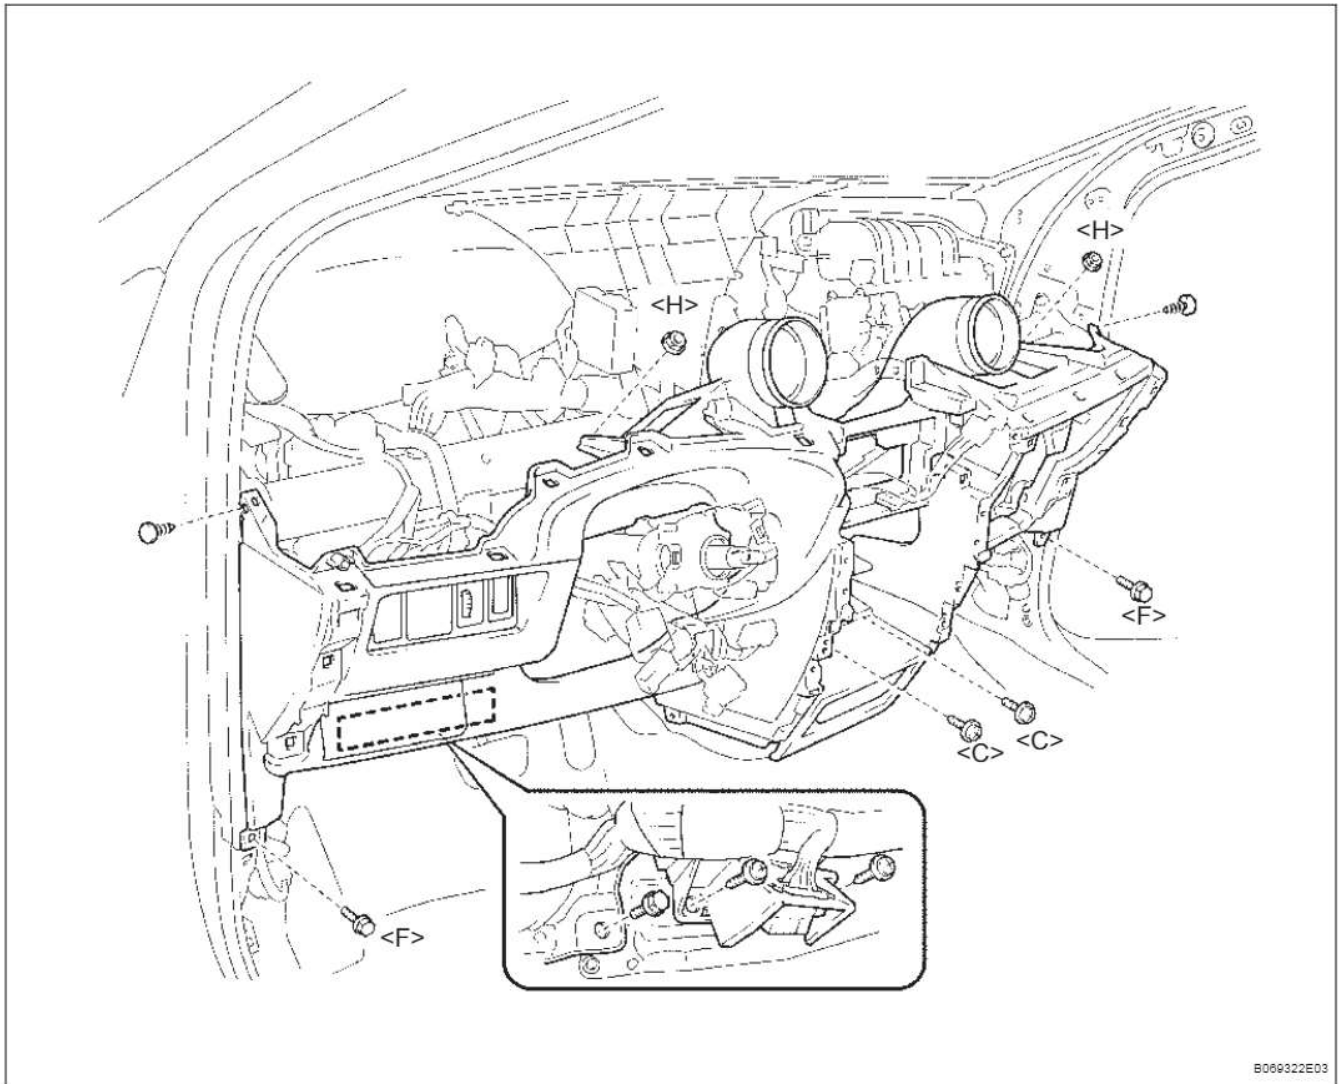


- 2. INSTALL FUSE BOX OPENING COVER**
- 3. INSTALL INSTRUMENT PANEL FINISH PANEL LOWER CENTER**


- (a) Attach the 3 claws to install the instrument panel finish panel lower center.
- (b) Install the 2 clips.

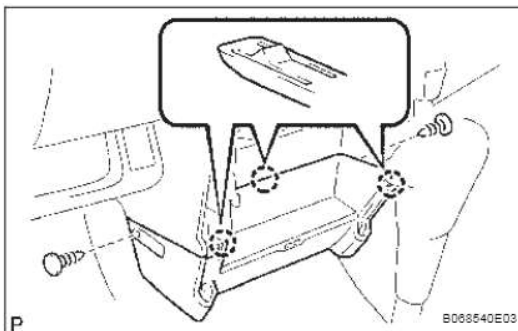


IP - 24

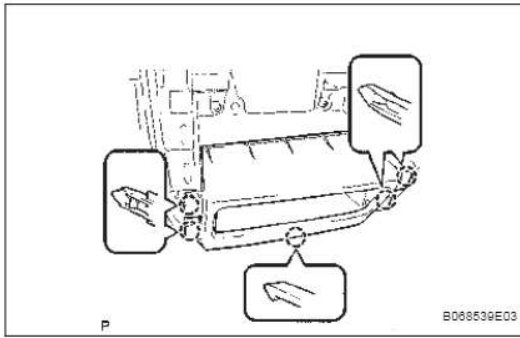INSTRUMENT PANEL – LOWER INSTRUMENT PANEL


- 4. INSTALL INSTRUMENT COVER LOWER CENTER**
 (a) Attach the 5 claws to install the instrument cover lower center.

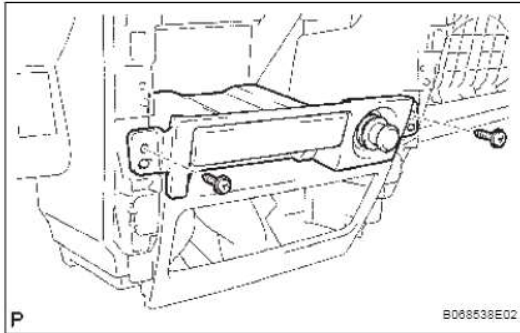


- 5. INSTALL FRONT ASH RECEPTACLE ASSEMBLY**
 (a) Connect the connectors.
 (b) Install the front ash receptacle with the 2 screws.

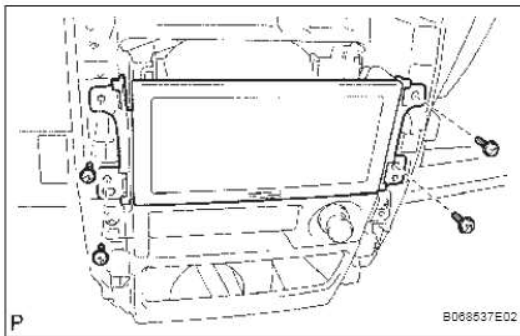

- 6. INSTALL INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY CENTER**
 (a) Connect the connectors.
 (b) Install the instrument cluster finish panel assembly center with the 4 screws.
- 7. INSTALL HEATER CONTROL AND ACCESSORY ASSEMBLY (See page AC-102)**

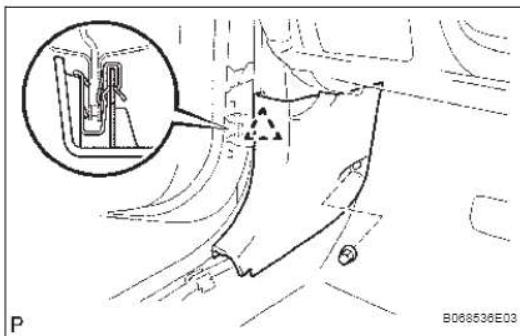

- 8. INSTALL COWL SIDE TRIM BOARD LH**
 (a) Attach the clip to install the cowl side trim board.
 (b) Install the clip.
- 9. INSTALL COWL SIDE TRIM BOARD RH**
 HINT:
 Use the same procedures for the RH side and LH side.


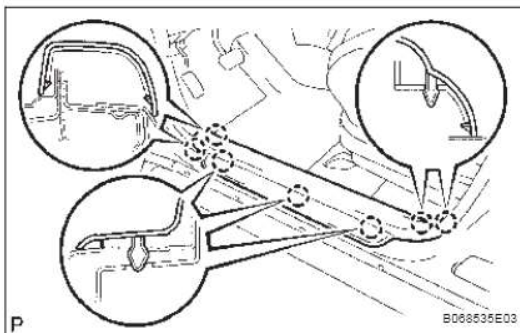


- 10. INSTALL FRONT DOOR SCUFF PLATE LH**
 (a) Attach the 7 claws to install the front door scuff plate.
- 11. INSTALL FRONT DOOR SCUFF PLATE RH**
 HINT:
 Use the same procedures for the RH side and LH side.
- 12. INSTALL WINDSHIELD WIPER SWITCH ASSEMBLY (See page WW-22)**

13. **INSTALL HEADLIGHT DIMMER SWITCH ASSEMBLY**
(See page [LI-32](#))
14. **INSTALL STEERING COLUMN COVER** (See page [SR-13](#))
15. **INSTALL STEERING WHEEL ASSEMBLY** (See page [SR-13](#))
16. **INSTALL STEERING PAD ASSEMBLY** (See page [RS-288](#))
17. **INSTALL INSTRUMENT PANEL SUB-ASSEMBLY**
(a) Install the instrument panel (see page [IP-10](#)).
18. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
19. **PERFORM INITIALIZATION**
(a) Perform initialization (see page [IN-23](#)).
NOTICE:
Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.
20. **CHECK SRS WARNING LIGHT**
(a) Check the SRS warning light (see page [RS-28](#)).

REAR CONSOLE BOX

COMPONENTS

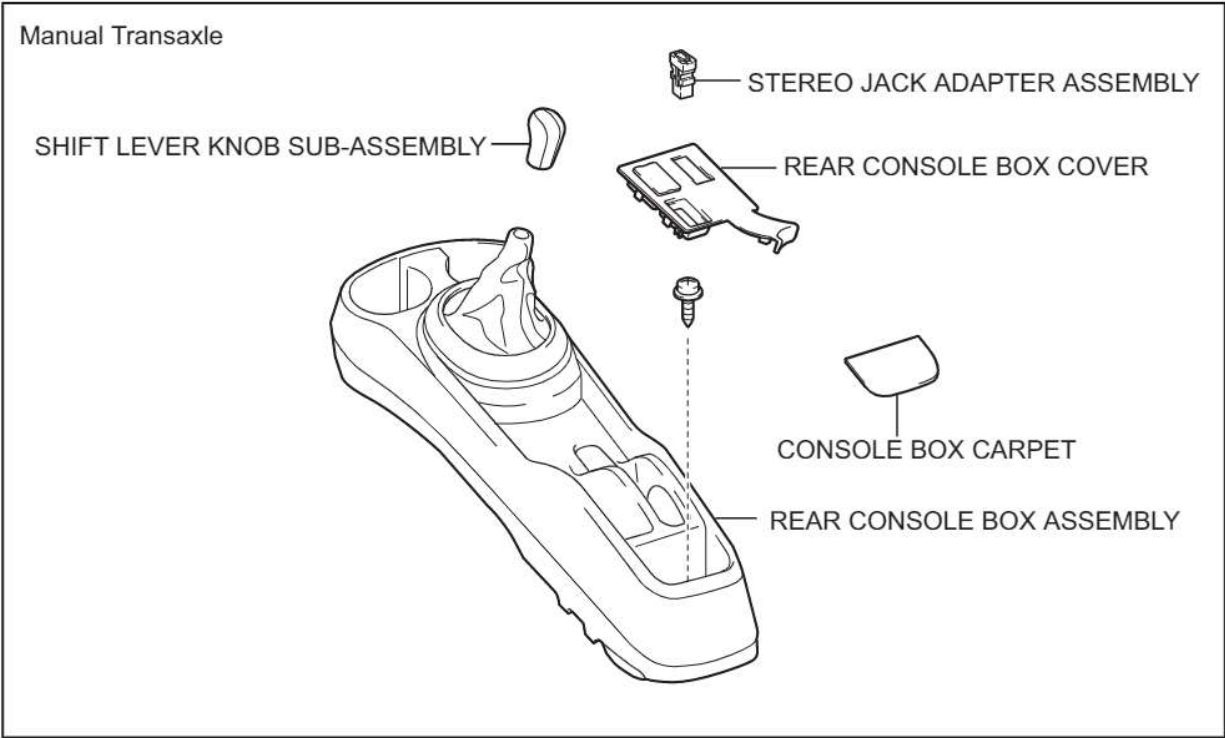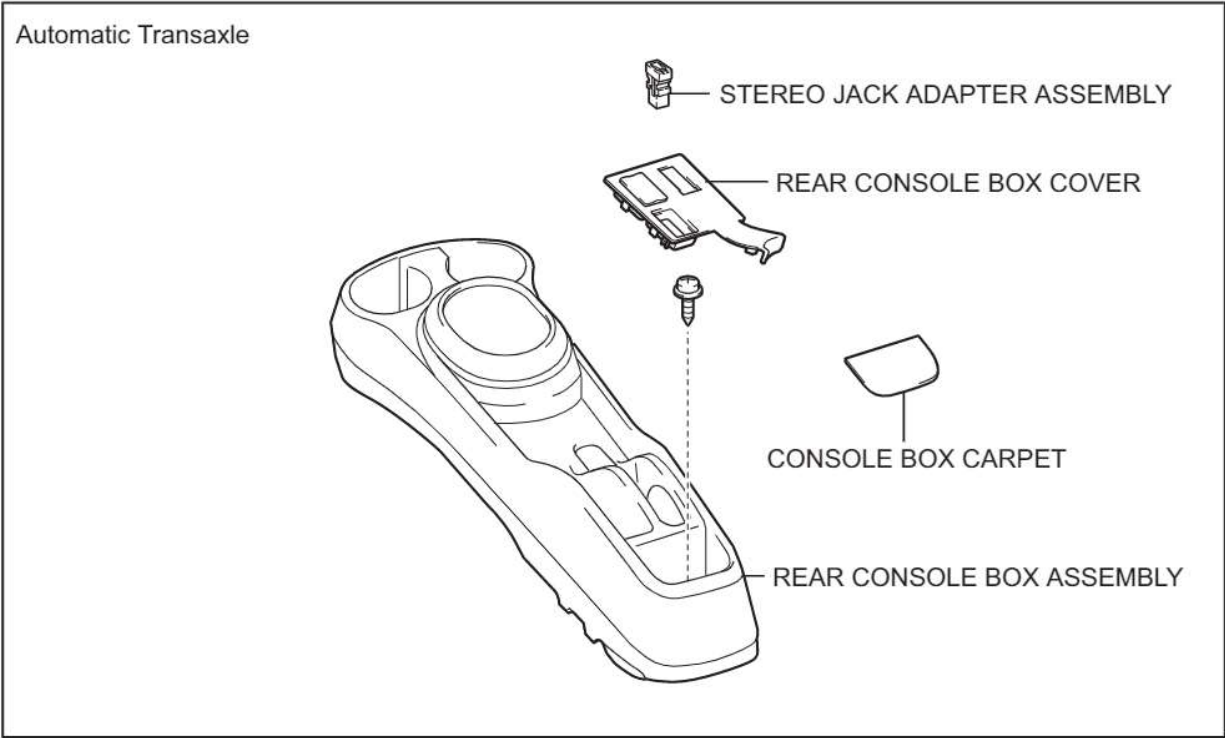

IP

IP-26



INSTRUMENT PANEL – REAR CONSOLE BOX

REMOVAL**1. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transaxle)****2. REMOVE REAR CONSOLE BOX ASSEMBLY**

- (a) Using a screwdriver, detach the 8 claws and remove the rear console box cover.

HINT:

Tape the screwdriver tip before use.

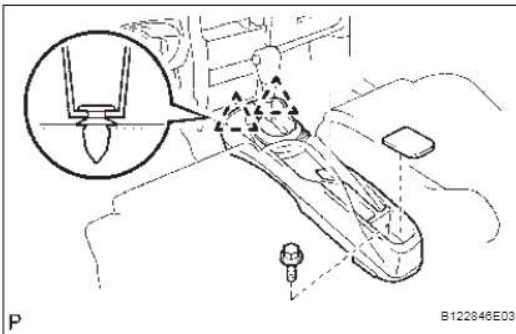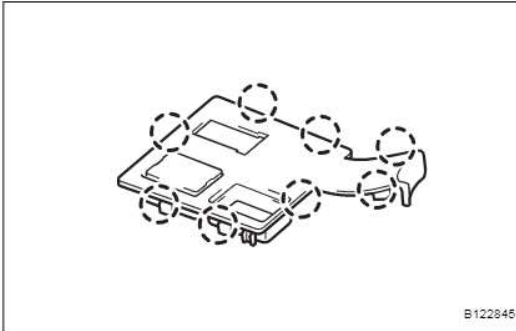

- (b) Remove the console box carpet.

- (c) Remove the screw.


- (d) Disconnect the connector.

- (e) Using a screwdriver, detach the 2 clips and remove the console box.

DISASSEMBLY**1. REMOVE STEREO JACK ADAPTER ASSEMBLY**


- (a) Detach the 2 claws and remove the stereo jack adapter.

- (b) Disconnect the connectors.

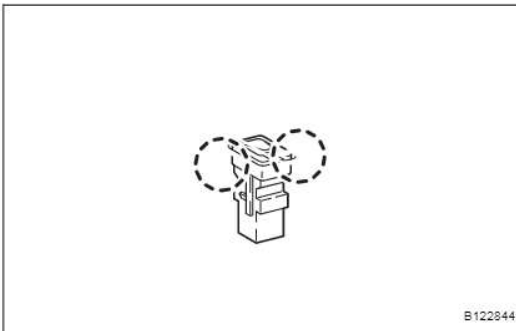**REASSEMBLY****1. INSTALL STEREO JACK ADAPTER ASSEMBLY**

- (a) Connect the connectors.


- (b) Attach the 2 claws to install the stereo jack adapter.

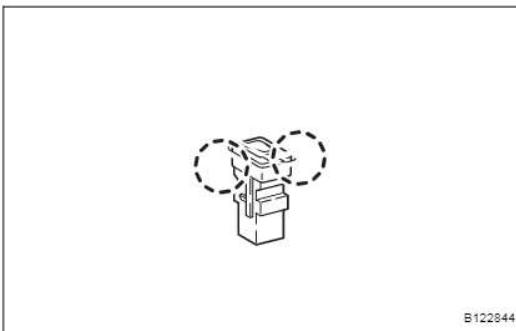


IP

INSTRUMENT PANEL – REAR CONSOLE BOX

IP-27

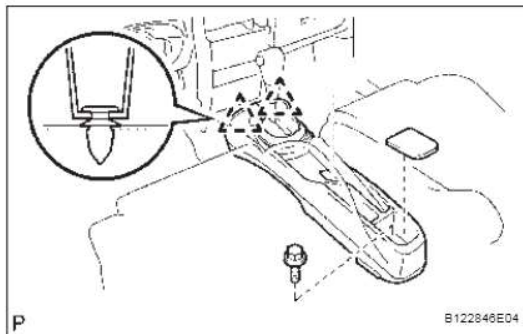**INSTALLATION****1. INSTALL REAR CONSOLE BOX ASSEMBLY**

- (a) Attach the 2 clips to install the console box.
- (b) Connect the connector.
- (c) Install the screw.
- (d) Install the console box carpet.

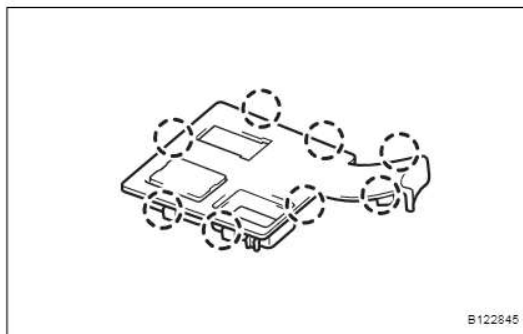

- (e) Attach the 8 claws to install the rear console box cover.

2. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transaxle)**IP**