


Chrysler PT Cruiser 2001 – 2010 fuse box diagram

Passenger Compartment Fuse Box

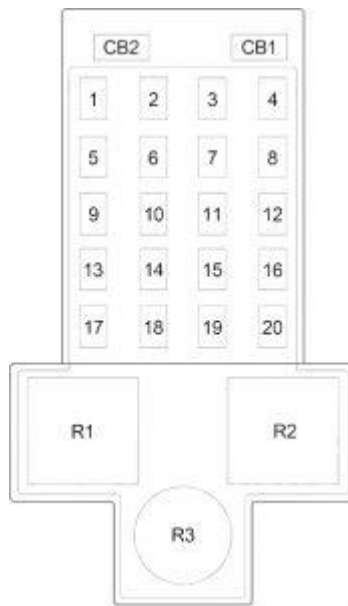

Chrysler PT Cruiser – fuse box diagram – passenger

compartment

No	A	Protected Component
1	10	'01: Remote Keyless Entry Module (Radio, Instrument Cluster, Door Lock Switch, Tail/Stop Lamp, Power Mirror Switch, Left/Right Lavalier Module, Front Park/Turn Signal Lamp, Multi-Function Switch, Rear Turn Signal Lamp, License Lamp)
	25	'?: Head Lamp Switch, Headlamp Relay, Remote Keyless Entry Module, Instrument Cluster, Fuse (Passenger Compartment): "8", "19", "20", Fuse (Engine Compartment): "16"
2	15	Head Lamp Switch (Instrument Cluster, Door Lock Switch, City Lamp, Front Park/Turn Signal Lamp, Tail/Stop Lamp, License Lamp, Remote Keyless Entry Module, Power Mirror Switch)
3	20	Remote Keyless Entry Module (Radio, Instrument Cluster, Door Lock Switch, Tail/Stop Lamp, Power Mirror Switch, Left/Right Lavalier Module, Front Park/Turn Signal Lamp, Multi-Function Switch, Rear Turn Signal Lamp, License Lamp)
4	20	'01: Driver Heated Seat Switch, Driver Heated Seat Module


	2 0	'?: Power Seat Switch
5	1 0	Occupant Restraint Controller (Airbag Control Module)
6	1 0	Headet Seat Relay, Back-Up Lamp Switch (Manual Transmission), Transmission Range Sensor (Automatic Transmission), Rear Window Defogger Switch
7	2 5	Blower Motor
8	1 5	'01: Headlamp Switch (Instrument Cluster, Front Fog Lamp), Headlamp Relay (Left/Right High Beam Headlamp)
	1 5	'?: Headlamp Switch (Instrument Cluster, Front Fog Lamp)
9	1 0	Occupant Restraint Controller (Airbag Control Module), Left/Right Side Impact Airbag Control Module
10	1 0	Instrument Cluster, Remote Keyless Entry Module, Sentry Key Immobilizer Module
11	1 0	Powertrain Control Module (Gasoline), Fuel Pump Relay (Gasoline), ABS, Engine Control Module (Diesel), EVAP/Purge Solenoid (1.6L), Throttle Inlet Pressure Solenoid (2.4L Turbo)
12	1 0	Leak Detection Pump, Air Conditioner Compressor Clutch Relay, Radiator Fan (High Speed) Relay (except 2.4L Turbo), Radiator Fan (Low Speed) Relay (except 2.4L Turbo), Brake Transmission Shift Interlock Solenoid (Automatic Transmission), Transmission Control Module (Automatic Transmission)
13	1 0	'01: Radio
	1 0	'?: Dome Lamp, Intrusion Sensor, Overhead Console Module, Left/Right Vanity Lamp, Cargo Lamp, Instrument Cluster, Sentry Key Immobilizer Module, Power Mirror Switch, Remote Keyless Entry Module
14	2 0	'01: Power Sunroof Module, Overhead Console Module

	2 0	'?: Radio, Map/Reading Lamps, Power Sunroof Module, Overhead Console Module, Antenna, Rear View Mirror, Hands Free Module, Satellite Radio
	2 0	Convertible: Radio, Compass/Temperature Mirror Module, Driver/Passenger Window Regulator Module
15	2 0	Front Wiper Motor, Rear Wiper Switch, Rear Wiper Motor, Multi-Function Switch, Front Wiper/Washer Switch
16	1 0	'?: Autostick Switch, Powertrain Control Module, Instrument Cluster
17	2 0	'01: Passenger Heated Seat Switch, Passenger Heated Seat Module
	1 5	'?: Heated Seat Relay (Driver/Passenger Heated Seat Switch, Heated Seat Module)
18	1 0	Heated Mirror
19	1 0	Right Low Beam Headlamp
20	1 0	Left Low Beam Headlamp, Headlamp Leveling Switch, Left/Right Lavalier Module
Circuit Breaker		
CB 1	2 5	'01: Headlamp Switch
CB 2	2 0	Front Power Window Switch
	2 0	Convertible: Driver/Passenger Window Regulator Module
Relay		
R1		LHD: Headlamp

	RHD: Heated Seat
R2	LHD: Heated Seat
	RHD: Headlamp
R3	–


Engine Compartment Fuse Box

Gasoline:

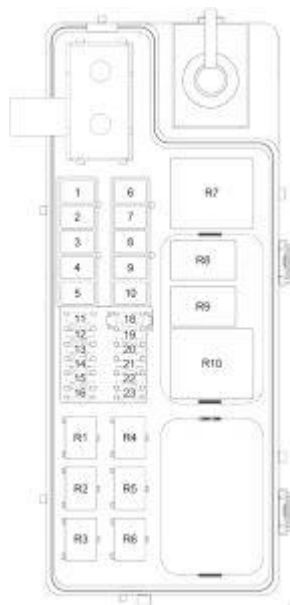

Chrysler PT Cruiser – fuse box diagram – engine compartment (gasoline)

Diesel:

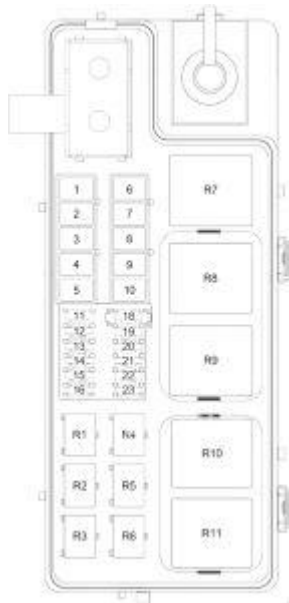

Chrysler PT Cruiser – fuse box diagram – engine compartment

(diesel)

No	A	Protected Component
1	30	Starter Relay, Ignition Switch (Transmission Control Module, Powertrain Control Module (Gasoline), Engine Control Module (Diesel), Fuse (Passenger Compartment): "9", "10", "11", "12", "13", "14", "15", "16")
2	40	ABS
3	40	Ignition Switch (Fuse (Passenger Compartment): "5", "6", "7", "CB2")
4	40	'01: Heated Seat Relay (Fuse (Passenger Compartment): "4", "17")
	20	Diesel (?): Heated Seat Relay (Fuse (Passenger Compartment): "4", "17")
	30	Gasoline (?): Heated Seat Relay (Fuse (Passenger Compartment): "4", "17")
5	40	<i>except 2.4 Turbo</i> : Radiator Fan (High Speed) Relay, Radiator Fan (Low Speed) Relay
	40	<i>2.4 Turbo</i> : Radiator Fan (Low Speed) Relay

6	2 0	'01: Power Seat Switch
	5 0	2.4 Turbo: Radiator Fan (High Speed) Rela
7	2 0	'01: ABS
	3 0	'?: ABS
8	4 0	Rear Window Defogger, (Fuse (Passenger Compartment): "18")
9	4 0	Diesel ('?): Cabin Heater Relay No.1
10	4 0	Fuse (Passenger Compartment): "1", "2", "3", "CB1"
11	1 0	Air Conditioner Compressor Clutch Relay
12	1 5	Stop Lamp Switch, ABS, Stop Lamp, Center High Mounted Stop Lamp, Powertrain Control Module (Gasoline), Engine Control Module (Diesel)
13	2 0	Gasoline: Automatic Shut Down Relay (Oxygen Sensor, Generator, Ignition Coil, Noise Suppressor, Fuel Injector, Surge Solenoid (2.4 Turbo), Radiator Fan Motor (2.4 Turbo)), Fuel Pump Relay, Data Link Connector, Powertrain Control Module
	2 0	Diesel: Automatic Shut Down Relay (Cabin Heater Relay No.1, Cabin Heater Relay No.2, Glow Plug Relay, Fuel Heater Relay, Air Conditioner Compressor Clutch Relay, Radiator Fan (High Speed) Relay, Swirl Solenoid, Wastegate Solenoid, Fuel Pump Relay, Radiator Fan (Low Speed) Relay EGR Solenoid, Generator, Camshaft Position Sensor, Mass Air Flow Sensor, Fuel Pressure Solenoid), Data Link Connector, Engine Control Module
14	1 5	Horn Relay

15	2 0	Transmission Control Relay, Transmission Control Module, Transmission Solenoid/Pressure Switch Assembly
16	1 5	'?: Left/Right High Beam Headlamp
17	–	
18	1 5	'01: Radio, Map/Reading Lamps, Dome Lamp, Intrusion Sensor, Overhead Console Module, Left/Right Vanity Lamp, Cargo Lamp, Instrument Cluster, Sentry Key Immobilizer Module, Power Mirror Switch, Siren, Remote Keyless Entry Module
	2 0	'?: Siren, Radio, Fuse (Passenger Compartment): "13"
19	1 5	Multi-Function Switch
20	2 0	Ignition Switch, Cigar Lighter, Front Power Outlet, Rear Power Outlet
21	1 5	Diesel ('?): Fuel Pump Relay (PCV Heater, Fuel Heater Relay, Fuel Pump Module)
22	2 0	Headlamp Switch (Fog Lamp, Instrument Cluster)
23	–	
Relay		
R1	Horn	
R2	Fuel Pump	
R3	Automatic Shut Down	

R4	Starter
R5	Air Conditioner Compressor Clutch
R6	<i>except 2.4 Turbo</i> : Radiator Fan (High Speed)
R7	Radiator Fan (Low Speed)
R8	Gasoline: Transmission Control
	Diesel: Cabin Heater (No.2)
R9	Gasoline: –
	Diesel: Cabin Heater (No.1)
R10	Gasoline: –
	Diesel: Glow Plug <i>2.4 Turbo</i> : Radiator Fan (High Speed) (Pic. for Diesel)
R11	Diesel: Fuel Heater