


2. Assembly of Exterior Parts

A: BODY REINFORCING PARTS

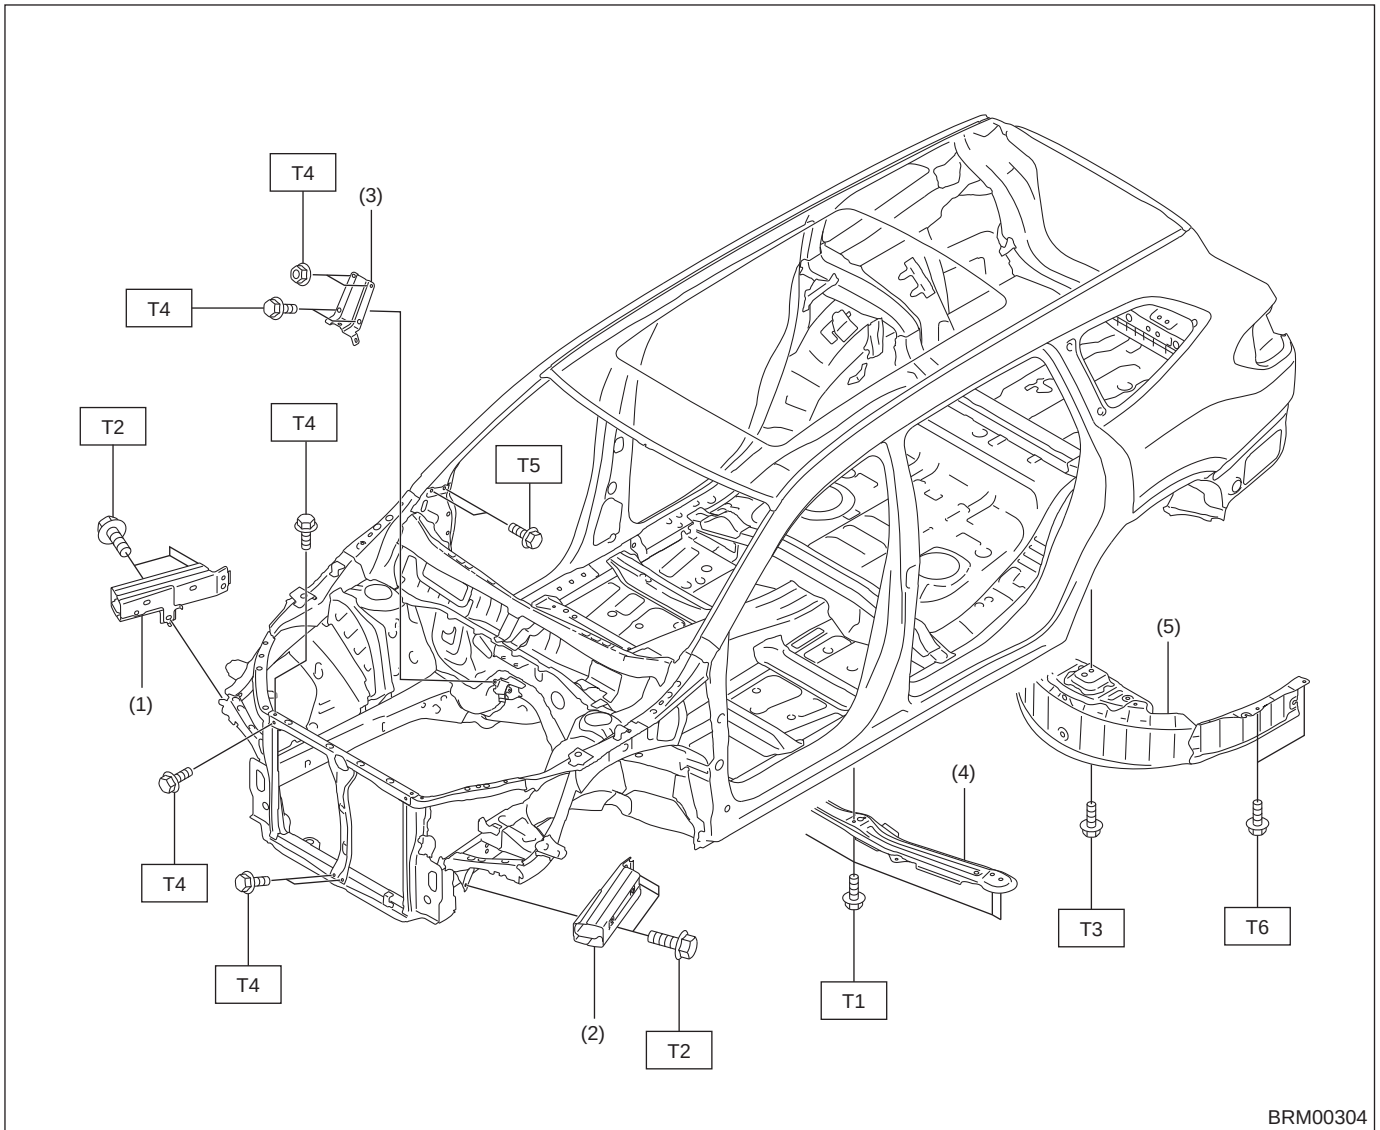

- (1) GUSSET CP FT SD RH
- (2) GUSSET CP FT SD LH
- (3) PLATE PTG STPR
- (4) BRACE FLR CTR CP
- (5) COVER SP TIRE CP

Tightening torque: N·m (kgf-m, ft-lb)

T1: 45 (4.59, 33.19)

T2: 37 (3.77, 27.29)

T3: 32 (3.27, 23.60)


T4: 18 (1.84, 13.28)

**T5: Secure 18 (1.84, 13.28) or more.
The bolts should be seated and not broken.**

T6: 10 (1.02, 7.38)

Assembly of Exterior Parts

B: Bracket brace (Model with sunroof)

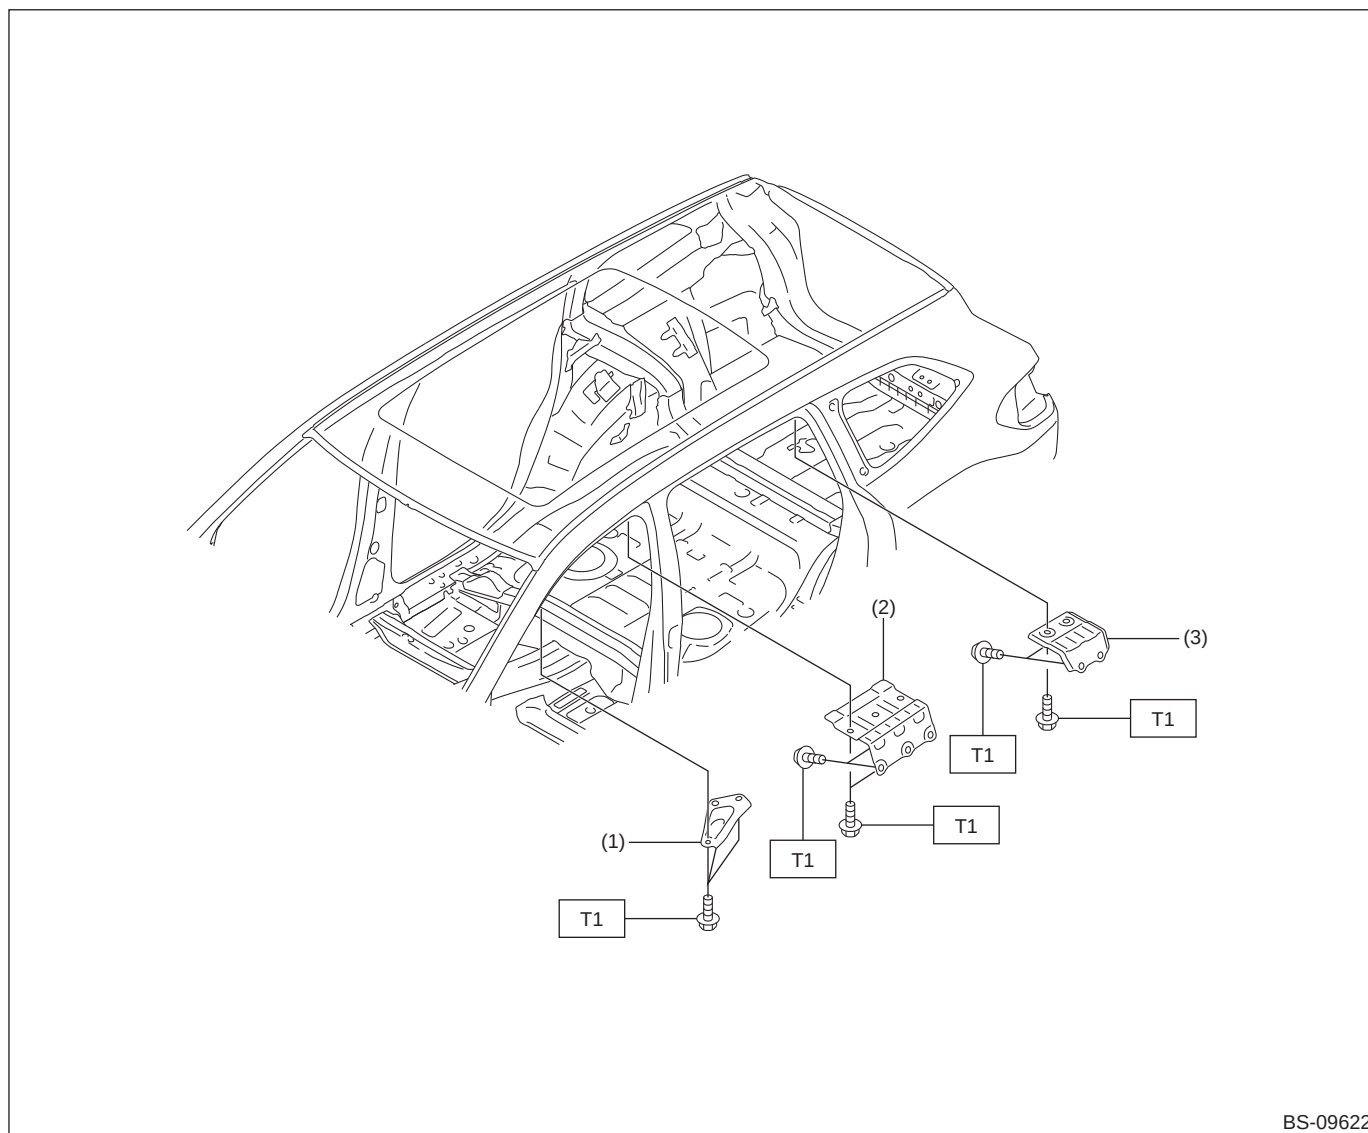


BS-09622

- (1) BRKT BRACE SR F
- (2) BRKT BRACE SR C
- (3) BRKT BRACE SR R

Tightening torque: N·m (kgf-m, ft-lb)
T1: 12.7 (1.29, 9.37)

Assembly of Exterior Parts

C: Bracket brace (Model without sunroof)

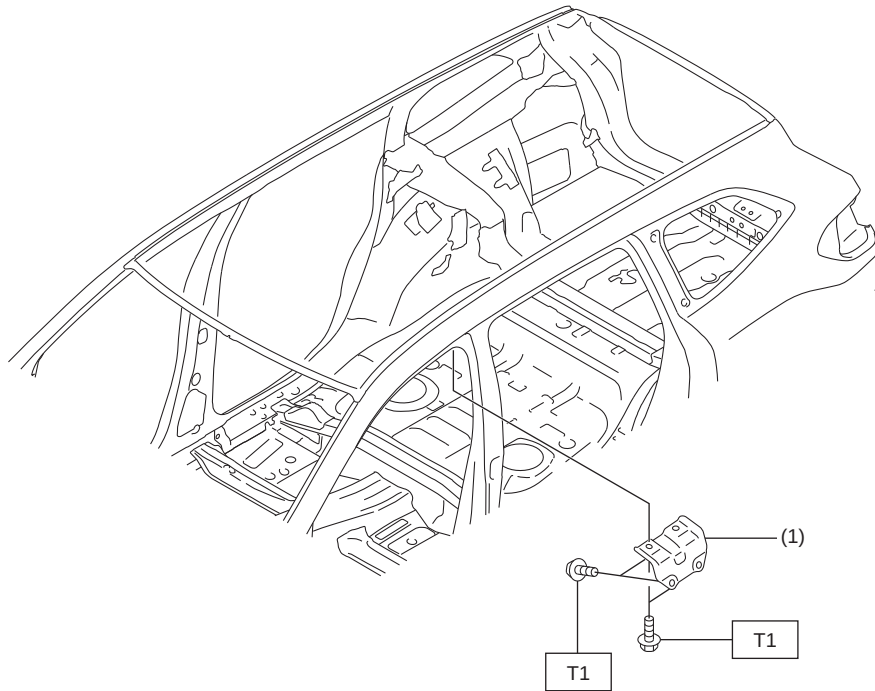

BS-09623

(1) BRKT BRACE

Tightening torque: N·m (kgf-m, ft-lb)
T1: 12.7 (1.29, 9.37)