


Pontiac Grand Am 1993 fuse box diagram

Instrument Panel Fuse Block – Driver's Side

The main fuse panel is located on the left side of the instrument panel.

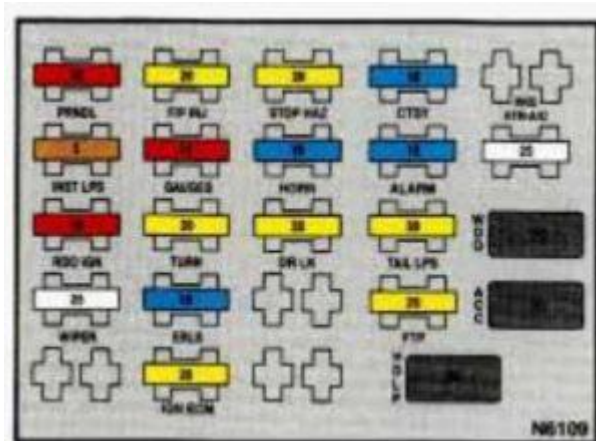

Pontiac Grand Am – fuse box

Fuses	Ampere rating [A]	Usage
PRNDL	10	Back Up Lights, Electronic PRNDL (automatic transaxle)
F/P INJ	20	Fuel Pump, Fuel Injectors
STOP HAZ	20	Turn/Hazard/Stop Lights, Anti-Lock Brakes (ABS), BrakeTransaxle Shift Interlock (BTSI)
CTSY	15	Power Door Locks, Power Mirrors, Cigar Lighter BLANK
INST LPS	5	Instrument Panel Lights
GAUGES	10	Rear Window Defogger Relay, Chime, Gages, ABS , BTSI, Daytime Running Lights (Dm) (Canada)
HORN	15	Horn

ALARM	15	Chime, Interior Lights, Passive Restraints, Radio/Clock Memory
HTR-A/C	25	Heater, Air Conditioning, ABS, DRL (Canada), Engine Block Heater
RDO IGN	10	Radio, Cruise Control, Variable Effort Steering
TURN	20	Turn Signals
DR LK	20	Power Door Lock
TAIL LPS	20	Exterior Lights, Fog Lights, Instrument Panel Lights, DRL (Canada)
WDO	30	Power Windows (Circuit Breaker
WIPER	25	Windshield WipedWasher
ERLS	15	Engine Controls, Starter and Charging System BLANK
FTP	20	Flash-to-Pass (US.
ACC	30	Power Seats, Rear Window Defogger (Circuit Breaker) BLANK
IGN ECM	20	Engine Control Module, Ignition System BLANK
HDLP	20	Headlights, DRL (Canada) (Circuit Breaker)