


Toyota Hilux (2014) – fuse box diagrams

Year of production: 2014

Fuse box in engine compartment

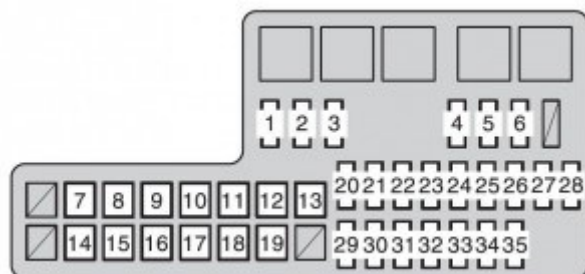


Toyota Hilux mk8 – fuse box – engine

compartment

Fuse	Ampere	Circuit
1 SPARE	25	Spare fuse
2 SPARE	15	Spare fuse
3 SPARE	10	Spare fuse
4 FOG	7,5	Front fog lights
5 HORN	10	Horn
6 EFI	25	Multiport fuel injection system/ sequential multiport fuel injection system
7 PTC NO.1	50	Power heater
8 PWR SEAT	30	Power seat
9 PTC NO.2	50	Power heater
10 RR CLR*1	40	No circuit
H-LP CLN*2	40	Headlight cleaners
11 FR HTR	50	Air conditioning system, A/C
12 ABS NO.2	30	ABS, TRC, VSC
13 ABS NO.1	40	ABS, TRC, VSC
14 ALT	100	Charging system, PWR SEAT, RR CLR, H-LP CLN, FR HTR, AM1, IG1, PTC NO.1, PTC NO.2, PWR OUT, STOP, TAIL, OBD
15 GLOW	80	Engine glow system
16 BATT P/I	50	FOG, HORN, EFI
17 AM2	30	Engine starter, ST, IGN, INJ, MET
18 MAIN	40	H-LP RH, H-LP LH, H-LP RL, H-LP LL
19 A/PUMP	50	Emission control system
20 H-LP RL	15	Right-hand headlight (low beam)
21 H-LP LL	15	Left-hand headlight (low beam)
22 H-LP RH	15	Right-hand headlight (high beam), righthand headlight (low beam)

23	H-LP LH	15	Left-hand headlight (high beam), lefthand headlight (low beam)
24	EFI No.2	10	Multiport fuel injection system/ sequential multiport fuel injection system
25	ECU-IG-NO.2	10	Charging system, air conditioning system, ABS, VSC, headlight cleaners
26	ECU-B	10	Door courtesy switches, power door lock system, wireless remote control system, steering sensor, headlights
27	RAD	20	Audio system
28	DOME	7,5	Interior lights, engine switch light, personal light, gauges and meters, clock, multi-information display, wireless remote control system, daytime running light system, fog light
29	A/F	20	Emission control system
30	ETCS	10	Multiport fuel injection system/ sequential multiport fuel injection system
31	ALT-S	7,5	Charging system
32	TURN-HAZ	15	Emergency flashers and turn signal lights
33	SIREN	7,5	SIREN
34	ECU-B No.2	7,5	Air conditioning system
35	DCC	30	ECU-B, DOME, RAD
*1: For TGN26L-PRMDK and KUN25L-PRMDH models*3			
*2: Except for TGN26L-PRMDK and KUN25L-PRMDH models*3			
*3: The model code is indicated on the manufacturer's label or plate.			

Fuse box in instrument panel (driver's side) – front side

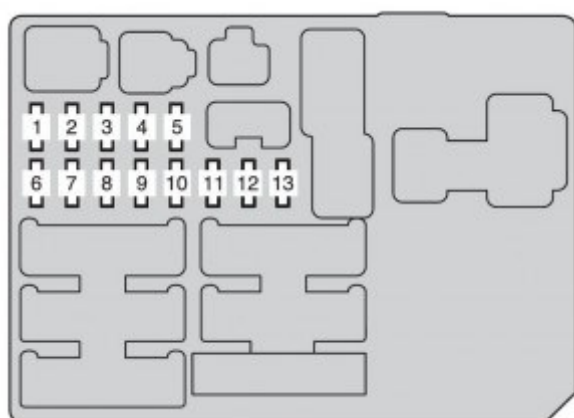


Toyota Hilux mk8 – fuse box – instrument panel

(driver's side – front side)

	Fuse	Ampere	Circuit
1	PWR OUT	15	Power outlet
2	TAIL	10	Instrument panel light, front fog lights, headlight beam level control system, front position lights, tail lights, license plate lights,

			multiport fuel injection system/sequential multiport fuel injection system, multi-information display, daytime running light system and automatic headlight system
3	STOP	10	Stop lights, high mounted stoplight, multiport fuel injection system/ sequential multiport fuel injection system, ABS, TRC, VSC and shift lock control system
4	OBD	7,5	On-board diagnosis system
5	INJ	15	Multiport fuel injection system/ sequential multiport fuel injection system
6	ECU-IG & GAUGE	10	Air conditioning system, charging system, rear differential lock system, ABS, TRC, VSC, emergency flashers, turn signal lights, back-up lights, multiport fuel injection system/sequential multiport fuel injection system, shift lock control system, rear window defogger, headlights, door courtesy switches, power door lock system, wireless remote control system, steering sensor, daytime running light system, cruise control, headlight cleaners, seat heaters, outside rear view mirror defoggers, multi-information display and passenger's seat belt reminder light
7	WIP	20	Windshield wiper and washer
8	IGN	7,5	Multiport fuel injection system/ sequential multiport fuel injection system, SRS airbags and fuel pump
9	ACC	7,5	Audio system, power outlet, clock, power rear view mirror control system, shift lock control system and multi-information display
10	CIG	15	Cigarette lighter
11	MET	7,5	Gauges and meters and DPF system
12	A/C	10	Air conditioning system
13	ST	7,5	Starting system, gauges and meters and multiport fuel injection system/sequential multiport fuel injection system

Fuse box in instrument panel (driver's side) – rear side

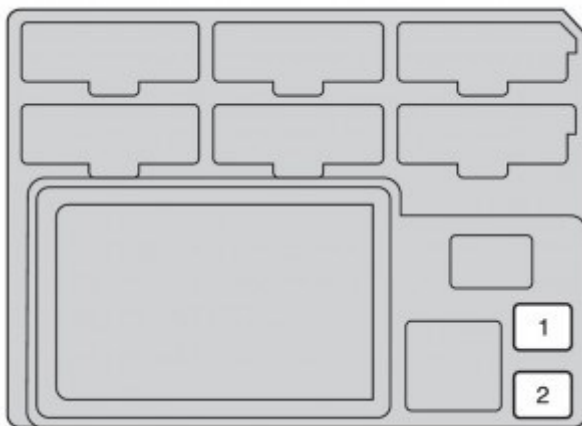


Toyota Hilux mk8 – fuse box – instrument panel

(driver's side – rear side)

Fuse	Ampere	Circuit
------	--------	---------

1	AM1	40	Rear differential lock system, ABS, TRC, VSC, ACC, CIG, ECU-IG & GAUGE, WIP
2	IG1	40	PWR, S-HTR, 4WD, DOOR, DEF and MIR HTR fuses

Fuse box in instrument panel (passenger's side)

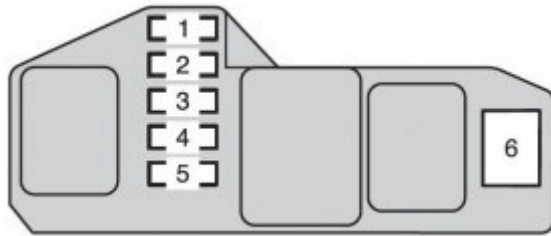

Toyota Hilux mk8 – fuse box – instrument panel

(passenger's side)

Fuse	Ampere	Circuit
1 MIR-HTR	15	Outside rear view mirror defoggers
2 4WD	20	Rear differential lock system, ABS, TRC and VSC
3 S-HTR	15	Seat heaters
4 DEF	20	Rear window defogger and multiport fuel injection system/sequential multiport fuel injection system
5 DOOR	25	Power door lock system and power windows
6 PWR	30	Power windows

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.