

BODY & TRIM

SECTION BT

MODIFICATION NOTICE:

- The door trim and roof trim have been changed.
- The front and rear doors have been changed.
- A power door lock system with the Super Lock System has been adopted on RHD 3-door hatchback models.

CONTENTS

PRECAUTIONS	2	DOOR	3
Supplemental Restraint System (SRS) "AIR		Front Door	3
BAG" (Dual Air Bag System)	2	Rear Door	4
Supplemental Restraint System (SRS) "AIR		INTERIOR TRIM	5
BAG" (Single Air Bag System)	2	Door Trim	5
		Roof Trim.....	8

★ For wiring diagrams of body electrical systems, refer to EL section.

BT

PRECAUTIONS

Supplemental Restraint System (SRS) “AIR BAG” (Dual Air Bag System)

The Supplemental Restraint System “Air Bag”, used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger in a frontal collision. The Supplemental Restraint System consists of air bag modules (located in the center of the steering wheel and on the instrument panel on the passenger side), a diagnosis sensor unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the **RS section** of Service Manual, Pub. No. SM5E-0N15G0.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses are covered with yellow insulation either just before the harness connectors or for the complete harness, for easy identification.

Supplemental Restraint System (SRS) “AIR BAG” (Single Air Bag System)

The Supplemental Restraint System “Air Bag”, used along with a seat belt, helps to reduce the risk or severity of injury to the driver in a frontal collision. The Supplemental Restraint System consists of an air bag module (located in the center of the steering wheel), a diagnosis sensor unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the **RS section** of Service Manual, Pub. No. SM5E-0N15G0.

WARNING:




- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual.

DOOR


Front Door

- For removal of door trim, refer to "Door Trim" in "INTERIOR TRIM" for details, BT-5.
- After adjusting door or door lock, check door lock operation.
- ★ For details of Super Lock System, refer to "POWER DOOR LOCK — Super Lock —" in EL section.

SEC. 800•803•805

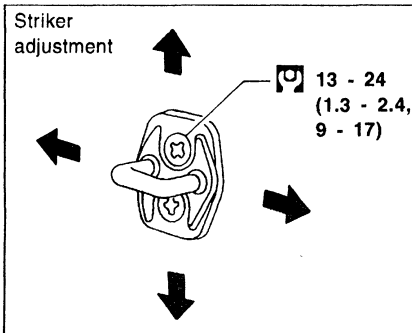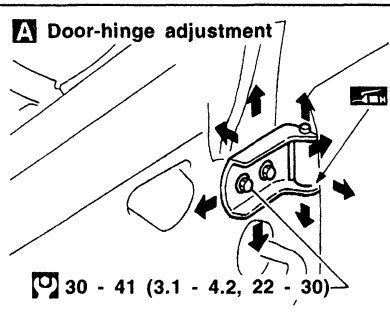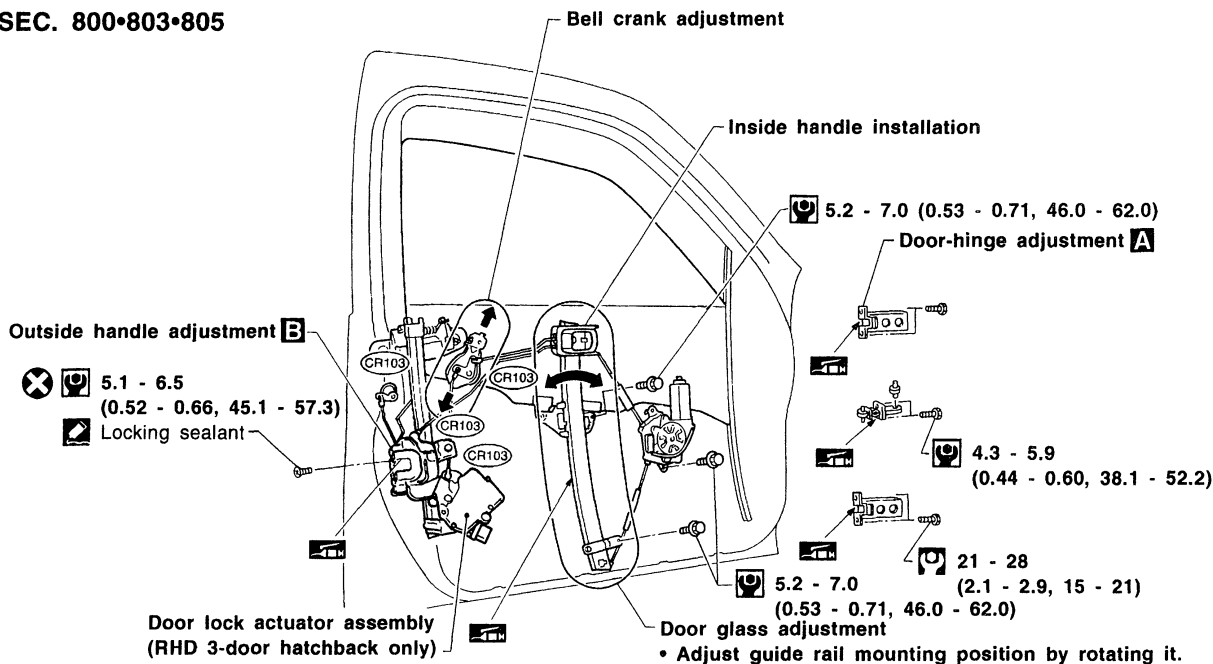

- Parts consisting the system for the 3-door hatchback are the same as for 4-door sedan and 5-door hatchback.

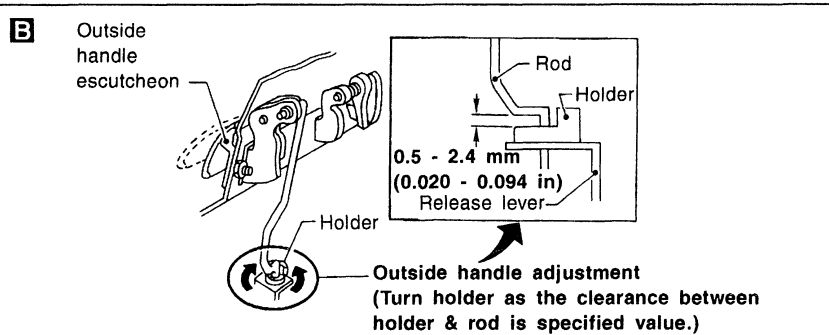

⊗ : N•m (kg-m, ft-lb)

⊙ : N•m (kg-m, in-lb)





BT

SBT244

DOOR

Rear Door

SEC. 820•823•825

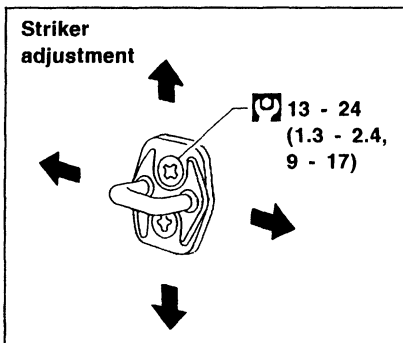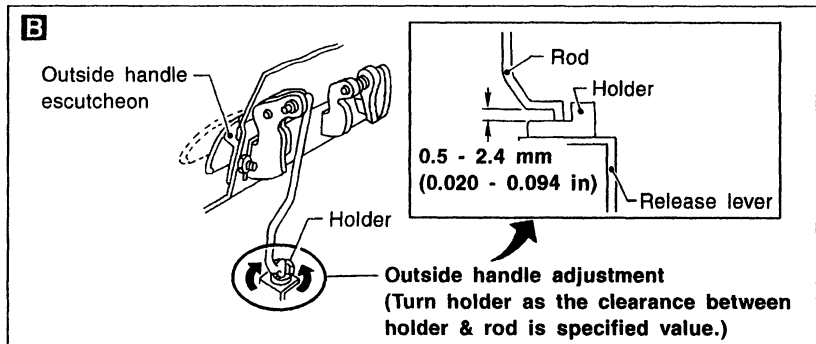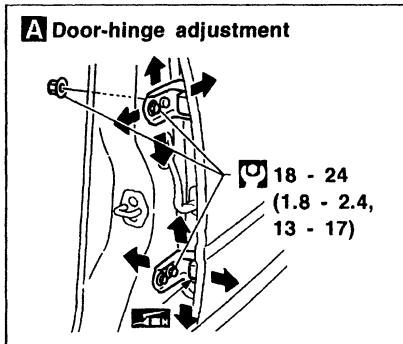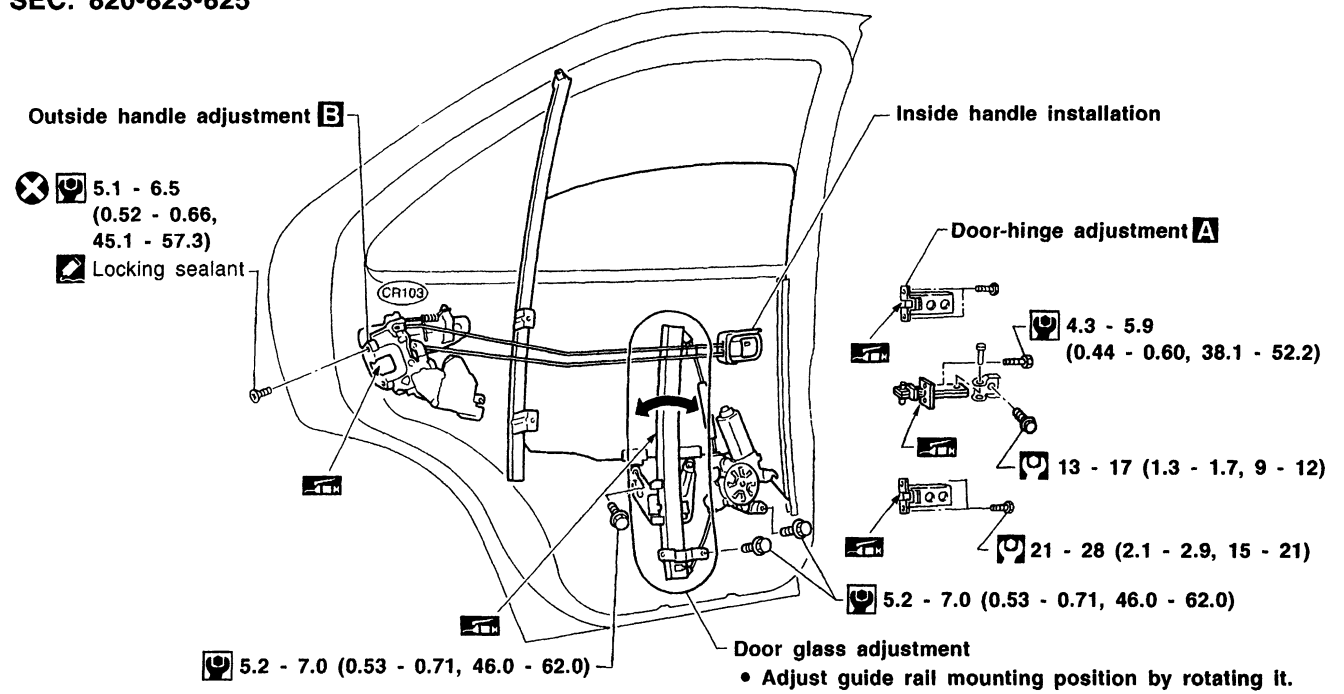

: N•m (kg-m, ft-lb)

: N•m (kg-m, in-lb)

SBT245




INTERIOR TRIM

Door Trim

REMOVAL — Door trim

3-door hatchback

- ① Remove inside handle escutcheon.
- ② Remove power window switch, then disconnect the connector.
- ③ Remove screw securing pull handle and remove pull handle.
- ④ Remove screws and clips (C103) securing door finisher.
- ⑤ Lift out door finisher.

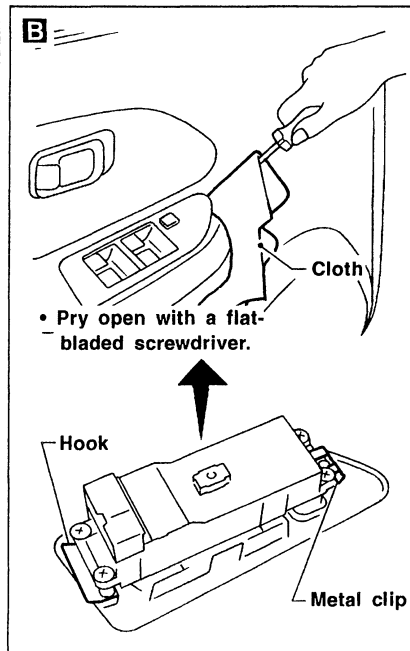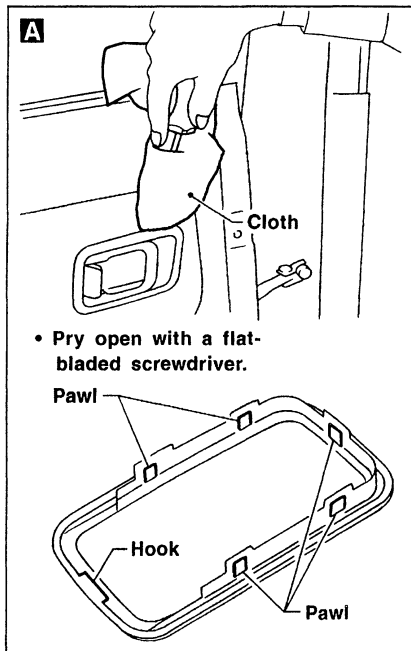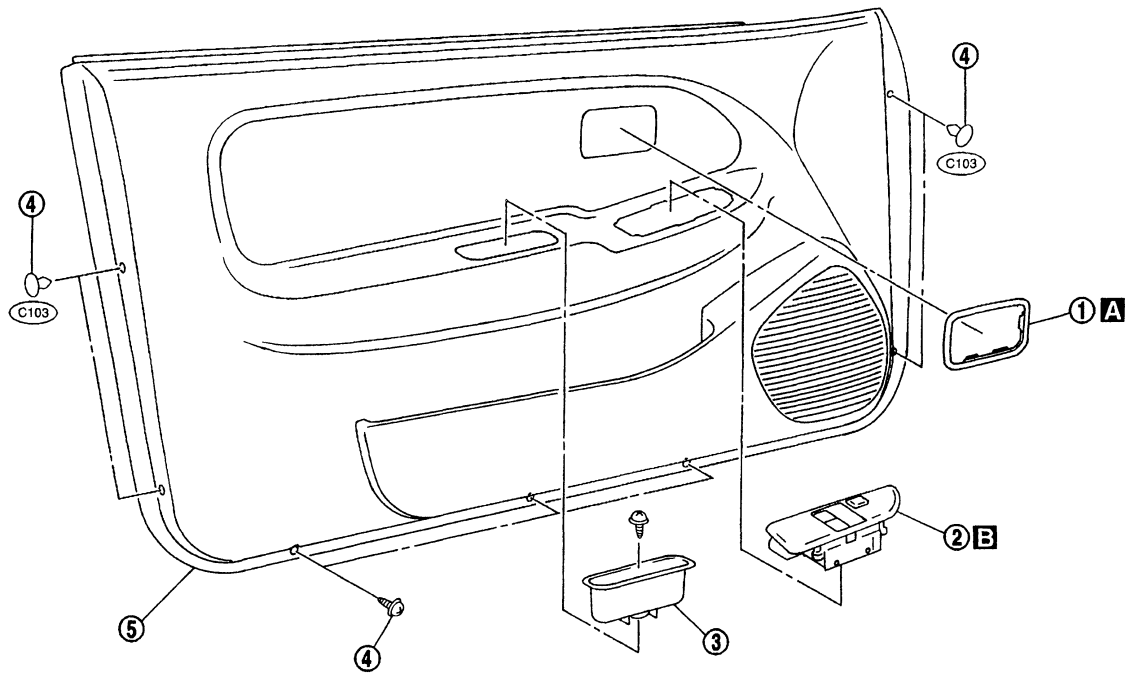

BT

SBT240



INTERIOR TRIM

Door Trim (Cont'd)

REMOVAL — Door trim

4-door sedan and 5-door hatchback


- ① Remove inside handle escutcheon.
- ② Remove power window switches, then disconnect the connector.
- ③ Remove screw securing pull handle and remove pull handle.
- ④ Remove window regulator handle (Manual window models).
- ⑤ Remove screws and clips (C103) securing door finisher.
- ⑥ Lift out door finisher.

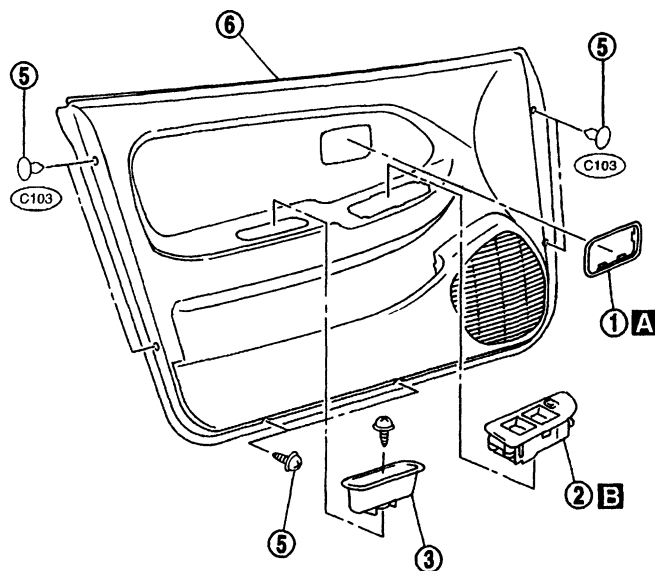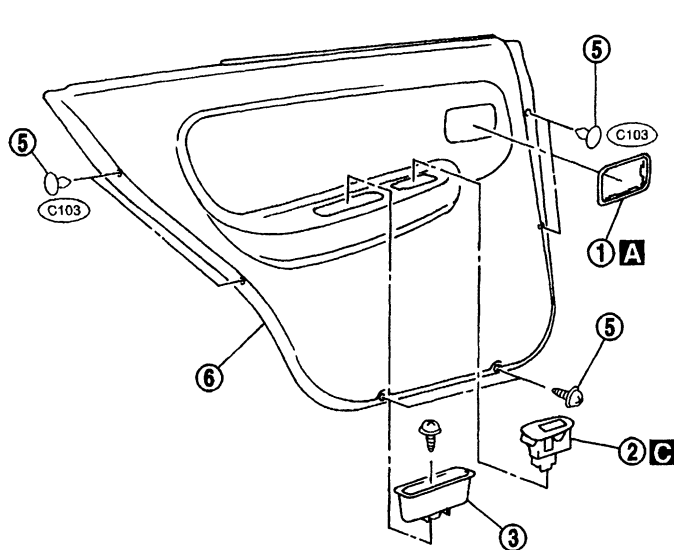


SBT241

INTERIOR TRIM

Door Trim (Cont'd)

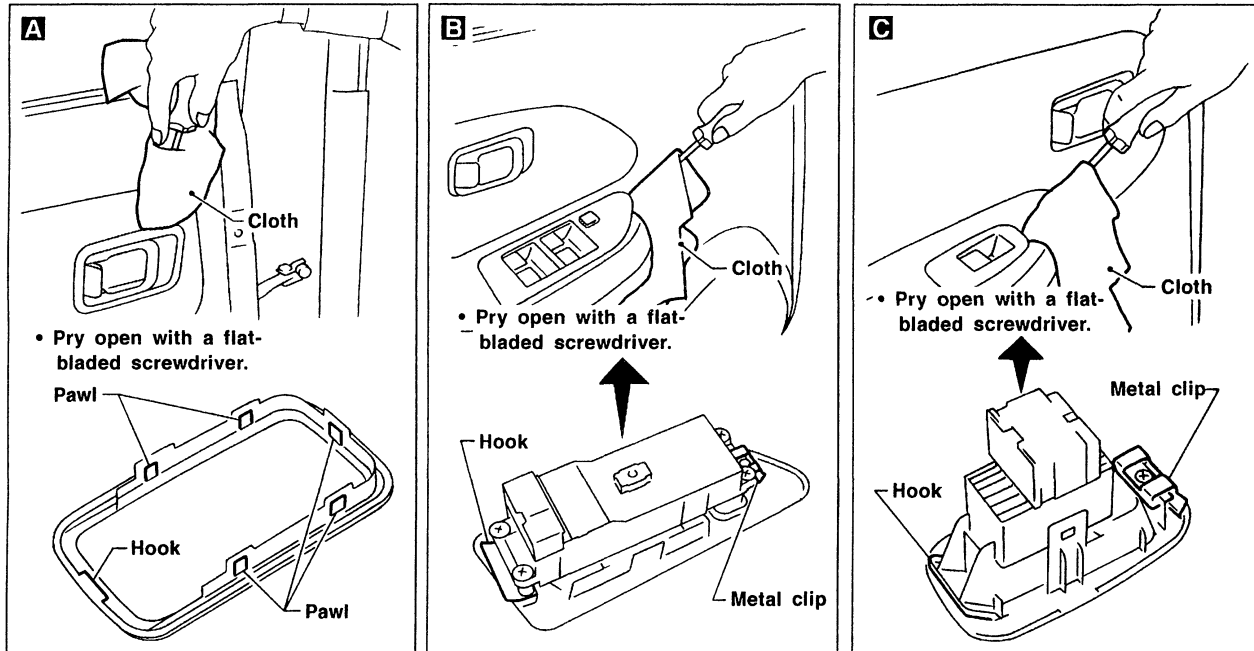


Manual window regulator handle Removal

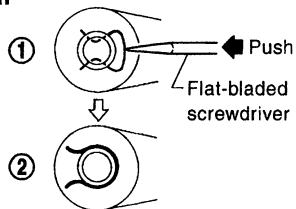

Squeeze the regulator handle clip in place with a screwdriver and remove the regulator handle from the regulator shaft.
Set the regulator handle clip as shown in figure ①.

Installation

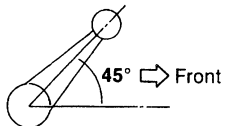

Push the regulator handle to install it onto the regulator shaft.
Install the regulator handle in place as shown in the figure with the window completely closed.

BT

SBT247

INTERIOR TRIM



Roof Trim

REMOVAL — Headlining

4-door sedan

- ① Remove front and rear seats. Refer to "SEAT" in BT section of Service Manual, Pub. No. SM5E-0N15G0.
- ② Remove front and rear seat belts. Refer to "SEAT BELTS" in RS section of Service Manual, Pub. No. SM5E-0N15G0.
- ③ Remove body side trim. Refer to "Side and Floor Trim" in BT section of Service Manual, Pub. No. SM5E-0N15G0.
- ④ Remove sunroof switch. (Models equipped with sunroof)
- ⑤ Remove sunroof welt. (Models equipped with sunroof)
- ⑥ Remove inside mirror assembly.
- ⑦ Remove sun visors.
- ⑧ Remove interior lamp assembly.
- ⑨ Remove assist grips.
- ⑩ Remove clips (C103) securing headlining.
- ⑪ Remove headlining.

SEC. 264•738•963•964

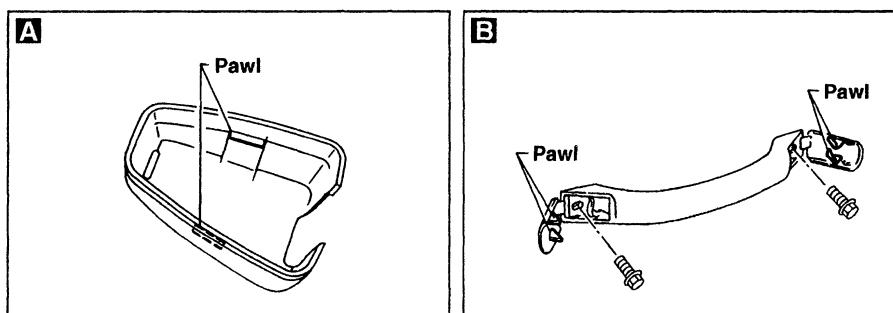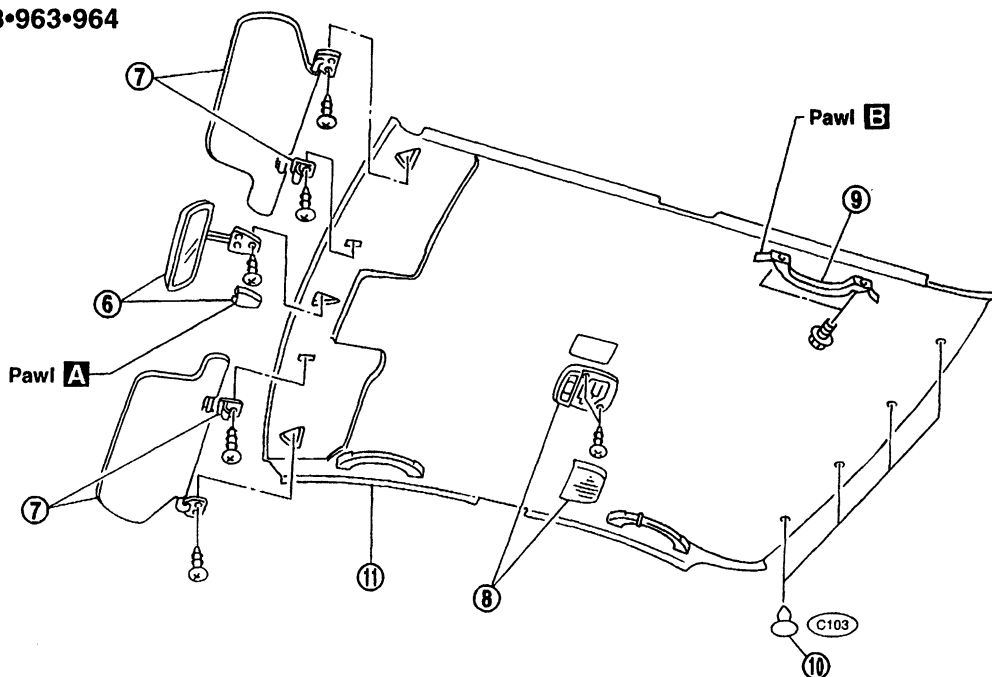

SBT242

INTERIOR TRIM





Roof Trim (Cont'd)

REMOVAL — Headlining

3-door and 5-door hatchback

- ① Remove front and rear seats. Refer to "SEAT" in BT section of Service Manual, Pub. No. SM5E-0N15G0.
- ② Remove front and rear seat belts. Refer to "SEAT BELTS" in RS section of Service Manual, Pub. No. SM5E-0N15G0.
- ③ Remove body side trim. Refer to "Side and Floor Trim" in BT section of Service Manual, Pub. No. SM5E-0N15G0.
- ④ Remove sunroof switch. (Models equipped with sunroof)
- ⑤ Remove sunroof welt. (Models equipped with sunroof)
- ⑥ Remove inside mirror assembly.
- ⑦ Remove sun visors.
- ⑧ Remove interior lamp assembly.
- ⑨ Remove assist grips.
- ⑩ Remove roof rear garnish.
- ⑪ Remove headlining.

SEC. 264•738•963•964

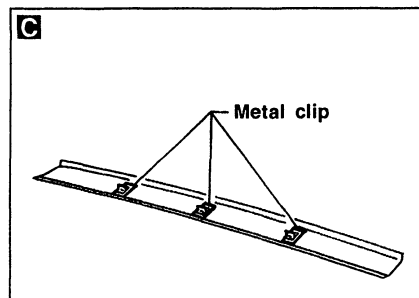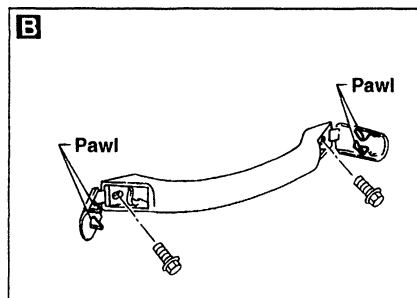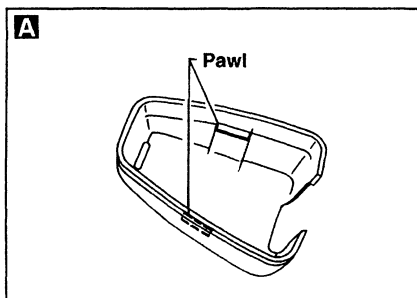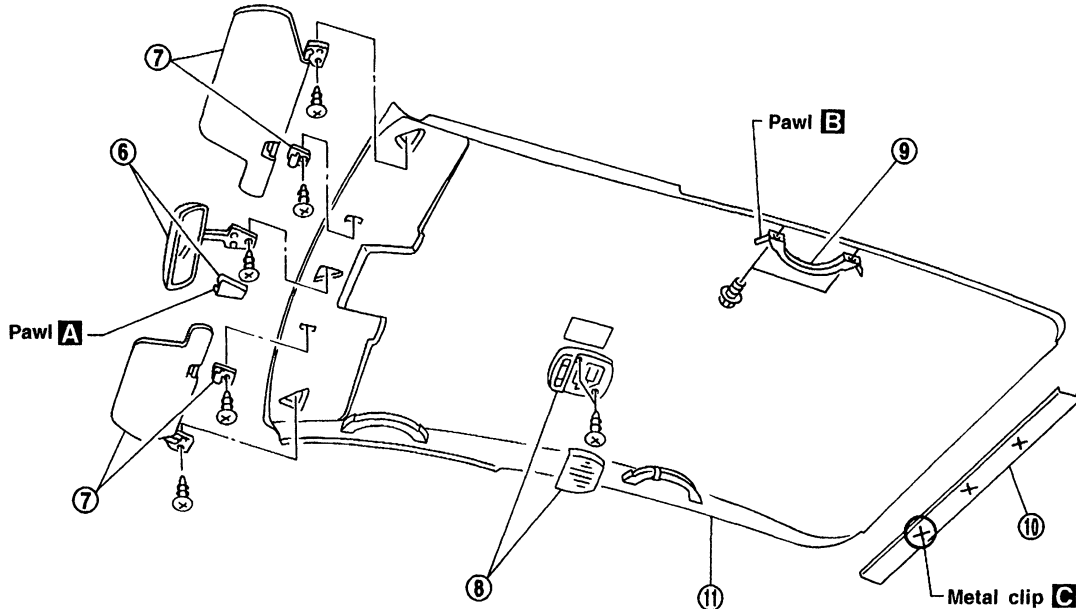

BT

SBT243