

ALPHABETICAL INDEX

SECTION **IDX**

ID

ALPHABETICAL INDEX

A

A/C circuit diagram HA-3
A/C service data specification HA-22
A/C trouble diagnoses HA-3
A/C wiring diagram HA-5
ABS wiring diagram BR-7
Accelerator control system FE-2
Accelerator position sensor
(CD engine) EC-224
Accelerator position switch
(CD engine) EC-249
Accelerator switch (F/C) (CD engine) EC-197
Adjustment resistor (CD engine) EC-184
Air conditioner cut control
(CD engine) EC-114
Air flow meter - See Mass air flow
sensor (SR engine) EC-49
Auxiliary air control (AAC)
(SR engine) EC-72

B

Back-up lamp EL-39
Battery EL-15
Baulk ring (MT) (RS5F30A &
RS5F31A) MT-6
Baulk ring (MT) (RS5F32A) MT-8
Belt inspection (drive belt)
(CD engine) MA-9
Belt inspection (drive belt)
(SR engine) MA-7
Brake pedal BR-2

C

Camshaft position sensor (CMPS)
(SR engine) EC-46
Camshaft position sensor (CMPS)
(PUMP) (CD engine) EC-167
Camshaft position sensor
(SR engine) EC-48
Charging system EL-23
Clearance lamp EL-33
Clutch release bearing CL-2
Clutch withdrawal lever CL-2
Combination meter EL-53
CONSULT for ECCS (CD engine) EC-130
CONSULT for ECCS (SR engine) EC-26
CONSULT general information GI-4
Control lever (MT) MT-4
Control sleeve position sensor
(CSPS) (CD engine) EC-179

Control valve (AT) AT-2
Cooling circuit (SR engine) LC-4
Cooling fan control (CD engine) EC-203
Cooling fan control (SR engine) EC-82
Cooling fan motor (CD engine) EC-212
Cooling fan relay (CD engine) EC-212
Coupling sleeve (MT)
(RS5F30A & RS5F31A) MT-6
Coupling sleeve (MT) (RS5F32A) MT-8
Crank angle sensor built into distrib-
utor - See Camshaft position sen-
sor (SR engine) EC-46
Crankcase emission control system -
See positive crankcase ventilation
(CD engine) EC-116
Crankshaft position sensor (TDC)
(CD engine) EC-228
Cylinder block (CD engine) EM-23
Cylinder block (SR engine) EM-14
Cylinder head (CD engine) EM-22
Cylinder head (SR engine) EM-13
Cylinder head bolt tightening
(SR engine) EM-8

D

Daytime light system EL-27
Daytime running light - See Daytime
light system EL-27
Detonation sensor - See Knock sen-
sor (SR engine) EC-57
Diagnostic trouble code (DTC) chart
(CD engine) EC-142
Diagnostic trouble code (DTC) for
ECCS OBD system (CD engine) EC-125
Differential gear (FF MT)
(RS5F30A & RS5F31A) MT-6
Differential gear (FF MT) (RS5F32A) MT-8
Door trim BT-5
Door, front BT-3
Door, rear BT-4

E

ECCS basic inspection (CD engine) EC-140
ECCS basic inspection (SR engine) EC-32
ECCS circuit diagram (CD engine) EC-106
ECCS circuit diagram (SR engine) EC-9
ECCS component parts location
(CD engine) EC-104
ECCS component parts location
(SR engine) EC-11
ECCS on board diagnostic system
(CD engine) EC-125
ECCS on board diagnostic system
(SR engine) EC-26

ALPHABETICAL INDEX

ECCS symptom matrix chart
(CD engine) EC-148
ECCS system diagram and chart
(CD engine) EC-107
ECCS system diagram and chart
(SR engine) EC-10
ECCS trouble diagnoses (CD engine) EC-136
ECCS trouble diagnoses (SR engine) EC-32
ECM input/output signal (CD engine) EC-154
ECM input/output signal (SR engine) EC-37
EGR control valve (CD engine) EC-246
Electric governor (CD engine) EC-188
Electrical load signal circuit
(GA engine) EC-6
Electrical load signal circuit
(SR engine) EC-93
Electrical unit Foldout
Electrical units location EL-120
Electronic fuel injection pump
(CD engine) EC-122
Engine control module (ECM)
ECCS-D control module
(CD engine) EC-201
Engine coolant temperature sensor
(ECTS) (CD engine) EC-172
Engine coolant temperature sensor
(ECTS) (SR engine) EC-52
Engine outer component parts
(CD engine) EM-16
Engine outer component parts
(SR engine) EM-4
Engine serial number GI-8
EVAP canister purge volume control
solenoid valve (SR engine) EC-62
Evaporative emission (EVAP) system
(SR engine) EC-15
Exhaust system FE-3
Exterior lamp EL-33

F

Fast idle cam (FIC) inspection and
adjustment (SR engine) EC-25
Final drive (FF MT)
(RS5F30A & RS5F31A) MT-6
Final drive (FF MT) (RS5F32A) MT-8
Fog lamp, front EL-41
Fog lamp, rear EL-44
Front disc brake BR-6
Front door BT-3
Front fog lamp EL-41
Front washer EL-72
Fuel cut control (at no load & high
engine speed) (CD engine) EC-115
Fuel cut solenoid valve (CD engine) EC-216

Fuel gauge EL-54
Fuel injection system (CD engine) EC-110
Fuel pump (SR engine) EC-69
Fuel pump control (SR engine) EC-69
Fuel temperature sensor (CD engine) EC-220

G

Gauges EL-53
Gears (MT) (RS5F30A & RS5F31A) MT-6
Gears (MT) (RS5F32A) MT-8
Glow plug (CD engine) EC-239
Glow relay (CD engine) EC-239

H

Harness layout EL-122
Headlamp aiming control EL-31
How to erase DTC for ECCS OBD
system (CD engine) EC-125
How to read wiring diagrams GI-3

I

IACV - FICD solenoid valve
(SR engine) EC-81
IACV-FICD solenoid valve
(SR engine) EC-75
Idle mixture ratio (SR engine) EC-18
Idle speed (SR engine) EC-18
Ignition timing (SR engine) EC-18
Illumination EL-46
Injection nozzle (CD engine) EC-117
Injection timing control valve
(CD engine) EC-193
Injector (SR engine) EC-68
Injector removal and installation
(SR engine) EC-16
Input shaft (RS5F30A & RS5F31A) MT-6
Input shaft (RS5F32A) MT-8
Intake manifold (SR engine) EM-10

J

Joint connector (J/C) Foldout

K

Knock sensor (KS) (SR engine) EC-57, EC-58

ALPHABETICAL INDEX

L

License lamp..... EL-33
Location of electrical units..... EL-120
Lubrication circuit (SR engine)..... LC-2

M

Main drive gear (MT)
(RS5F30A & RS5F31A)..... MT-6
Main drive gear (MT) (RS5F32A)..... MT-8
Mainshaft (MT)
(RS5F30A & RS5F31A)..... MT-6
Mainshaft (MT) (RS5F32A)..... MT-8
Malfunction indicator lamp (MIL)
(CD engine)..... EC-126
Mass air flow sensor (MAFS)
(SR engine)..... EC-49
Mass air flow sensor (SR engine)..... EC-51
Meter..... EL-53
MIL & Data link connectors circuit
(CD engine)..... EC-258
MIL & Data link connectors circuit
(GA engine)..... EC-8
MIL & Data link connectors circuit
(SR engine)..... EC-99
Model variation..... GI-5
MT overhaul..... MT-5
MT removal and installation..... MT-3

N

NATS (Nissan Anti-Theft System)..... EL-99
NATS V2.0 precautions (For Europe)..... GI-2
Needle lift sensor (NLS) (CD engine)..... EC-213

O

Oil cooler (SR engine)..... LC-3
Oil pan (SR engine)..... EM-7
Oil pump (CD engine)..... LC-5

P

Park/Neutral position switch
(CD engine)..... EC-253
Park/Neutral position switch
(SR engine)..... EC-89
Periodic maintenance (for Europe)..... MA-3
Power door lock..... EL-78
Power steering oil pressure switch
(SR engine)..... EC-86

Power supply routing..... EL-4
Power window..... EL-73

Q

Quick-glow system (CD engine)..... EC-235
Quick-glow system check
(CD engine)..... EC-238

R

Rear door..... BT-4
Rear fog lamp..... EL-44
Refrigerant lines..... HA-21
Release bearing (clutch)..... CL-2
Reverse gear (MT)
(RS5F30A & RS5F31A)..... MT-6
Reverse gear (MT) (RS5F32A)..... MT-8
Reverse idler shaft (MT)
(RS5F30A & RS5F31A)..... MT-6
Reverse idler shaft (MT) (RS5F32A)..... MT-8
Roof trim..... BT-8

S

Self-diagnostic results (CD engine)..... EC-126
SMJ (super multiple junction)..... Foldout
Spark plug replacement..... MA-8
Speedometer..... EL-54
SRS Trouble diagnoses..... RS-3
SRS Wiring diagram..... RS-4
Starting system..... EL-16
Stop lamp..... EL-37
Super lock..... EL-81
Super lock system precautions..... GI-2
Synchronizer (MT)
(RS5F30A & RS5F31A)..... MT-6
Synchronizer (MT) (RS5F32A)..... MT-8

T

Tachometer..... EL-54
Tail lamp..... EL-33
Throttle control solenoid valve
(CD engine)..... EC-246
Throttle position sensor (SR engine)..... EC-32
Throttle position sensor adjustment
(SR engine)..... EC-32
Throwout bearing - See Clutch
release bearing..... CL-2
Timing belt (CD engine)..... EM-18
Timing chain (GA engine)..... EM-3
Timing chain (SR engine)..... EM-8

ALPHABETICAL INDEX

Transmission case (MT)
(RS5F30A & RS5F31A) MT-5
Transmission case (MT) (RS5F32A) MT-7

V

Vacuum hose (brake system) BR-3, BR-4
Vacuum hose drawing (ECCS)
(CD engine) EC-108
Vacuum hose drawing (ECCS)
(SR engine) EC-13
Vehicle identification number GI-7
Vehicle speed sensor (VSS)
(CD engine) EC-176
Vehicle speed sensor (VSS)
(SR engine) EC-59

W

Warning buzzer EL-71
Warning lamps EL-58
Washer, front EL-72
Water pump (CD engine) LC-6
Water temperature gauge EL-54
Windshield washer - See Front
washer EL-72
Withdrawal lever (clutch) CL-2