

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

# ALPHABETICAL INDEX

## A

AAC/V - Wiring diagram (GA engine) ..... EC-31  
 AAC/V - Wiring diagram (SR engine) ..... EC-72  
 ABS (anti-lock brake system) ..... BR-9  
 ABS - Wiring diagram ..... BR-21  
 A/C trouble diagnoses (manual A/C) ..... HA-3  
 A/C, M - Wiring diagram ..... HA-4  
 A/CCUT - Wiring diagram (CD engine) ..... EC-99  
 ACL/SW - Wiring diagram (CD engine) ..... EC-98  
 Air bag ..... RS-8  
 Air bag disposal ..... RS-17  
 Air bag precautions ..... GI-3  
 AIRREG - Wiring diagram (SR engine) ..... EC-71  
 Alternator ..... EL-27  
 Anti-lock brake system - Wiring diagram ..... BR-21  
 A/T - Wiring diagram ..... AT-3  
 A/T trouble diagnoses ..... AT-3  
 Audio ..... EL-134  
 AUDIO - Wiring diagram ..... EL-134

## B

Back-up lamp ..... EL-48  
 BACK/L - Wiring diagram ..... EL-48  
 Baulk ring (M/T) ..... MT-5, 7  
 BUZZER - Wiring diagram ..... EL-115

## C

Camshaft position sensor (CMPS) (GA engine) ..... EC-8  
 CHARGE - Wiring diagram ..... EL-22  
 Charging system ..... EL-22  
 CIGAR - Wiring diagram ..... EL-130  
 Cigarette lighter ..... EL-130  
 Clock ..... EL-131  
 CLOCK - Wiring diagram ..... EL-131  
 Clutch cable ..... CL-3  
 Clutch damper ..... CL-5  
 Clutch master cylinder ..... CL-4  
 Clutch operating cylinder ..... CL-5  
 Clutch pedal ..... CL-2  
 Clutch release bearing ..... CL-6  
 Clutch release mechanism ..... CL-6  
 Clutch withdrawal lever ..... CL-6  
 CMPS - Wiring diagram (GA engine) ..... EC-8  
 CMPS - Wiring diagram (SR engine) ..... EC-60  
 Collision diagnosis ..... RS-50  
 Combination meter ..... EL-83  
 Combination switch ..... EL-28  
 CONSULT for ABS ..... BR-31  
 CONSULT general information ..... GI-5  
 Control lever (M/T) ..... MT-3  
 Control valve (A/T) ..... AT-13  
 COOL/F - Wiring diagram (CD engine) ..... EC-91

COOL/F - Wiring diagram (GA engine) ..... EC-33  
 COOL/F - Wiring diagram (SR engine) ..... EC-77  
 Coupling sleeve (M/T) ..... MT-5, 7

## D

Daytime light system ..... EL-31  
 DEF - Wiring diagram ..... EL-132  
 Diagnosis sensor unit ..... RS-12  
 Differential gear (FF M/T) ..... MT-5, 7  
 Dimensions ..... GI-11  
 D/LOCK - Wiring diagram ..... EL-161  
 Dome light - See Interior lamp ..... EL-76  
 Door glass ..... BT-3  
 Door glass Fitting Adjustment ..... BT-3  
 Door lock ..... BT-3  
 Door trim ..... BT-5  
 Door, front ..... BT-3  
 Door, rear ..... BT-4  
 DTRL - Wiring diagram ..... EL-32

## E

ECCS circuit diagram (CD engine) ..... EC-85  
 ECCS circuit diagram (GA engine) ..... EC-4  
 ECCS circuit diagram (SR engine) ..... EC-57  
 ECTS - Wiring diagram (SR engine) ..... EC-62  
 EGRC/V - Wiring diagram (CD engine) ..... EC-94  
 EGRC/V - Wiring diagram (GA engine) ..... EC-38  
 EGRC/V - Wiring diagram (SR engine) ..... EC-66  
 Electric sun roof ..... EL-140  
 Electrical unit ..... Foldout  
 Electrical units location ..... EL-232

## F

FCUT - Wiring diagram (CD engine) ..... EC-92  
 F/FOG - Wiring diagram ..... EL-50, 53  
 FICD - Wiring diagram (SR engine) ..... EC-73  
 Final drive (FF M/T) ..... MT-5, 7  
 Fog lamp, front ..... EL-50  
 Fog lamp, rear ..... EL-52  
 Fork rod (M/T) ..... MT-6  
 F/PUMP - Wiring diagram (GA engine) ..... EC-29  
 F/PUMP - Wiring diagram (SR engine) ..... EC-70  
 Front disc brake ..... BR-6  
 Front door ..... BT-3  
 Front fog lamp ..... EL-50  
 Front seat ..... BT-9  
 Front seat belt ..... RS-4  
 Fuel gauge ..... EL-83  
 Fuse block ..... Foldout

# ALPHABETICAL INDEX

## G

Gauges ..... EL-83  
 Gear components (M/T)..... MT-5, 7  
 Glass..... BT-3  
 GLOW - Wiring diagram (CD engine)..... EC-93  
 GOVNR - Wiring diagram (CD engine) ..... EC-89

## H

H/AIM - Wiring diagram ..... EL-35  
 Harness layout..... EL-234  
 Hazard warning lamp..... EL-58  
 Headlamp..... EL-29  
 Headlamp aiming control..... EL-35  
 Headlamp leveler - See Headlamp  
 aiming control..... EL-35  
 Headlamp wiper..... EL-127  
 Heated seat ..... EL-146  
 HEATER - Wiring diagram ..... HA-16  
 Height (Dimensions) ..... GI-11  
 H/LAMP - Wiring diagram..... EL-29  
 HLC - Wiring diagram..... EL-127  
 HO2S - Wiring diagram (GA engine) ..... EC-40  
 HO2S - Wiring diagram (SR engine) ..... EC-79  
 Horn ..... EL-129  
 HORN - Wiring diagram ..... EL-129  
 HSEAT - Wiring diagram ..... EL-146

## I

IACV-FICD solenoid valve (GA engine) ..... EC-44  
 IGN/SG - Wiring diagram (GA engine) ..... EC-15  
 IGN/SG - Wiring diagram (SR engine) ..... EC-63  
 Ignition coil (GA engine)..... EC-15  
 ILL - Wiring diagram ..... EL-67  
 Illumination..... EL-66  
 Inhibitor switch ..... AT-6  
 INJECT - Wiring diagram (GA engine) ..... EC-27  
 INJECT - Wiring diagram (SR engine) ..... EC-68  
 Input shaft (FF M/T)..... MT-5, 7  
 INT/L - Wiring diagram ..... EL-75  
 Interior..... BT-5  
 Interior lamp..... EL-76

## J

Joint connector (J/C) ..... Foldout  
 Junction box (J/B) ..... Foldout

## K

Keyless entry system - See Multi-re-  
 mote control system..... EL-196

KS - Wiring diagram (GA engine) ..... EC-21

## L

Length (Dimensions) ..... GI-11  
 License lamp..... EL-39  
 LKUP - Wiring diagram (SR engine) ..... EC-80  
 LOAD - Wiring diagram (SR engine) ..... EC-81  
 Location of electrical units ..... EL-232  
 Lock, door..... BT-3  
 Luggage room lamp..... EL-75

## M

MAFS - Wiring diagram (GA engine) ..... EC-13  
 MAFS - Wiring diagram (SR engine)..... EC-61  
 MAIN - Wiring diagram (CD engine)..... EC-86  
 MAIN - Wiring diagram (GA engine) ..... EC-6  
 MAIN - Wiring diagram (SR engine) ..... EC-58  
 Main drive gear (M/T) ..... MT-5, 7  
 Mainshaft (M/T)..... MT-5, 7  
 Manual air conditioner - Wiring diagram..... HA-4  
 Master cylinder (brake) ..... BR-3  
 Master cylinder (clutch) ..... CL-4  
 Meter..... EL-83  
 METER - Wiring diagram ..... EL-86  
 MIL/DL - Wiring diagram (CD engine) ..... EC-101  
 MIL/DL - Wiring diagram (SR engine) ..... EC-83  
 MIRROR - Wiring diagram ..... EL-142  
 Mirror defogger ..... EL-132  
 Model variation ..... GI-6  
 M/T major overhaul ..... MT-4  
 MULTI - Wiring diagram ..... EL-197  
 Multi-remote control system ..... EL-196

## N

NATS (Nissan anti-theft system) ..... EL-202  
 NATS - Wiring diagram..... EL-203  
 NATS precautions (For Europe)..... GI-4

## O

Operating cylinder (clutch) ..... CL-5  
 Overdrive control switch..... AT-6

## P

Parking brake control ..... BR-8  
 Parking lamp..... EL-39  
 PGC/V - Wiring diagram (GA engine)..... EC-37  
 PGC/V - Wiring diagram (SR engine)..... EC-67  
 POWER - Wiring diagram ..... EL-8  
 Power door lock ..... EL-159, 171, 178

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

# ALPHABETICAL INDEX

Power door mirror ..... EL-142  
 Power supply routing ..... EL-6  
 Power transistor (GA engine)..... EC-15  
 Power window..... EL-148

## R

Radio - See Audio ..... EL-134  
 Rear axle..... RA-2  
 Rear door..... BT-4  
 Rear drum brake ..... BR-7  
 Rear fog lamp ..... EL-52  
 Rear seat ..... BT-10  
 Rear seat belt..... RS-5  
 Rear washer..... EL-119  
 Rear window defogger..... EL-132  
 Rear wiper..... EL-119  
 Release bearing (clutch) ..... CL-6  
 Reverse idler shaft (M/T) ..... MT-5, 7  
 Reverse main gear (M/T)..... MT-5, 7  
 Road wheel size ..... GI-11  
 Room lamp - See Interior lamp ..... EL-76  
 ROOM/L - Wiring diagram ..... EL-78

## S

Seat belt, front..... RS-4  
 Seat belt, rear ..... RS-5  
 Seat, front ..... BT-9  
 Seat, rear ..... BT-10  
 Shift control components (M/T)..... MT-6  
 Shift fork (M/T) ..... MT-6  
 Side air bag..... RS-8  
 S/LOCK - Wiring diagram..... EL-181  
 Speedometer ..... EL-83  
 Spiral cable ..... RS-7, 14  
 Spot lamp..... EL-75  
 SROOF - Wiring diagram ..... EL-140  
 SRS - See Supplemental Restraint  
     System ..... RS-7, 8  
 SRS - Wiring diagram..... RS-20, 26  
 SRS Trouble diagnoses ..... RS-20, 21  
 S/SIG - Wiring diagram (CD engine) ..... EC-96  
 S/SIG - Wiring diagram (GA engine) ..... EC-26  
 S/SIG - Wiring diagram (SR engine) ..... EC-65  
 START - Wiring diagram..... EL-17  
 Starter ..... EL-21  
 Starting system ..... EL-17  
 Stop lamp..... EL-46  
 STOP/L - Wiring diagram ..... EL-46  
 Striking rod (M/T) ..... MT-6  
 Sun roof, electric..... EL-140  
 Super lock..... EL-178  
 Super lock system precautions ..... GI-4

Supplemental Restraint System ..... RS-7, 8  
 Supplemental restraint system - Wiring  
     diagram ..... RS-20, 26  
 Synchronizer (M/T) ..... MT-5, 7

## T

Tachometer ..... EL-83  
 Tail lamp..... EL-39  
 TAIL/L - Wiring diagram..... EL-40  
 TCV - Wiring diagram (CD engine) ..... EC-90  
 Throwout bearing - See Clutch release  
     bearing ..... CL-6  
 Tire size ..... GI-11  
 Torque convertor clutch solenoid valve ..... AT-6  
 Transmission case (M/T)..... MT-4  
 Tread-FR&RR (Dimensions)..... GI-11  
 Trim ..... BT-5  
 Trunk room lamp..... EL-75  
 TURN - Wiring diagram ..... EL-59  
 Turn signal lamp ..... EL-58

## V

Vehicle identification number ..... GI-9  
 Vehicle speed sensor (VSS)  
     (GA engine) ..... EC-22  
 VSS - Wiring diagram (CD engine) ..... EC-88  
 VSS - Wiring diagram (GA engine)..... EC-22  
 VSS - Wiring diagram (SR engine)..... EC-64

## W

WARN - Wiring diagram ..... EL-102  
 Warning buzzer ..... EL-114  
 Warning lamps..... EL-101  
 Washer, rear..... EL-119  
 Water temperature gauge..... EL-83  
 Wheel hub (rear) ..... RA-2  
 Wheel sensors (ABS)..... BR-12  
 Wheel size ..... GI-11  
 Wheelbase (Dimensions) ..... GI-11  
 Width (Dimensions) ..... GI-11  
 WINDOW - Wiring diagram ..... EL-150  
 Window, door ..... BT-3  
 WIP/R - Wiring diagram..... EL-120  
 Wiper, rear ..... EL-119  
 Wiring Diagram (Cell code) list..... EL-262  
 Wiring diagram - AT - LHD..... AT-3  
 Wiring diagram - AT - RHD ..... AT-4  
 Withdrawal lever (clutch) ..... CL-6