

ALPHABETICAL INDEX

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

SECTION **IDX**

ALPHABETICAL INDEX

A

Air bag RS-6
Air bag disposal RS-12
Air bag precautions GI-2
Audio EL-41
AUDIO - Wiring diagram EL-41

B

BUZZER - Wiring diagram EL-39

C

Collision diagnosis RS-46
Combination meter EL-23
CONSULT general information GI-3

D

Diagnosis sensor unit RS-11
D/LOCK - Wiring diagram EL-44

E

Electrical units location EL-47

F

Front passenger air bag RS-6
Front seat belt RS-4
Fuel gauge EL-23

G

Gauges EL-23

H

Harness layout EL-49
Hazard warning lamp EL-17
Horn EL-40
HORN - Wiring diagram EL-40

I

Interior lamp EL-22

L

Location of electrical units EL-47

M

Meter EL-23
METER - Wiring diagram EL-23
Model variation GI-4

P

POWER - Wiring diagram EL-6
Power door lock EL-43
Power supply routing EL-4

R

Radio - See Audio EL-41
Room lamp EL-22
Room lamp - See Interior lamp EL-22
ROOM/L - Wiring diagram EL-22

S

Seat belt pre-tensioner RS-6
Seat belt pre-tensioner disposal RS-12
Seat belt, front RS-4
Side air bag RS-6
Speedometer EL-23
SRS - See Supplemental Restraint
System RS-6
SRS - Wiring diagram RS-20
SRS Trouble diagnoses RS-15
Stop lamp EL-15
STOP/L - Wiring diagram EL-15
Supplemental Restraint System RS-6
Supplemental restraint system - Wiring
diagram RS-20

T

Tachometer EL-23
TURN - Wiring diagram EL-18
Turn signal lamp EL-17

V

Vehicle identification number GI-6

ALPHABETICAL INDEX

W

WARN - Wiring diagram..... EL-27
Warning buzzer EL-39

Warning lamps EL-26
Water temperature gauge EL-23

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX