

Fuses	Usage
ACCA/DRIV DR SW	Adaptive Cruise Control (ACC), Driver Door Switch
AUX PWR	Auxiliary Power
BTSI SOL/COL LOCK	Brake Transmission Shift Interlock Solenoid, Column Lock
CIGAR LTR	Cigar Lighter
CLSTR/HUD	Instrument Panel Cluster, Heads-up Display (HUD)

COLUMN LK MDL	Not Used
DECK LID CLOSE/PRK/BRK B	Trunk Close Button, Parking Brake Solenoid B
DR LOCKS	Door Locks
ECM	Engine Control Module
EMPTY	Not Used
EMPTY	Not Used
EMPTY	Not Used
EMPTY	Not Used
EMPTY	Not Used
FOLDING TOP/TRUNK LATCH	Retractable Hardtop, Trunk Latch
FUSE PULLER	Fuse Puller
GMLAN DEVICES	GMLAN Devices
HTD STR WHL	Heated Steering Wheel
HTD/SEAT LH	Driver Side Heated Seat
HTD/SEAT RH	Passenger Side Heated Seat
HVAC/PWR SND	Climate Control System, Power Sounder
IGN SW/INTR SNSR	Ignition Switch, Intrusion Sensor
INTERIOR LIGHTS	Interior Lights
ISRVN/HVAC	Inside Rearview Mirror, Climate Control System, Column Lock, Power Sounder
ONSTAR	OnStar®
PRK/BRK SOL A	Parking Brake Solenoid A
PWR FLDG MIR-EXT/RET	Power Folding Mirror
PWR LUMBAR LH/RH	Power Lumbar
RADIO/S-BAND/VICS	Radio, S-Band, CD Changer
REAR FOG/ALDL	Rear Fog Lamps, Diagnostic Link Connector
REVERSE LAMP	Reverse Lamp
REVERSE LAMP	Reverse Lamp
RPA/H/C SEAT/WPR RELAYS	Rear Park Aid, Heated/Cooled Seats, Windshield Wiper Relays
RUN/ACSRV PWR	Run, Accessory Power
Starter/Crank	Starter/Crank
SDM/PSIR SW	Airbags
SPARE FUSE HOLDER	Spare Fuse
SPARE FUSE HOLDER	Spare Fuse
SPARE FUSE HOLDER	Spare Fuse

SPARE FUSE HOLDER	Spare Fuse
STOP LAMP	Stoplamp
STR WHL DIMMING	Steering Wheel Control Button Lights
TILT/TELE SW/MEM SEAT MOD/TOP SW	Power Tilt Wheel, Telescopic Steering Column, Memory Seat, Driver Seat Switch, Retractable Hardtop Switch
TUTD SW/STRG COL SW	Tap-Up/Tap-Down Switch
WPR DWELL	Rainsense™


Relays	Usage
PRK/BRK HOLD	Park Brake Hold
PRK/BRK RELEASE	Park Brake Release
F/MIR RETRACT	Not Used
FOG RR	Not Used
F/MIR EXTEND	Not Used
FUEL DR	Fuel Door

Circuit Breakers Usage

PWR SEAT Power Seats
DR CNTRLS Door Controls

Underhood Fuse Block

The underhood fuse block is located next to the engine on the passenger's side of the vehicle.

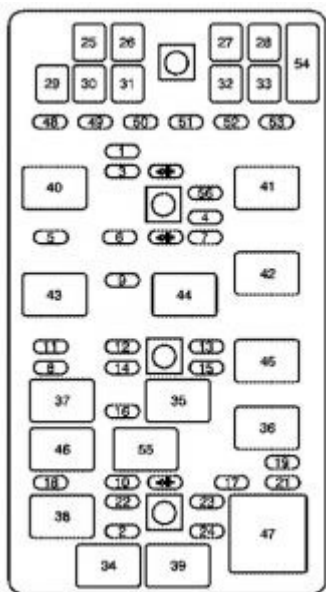

Cadillac XLR – fuse box – engine compartment

Fuses	Usage
-------	-------

1	Antilock Brake System, Electronic Suspension Control, Adaptive Forward Lighting System (AFS)
2	Horn
3	Adaptive Cruise Control (ACC), Transmission Controls
4	Windshield Wipers
5	Stop/Back-Up Lamps
6	Oxygen Sensor
7	Battery 5
8	Parking Lamps
9	Electronic Throttle Control
10	Fuel Pump
11	Antilock Brake System
12	Odd Injectors
13	Electronic Suspension Control
14	Emission Controls
15	Air Conditioning Compressor
16	Even Injectors
17	Windshield Washer, Adaptive Forward Lighting System (AFS), Intercooler Pump
18	Headlamp Washer
19	Right Low Beam Headlamp
20	Not Used
21	Left Low Beam Headlamp
22	Fog Lamp
23	Right High Beam Headlamp
24	Left High Beam Headlamp
25	Cooling Fan
26	Battery 3
27	Anti-Lock Brakes
28	Climate Controls
29	Battery 2
30	Starter
31	Audio Amplifier
32	Not used
33	Battery 1
48	Spare

49	Spare
50	Spare
51	Spare
52	Spare
53	Not Used
54	Fuse Puller
56	Engine Control Module, Transmission Control Module

Relays	Usage
34	Horn
35	Air Conditioning Compressor
36	Windshield Washer
37	Parking Lamps
38	Fog Lamps
39	High Beam Headlamps
40	Rear Window Defogger
41	Windshield Wiper High/Low
42	Wiper RUN/ACCESSORY Power
43	Starter/Crank
44	Ignition 1
45	Windshield Wiper On/Off
46	Headlamp Washer
47	Low Beam Headlamps
55	Fuel Pump

Diodes	Usage
	Diode 1
	Wiper diode
	Diode 2