

Isuzu Rodeo 1991 fuse box diagram

Fuse box diagram

1 10A (TAIL.L ILLUM.L)	6 15A WIPER	11 (Not used)
2 10A STOP.L	7 10A GAUGE TURN.L	12 (Not used)
3 10A DOME.L	8 10A ENGINE BACK.L	13 15A CIGAR RADIO
4 (Not used)	9 15A IGNITION	14 20A (RWAL)
5 (Not used)	10 (Not used)	15 10A SPARE
(Not used)		16 15A SPARE
		17 20A SPARE

Isuzu Rodeo – fuse box diagram

Number	Function	A
1	Exterior lights: front park. rear side marker. park. and license lights; electronic engine control; dash and console lights; rear wheel anti-lock brake system	10
2	Brake lights	10
3	Dome and luggage room lights; radio; electronic engine control	10
4	—	—
5	—	—
6	Windshield wiper/washer	15
7	Indicators; gauges; turn and hazard lights; power windows	10

8	Charging system: back up lights; electronic engine control	10
9	Ignition system	15
10	—	—
11	Electronic engine control	20
12	Starting system	10
13	Cigarette lighter: sound system	15
14	Rear wheel antilock brakes system	20
15	Spare	10
16	Spare	15
17	Spare	20