

FUEL INJECTION (FUEL SYSTEMS)

FU(SOHC)

Page

1.	General Description	
2.	Throttle Body	
3.	Intake Manifold	
4.	Engine Coolant Temperature Sensor	
5.	Crankshaft Position Sensor	
6.	Camshaft Position Sensor	
7.	Knock Sensor	
8.	Throttle Position Sensor	
9.	Intake Air Temperature and Pressure Sensor	
10.	Atmospheric Pressure Sensor	2
11.	Idle Air Control Solenoid Valve	
12.	Air Assist Injector Solenoid Valve	
13.	Fuel Injector	
14.	Front Oxygen (A/F) Sensor	
15.	Rear Oxygen Sensor	
16.	Engine Control Module	
17.	Main Relay	
18.	Fuel Pump Relay	
19.	Fuel	
20.	Fuel Tank	
21.	Fuel Filler Pipe	
22.	Fuel Pump	
23.	Fuel Level Sensor	
24.	Fuel Sub Level Sensor	
25.	Fuel Filter	
26.	Fuel Cut Valve	
27.	Fuel Damper Valve	
28.	Fuel Delivery, Return and Evaporation Lines	
29.	Fuel System Trouble in General	

ATMOSPHERIC PRESSURE SENSOR

Fuel Injection (Fuel Systems)

10. Atmospheric Pressure Sensor

S155045


A: REMOVAL

S155045A18


NOTE:

Not applicable to vehicles with option code "KS".
<Ref. to ID-3, MODEL NUMBER PLATE, IDENTIFICATION, Identification.>

- 1) Disconnect battery ground cable.

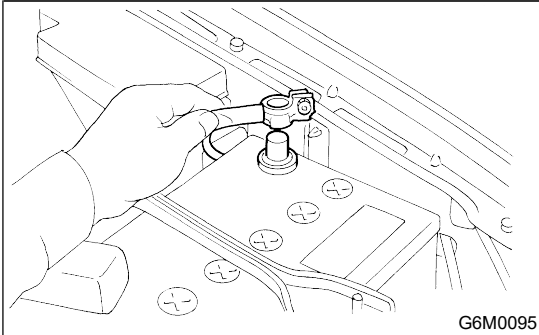

- 2) Disconnect connector from atmospheric pressure sensor.
- 3) Remove atmospheric pressure sensor from bracket.

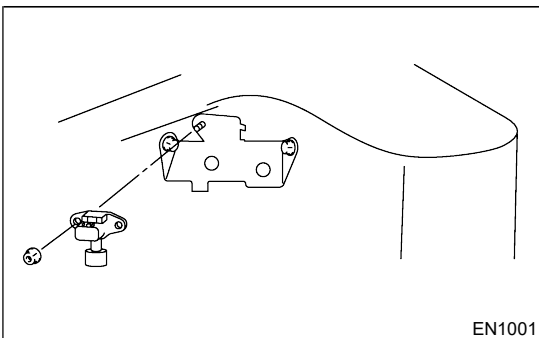

B: INSTALLATION

S155045A11

NOTE:

Not applicable to vehicles with option code "KS".
<Ref. to ID-3, MODEL NUMBER PLATE, IDENTIFICATION, Identification.>

Install in the reverse order of removal.

Tightening torque:

6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

