

Oldsmobile Aurora 1999 fuse box diagram

Instrument Panel Fuse Block

This is located on the left side of the instrument panel.




Oldsmobile Aurora – fuse box – instrument panel

Position	Circuitry
1	Supplemental Inflatable Restraint (Air Bag)
2	Injectors
3	Anti-Lock Brake System
4	Left Exterior Lamps
5	Turn Signal Lamps
6	Injectors
7	Climate Controls
8	Right Exterior Lamps
9	Chime (Ignition I), Memory Set
10	Powertrain Control Module, VATS PASS-Key@II
11	Auxiliary Power
12	Interior Lamps
13	Shift Sols
14	Linear EGR

15	Cruise Control
16	Perimeter Lights
17	Driver Information Center
18	Converter Oxygen Sensors
19	Radio
20	Open
21	Climate Control Relay
22	Fog Lamps
23	Windshield Wipers
24	Flat Pack Motor
25	TMNSS
26	Cigarette Lighter
27	Crank, Air Bag Module
28	Climate Control Blower

Rear Compartment Driver Fuse Block

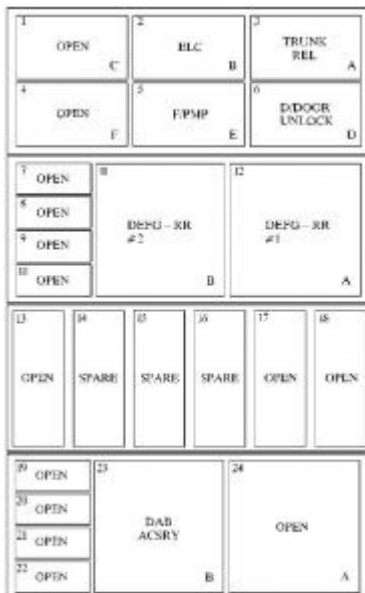

Oldsmobile Aurora –
fuse box – rear compartment driver side fuse block

Position	Circuitry
1	Open
2	Electronic Level Control Relay

3	Trunk Release Relay
4	Open
5	Fuel Pump Relay
6	Driver Door Unlock Relay
7	Open
8	Open
9	Open
10	Open
11	Rear Defogger Relay (Lower Zone)
12	Rear Defogger Relay (Upper Zone)
13	Open
14	Spare
15	Spare
16	Spare
17	Open
18	Open
19	Open
20	Open
21	Open
22	Open
23	Direct Accessory Power — Accessory Relay
24	Open

Rear Compartment Passenger Fuse Block

1 SPARE	2 SPARE	3 OPEN	4 PWR WDO/SUNRF
5 SPARE	6 SPARE	7 OPEN	
8 SPARE	9 SPARE	10 OPEN	11 PWR ST
12 SPARE	13 SPARE	14 OPEN	
15 PWR ST	16 HDLP	17 HVAC BLD SHOE	18 PCNU VATS
			19 IGN 2
			20 IGN 1
21 DEFOG RR	22 TRUNK FULL DV	23 ELC	24 IP
			25 EXT LP
			26 BOSE
27 PWR DR LK	28 INTR LP	29 XERO STOP	30 PARK LP
31 HDT MIR	32 OPEN	33 FDR REL	34 CLG FAN RLY
35 BATT THERM	36 LP 2	37 LP 1	38 HTD SI
39 EPMP	40 OPEN	41 RR DEFOG 2	42 RR DEFOG 1


Oldsmobile Aurora –

fuse box – rear compartment passenger side fuse block

Position	Circuitry
1	Spare
2	Spare
3	Open
4	Breaker — Power Window, Sunroof
5	Spare
6	Spare
7	Open
8	Spare
9	Spare
10	Open
11	Breaker — Power Seat
12	Spare
13	Spare
14	Open
15	Power Seat
16	Breaker — Headlamps
17	HVAC Blower Motor

18	Powertrain Control Module, PASS-Key II
19	Ignition 3
20	Ignition 1
21	Rear Defogger
22	Trunk Pull Down
23	Electronic Level Control
24	Instrument Panel
25	Exterior Lamps
26	Base@ Stereo (Option)
27	Power Door Locks
28	Interior Lamps
29	Hazard Lamps, Stoplamps
30	Parking Lamps
31	Heated Outside Mirror
32	Open
33	Fuel Door Release
34	Cooling Fan Relay
35	Battery Thermistor
36	Instrument Panel — Power Antenna, Remote CD Changer, Radio Chassis
37	Instrument Panel — Remote Accessory Power Module, Oil Level Indicator, ALDL
38	Heated Seats
39	Fuel Pump
40	Open
41	Rear Defog 2
42	Rear Defog 1

Engine compartment fuse block

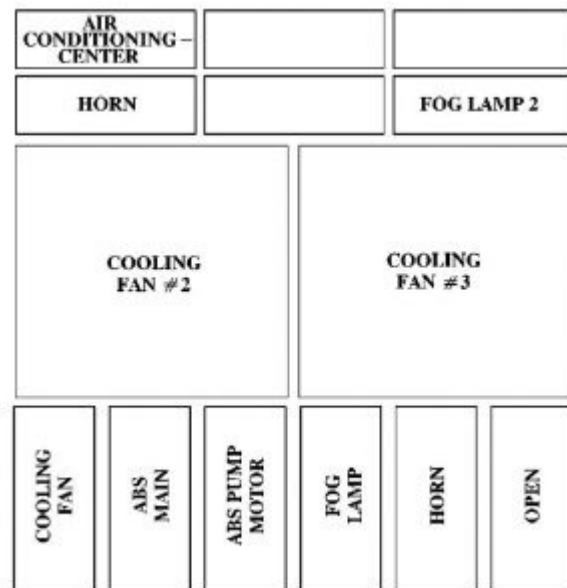

Oldsmobile Aurora – fuse box – engine compartment

Position	Circuitry
1	Air Conditioning Center
2	Open
3	Open
4	Horn
5	Open
6	Fog Lamp 2
7	Cooling Fan #2
8	Cooling Fan #3
9	Cooling Fan
10	ABS Main
11	ABS Pump Motor
12	Fog Lamp
13	Horn
14	Open