

Fiat Panda mk3 (from 2011) fuse box diagrams

Fuse box in engine compartment

This is located next to the battery.




Fiat Panda mk3 – fuse box- engine compartment

Description	Fuse	Ampere rating [A]
Body Computer Node	F01	60
Passenger compartment fan	F08	40
Fog lights	F09	15
Horns	F10	15
Main beam headlights	F14	15
Heated windscreen	F15	70
Air conditioning compressor	F19	7,5
Front power socket (with or without cigar lighter)	F20	15
Fuel pump	F21	15
Blow-by	F30	5
Sun roof motor	F82	20
+15 (*) reversing lights	F87	5
Mirrors demisting	F88	7,5
Heated rear window	F89	30
Battery charge status sensor	F90	5

(*)+15 = ignition-operated positive termina

Dashboard fuse box

The control unit is located near the left side of the steering column.

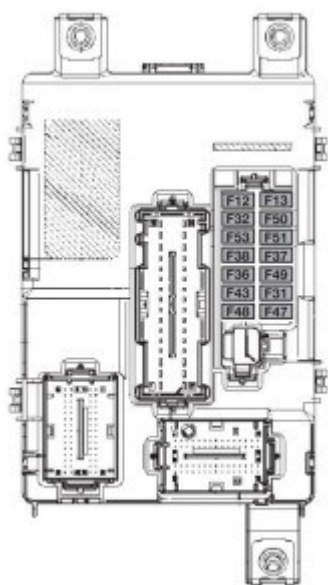

Fiat Panda mk3 – fuse box – dashboard

Description	Fuse	Ampere rating [A]
+15 (*) headlamp alignment corrector	F13	5
+15 (*) Ignition-operated control with inhibition during engine starting	F31	5
+30 (**)	F36	10
+15 (*) brake pedal switch (NA)	F37	7,5
Door central locking	F38	20
Two-way windscreen washer pump	F43	20
Front electric window (driver side)	F47	20
Front electric window (passenger side)	F48	20
+15 (*)	F49	7,5
+15 (*)	F50	7,5
+15 (*)	F51	5
+30 (**)	F53	7,5

(*)+15 = ignition-operated positive terminal

(**)+30 = battery direct positive terminal (not ignition-operated)