


General Description

EXTERIOR BODY PANELS

1. General Description


A: SPECIFICATION

1. FRONT

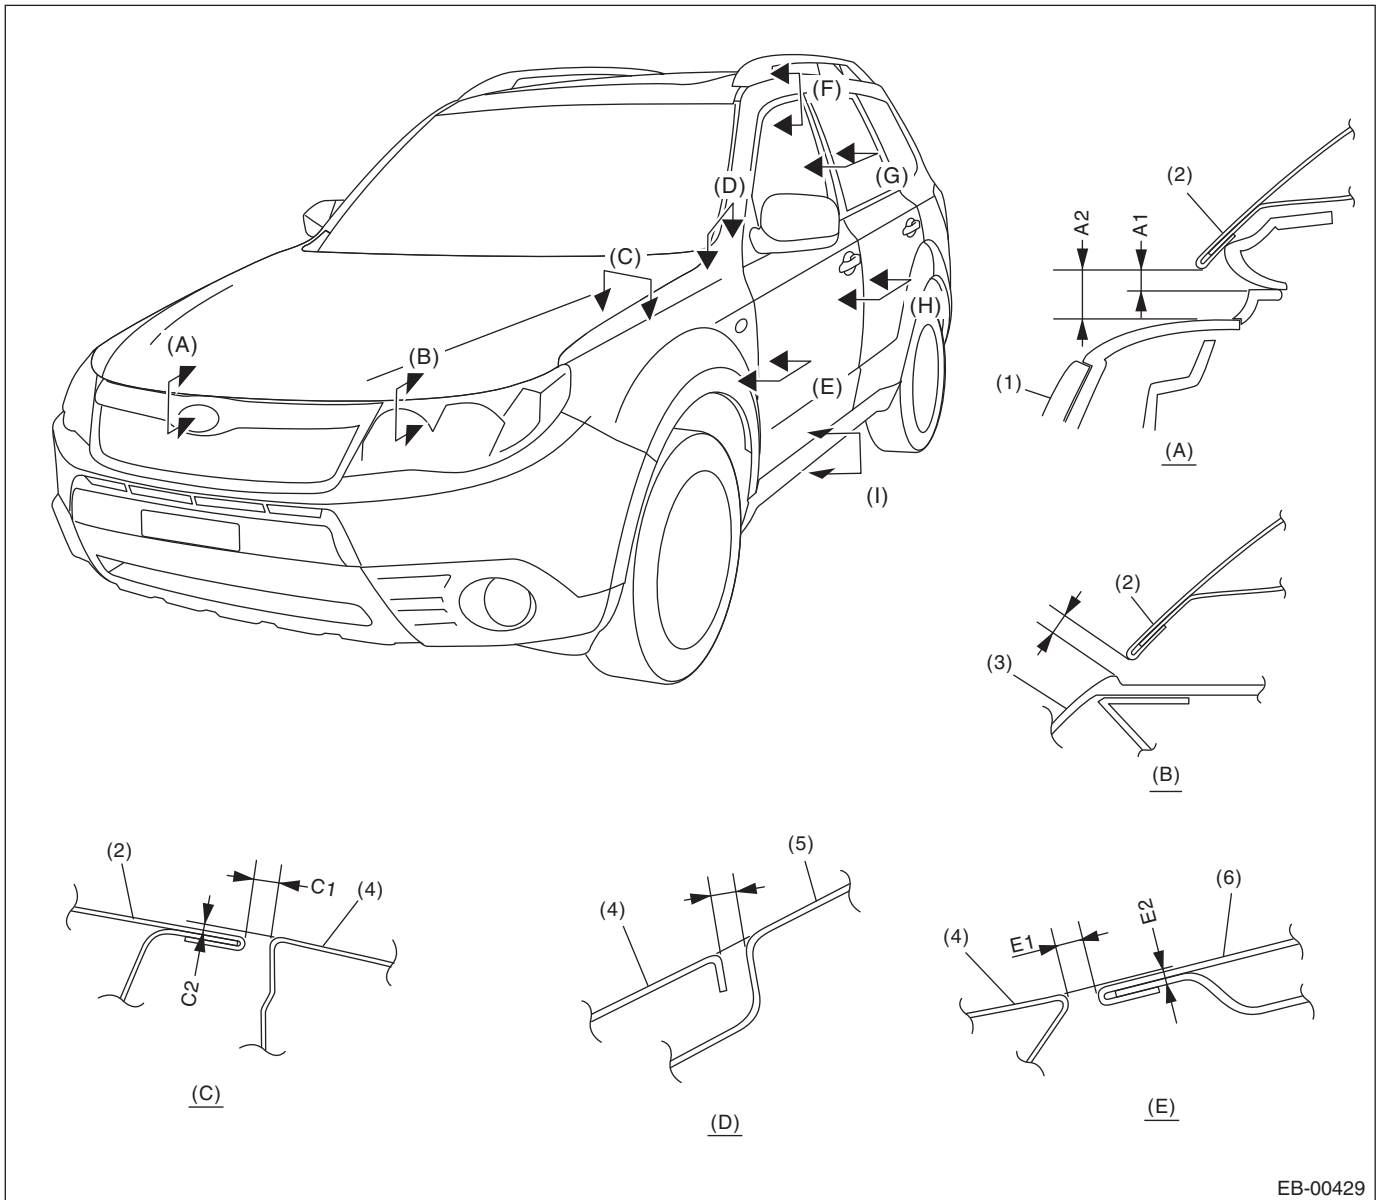

General Description

EXTERIOR BODY PANELS

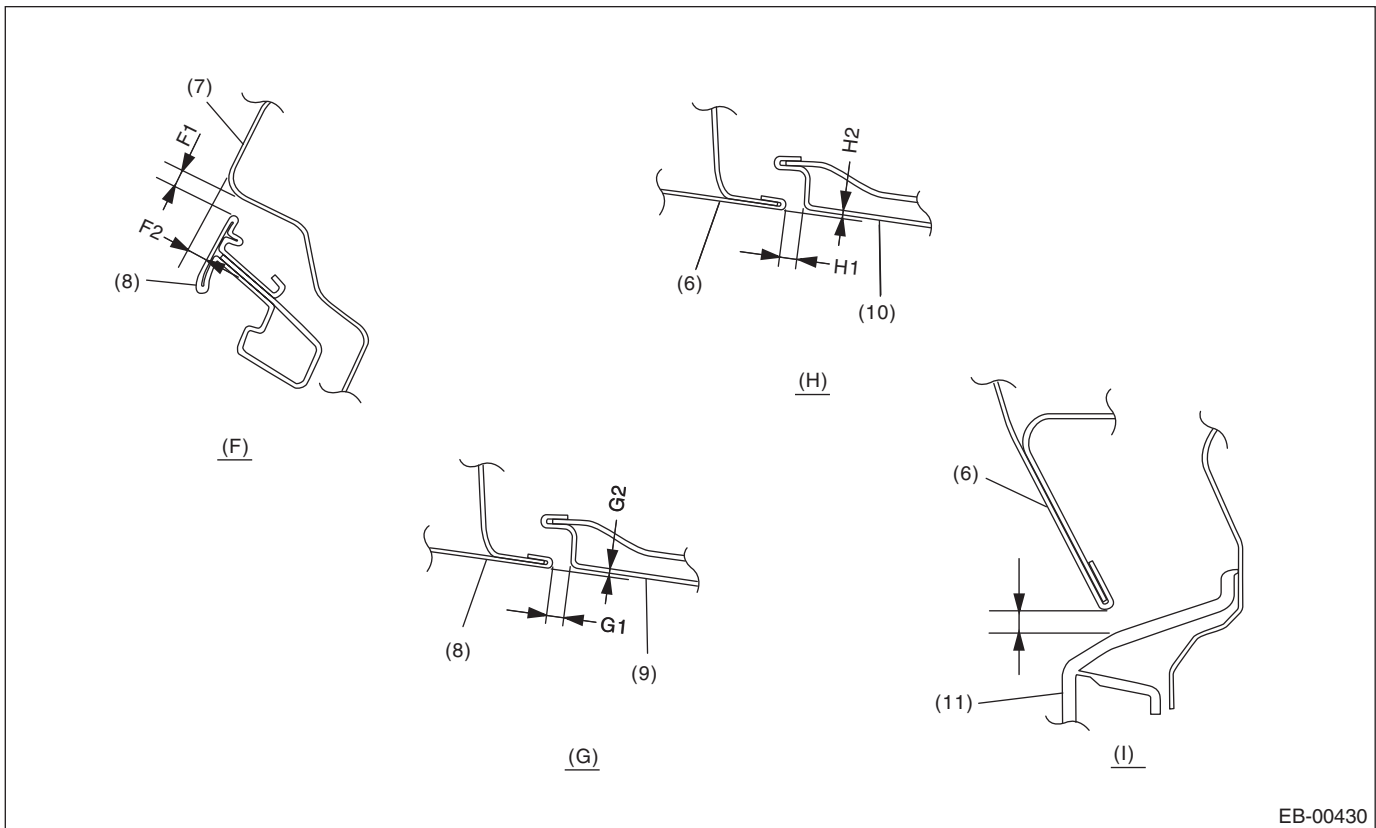

EB-00430


- | | | |
|------------------------|------------------------|------------------------|
| (1) Front grille | (5) Front pillar panel | (9) Rear door sash |
| (2) Front hood panel | (6) Front door panel | (10) Rear door panel |
| (3) Headlight | (7) Roof panel | (11) Side sill spoiler |
| (4) Front fender panel | (8) Front door sash | |

Section	Part	Standard value
(A)	Front hood panel to Front grille	A1: 2.2±1.0 mm (0.09±0.04 in) A2: 7.6±1.0 mm (0.3±0.04 in)
(B)	Front hood panel to Headlight	5.5±1.0 mm (0.22±0.04 in)
(C)	Front hood panel to Front fender panel	C1: 3.5±1.0 mm (0.14±0.04 in) C2: -0.5, +0.5 — -1.0 mm (-0.02, +0.02 — -0.04 in)
(D)	Front fender panel to Front pillar panel	3.0±1.0 mm (0.12±0.04 in)
(E)	Front fender panel to Front door panel	E1: 4.0±1.0 mm (0.16±0.04 in) E2: 0+1.0, -0.5 mm (0+0.04, -0.02 in)
(F)	Roof panel to Front door sash	F1: 5.0±1.0 mm (0.20±0.04 in) F2: 3.8±1.0 mm (0.15±0.04 in)
(G)	Front door sash to Rear door sash	G1: 5.5±1.0 mm (0.22±0.04 in) G2: 0+1.0, -0.5 mm (0+0.04, -0.02 in)
(H)	Front door panel to Rear door panel	H1: 4.5±1.0 mm (0.18±0.04 in) H2: 0+1.0, -0.5 mm (0+0.04, -0.02 in)
(I)	Front door panel to Side sill spoiler	5.7±1.0 mm (0.22±0.04 in)

General Description


EXTERIOR BODY PANELS

2. REAR

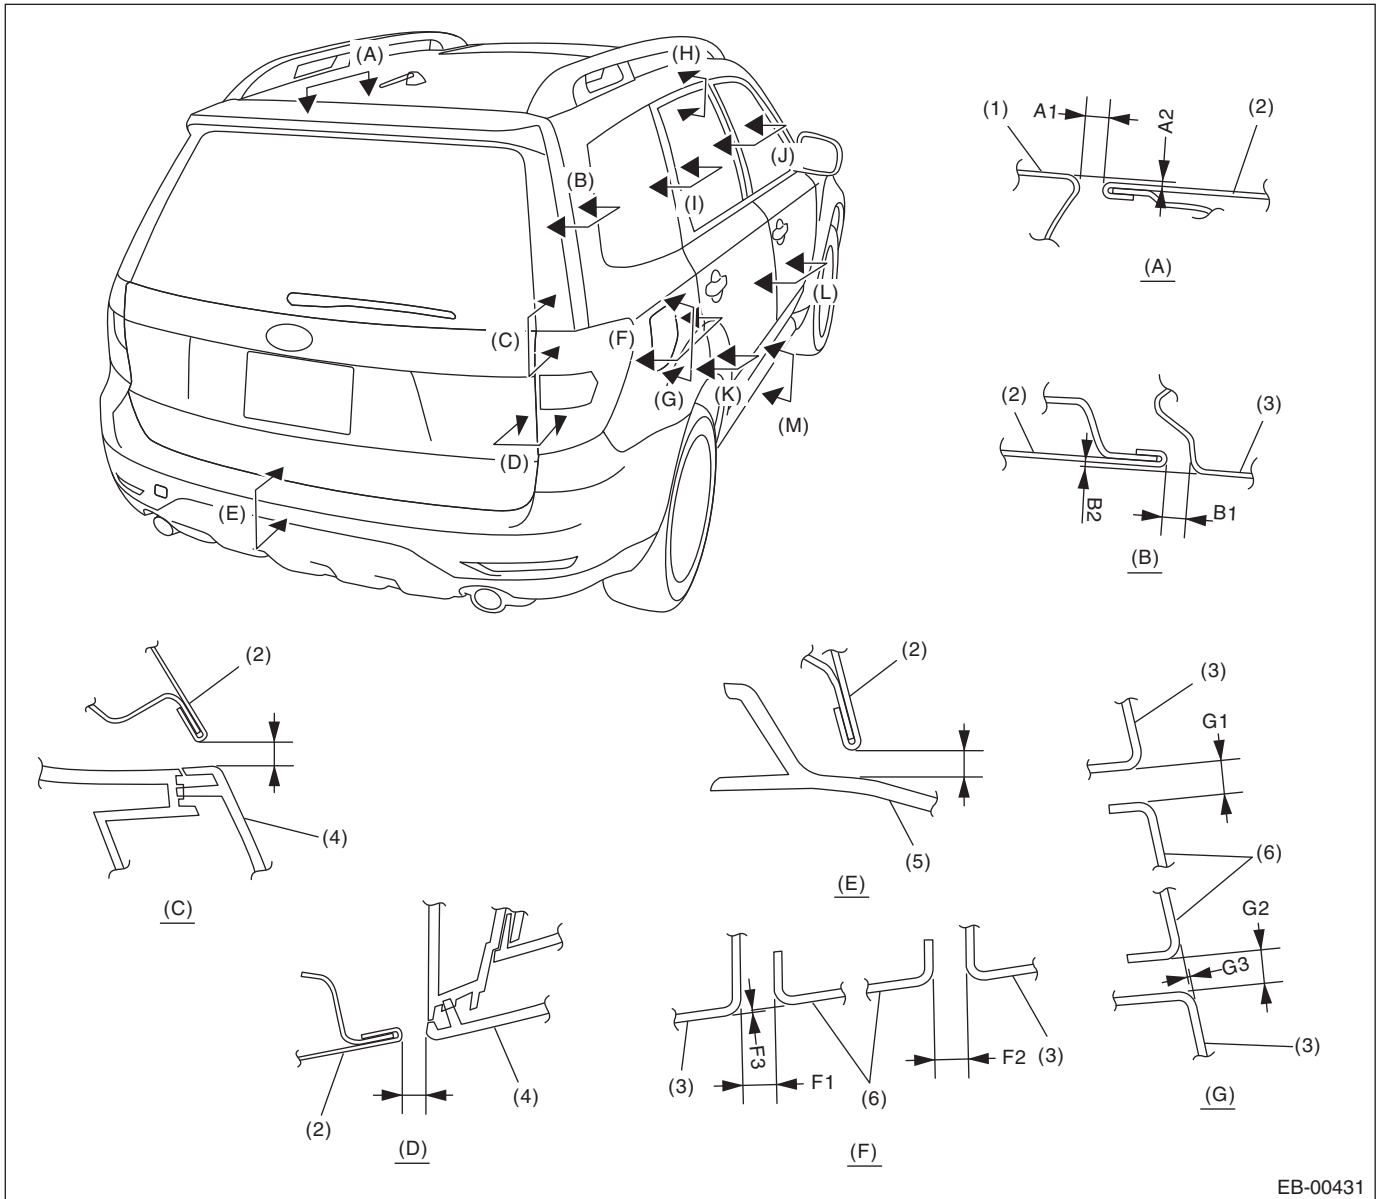

General Description

EXTERIOR BODY PANELS

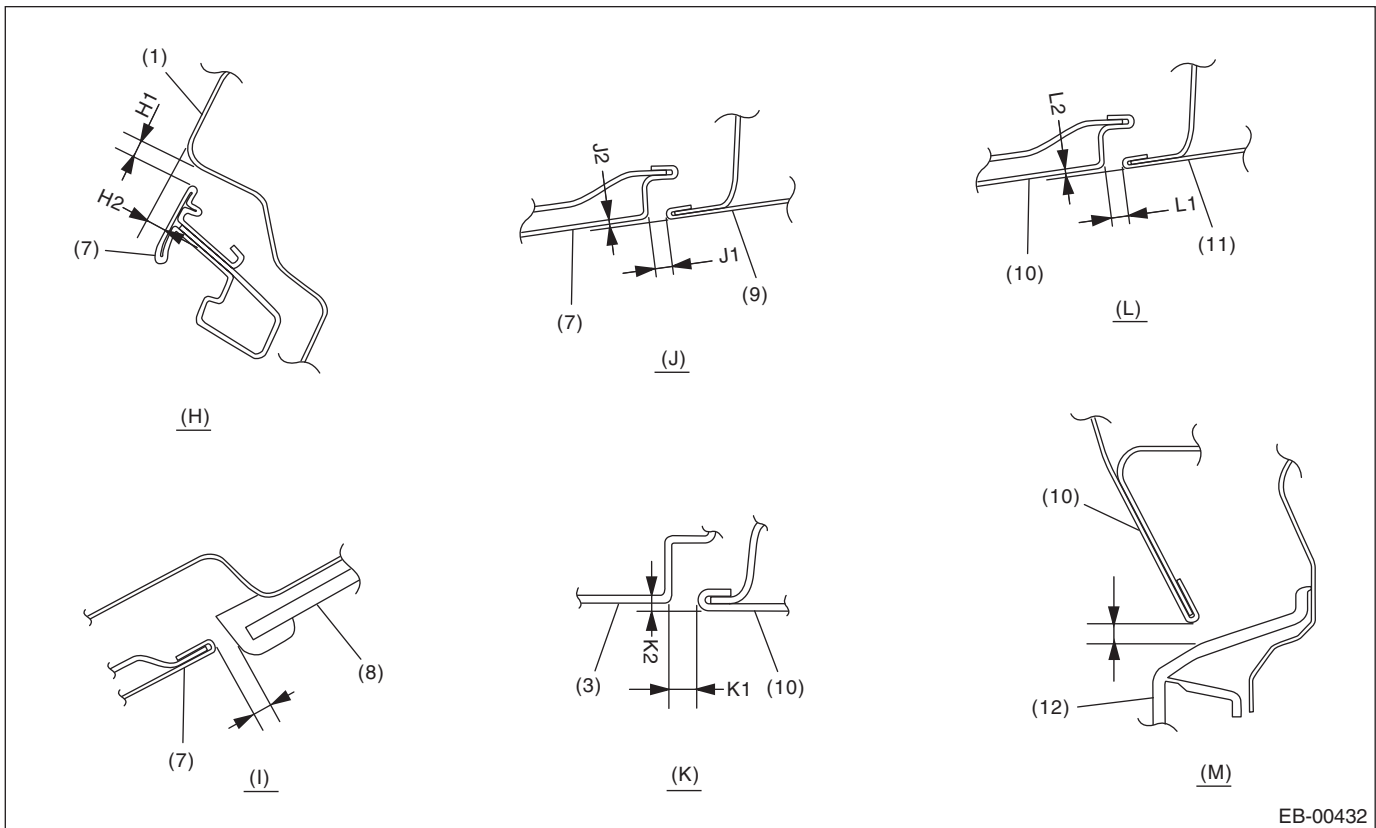

EB-00432

- | | | |
|----------------------------|------------------------|------------------------|
| (1) Roof panel | (5) Rear bumper | (9) Front door sash |
| (2) Rear gate panel | (6) Fuel filler lid | (10) Rear door panel |
| (3) Rear quarter panel | (7) Rear door sash | (11) Front door panel |
| (4) Rear combination light | (8) Rear quarter glass | (12) Side sill spoiler |


Section	Part	Standard value
(A)	Roof panel to Rear gate panel	A1: 6.5±1.0, -0.5 mm (0.26±0.04, -0.02 in) A2: 1.5±1.0 mm (0.06±0.04 in)
(B)	Rear gate panel to Rear quarter panel	B1: 6.8±1.0 mm (0.27±0.04 in) B2: 0-1.5 mm (0-0.06 in)
(C)	Rear combination light to Rear gate panel	5.4±1.0 mm (0.21±0.04 in)
(D)	Rear combination light to Rear gate panel	5.1±1.0 mm (0.20±0.04 in)
(E)	Rear gate panel to Rear bumper	7.1±1.0 mm (0.28±0.04 in)
(F)	Rear quarter panel to Fuel filler lid	F1: 3.5±0.5 mm (0.14±0.06 in) F2: 3.5±0.5 mm (0.14±0.06 in) F3: -0.2±0.4 mm (0.01±0.02 in)
(G)	Rear quarter panel to Fuel filler lid	G1: 3.5±0.5 mm (0.14±0.06 in) G2: 3.5±0.5 mm (0.14±0.06 in) G3: -0.2±0.4 mm (0.01±0.02 in)
(H)	Roof panel to Rear door sash	H1: 5.0±1.0 mm (0.20±0.04 in) H2: 3.8±1.0 mm (0.15±0.04 in)
(I)	Rear door sash to Rear quarter glass	5.5±1.0 mm (0.22±0.04 in)
(J)	Rear door sash to Front door sash	J1: 5.5±1.0 mm (0.22±0.04 in) J2: 0+1.0, -0.5 mm (0+0.04, -0.02 in)
(K)	Rear door panel to Rear quarter panel	K1: 4.0±1.0 mm (0.16±0.04 in) K2: 0±1.0 mm (0±0.04 in) (Vehicle body standard)
(L)	Front door panel to Rear door panel	L1: 4.5±1.0 mm (0.18±0.04 in) L2: 0+1.0, -0.5 mm (0+0.04, -0.02 in)
(M)	Front door panel to Side sill spoiler	5.7±1.0 mm (0.22±0.04 in)

General Description

EXTERIOR BODY PANELS

B: COMPONENT

1. FRONT HOOD

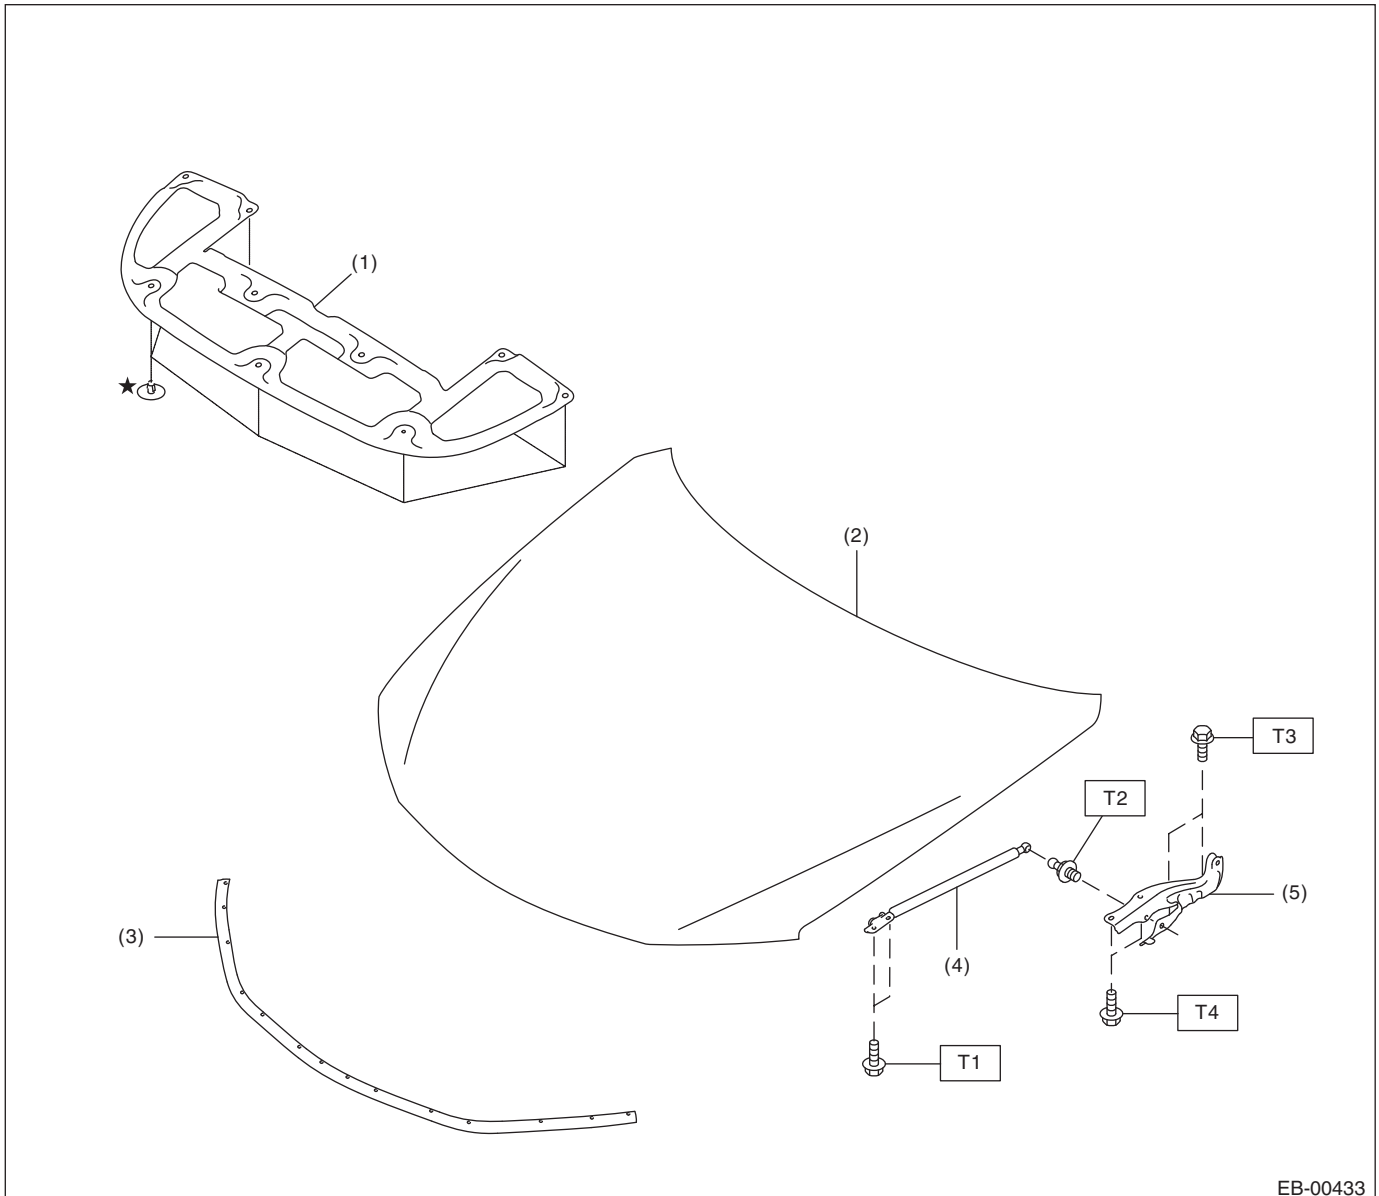

- (1) Insulator
- (2) Front hood panel ASSY
- (3) Seal

- (4) Damper stay
- (5) Hinge

Tightening torque:N·m (kgf-m, ft-lb)


T1: 7.5 (0.76, 5.5)

T2: 20 (2.04, 14.5)

T3: 25 (2.5, 18.4)

T4: 37 (3.8, 27.3)

2. FRONT FENDER

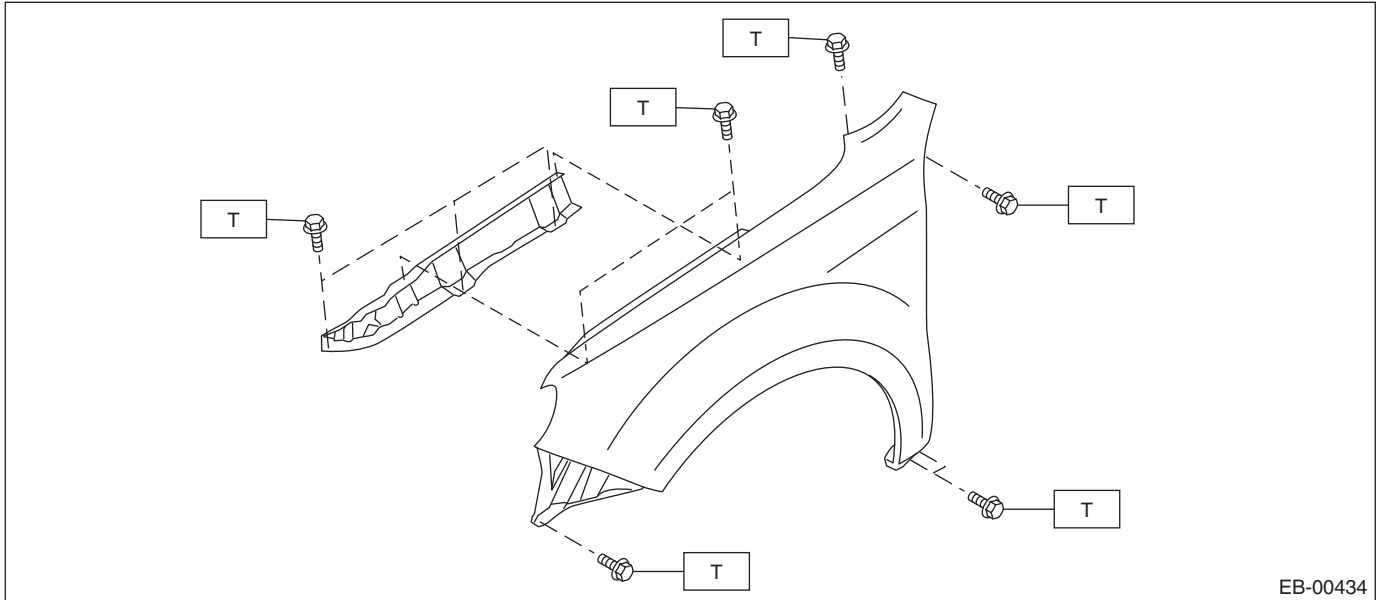

EB-00434


Tightening torque: N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

General Description

EXTERIOR BODY PANELS

3. FRONT DOOR

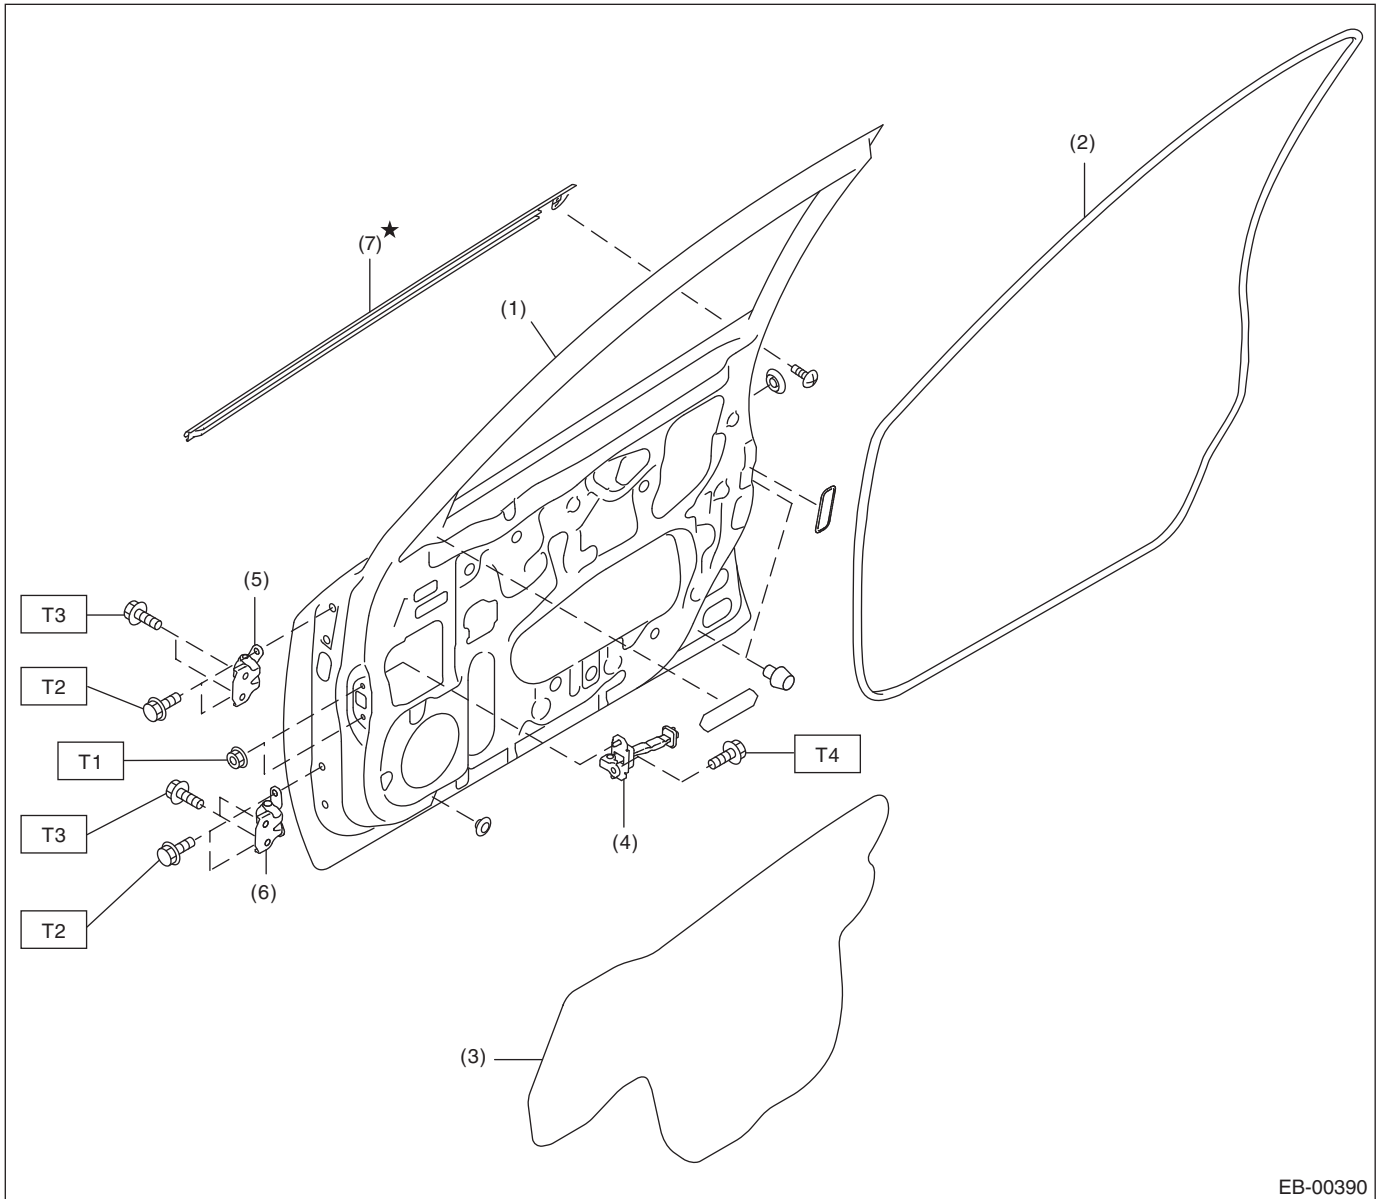

EB-00390

- | | |
|------------------------------|-------------------------------------|
| (1) Front door panel | (5) Upper hinge |
| (2) Front door weather strip | (6) Lower hinge |
| (3) Sealing cover | (7) Front door weather strip, outer |
| (4) Checker | |

Tightening torque: N·m (kgf-m, ft-lb)


T1: 7.5 (0.76, 5.5)

T2: 25 (2.5, 18.4)

T3: 30 (3.1, 22.1)

T4: 33 (3.4, 24.3)

4. REAR DOOR

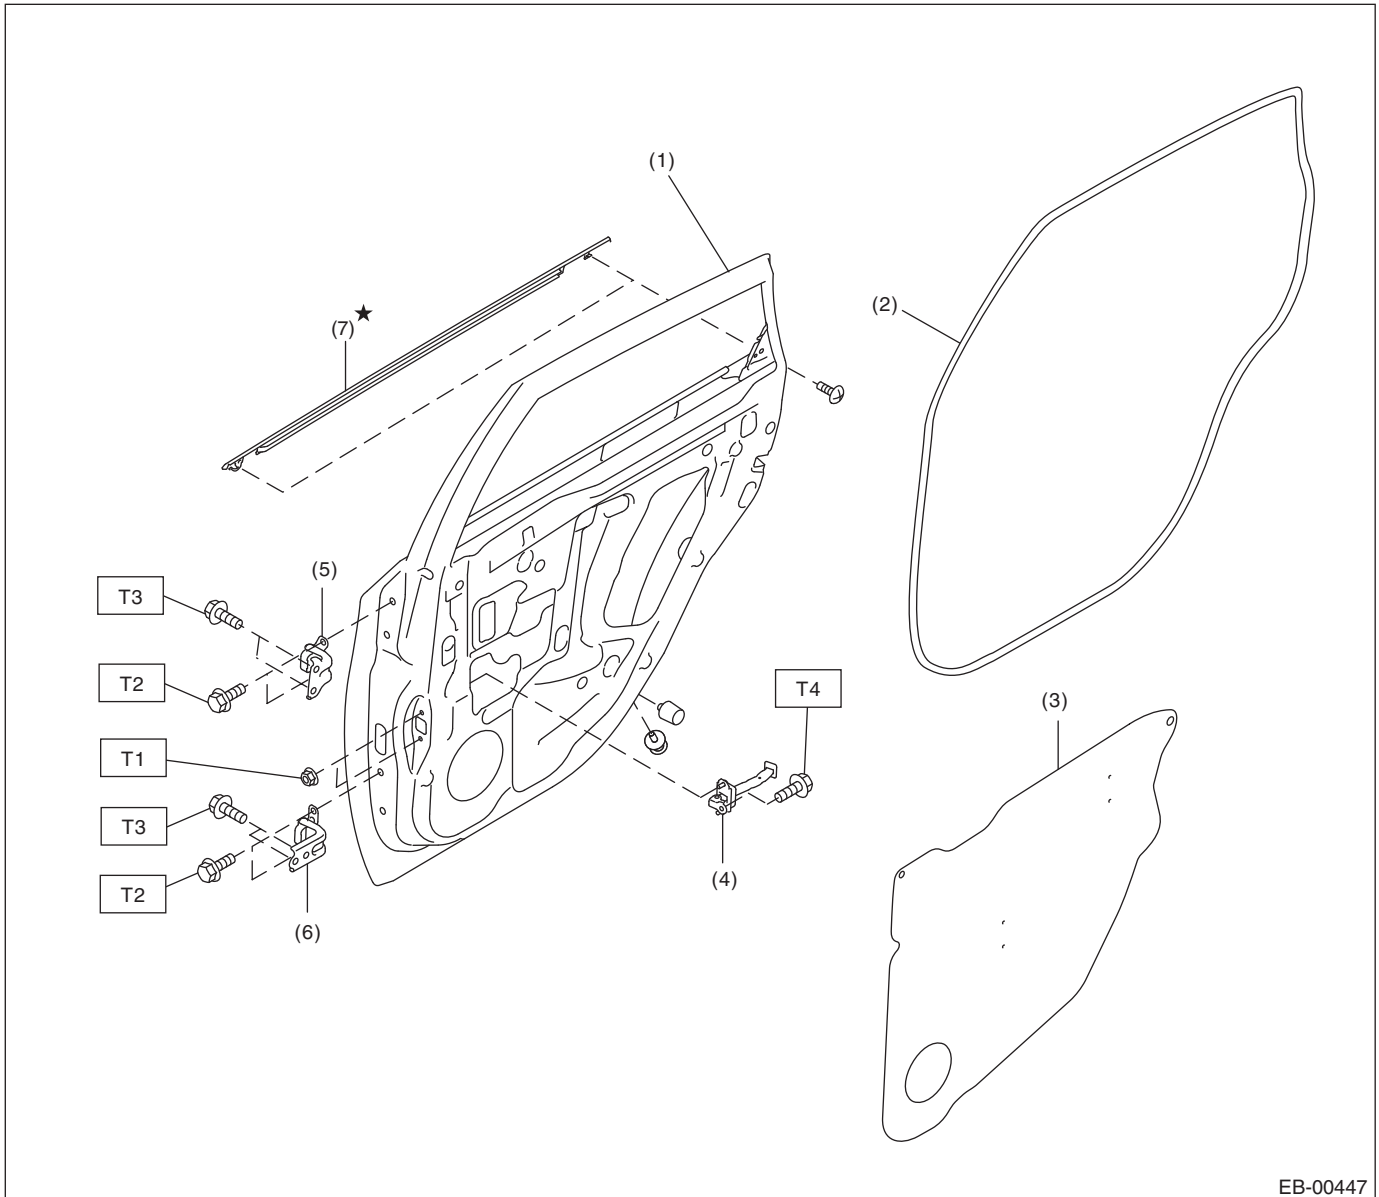

EB-00447

- | | |
|-----------------------------|------------------------------------|
| (1) Rear door panel | (5) Upper hinge |
| (2) Rear door weather strip | (6) Lower hinge |
| (3) Sealing cover | (7) Rear door weather strip, outer |
| (4) Checker | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 25 (2.5, 18.4)


T3: 30 (3.1, 22.1)

T4: 33 (3.4, 24.3)

General Description

EXTERIOR BODY PANELS

5. REAR GATE

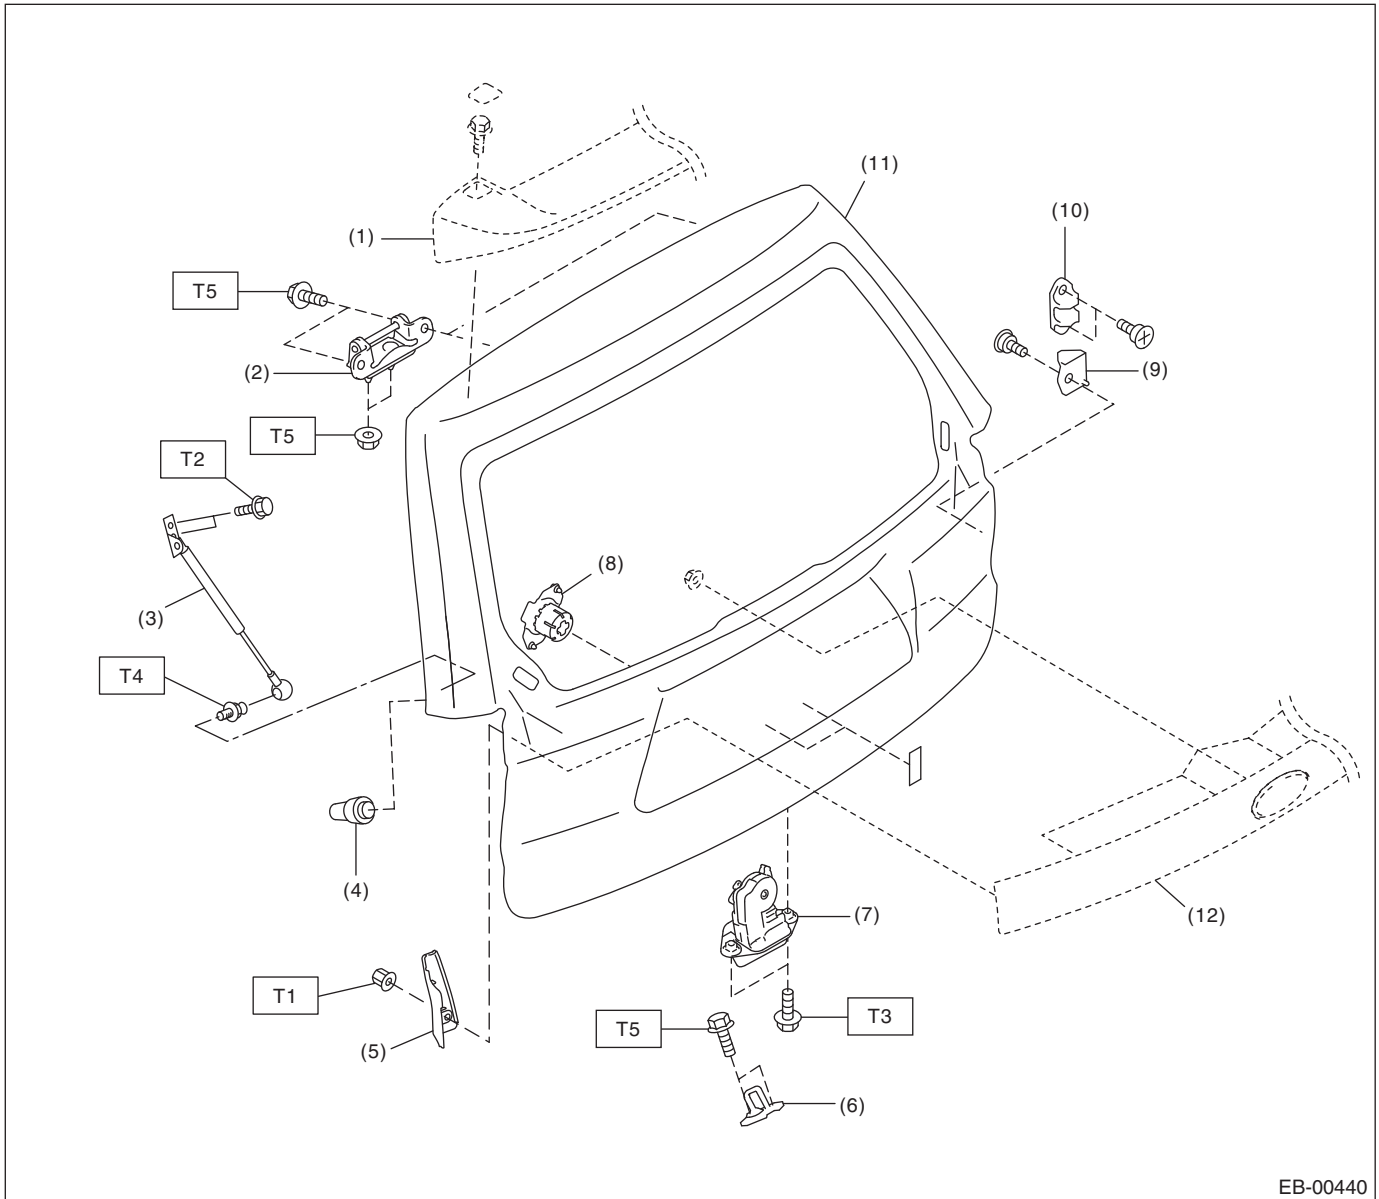

- (1) Rear spoiler
- (2) Hinge
- (3) Rear gate damper stay
- (4) Stopper rubber
- (5) Rear gate cover
- (6) Striker

- (7) Rear gate latch and actuator ASSY
- (8) Dynamic damper
- (9) Buffer (Rear gate side)
- (10) Buffer (Body side)
- (11) Rear gate panel
- (12) Rear gate garnish

Tightening torque: N·m (kgf-m, ft-lb)

T1: 4.5 (0.46, 3.32)

T2: 10 (1.02, 7.4)

T3: 18 (1.8, 13.3)


T4: 20 (2.04, 14.5)

T5: 25 (2.6, 18.4)

C: CAUTION

- The exterior body panel is very heavy. Be careful not to damage the panel by dropping it. During removal and installation, do not damage the panel painting surface.
- While removing mounting bolts, using assistance devices such as a support jack will help support the panel.
- Be careful not to lose small parts.

D: PREPARATION TOOL**1. SPECIAL TOOL**

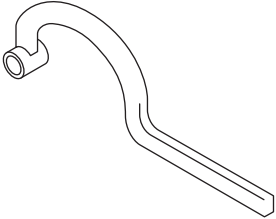ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-925610000	925610000	WRENCH	Used for removing and installing door hinge.

2. GENERAL TOOL

TOOL NAME	REMARKS
Support jack	Used for supporting door panel.
Clip remover	Used for removing various types of clips