



3. Front Fender

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the side sill spoilers. <Ref. to EI-39, REMOVAL, Side Sill Spoiler.>
- 3) Remove the front bumper. <Ref. to EI-28, REMOVAL, Front Bumper.>
- 4) Remove the headlight assembly. <Ref. to LI-17, REMOVAL, Headlight Assembly.>
- 5) Remove the mud guard. <Ref. to EI-27, REMOVAL, Mud Guard.>
- 6) Detach the tabs and remove the cowl panel, side.

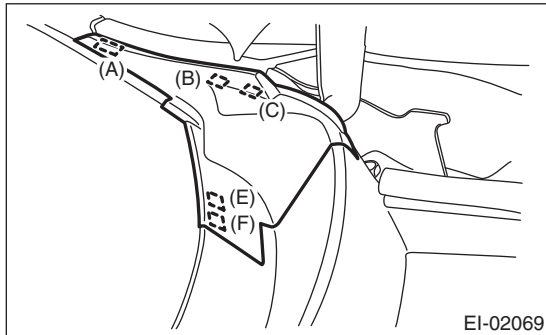

- (1) Detach tabs (A), (B), and (C) from the vehicle exterior.
 - (2) Detach tabs (E) and (F).
- 7) Remove the bolt, and remove the front fender panel.

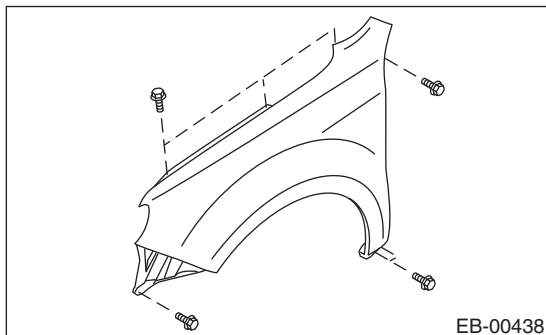

B: INSTALLATION

CAUTION:

- When replace double sided tape with new tape.
 - After attaching the front fender panel, always perform headlight beam level adjustment.
- Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

NOTE:

Install while paying attention to maintaining a uniform clearance around the front fender panel. For the dimension of clearances, refer to "SPECIFICATION" in "General Description". <Ref. to EB-2, SPECIFICATION, General Description.>