


General Description

EXTERIOR/INTERIOR TRIM

1. General Description

A: COMPONENT

1. FRONT GRILLE

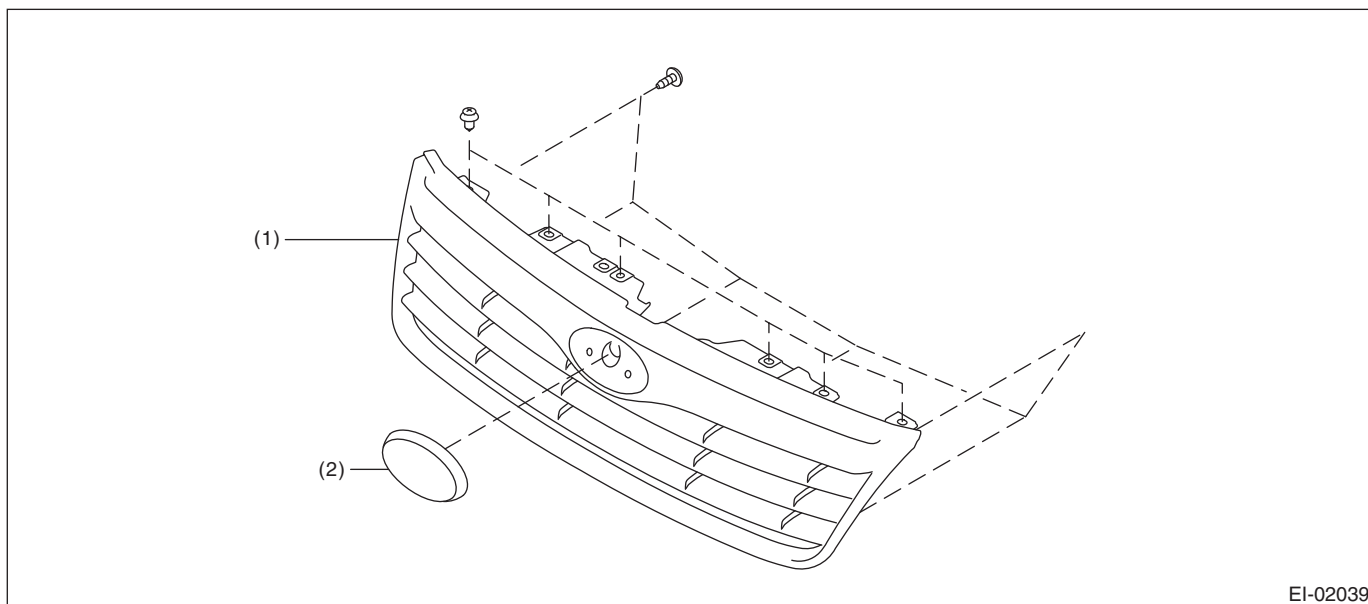


EI-02039

(1) Front grille ASSY

(2) Front grille emblem

2. UNDER COVER

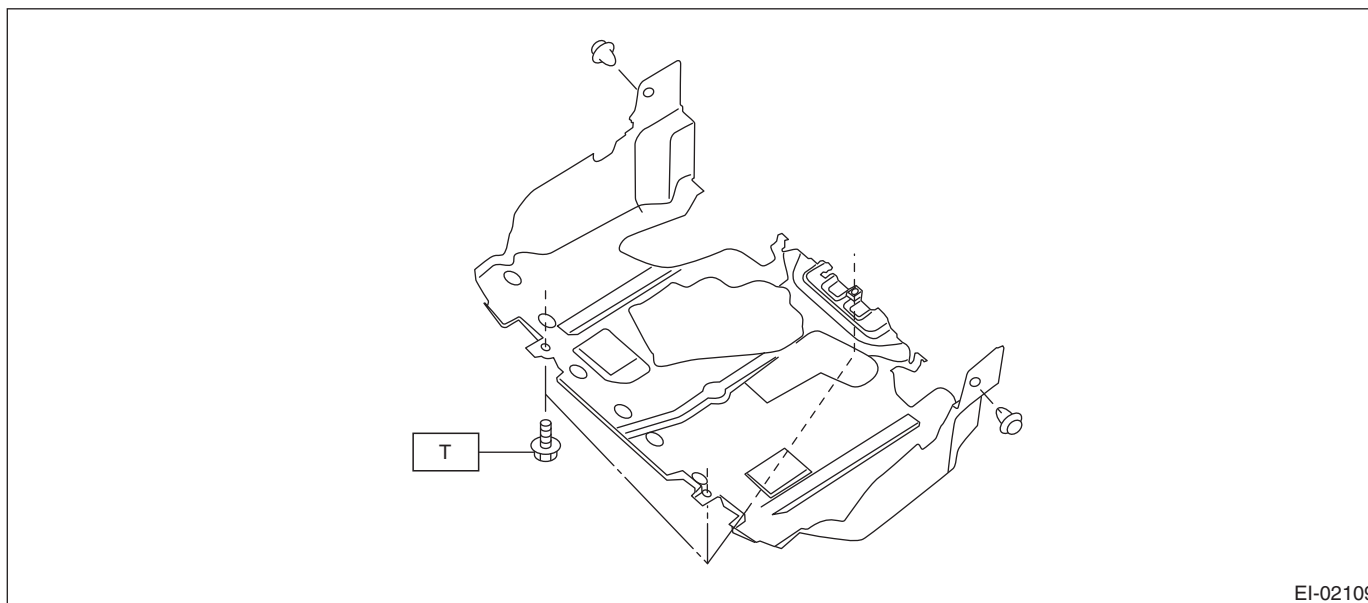


EI-02109

Tightening torque:N·m (kgf-m, ft-lb)

T: 14 (1.42, 10.3)

3. UNDER PROTECTOR

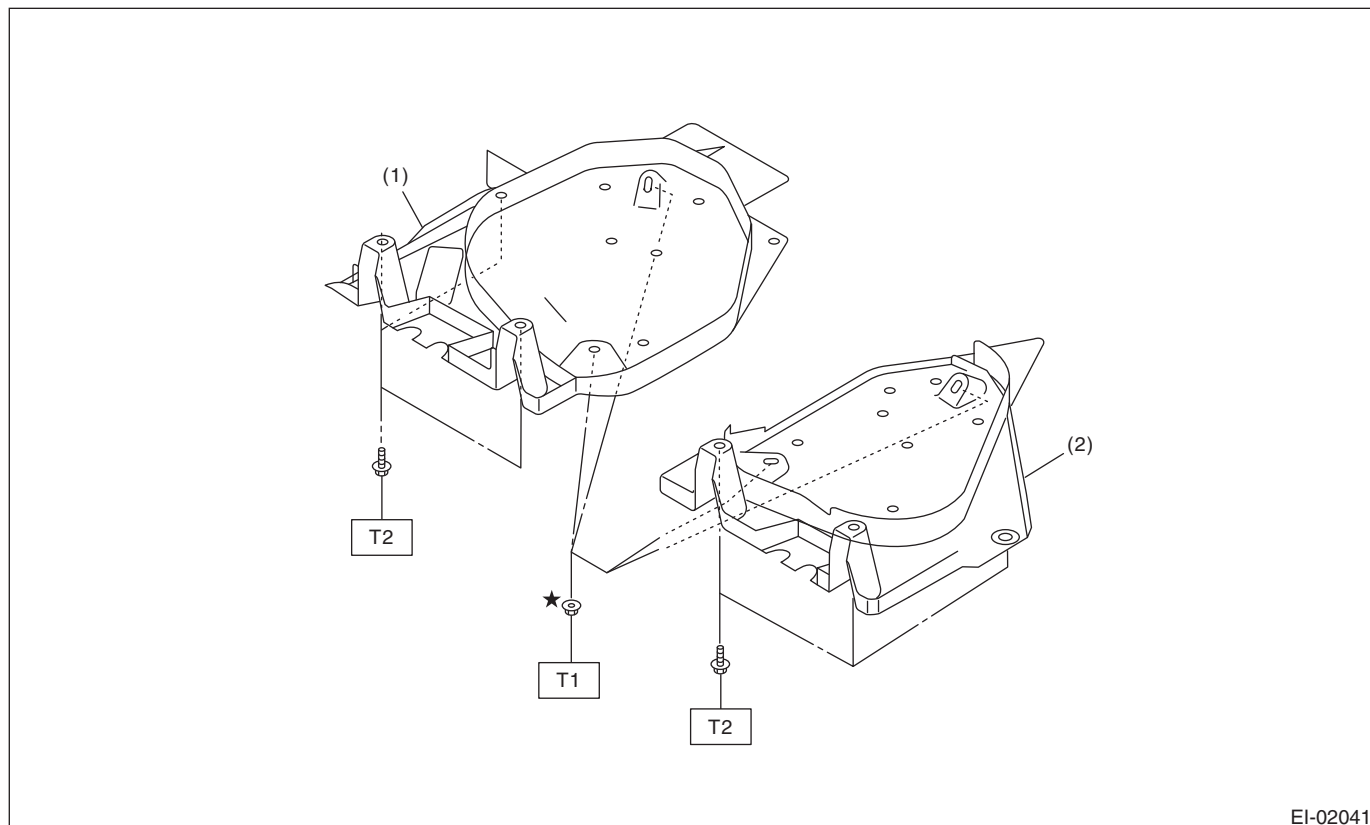

EI-02041

(1) Fuel tank protector RH

(2) Fuel tank protector LH

Tightening torque: N·m (kgf-m, ft-lb)


T1: 9 (0.92, 6.5)

T2: 18 (1.84, 13.3)

General Description

EXTERIOR/INTERIOR TRIM

4. FRONT HOOD GRILLE

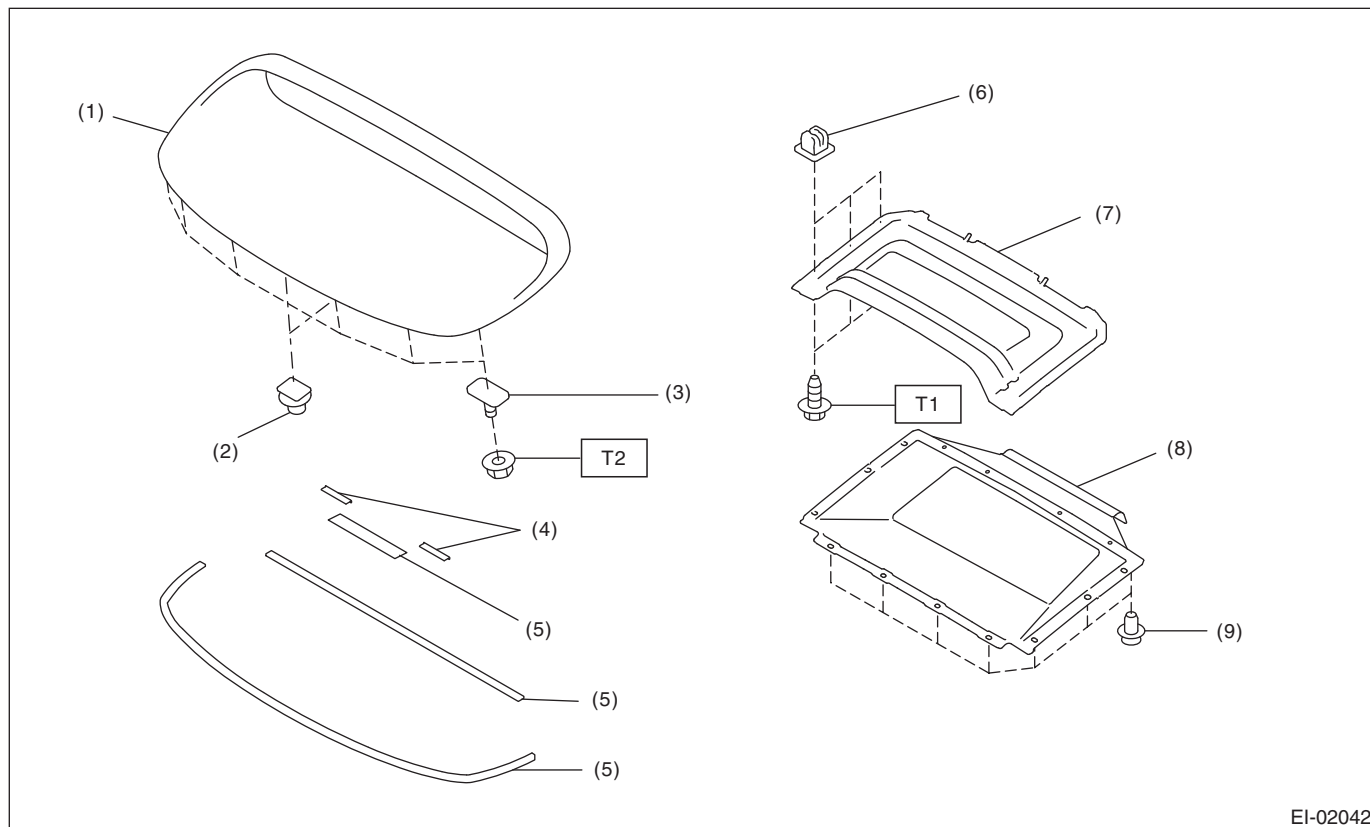

- (1) Front hood grille
- (2) Clip anchor
- (3) Bolt
- (4) Protector
- (5) Gasket


- (6) Grommet
- (7) Hood duct
- (8) Hood duct inner
- (9) Clip

Tightening torque: N·m (kgf-m, ft-lb)

T1: 1.0 (0.1, 0.74)

T2: 4.5 (0.46, 3.3)

5. FRONT BUMPER

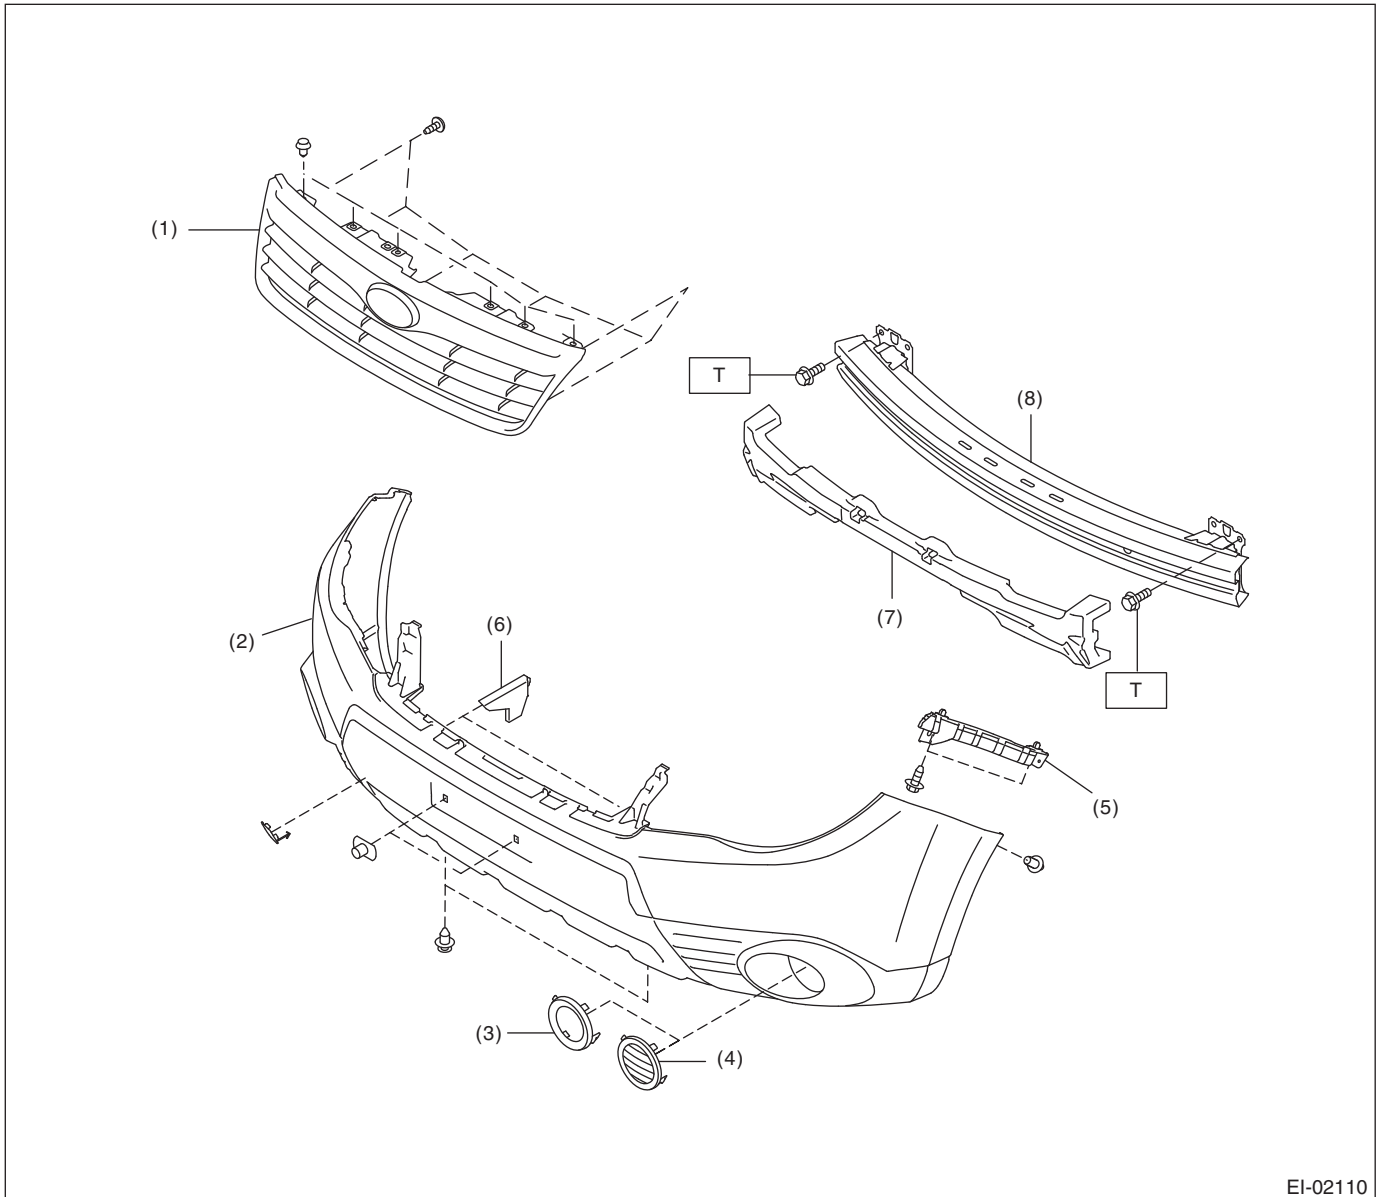

EI-02110

- | | |
|--|-------------------------------|
| (1) Front grille ASSY | (5) Front side bracket |
| (2) Bumper face | (6) Radiator gasket |
| (3) Fog light cover | (7) Energy absorber foam |
| (4) Front cover
(Models without fog lights) | (8) Bumper beam reinforcement |


Tightening torque: N·m (kgf-m, ft-lb)

T: 32 (3.3, 23.6)

General Description

EXTERIOR/INTERIOR TRIM

6. REAR BUMPER

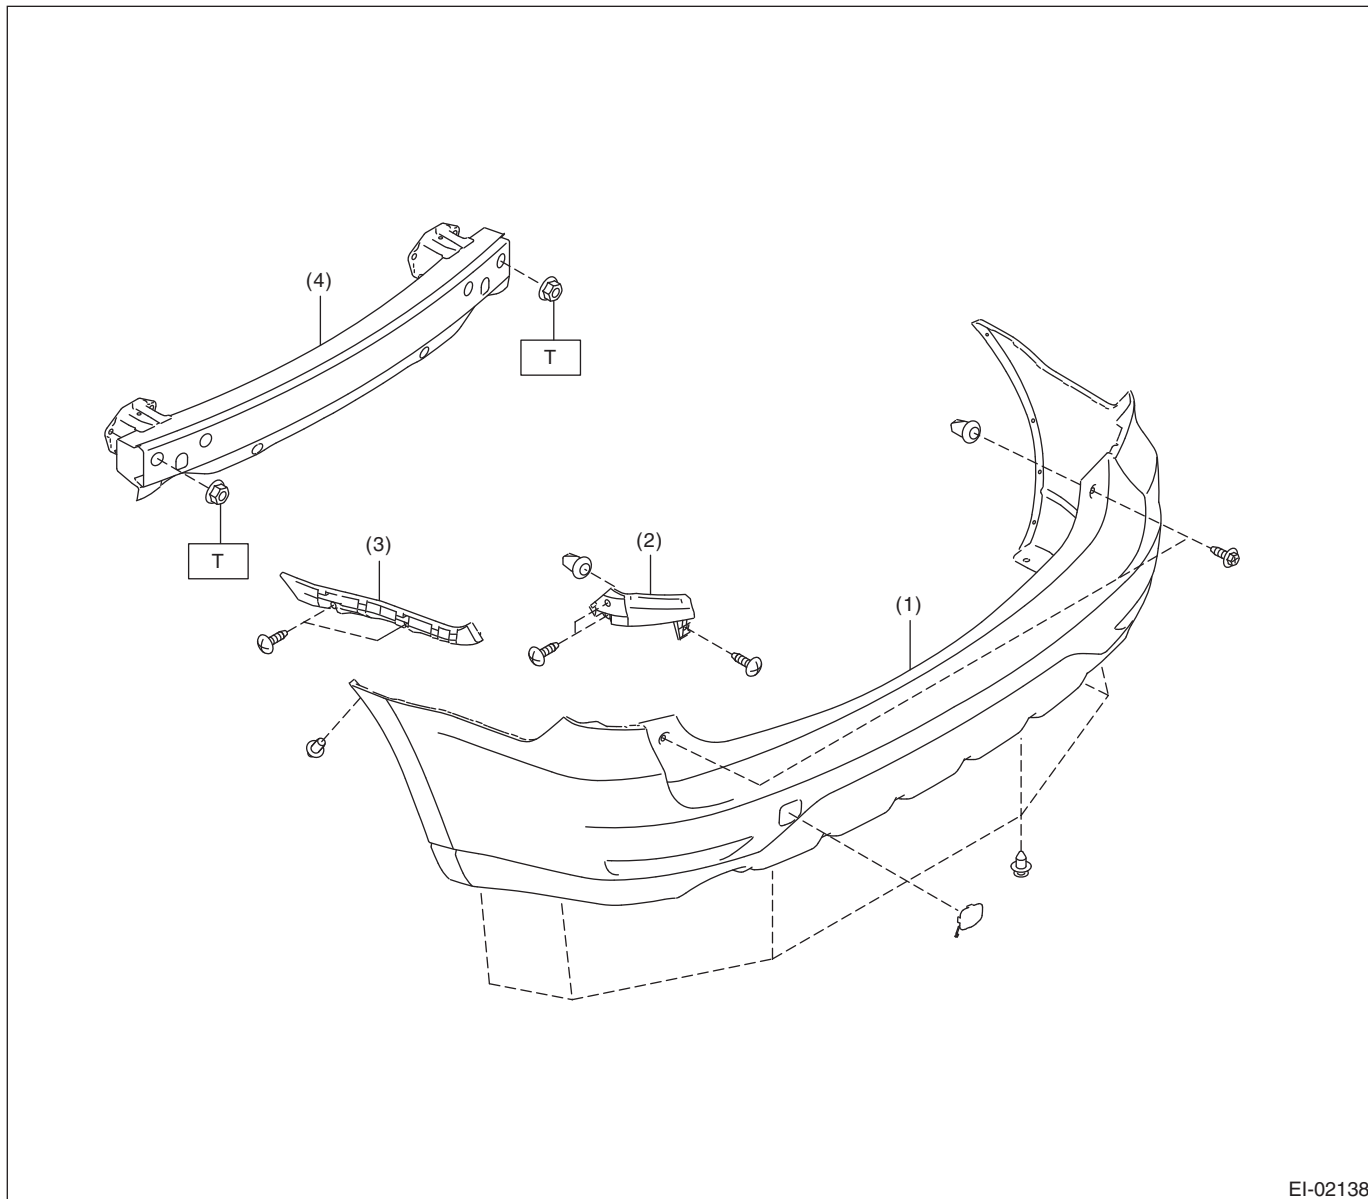

EI-02138


- (1) Bumper face
- (2) Rear bracket corner

- (3) Rear bracket side
- (4) Bumper beam reinforcement

Tightening torque: N·m (kgf-m, ft-lb)

T: 45 (4.6, 33.2)

7. MUD GUARD

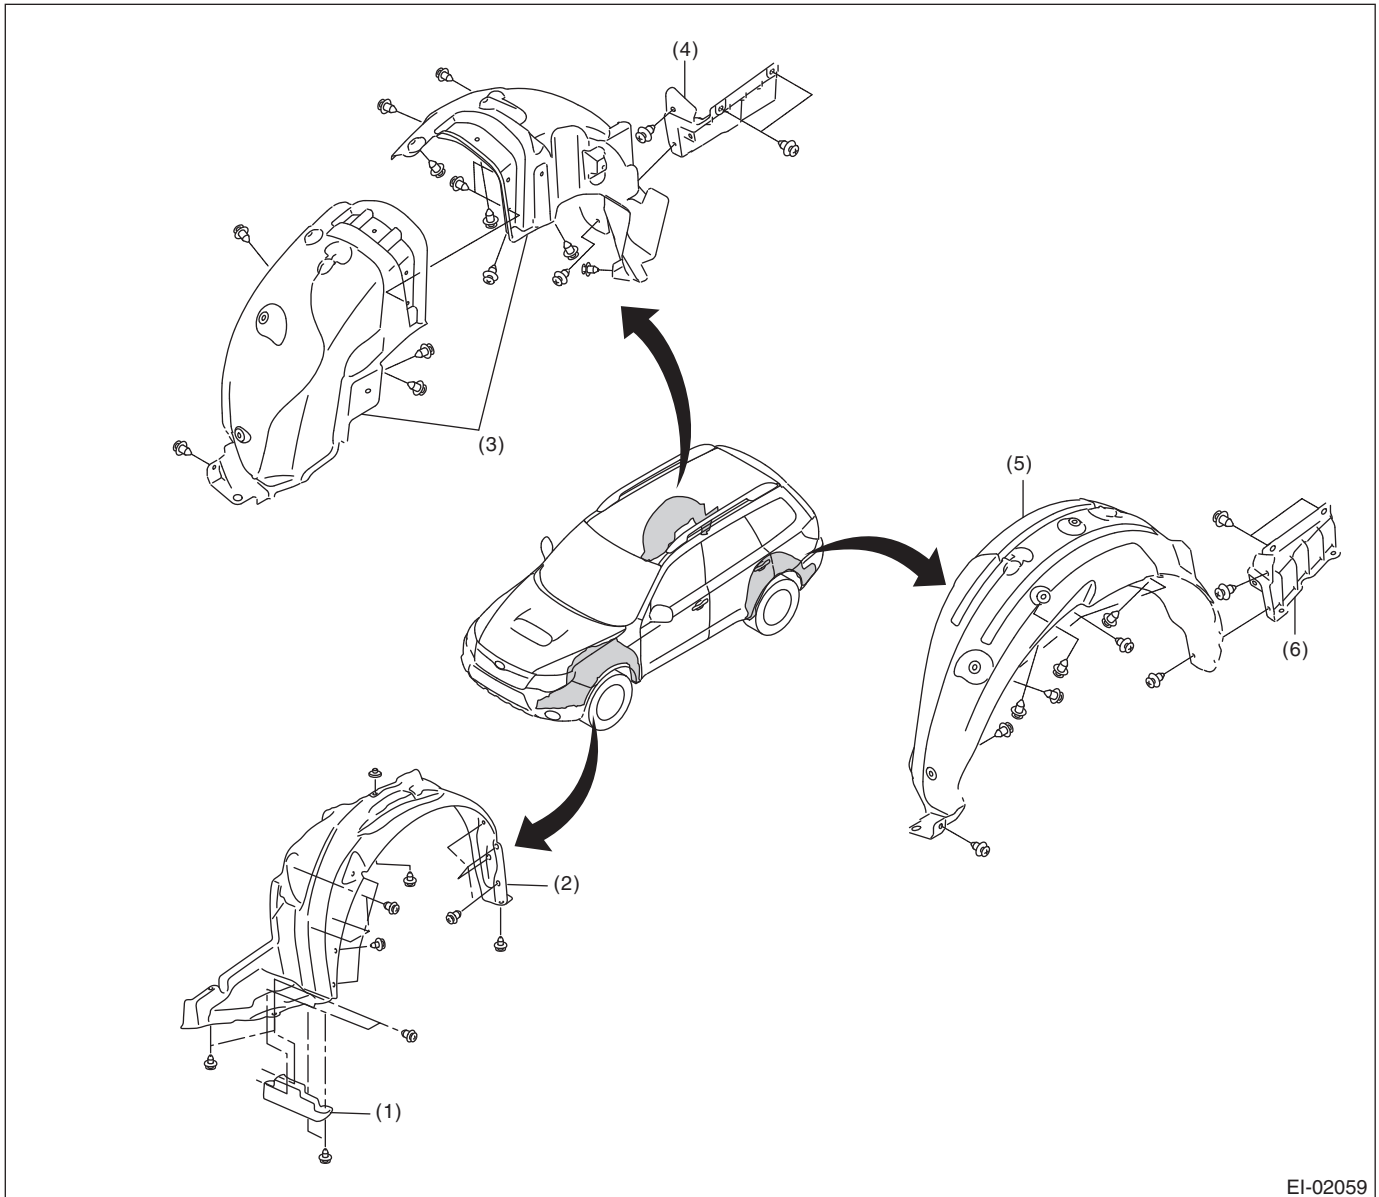


EI-02059

- | | | |
|---------------------|-----------------------|-----------------------|
| (1) Air flap | (3) Rear mud guard RH | (5) Rear mud guard LH |
| (2) Front mud guard | (4) Mud guard rear RH | (6) Mud guard rear LH |

General Description

EXTERIOR/INTERIOR TRIM

8. COWL PANEL

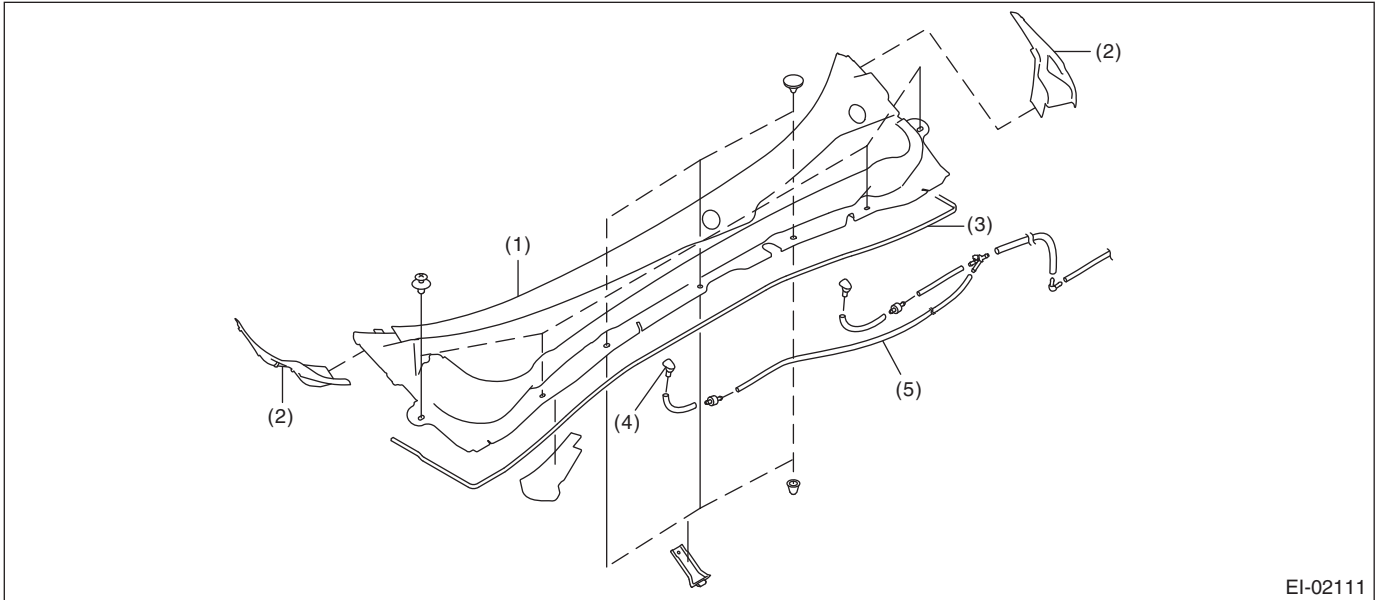


- (1) Cowl panel
(2) Cowl panel, side

- (3) Gasket
(4) Washer nozzle

- (5) Hose

9. ROOF SPOILER

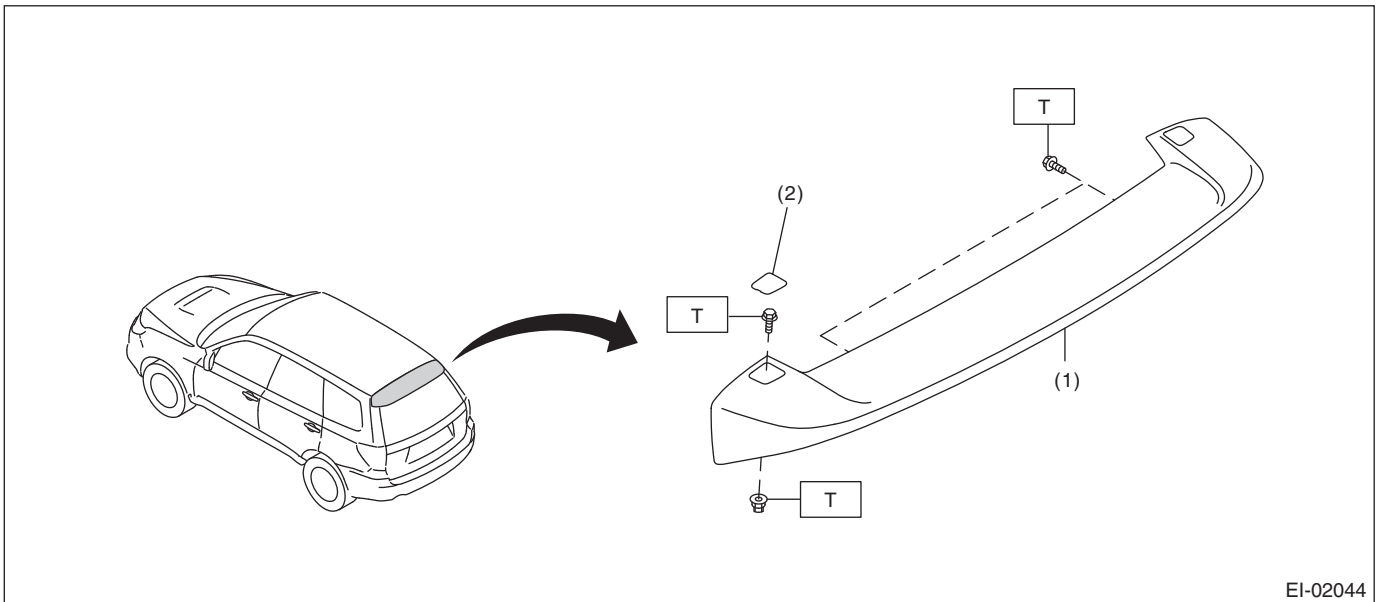


- (1) Roof spoiler

- (2) Cap


Tightening torque: N·m (kgf-m, ft-lb)
T: 7.5 (0.76, 5.5)

10.SIDE SILL SPOILER

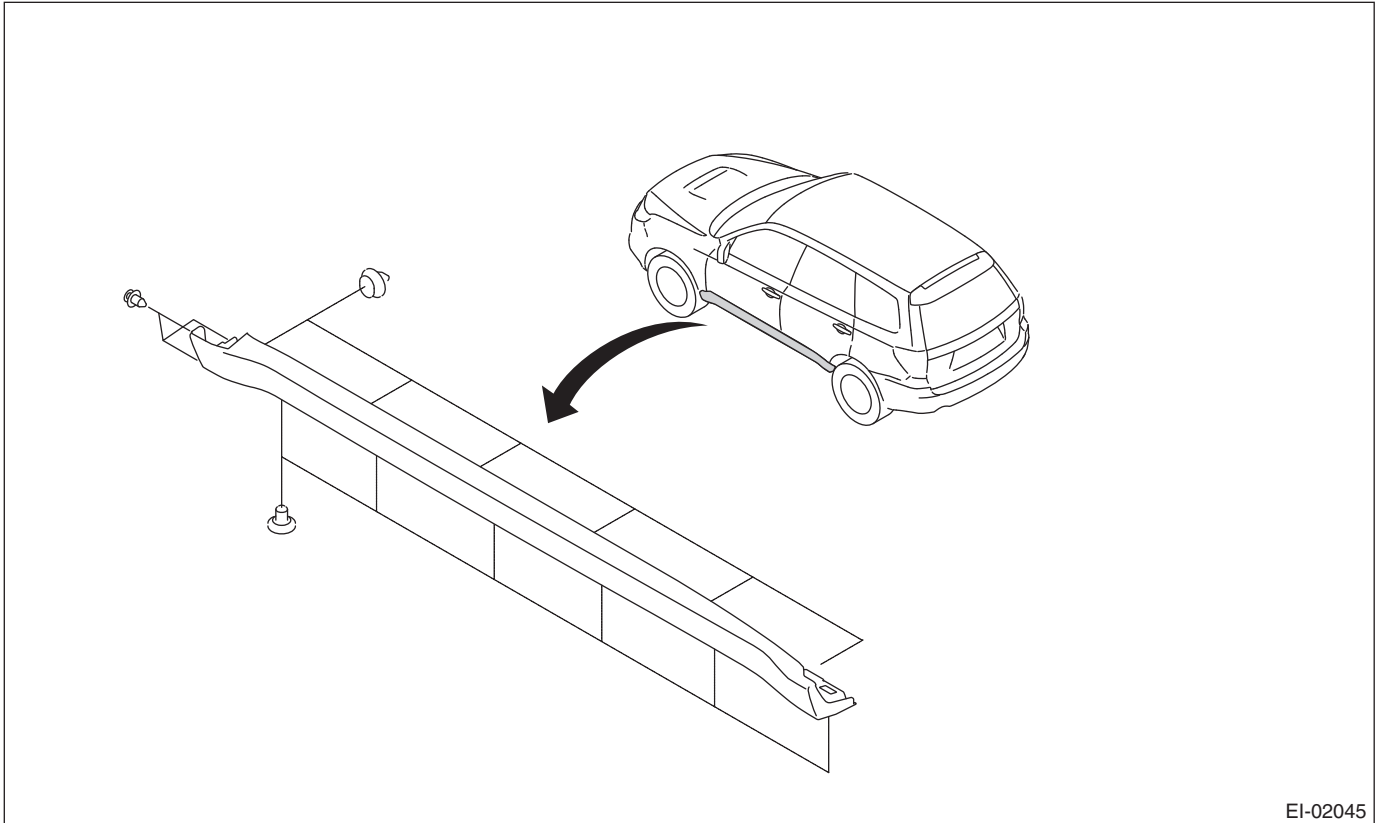

EI-02045

11.ROOF MOLDING

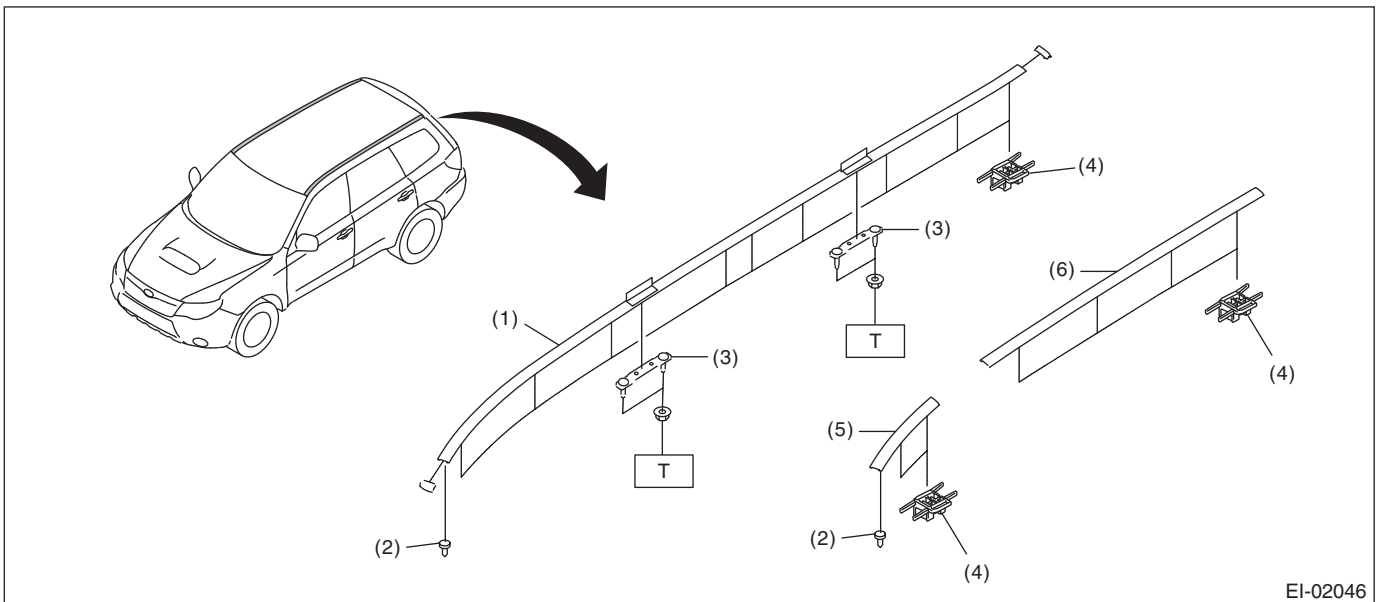

EI-02046


- | | |
|-------------------------------------|---|
| (1) Roof molding | (5) Roof molding, front
(Models with roof molding) |
| (2) Rivet | |
| (3) Roof carrier attachment bracket | (6) Roof molding, rear
(Models with roof molding) |
| (4) Clip | |

Tightening torque:N·m (kgf-m, ft-lb)
T: 7.5 (0.76, 5.5)

General Description

EXTERIOR/INTERIOR TRIM

12.ROOF RAIL

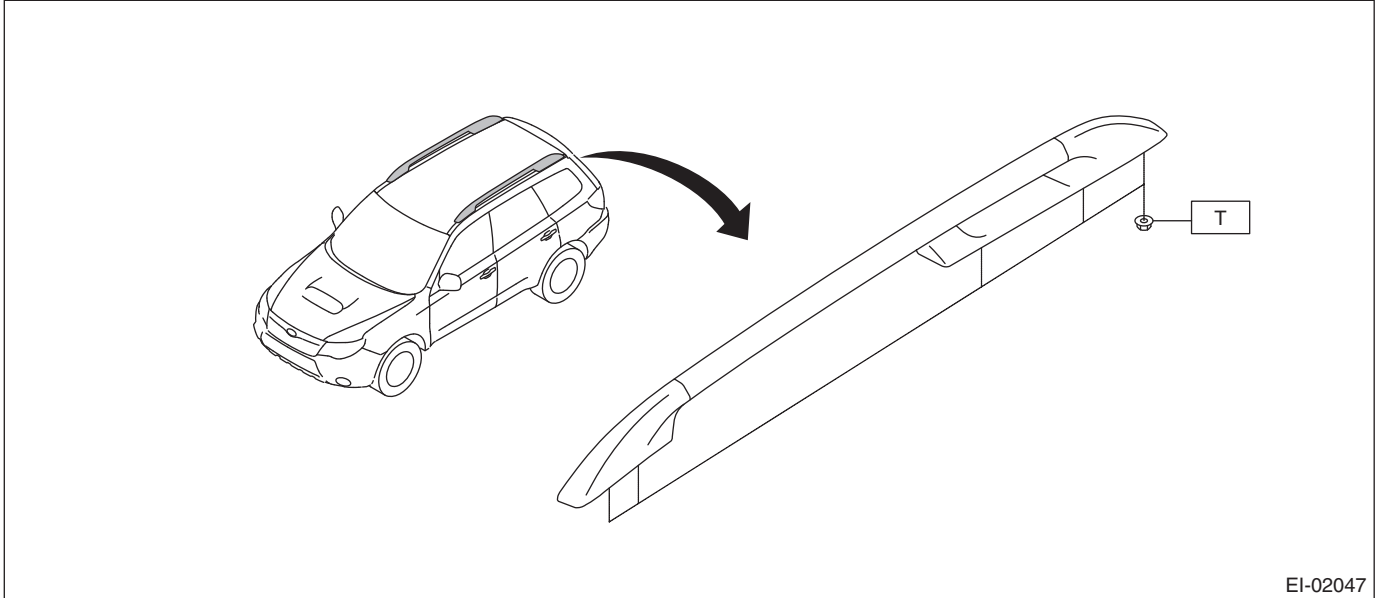


EI-02047

Tightening torque:N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

13.REAR GATE GARNISH

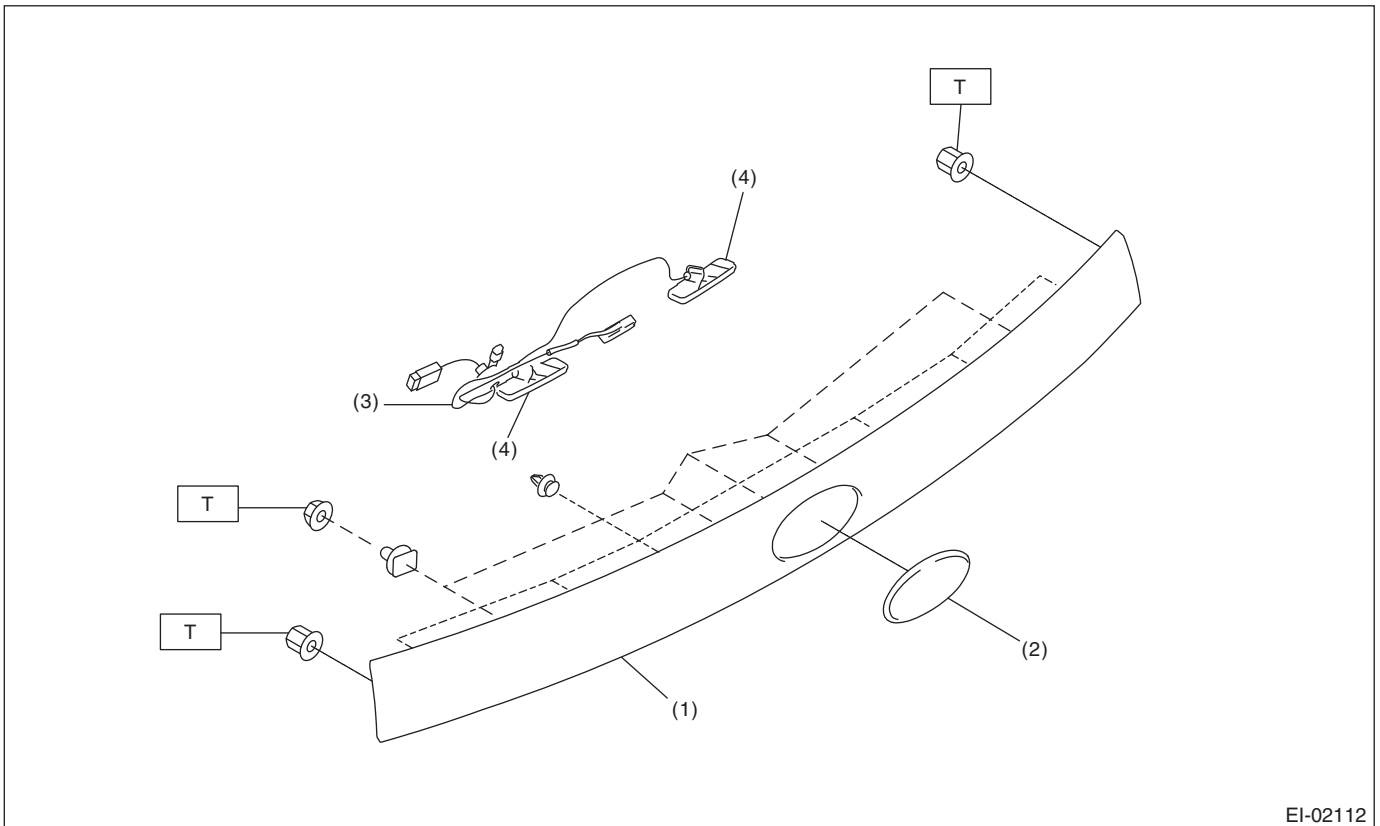

EI-02112

(1) Rear gate garnish

(2) Ornament


(3) License plate light ASSY harness

(4) License plate light

Tightening torque:N·m (kgf-m, ft-lb)

T: 4.5 (0.46, 3.32)

14.DOOR TRIM

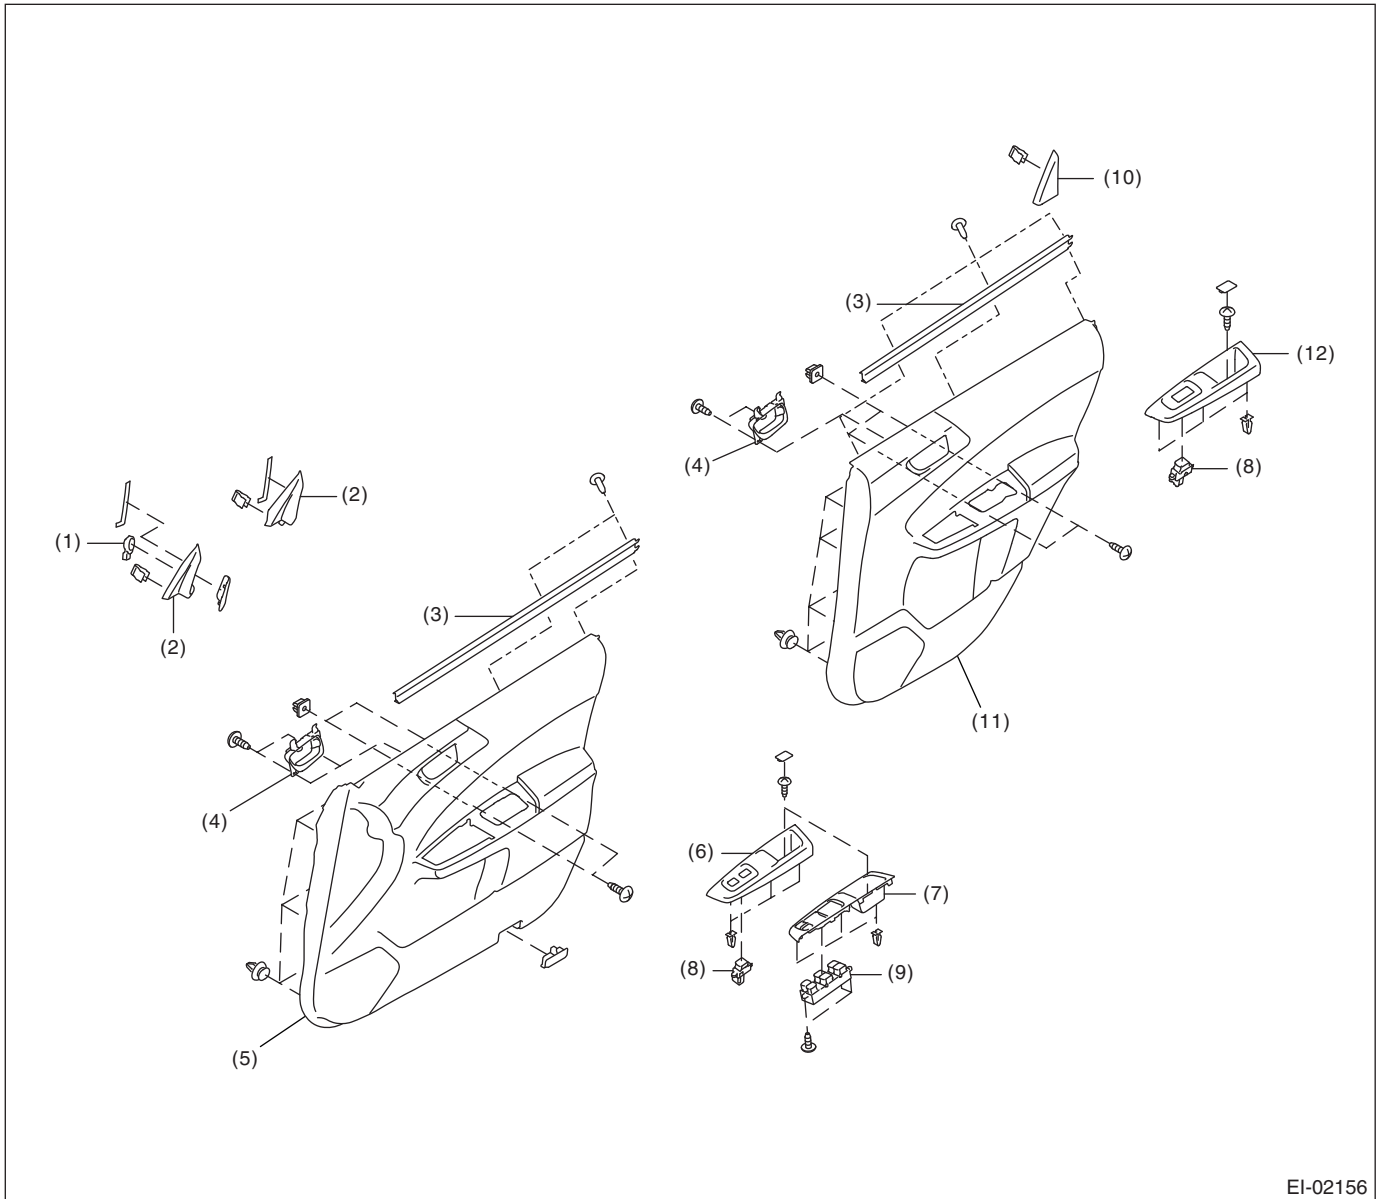


EI-02156

- | | | |
|-------------------------|---|--------------------------------------|
| (1) Tweeter | (6) Power window switch panel, front RH | (9) Power window main switch ASSY |
| (2) Gusset cover, front | (7) Power window switch panel, front LH | (10) Gusset cover, rear |
| (3) Upper weather strip | (8) Power window sub-switch | (11) Rear door trim |
| (4) Inner remote | | (12) Power window switch panel, rear |
| (5) Front door trim | | |

General Description

EXTERIOR/INTERIOR TRIM


15.CONSOLE BOX

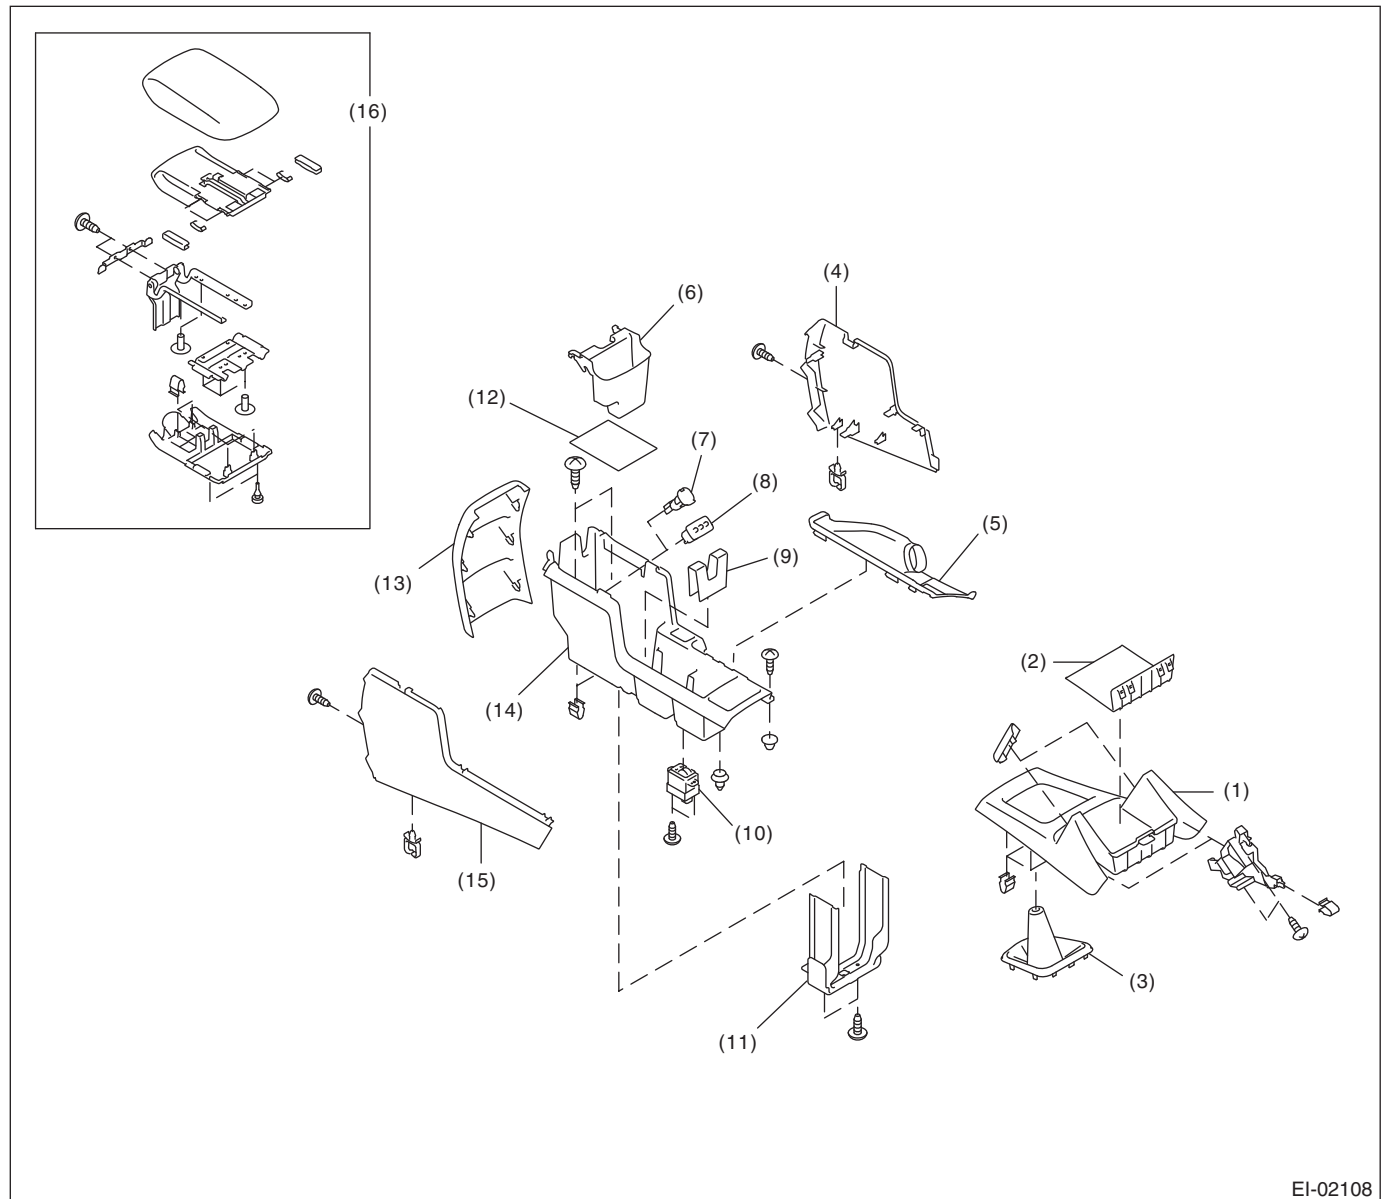

EI-02108

- | | | |
|-------------------------------|-----------------------------------|--------------------------------|
| (1) Console front panel | (7) Accessory power supply socket | (12) Console mat |
| (2) Console front mat | (8) AUX input terminal | (13) Console box, rear |
| (3) Shift boot (MT model) | (9) Cup holder partition | (14) Console cover |
| (4) Console box side cover LH | (10) Seat heater switch | (15) Console box side cover RH |
| (5) Parking brake lever boot | (11) Console box reinforcement | (16) Console lid ASSY |
| (6) Console pocket | | |

16.INSTRUMENT PANEL

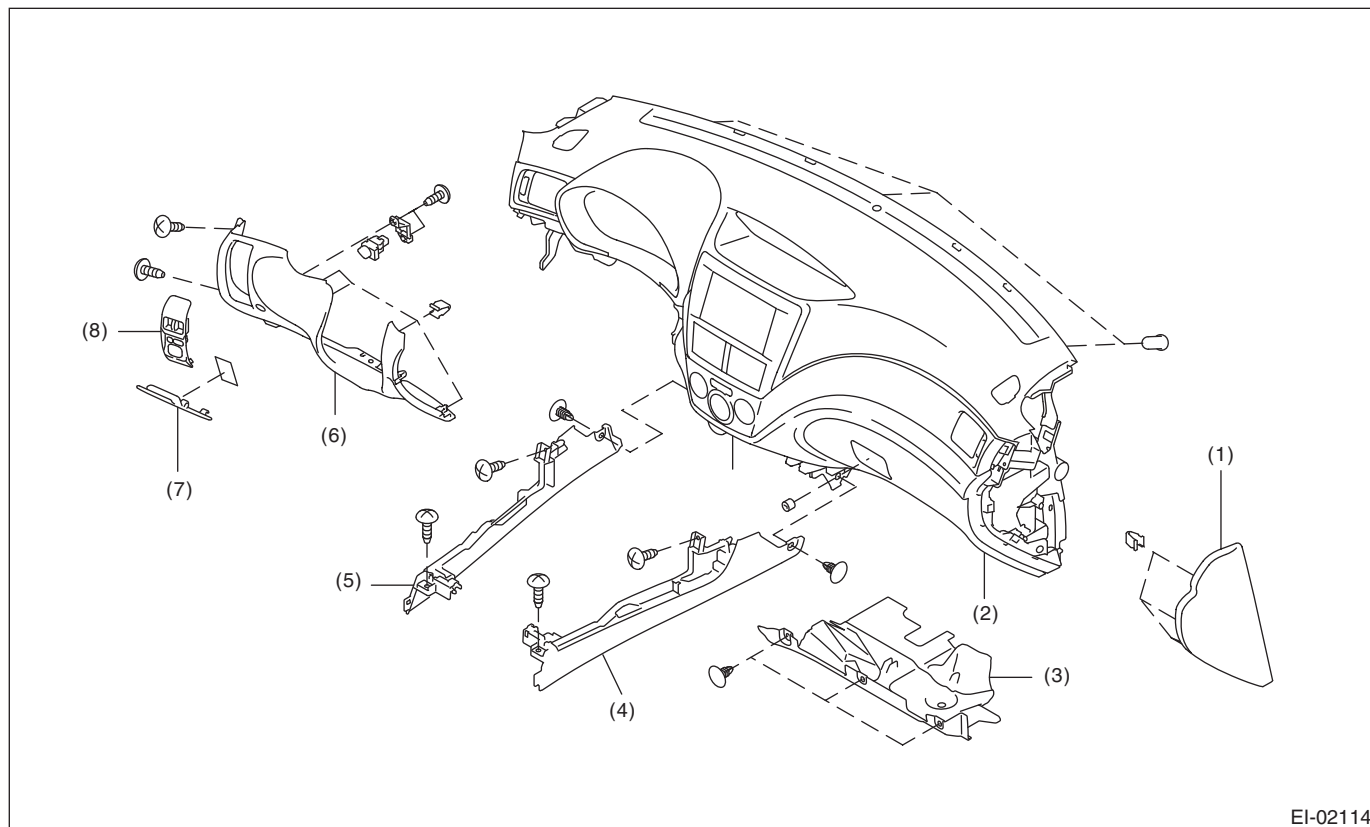


EI-02114

- | | | |
|---------------------------------|----------------------------------|-----------------------|
| (1) Instrument panel side cover | (4) Console side panel RH | (7) Fuse box lid |
| (2) Instrument panel ASSY | (5) Console side panel LH | (8) Switch panel ASSY |
| (3) Glove box lower cover | (6) Instrument panel lower cover | |


General Description

EXTERIOR/INTERIOR TRIM

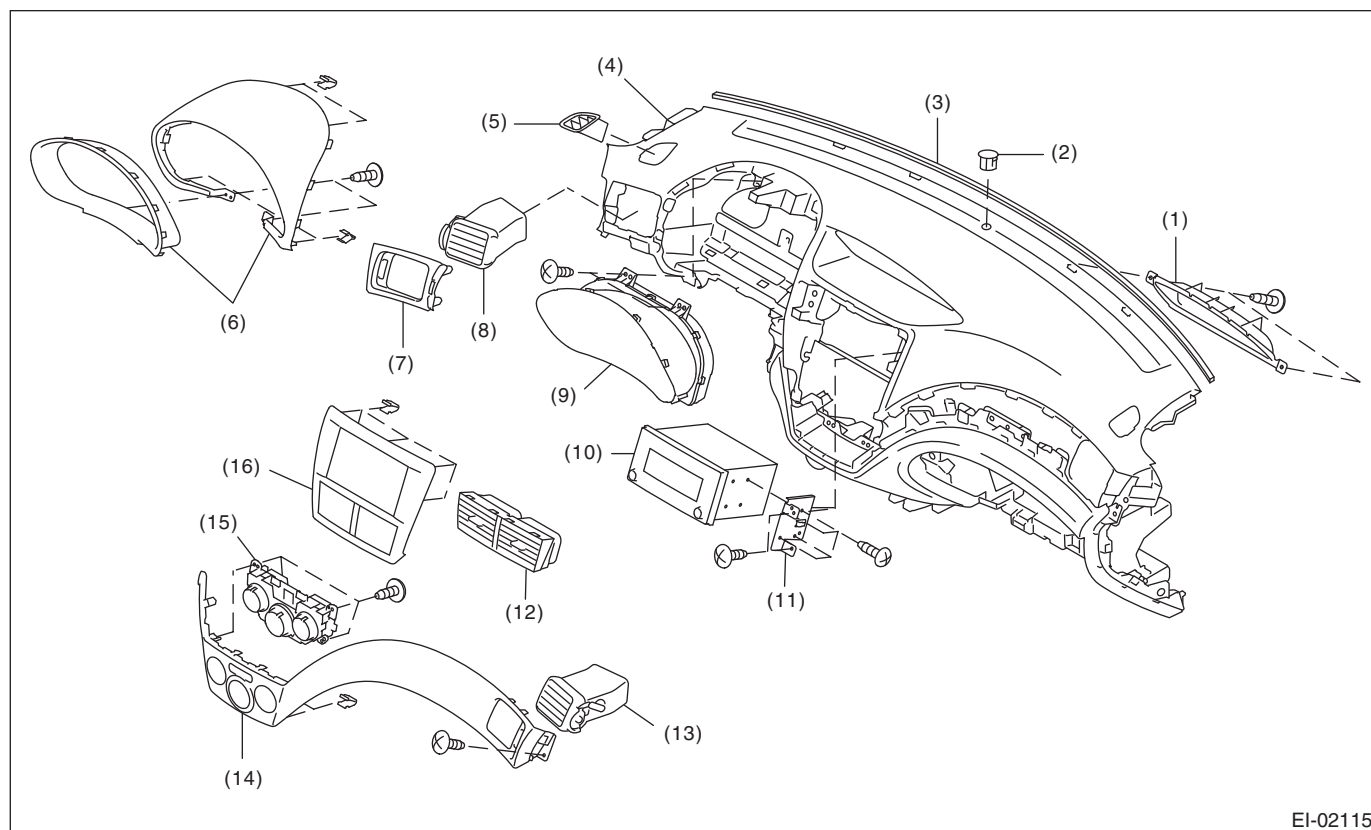

EI-02115

- | | | |
|---------------------------|-----------------------------|-------------------------------|
| (1) Clock panel | (7) Ornament panel LH | (12) Air vent side grille CTR |
| (2) Sunload sensor | (8) Air vent side grille LH | (13) Air vent grille RH |
| (3) Cushion | (9) Combination meter ASSY | (14) Ornament panel RH |
| (4) Instrument panel ASSY | (10) Audio | (15) Control module |
| (5) Defroster side grille | (11) Audio bracket | (16) Center panel |
| (6) Meter visor ASSY | | |

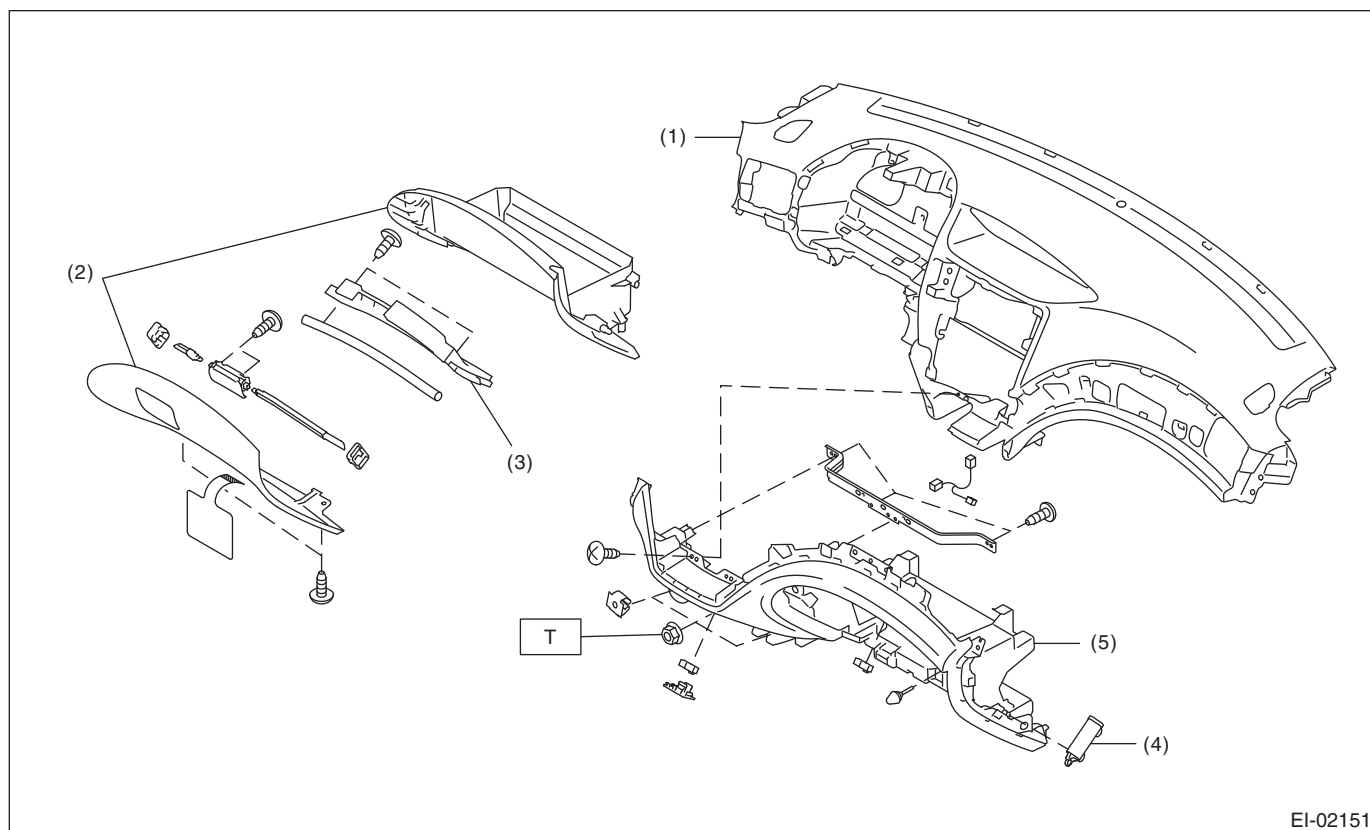

(1) Instrument panel pad & frame
ASSY

(2) Glove box lid ASSY

(3) Glove box pad

(4) Glove box damper


(5) Instrument panel lower

Tightening torque: N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

General Description

EXTERIOR/INTERIOR TRIM

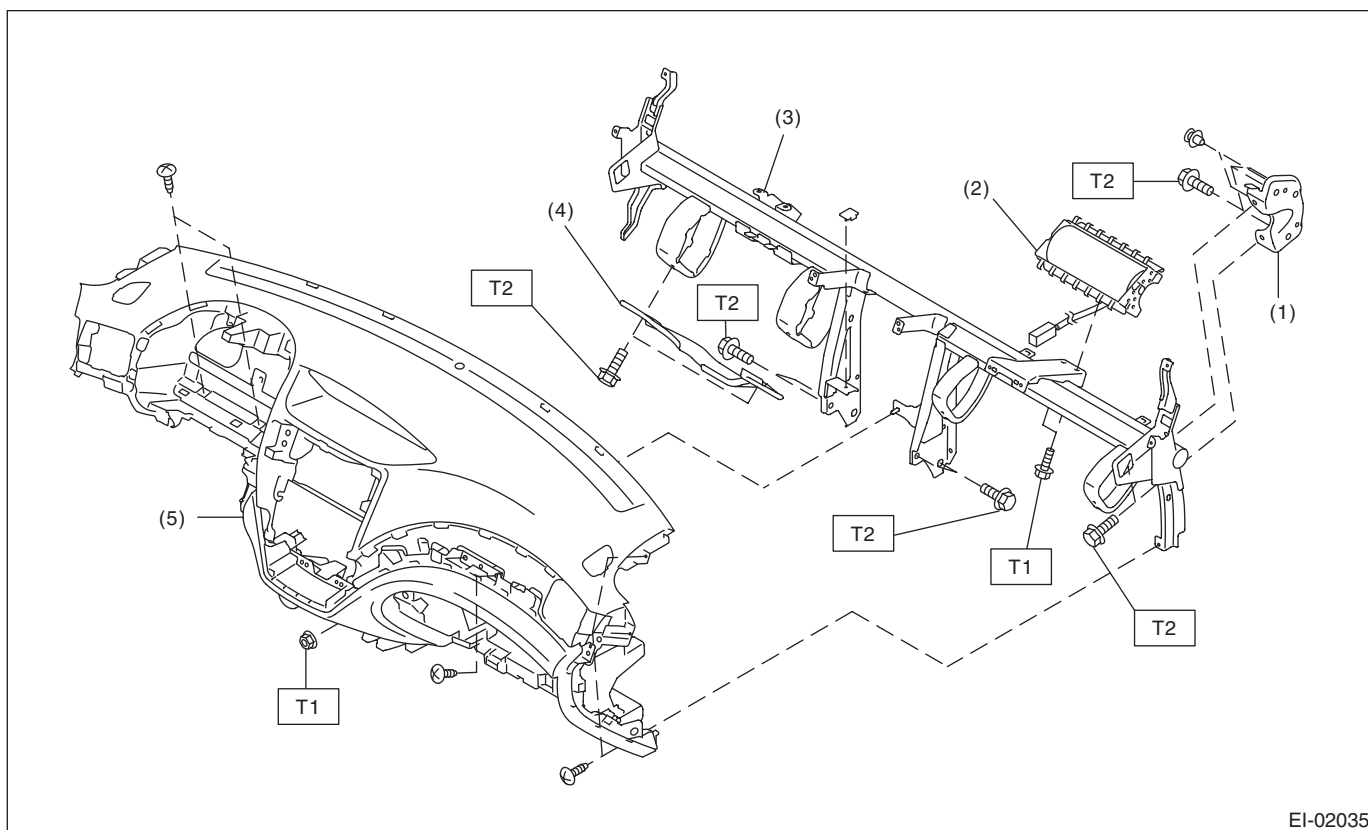


EI-02035

- | | |
|------------------------------------|---------------------------|
| (1) Steering support beam bracket | (4) Knee guard panel |
| (2) Passenger's airbag module ASSY | (5) Instrument panel ASSY |
| (3) Steering support beam ASSY | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 25 (2.55, 18.4)

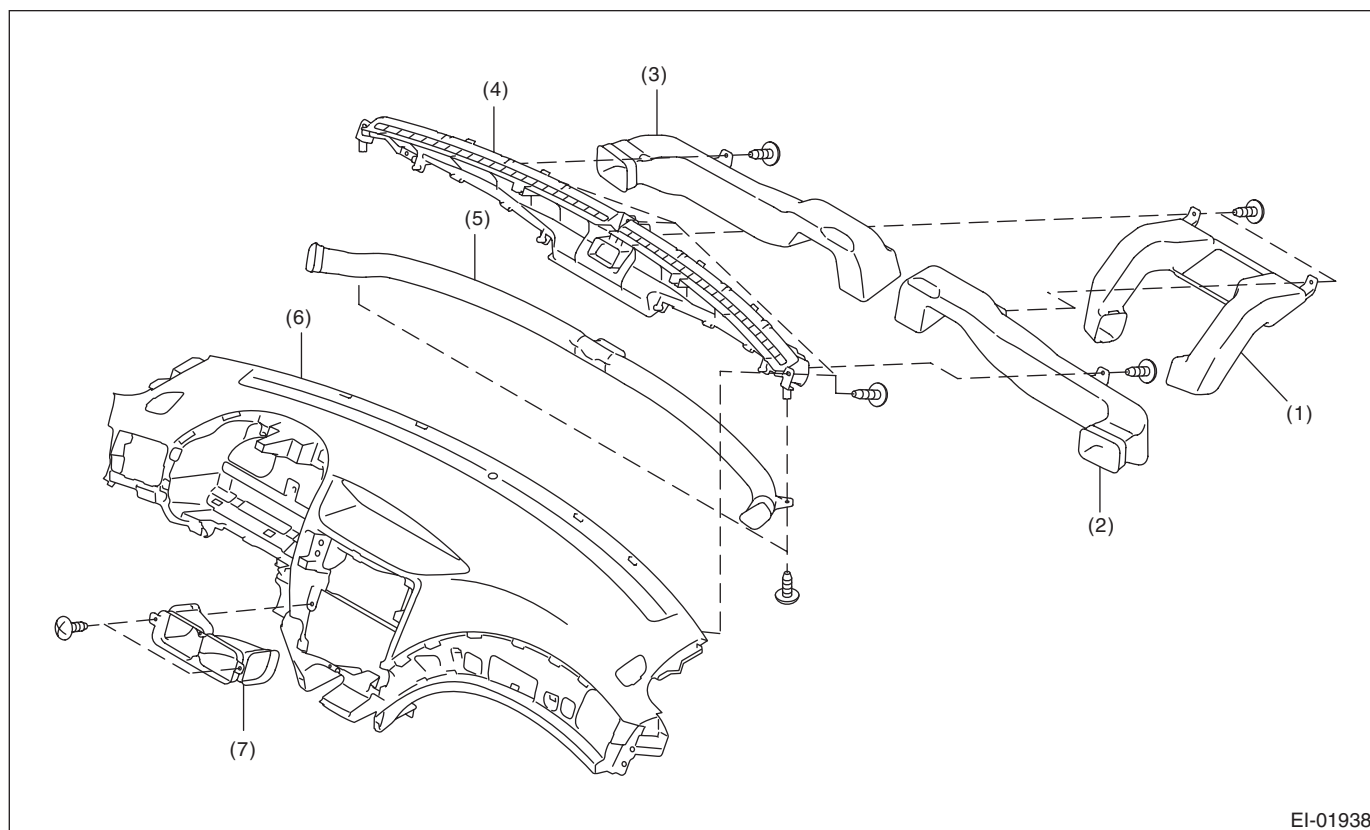


EI-01938

- | | | |
|--------------------------------|---------------------------------------|----------------------------|
| (1) Center vent duct | (5) Side defroster | (7) Center vent duct front |
| (2) Side vent duct RH | (6) Instrument panel pad & frame ASSY | |
| (3) Side ventilation duct (LH) | | |
| (4) Defroster nozzle ASSY | | |

General Description

EXTERIOR/INTERIOR TRIM

17.INNER TRIM

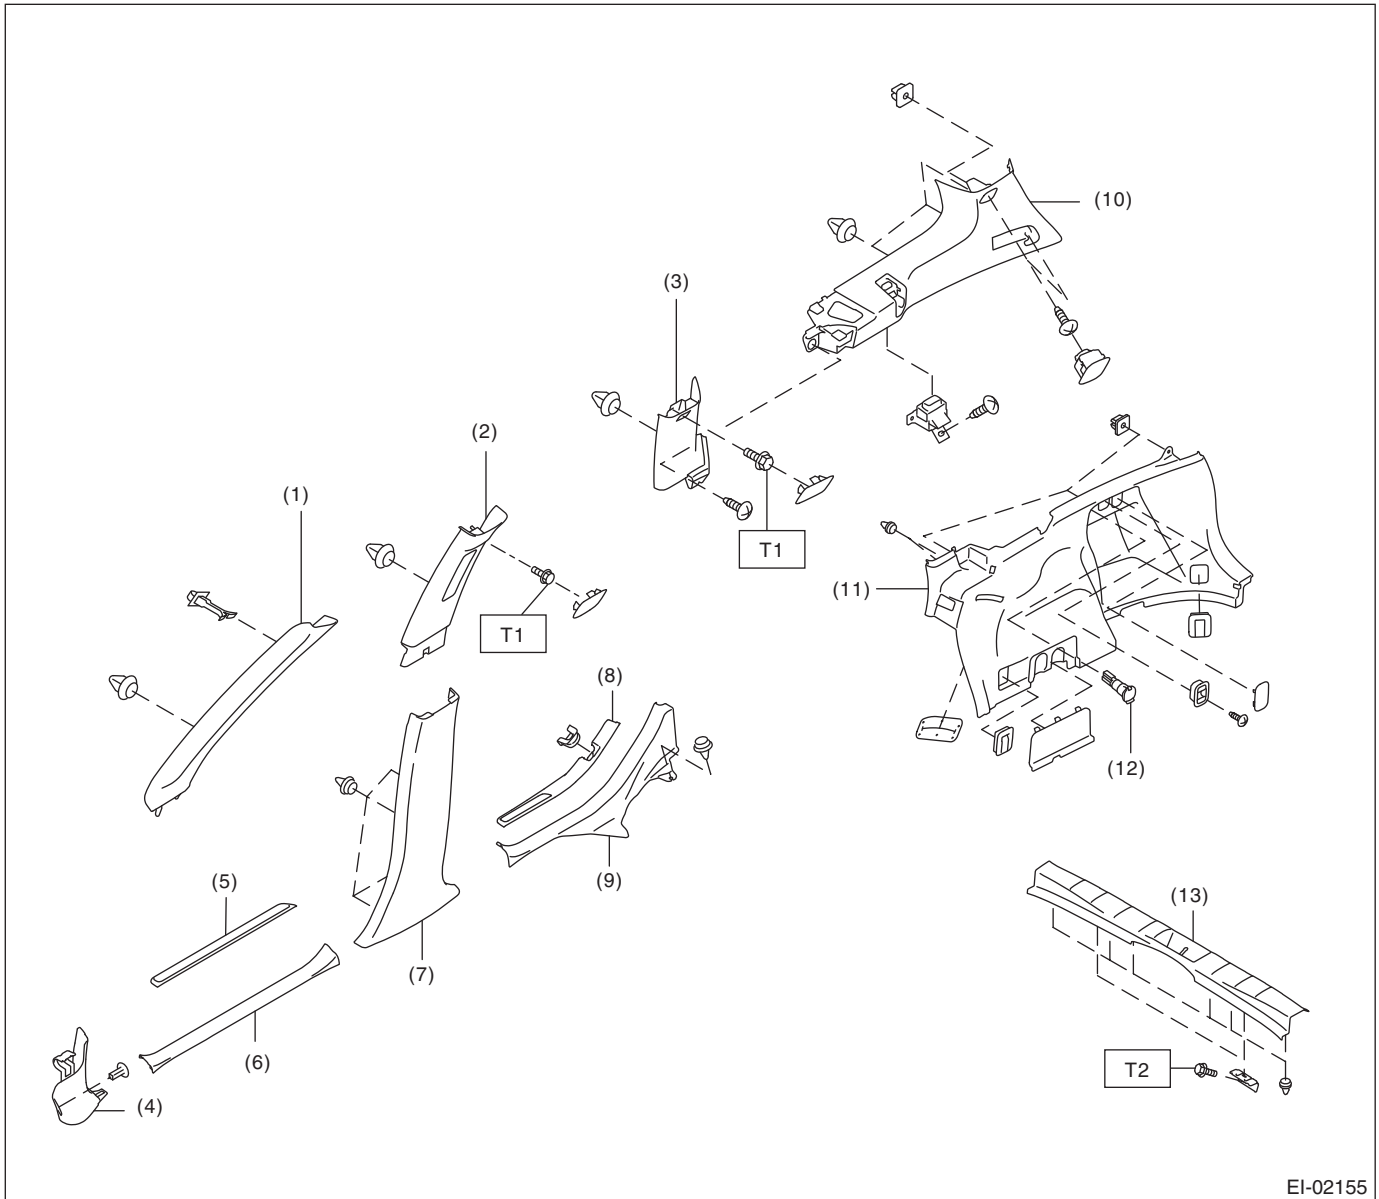

- | | |
|------------------------------------|------------------------------------|
| (1) Front pillar upper trim | (7) Center pillar lower trim |
| (2) Center pillar upper trim | (8) Rear outside scuff plate |
| (3) Rear quarter pillar front trim | (9) Rear inside scuff plate |
| (4) Front pillar lower trim | (10) Rear quarter upper trim |
| (5) Front outside scuff plate | (11) Rear quarter lower trim |
| (6) Front inside scuff plate | (12) Accessory power supply socket |


- (13) Luggage room end cover

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 25 (2.55, 18.4)


18. REAR GATE TRIM

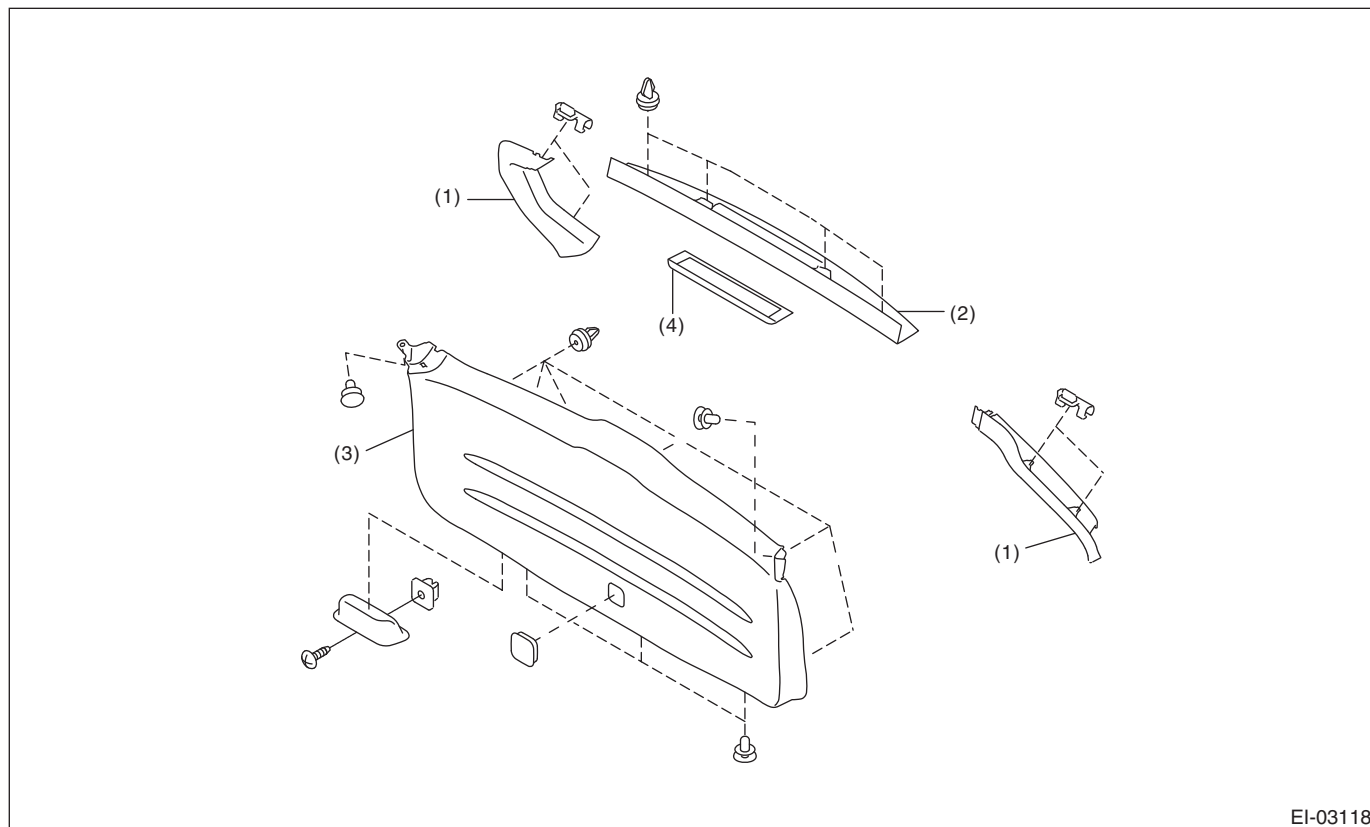

EI-03118

- (1) Rear gate pillar trim
- (2) Rear gate upper trim
- (3) Rear gate lower trim
- (4) High-mounted stop light

19. ROOF TRIM

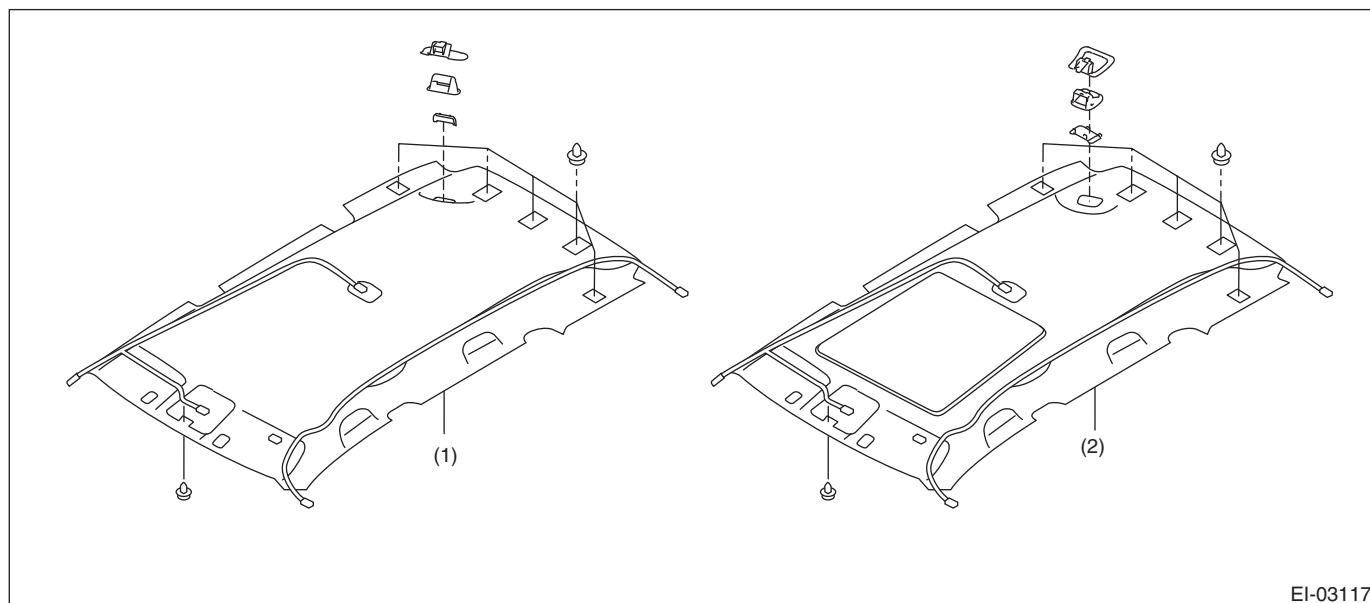


EI-03117

- (1) Models without sunroof
- (2) Models with sunroof

General Description

EXTERIOR/INTERIOR TRIM

20.ROOM INNER PARTS

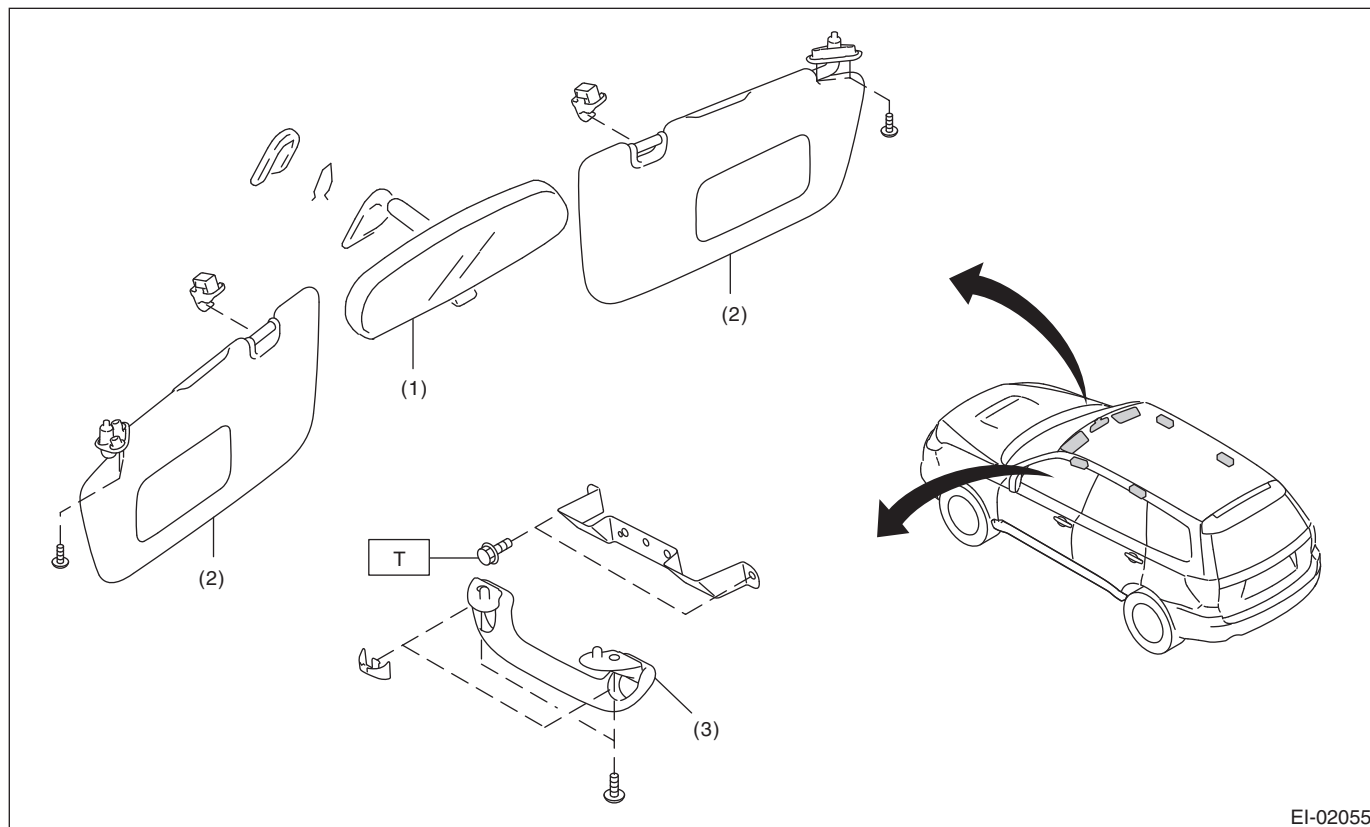

EI-02055

(1) Room mirror


(2) Sun visor

(3) Assist grip

Tightening torque:N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)


21.LUGGAGE ROOM PARTS

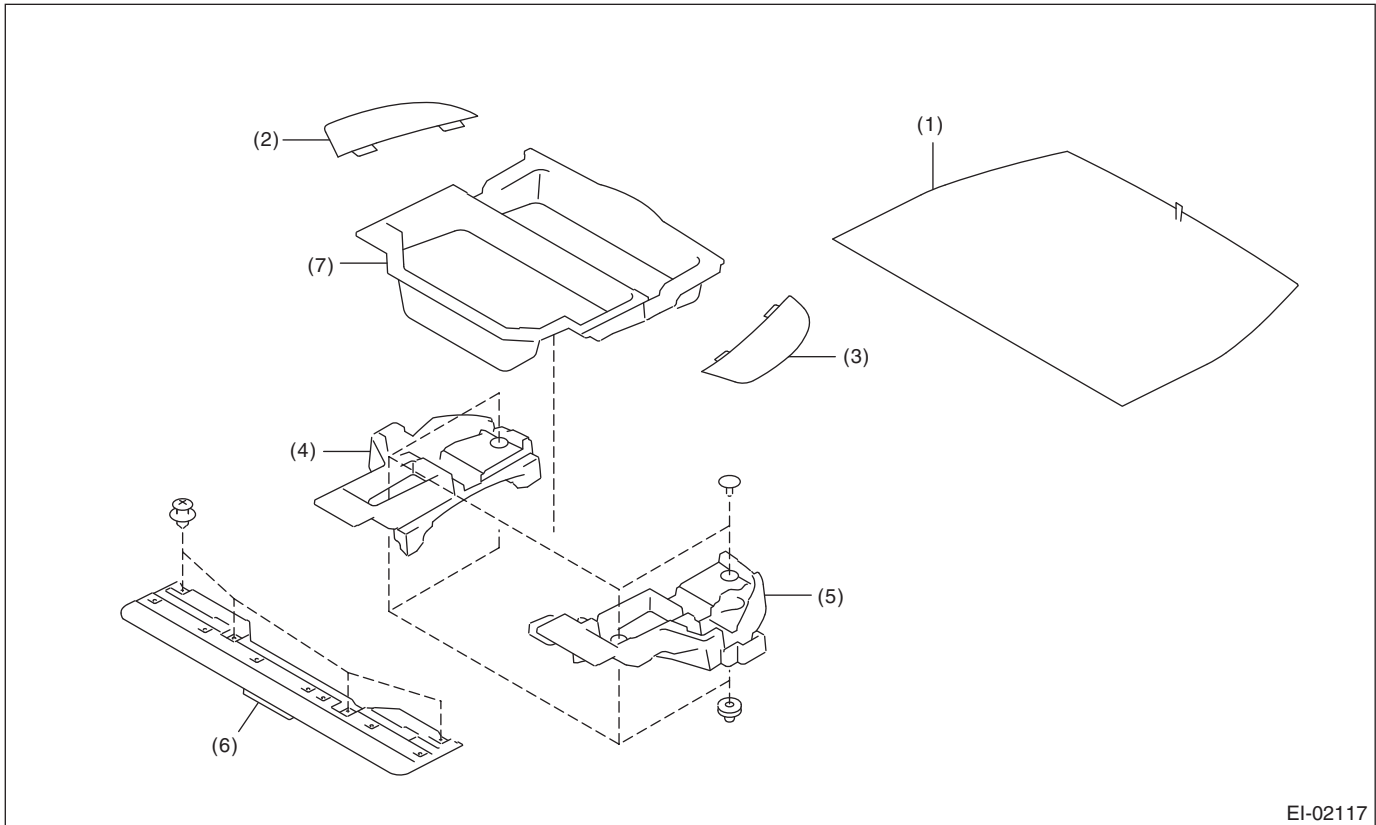

EI-02117

- | | | |
|---------------------------|-------------------------------|-----------------------------|
| (1) Luggage floor mat CTR | (4) Rear floor spacer side RH | (6) Rear floor spacer front |
| (2) Luggage floor mat RH | (5) Rear floor spacer side LH | (7) Trunk cover |
| (3) Luggage floor mat LH | | |

22.HEAT SHIELD COVER

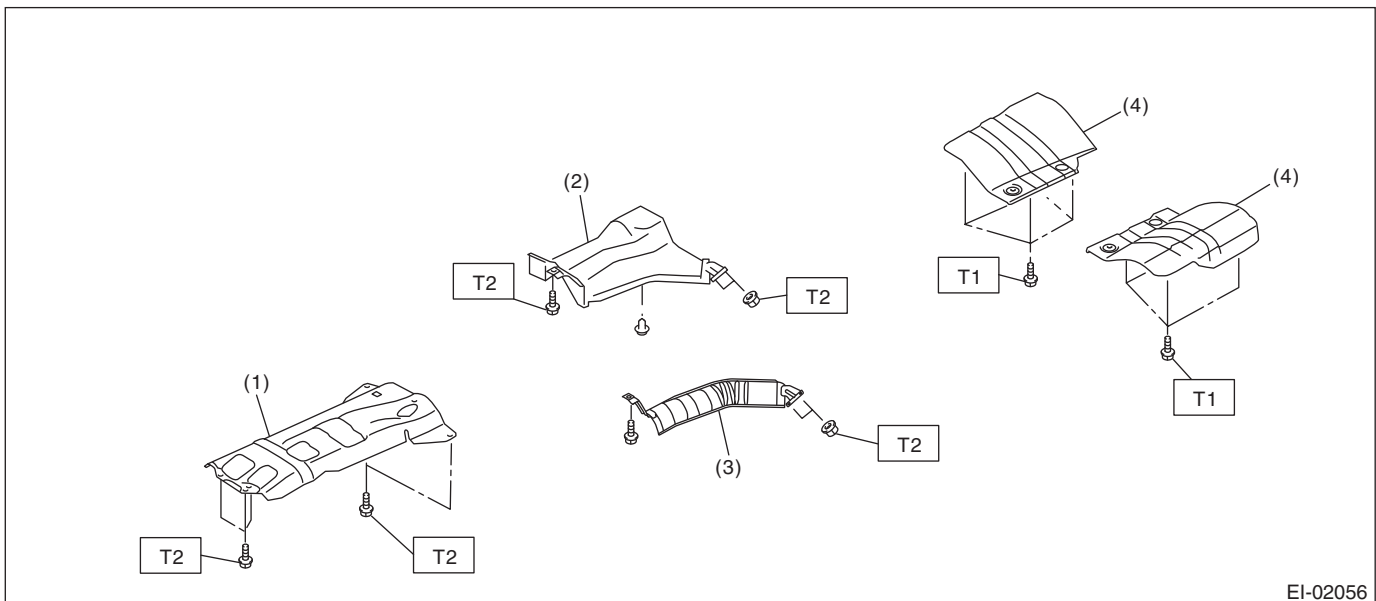

EI-02056


- | | |
|--|--|
| (1) Front heat shield cover | (3) Center heat shield cover (Non-turbo model) |
| (2) Center heat shield cover (Turbo model) | (4) Rear heat shield cover |

Tightening torque:N·m (kgf-m, ft-lb)
T1: 7.5 (0.76, 5.5)
T2: 18 (1.84, 13.3)

General Description

EXTERIOR/INTERIOR TRIM

23. TRAILER HITCH

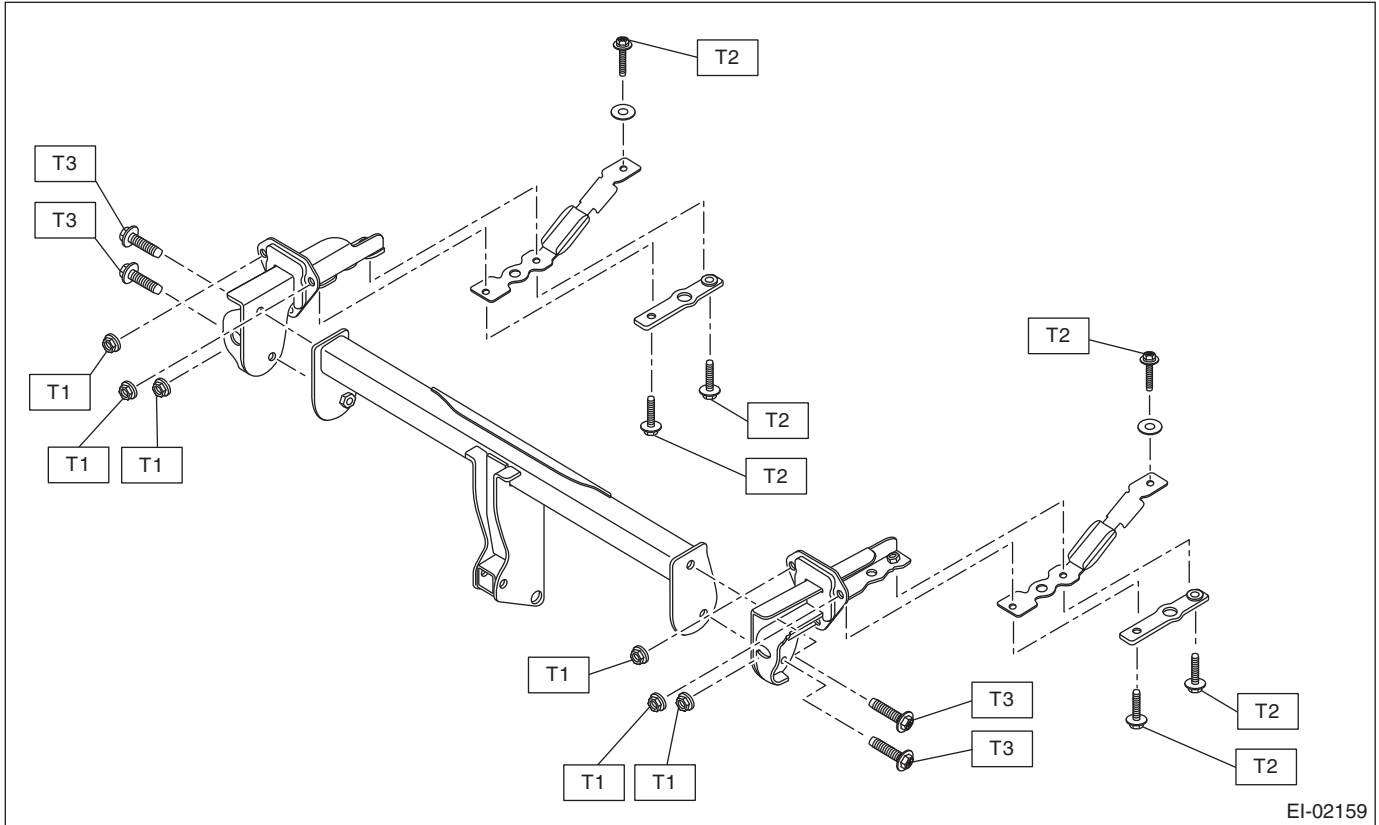

Tightening torque: N·m (kgf-m, ft-lb)

T1: 75 (7.6, 55.3)

T2: 90 (9.2, 66.4)

T3: 180 (18.4, 132.8)

B: PREPARATION TOOL

TOOL NAME	REMARKS
Clip remover	Used for removing trim. • KTC AP201-10A • KTC AP201-N • KTC AP203-10A • KTC AP20L-10B Or equivalent.
Clip clamp pliers	Used for removal of various clips and clamps. • KTC CCP-190 Or equivalent.