



10. Roof Spoiler

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the high-mounted stop light. <Ref. to LI-33, REMOVAL, High-mounted Stop Light.>
- 3) Remove the rear gate trim. <Ref. to EI-60, REMOVAL, Rear Gate Trim.>
- 4) Remove the bolt.

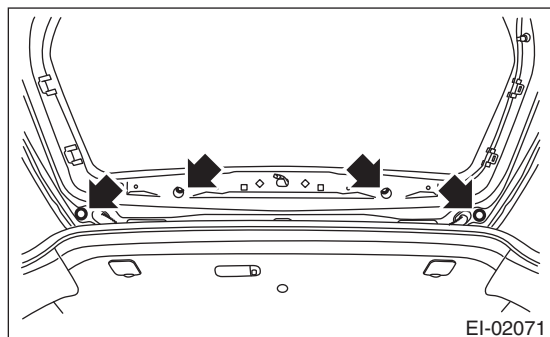

- 5) Open the caps (1), and remove the bolt inside, to remove the roof spoiler.

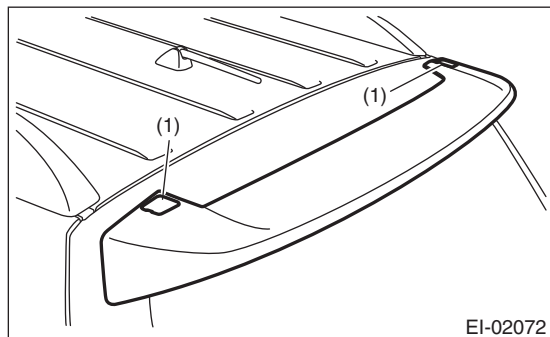

B: INSTALLATION

CAUTION:

Make sure that the bolts are securely attached, as insecure installation can cause water leaks.

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)