

12.Roof Molding

A: REMOVAL



1) Peel back the edge of the roof molding, slide the inner clips in the direction shown by the arrow using a flat tip screwdriver to remove the clips from the vehicle body studs.

RH: Slide towards the front of the vehicle.

LH: Slide towards the rear of the vehicle.

CAUTION:


Be careful not to damage the vehicle body.

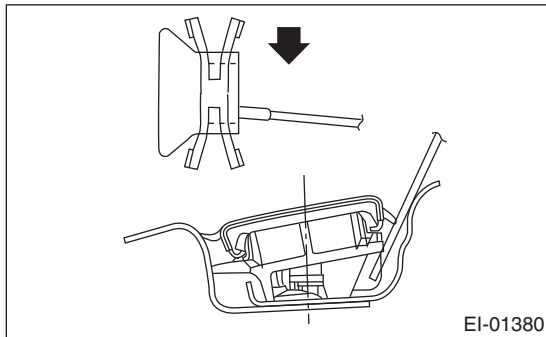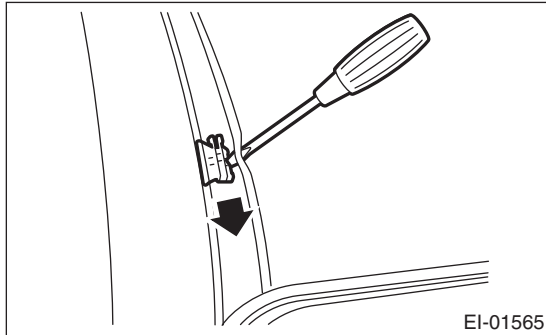

2) Lift up the roof molding and remove from the vehicle.

3) Remove the roof trim. <Ref. to EI-59, REMOVAL, Roof Trim.>

4) Remove the nuts and remove the roof carrier bracket.

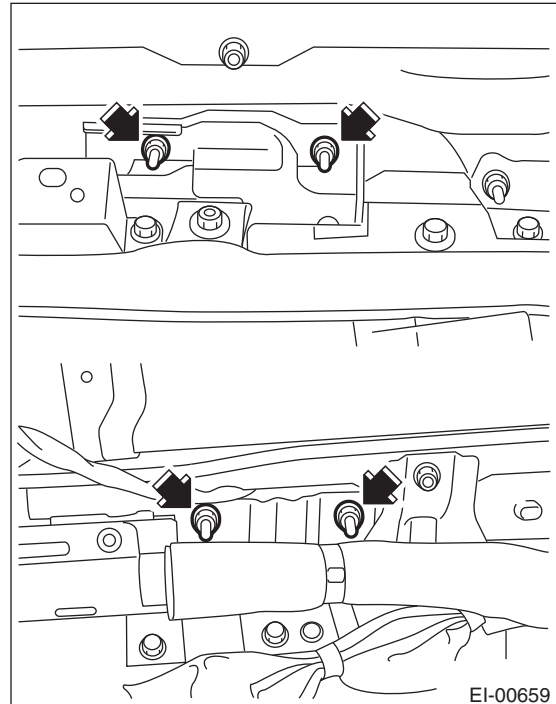

B: INSTALLATION

1) Install the roof carrier bracket.

Tightening torque:


7.5 N·m (7.6 kgf·m, 5.5 ft·lb)

2) Remove all clips from the roof molding and attach them to the vehicle body.

CAUTION:

Always replace any clips damaged when removing the roof molding with new clips.

3) Press the front edge of the roof molding against the front window, and attach the front positioning clip to the rivet on the body.

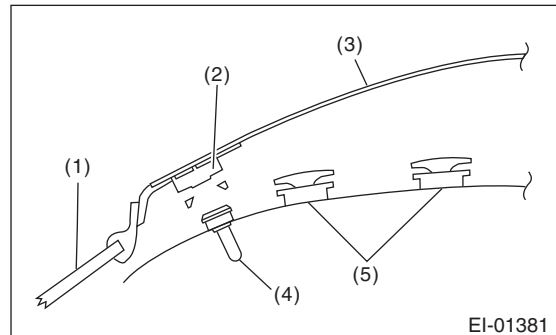

- (1) Windshield
- (2) Positioning clip
- (3) Roof molding
- (4) Rivet
- (5) Clip

4) While pushing down on the roof molding from above, engage the roof molding and clips.