



13. Roof Rail

A: REMOVAL

- 1) Remove the roof trim. <Ref. to EI-59, REMOVAL, Roof Trim.>
- 2) Remove the front installation nuts.

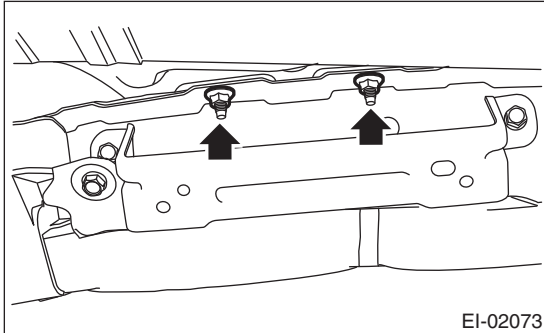

- 3) Remove the inflator pad (1) and then remove the rear mounting nuts.

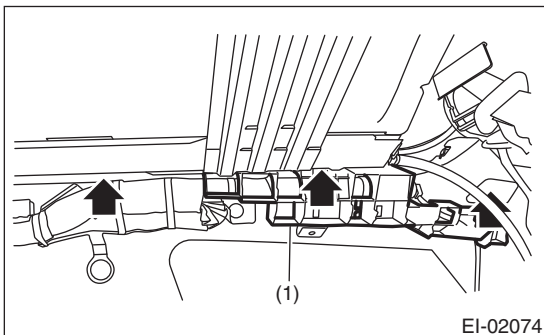

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

When removing or installing the roof rail, be careful not to scratch the body panel with the stud bolt of the roof rail.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)