


14. Door Trim

A: REMOVAL


- 1) Disconnect the ground cable from the battery.
- 2) Remove clip (A) and the gusset cover

- Front


For models with tweeters, disconnect the connector.

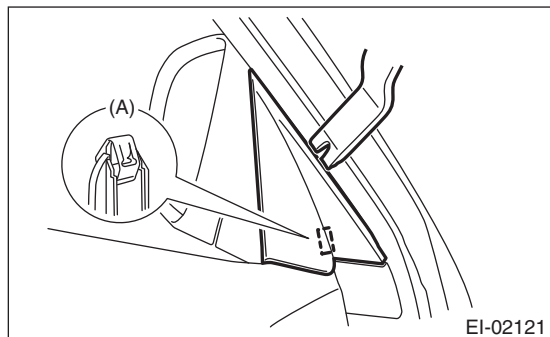

- Rear

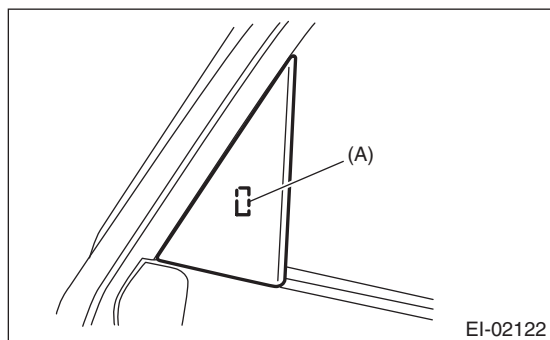


- 3) Open the inner remote cover and remove the screw.

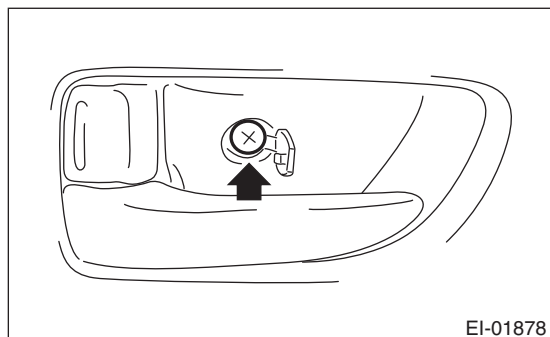


- 4) Open the cover, remove the screw, and remove the power window switch panel.

- Front door

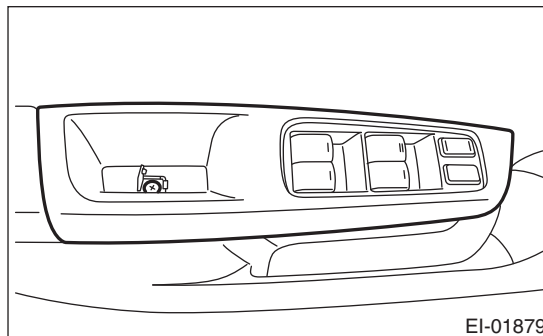


- Rear door

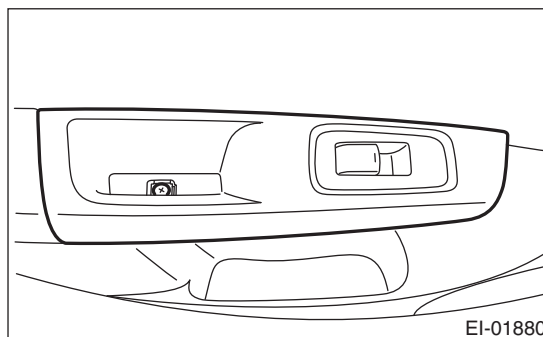


NOTE:

Remove from the notched part at the edge of the switch panel.

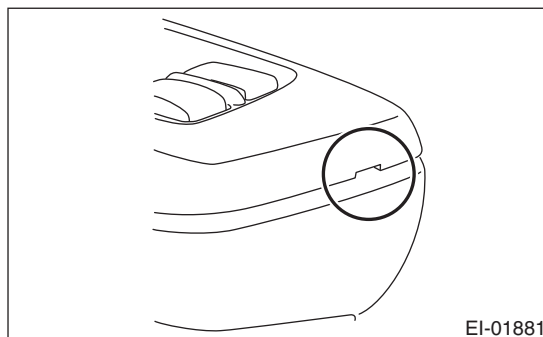


5) Remove the door trim screws.

- Front

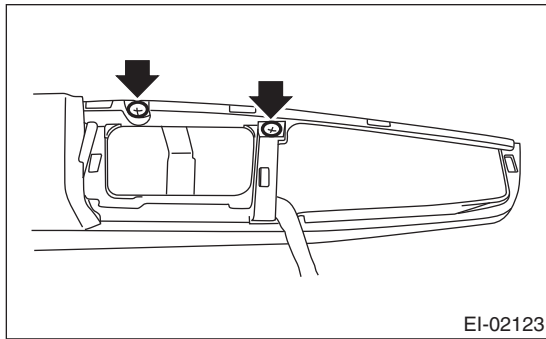


- Rear

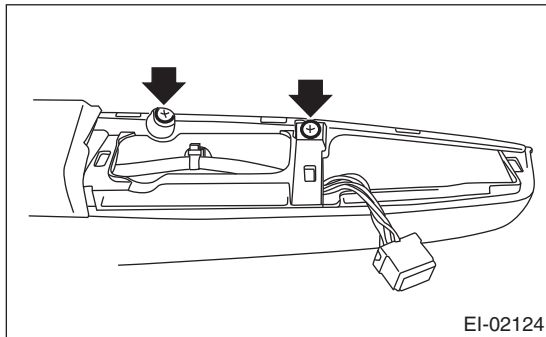


6) Remove the clips and disconnect the wire cables to remove the door trim.

NOTE:


Insert a plastic clip remover into the slit of the trim and lift the trim.

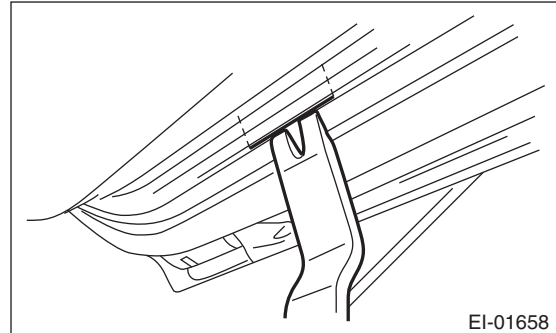

- Front door trim

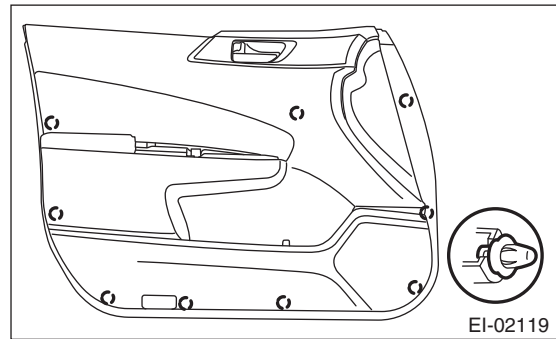

- Rear door trim

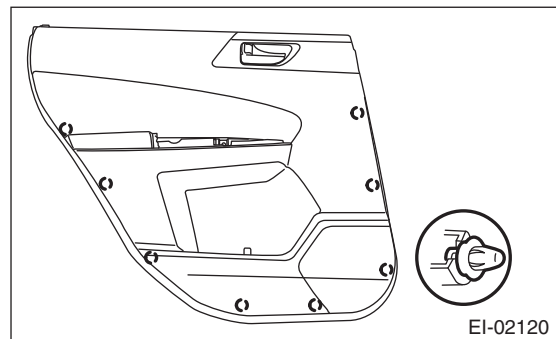

B: INSTALLATION

Install in the reverse order of removal.