


18.Center Console

A: REMOVAL


1. CENTER PANEL

- 1) Insert a plastic clip remover into the slit at the bottom edge of the center panel, and lift the panel.
- 2) Disengage the tabs and plastic hooks, and remove the center panel.

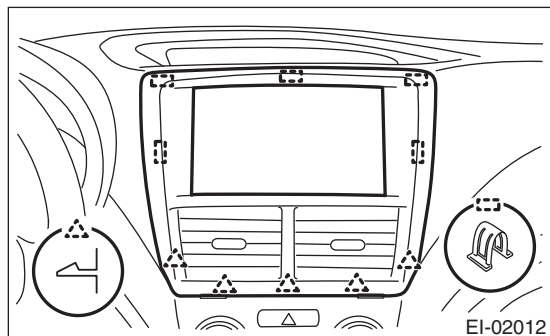

2. CONSOLE FRONT PANEL



- 1) Remove the console box. <Ref. to EI-46, REMOVAL, Console Box.>
- 2) Remove the shift knob. (MT model)
- 3) Detach the plastic hooks (A) and pull up on the console front panel.

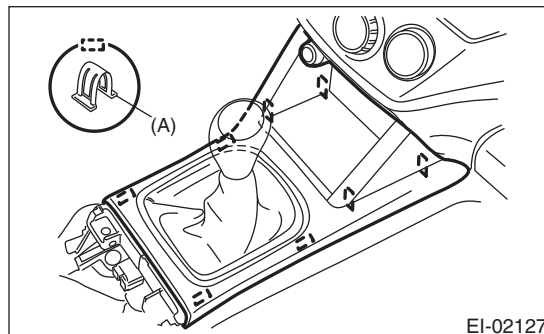

NOTE:

Pull up towards the rear of the vehicle to remove.

- 4) Remove the clips and screws, and remove the console side panel.

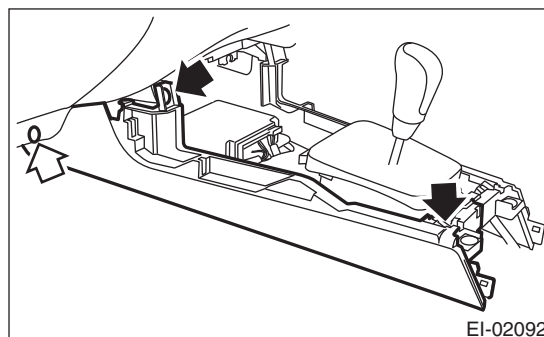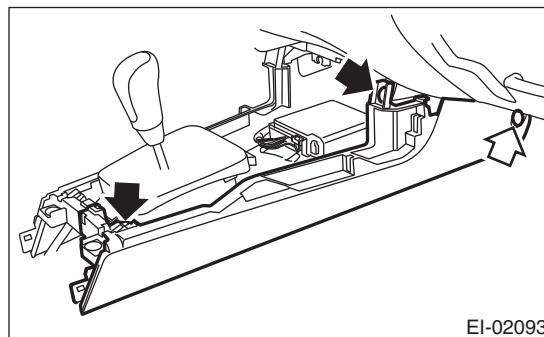

NOTE:

Pull towards the rear of the vehicle to remove.


Center Console

EXTERIOR/INTERIOR TRIM


3. ORNAMENT PANEL

• DRIVER'S SIDE

1) Detach the plastic hooks (A) and remove the instrument panel side cover LH.

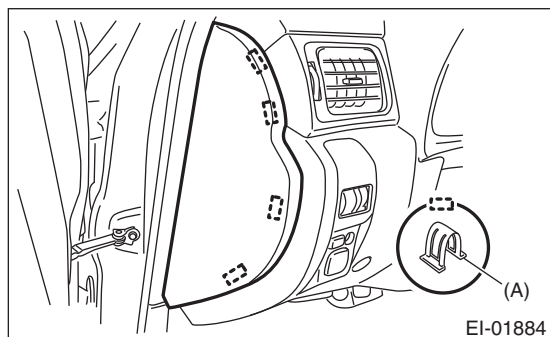


2) Remove the plastic hook (A), and detach the meter visor.

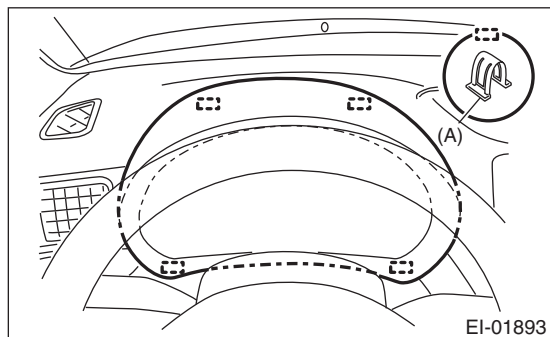

NOTE:

Pull the plastic hooks at the bottom of the meter visor towards you to remove.


3) Loosen the screws and detach the tabs to remove the ornament panel LH.

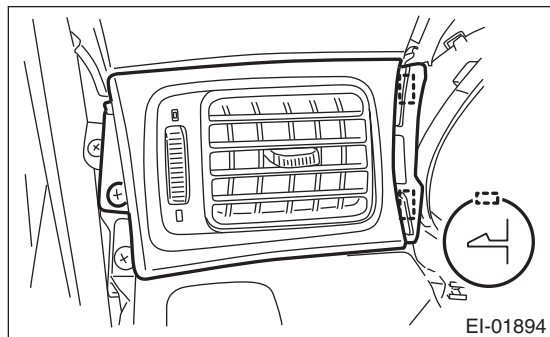

• PASSENGER'S SIDE

1) Remove the instrument panel lower cover. <Ref. to EI-44, REMOVAL, Instrument Panel Lower Cover.>

2) Remove the plastic hook (A), and detach the meter visor.

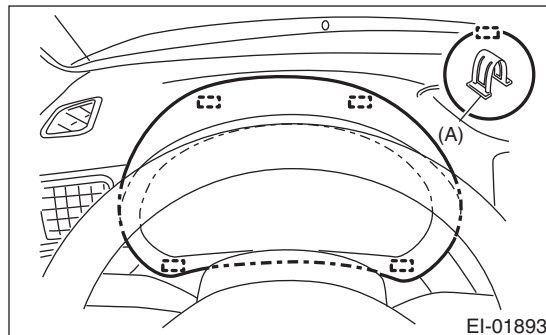


NOTE:


Pull the plastic hooks at the bottom of the meter visor towards you to remove.

3) Insert a plastic clip remover into the slit at the bottom edge of the center panel and lift the panel.

4) Disengage the tabs and plastic hooks, and remove the center panel.

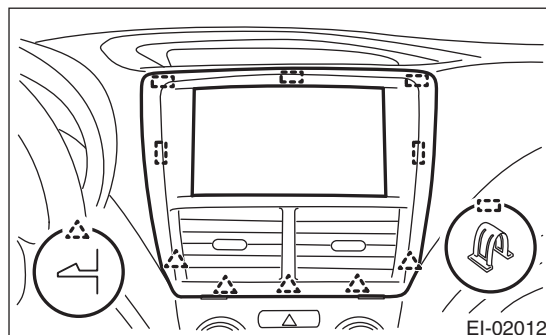


5) Detach the plastic hooks (A) and remove the instrument panel side cover RH.

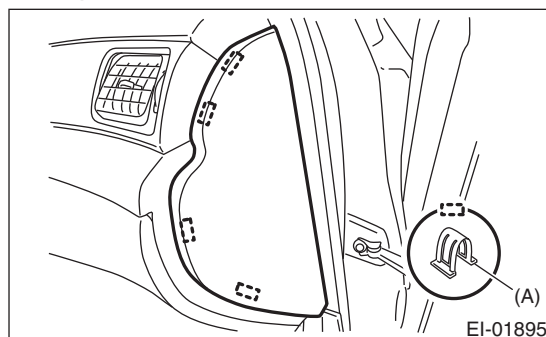


6) Remove the glove box lid. (Manual air conditioning model) <Ref. to EI-45, REMOVAL, Glove Box.>

7) On manual air conditioning models, remove the control cable.

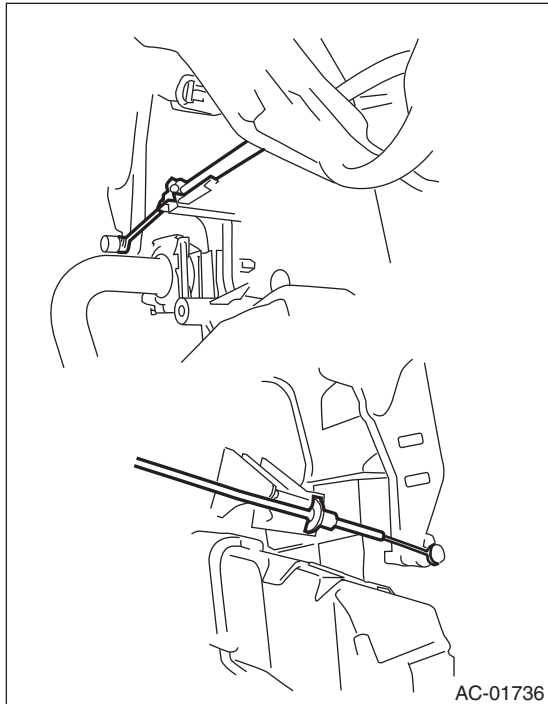

8) Loosen the screws and detach the plastic hooks to remove the ornament panel RH.

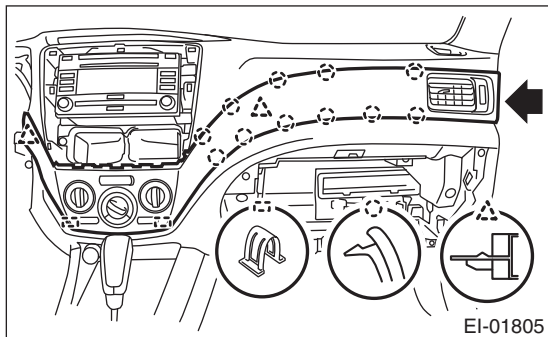


9) Disconnect the connectors.

4. INSTRUMENT PANEL LOWER

- 1) Remove the console box. <Ref. to EI-46, REMOVAL, Console Box.>
- 2) Remove the center panel. <Ref. to EI-47, CENTER PANEL, REMOVAL, Center Console.>
- 3) Remove the console front panel. <Ref. to EI-47, CONSOLE FRONT PANEL, REMOVAL, Center Console.>
- 4) Remove the ornament panel RH. <Ref. to EI-48, ORNAMENT PANEL, REMOVAL, Center Console.>
- 5) Remove the instrument panel lower cover. <Ref. to EI-44, REMOVAL, Instrument Panel Lower Cover.>
- 6) Remove the glove box lid and glove box lower cover. <Ref. to EI-45, REMOVAL, Glove Box.>
- 7) Remove the screws and nuts to remove the instrument panel lower.

NOTE:

The screw indicated by the white arrow is installed on the reverse face.

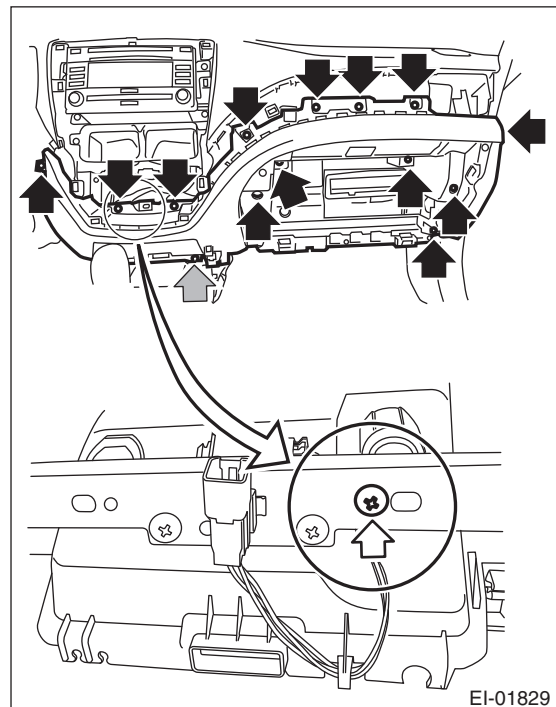

B: INSTALLATION

Install in the reverse order of removal.