

Lower Inner Trim

EXTERIOR/INTERIOR TRIM


20.Lower Inner Trim

A: REMOVAL


1) Remove the hook, and remove the inside scuff plate.

CAUTION:


Do not pull with excessive force. There is the possibility of the scuff plate being damaged.

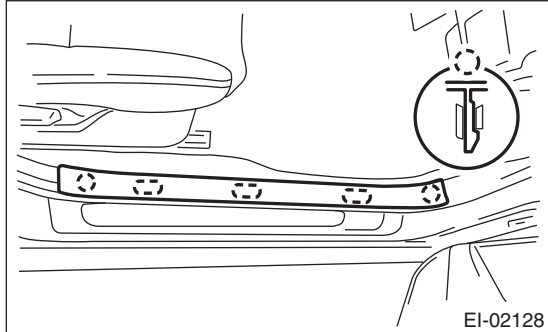

2) Remove the door molding (A), and remove the outside scuff plate.

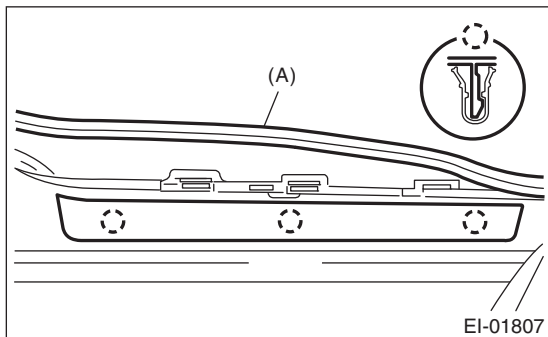

3) Remove clip (A), and remove the front pillar lower trim.

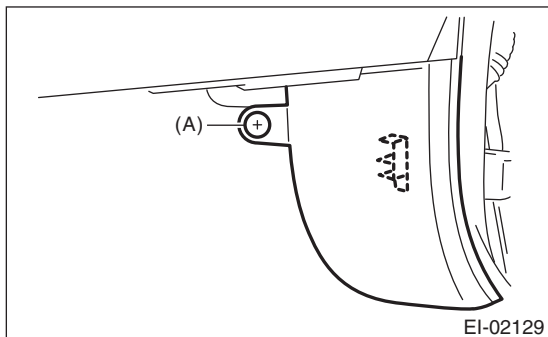


4) Remove the rear seat cushion. <Ref. to SE-15, REMOVAL, Rear Seat.>


5) Remove clip (A), and remove the inside scuff plate.

CAUTION:


Do not pull with excessive force. There is the possibility of the scuff plate being damaged.

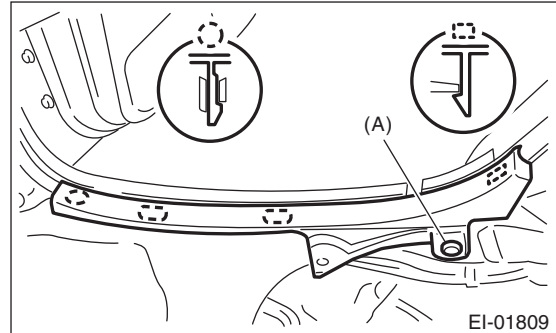


6) Remove door molding (A) and door catcher cover (B), then remove the outside scuff plate.

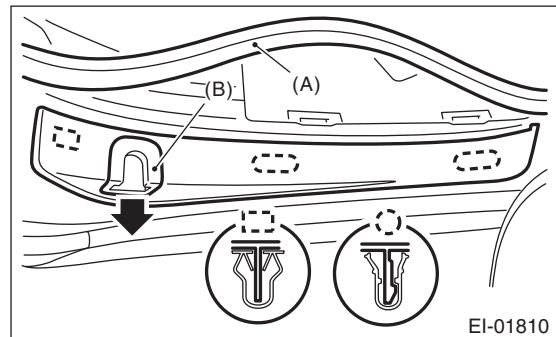

7) Spread the lower trim tab outward to disengage and pull the upper trim to remove.

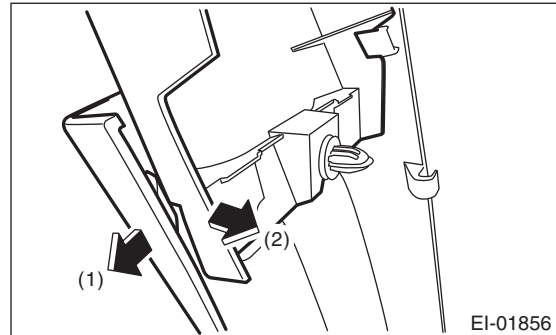

8) Remove the clips of the center pillar lower trim.

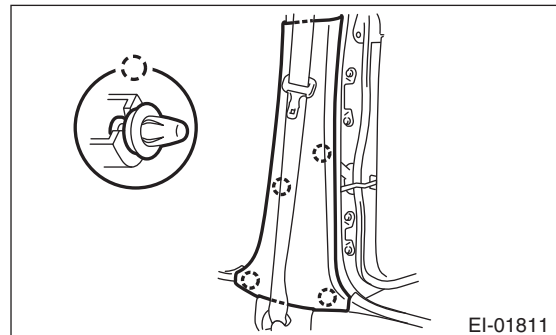

B: INSTALLATION

Install in the reverse order of removal.