


22.Rear Quarter Trim


A: REMOVAL

1) Remove the rear seat. <Ref. to SE-15, REMOVAL, Rear Seat.>

2) Remove the seat belt lower anchor bolt.

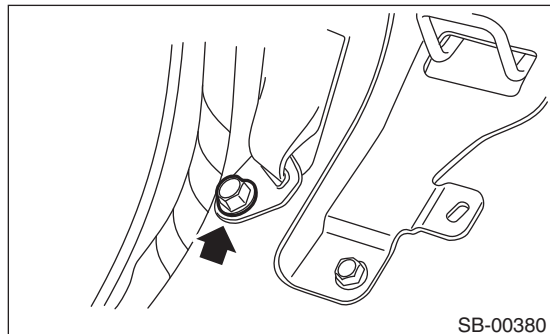


3) Remove cap (B) on the upper side of the rear quarter pillar front trim.

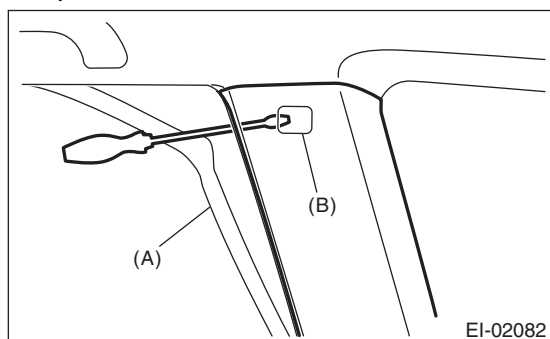


NOTE:

Remove molding (A), and remove the cap from the backside of the pillar trim being careful not to damage the trim.


4) Remove the bolt and screw, and remove the rear quarter pillar front trim.

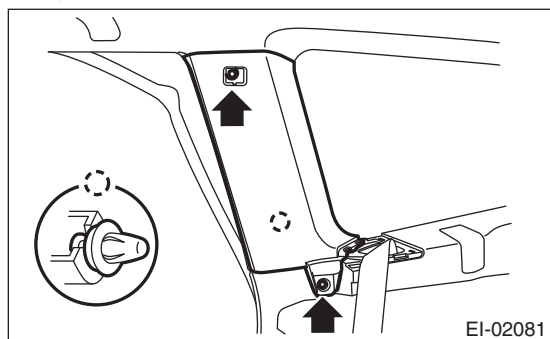


5) Remove covers (A) and (B).

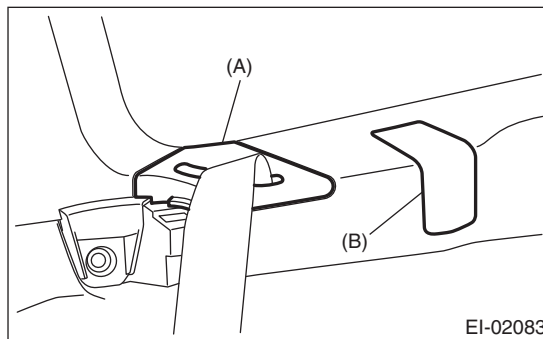


6) Remove the clips and screws, and remove the rear quarter upper trim.

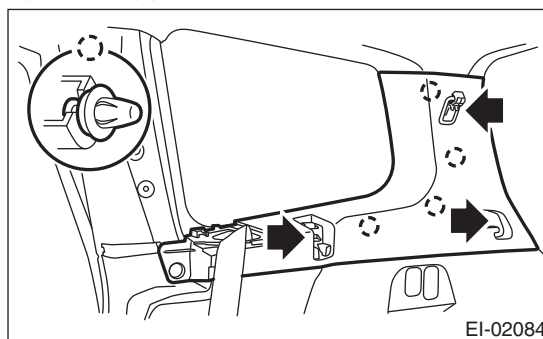

7) Remove the rear floor spacer.

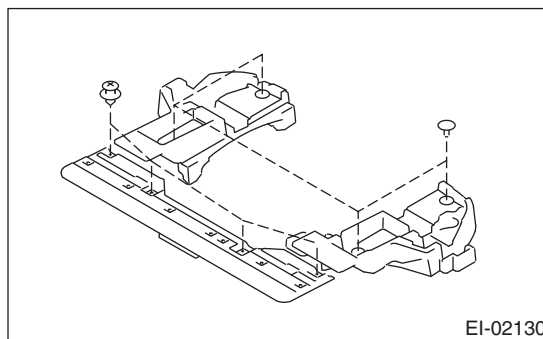


8) Remove the luggage room end covers.

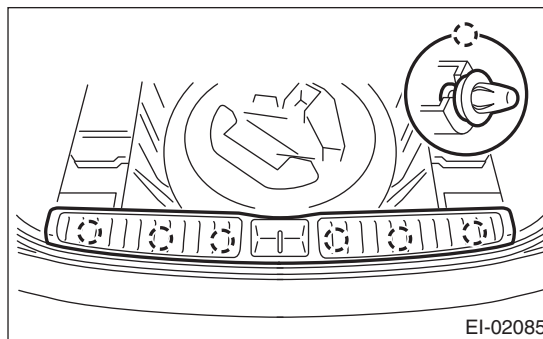

Rear Quarter Trim

EXTERIOR/INTERIOR TRIM

9) Remove the bolt and screws, and remove the rear quarter lower trim.

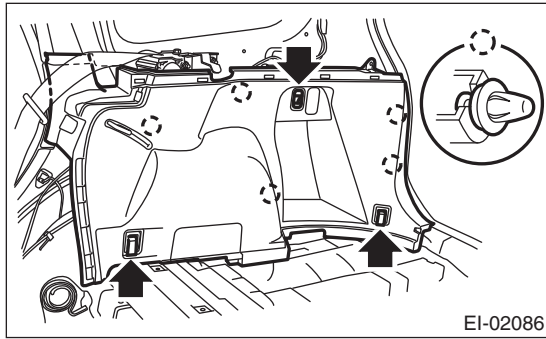

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque

Refer to “COMPONENT” of “General Description”. <Ref. to EI-18, INNER TRIM, COMPONENT, General Description.>

Refer to “COMPONENT” of “General Description”. <Ref. to SB-3, REAR SEAT BELT, COMPONENT, General Description.>