



23.Sun Visor

A: REMOVAL

1) Loosen the screws and remove the sun visor.

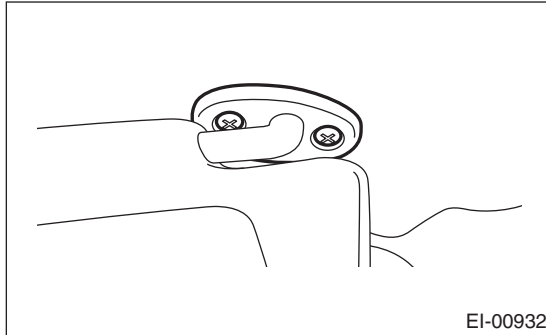

2) While pressing the (A) on the both side using flat tip screwdriver, pull the sun visor hook to remove it.

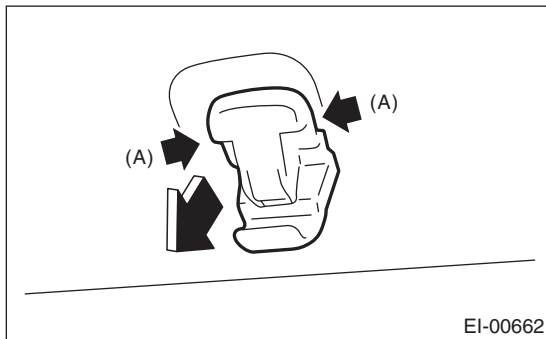

B: INSTALLATION

Install in the reverse order of removal.