



25. Roof Trim

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the spot map light. <Ref. to LI-34, REMOVAL, Spot Map Light.>
- 3) Remove the room light. <Ref. to LI-35, REMOVAL, Room Light.>
- 4) Remove the sun visor. <Ref. to EI-57, REMOVAL, Sun Visor.>
- 5) Remove the assist grip. <Ref. to EI-58, REMOVAL, Assist Grip.>
- 6) Remove the upper inner trim. <Ref. to EI-53, REMOVAL, Upper Inner Trim.>
- 7) Remove the rear quarter trim. <Ref. to EI-55, REMOVAL, Rear Quarter Trim.>
- 8) Remove the sunroof opening trim. (Model with sunroof)

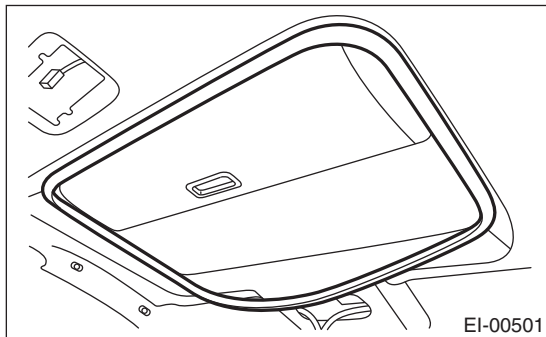

- 9) Disconnect the harness connectors of the left and right front pillar and rear quarter (LH).
- 10) Remove the clips, and then remove the roof trim.

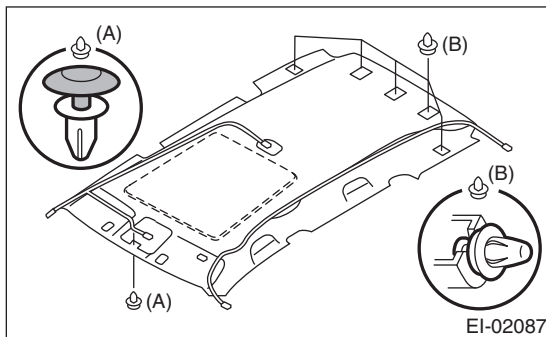

B: INSTALLATION

Install in the reverse order of removal.