


29. Heat Shield Cover

A: REMOVAL

1. FRONT HEAT SHIELD COVER



Remove the four bolts to remove the front heat shield cover.

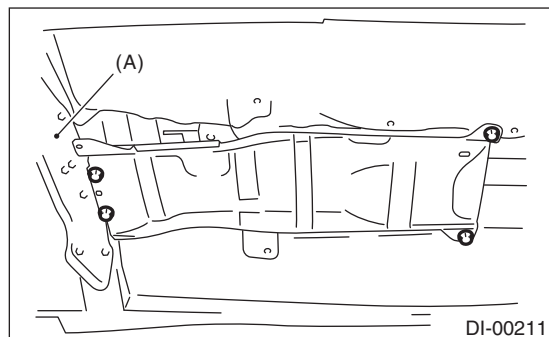

(A) Transmission mount


2. CENTER HEAT SHIELD COVER

Remove the bolt (A), nuts (B), and clip (C), and remove the center heat shield cover.

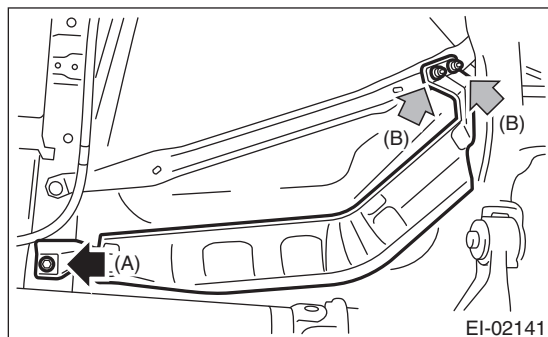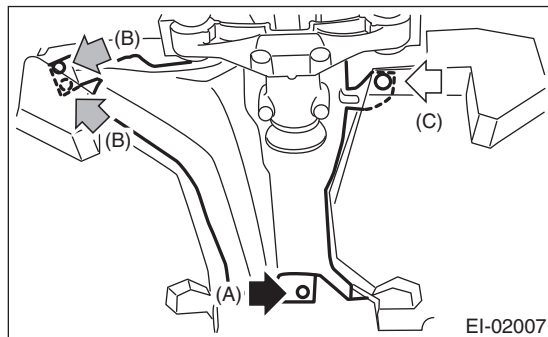

3. REAR HEAT SHIELD COVER

- 1) Remove the muffler. <Ref. to EX(H4SO)-10, REMOVAL, Muffler.> <Ref. to EX(H4DOTC)-14, REMOVAL, Muffler.>
- 2) Remove the bolts and rear heat shield cover.

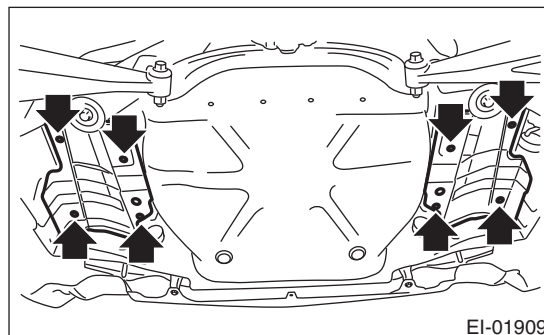

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to EI-21, HEAT SHIELD COVER, COMPONENT, General Description.>