


3. Front Hood Grille

A: REMOVAL


- 1) Open the front hood.
- 2) Remove screws (A) and clip (B), and remove the hood duct assembly.

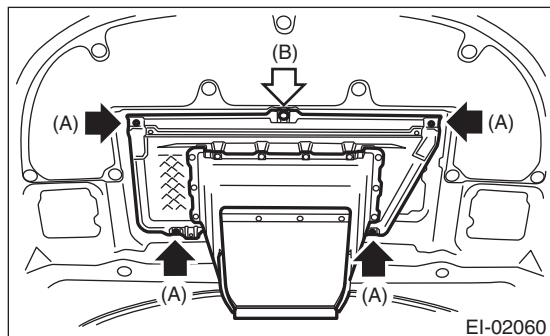


- 3) Release the clips to remove the front hood insulator.

CAUTION:

Do not reuse any clips damaged during removal. Always replace with new clips.

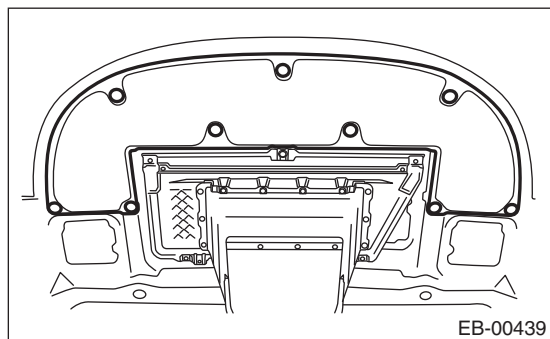

- 4) Loosen the nuts (A), remove the clip (B), and then remove the front hood grille.

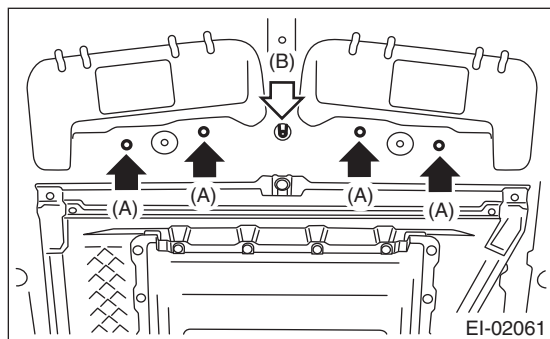


B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Insert the hooks (B) of the front hood duct into holes (A) of the front hood.

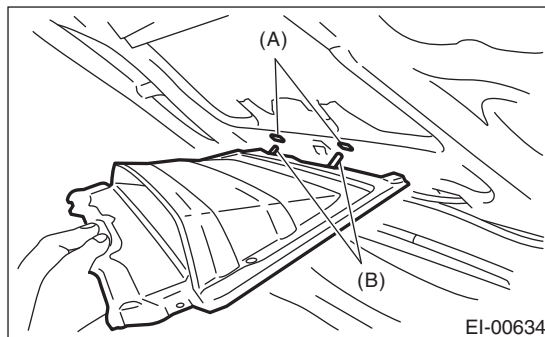

Tightening torque:

4.5 N·m (0.46 kgf-m, 3.32 ft-lb)