



30.Trailer Hitch

A: REMOVAL

- 1) Remove the muffler. <Ref. to EX(H4SO)-10, REMOVAL, Muffler.> <Ref. to EX(H4DOTC)-14, REMOVAL, Muffler.>
- 2) Remove the trailer hitch harness.

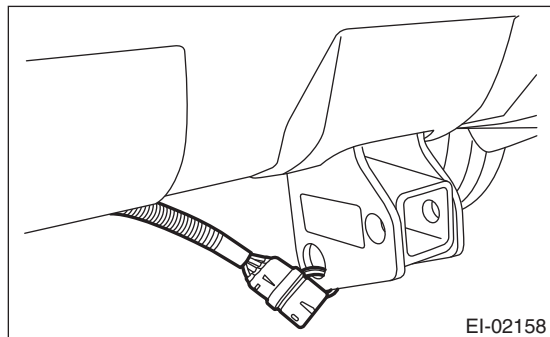


- 3) Remove the rear bumper face. <Ref. to EI-35, REAR BUMPER FACE, REMOVAL, Rear Bumper.>
- 4) Remove the bolts and side plate lower.

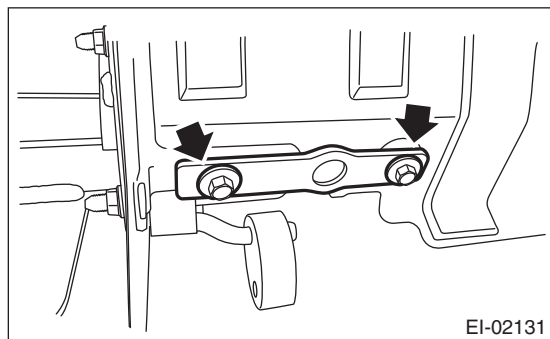

- 5) Remove the nuts and trailer hitch main frame assembly.

CAUTION:

The trailer hitch main frame assembly is very heavy. Be careful when removing.

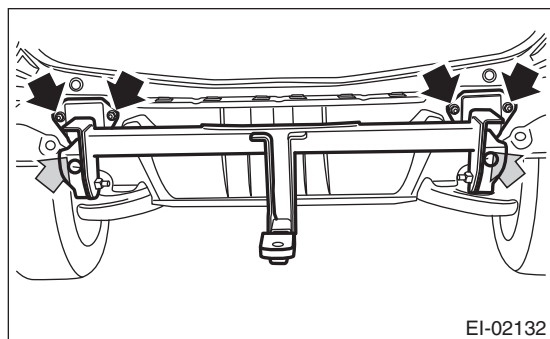

- 6) Remove the side plate upper from the vehicle body.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to EI-22, TRAILER HITCH, COMPONENT, General Description.>