
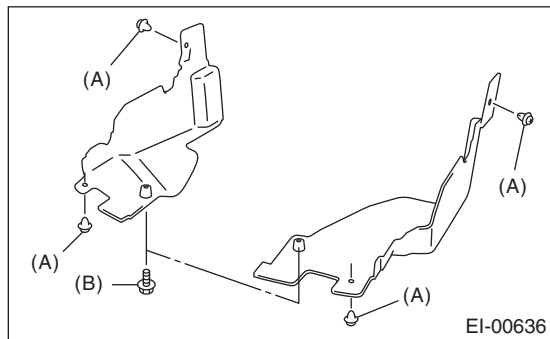


## 4. Front Under Cover

### A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove clips (A) in front fender and bolts (B), then remove the front under cover.

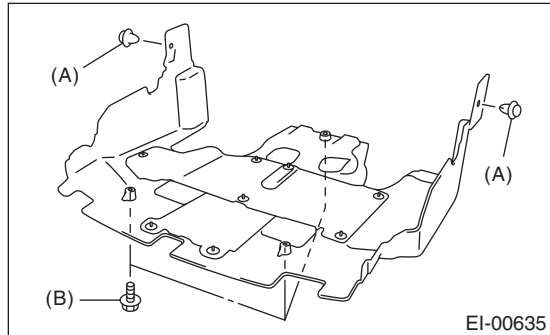

### B: INSTALLATION

Install in the reverse order of removal.

#### ***Tightening torque:***

***14 N·m (1.42 kgf-m, 10.3 ft-lb)***