


Fiat Doblo mk1 FL (Classic) (from 2004) – fuse box diagrams

Year of production: 2004, 2005, 2006, 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015, 2016

Fuse box under dashboard

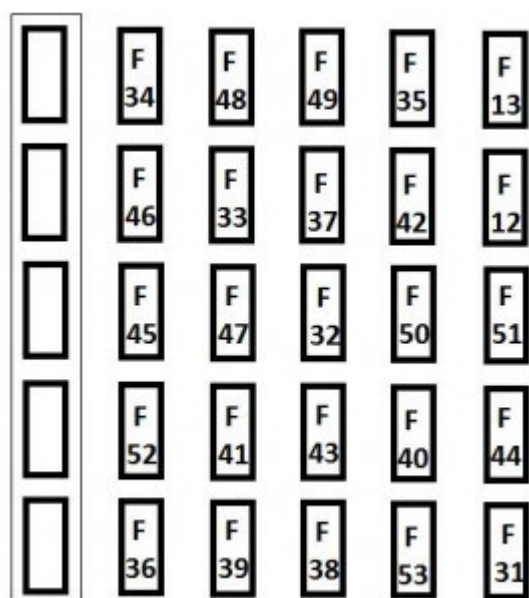


Fiat Doblo mk1 FL – fuse box – dashboard

Device protected	Fuse	Ampere rating [A]
Right-hand dipped beam	F12	10
Left-hand dipped beam	F13	10
Boot	F42	10
Hazard lights	F53	10
Front fog lights	F30	15
Dashboard instrument lights	F51	7,5
Light system	F32	15
Ceiling light	F42	10
Instrument panel and warning lights (ignition switch powered)	F37	10
Instrument panel and warning lights (battery powered)	F53	10
Reversing light	F31	7,5
Brake lights	F37	10
Number plate light	F51	7,5
Additional brake light (third stop light)	F37	10
Cigar lighter	F44	20
Air bag	F50	7,5
Right front power window	F48	20

Left front power window	F47	20
Door locking system	F38	20
ABS control unit (ignition switch powered)	F42	7,5
Manual climate control enable control	F31	7,5
Headlight beam adjuster	F13	10
Heated rear window	F40	30
Windscreen-rear window washer pump	F43	30
Supplementary power socket	F44	20
Heated seats	F45	15
+ 30 services (sound system, cellular telephone, diagnostic socket)	F39	10
+15 services (sound system, cellular telephone, dashboard control lighting, electrical mirrors, trailer, heated seat control lighting)	F49	7,5
Heated rearview mirrors	F41	7,5
Pump system relay	F31	7,5
Fan system relay passenger compartment heater	F31	7,5
Safet belt buzzer muting relay	F49	7,5
Windscreen wiper	F43	30
Rear window wiper	F52	15
Subwoofer system	F39	15
Spare	F35	—
Spare	F33	—
Spare	F34	—
Spare	F46	—

Fuse box in engine compartment

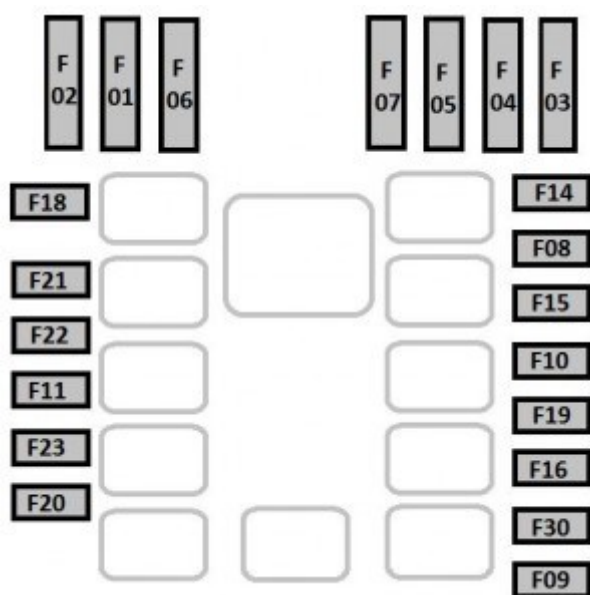

Fiat Doblo mk1 FL – fuse box – engine

compartment

Device protected	Fuse	Ampere rating [A]
------------------	------	-------------------

Right-hand main beam	F14	10
Left-hand main beam	F15	10
Front fog lights	F30	15
Dashboard control unit power: optional functions	F02 – MAXI FUSE	40
Dashboard control unit power: standard functions	F01 – MAXI FUSE	70
ABS power (pump)	F04 – MAXI FUSE	40
Ignition coils	F22	20
Engine control system secondary loads	F11	15
Engine control unit (+battery)	F18	7,5
Engine control unit (power)	F17	10
Engine control unit (ignition switch powered)	F16	7,5
Glow plug control unit	F11	15
Horn	F10	15
Ignition switch	F03 – MAXI FUSE	20
Manual climate control compressor	F19	7,5
Petrol fume recirculation solenoid valve	F11	15
Tachometer generator	F11	15
Injectors	F22	20
One-speed radiator fan	F06 – MAXI FUSE	30
Fuel pump	F22	20
Fuel pump	F21	15
ABS power (valve)	F05 – MAXI FUSE	30
Radiator fan first speed (versions with manual climate control system)	F06 – MAXI FUSE	30
Radiator fan first speed (1.3 -1.9 Multijet versions)	F06 – MAXI FUSE	40
Radiator fan second speed (1.4 – 1.6 versions with manual climate control system)	F07 – MAXI FUSE	60
Radiator fan second speed (1.3 -1.9 Multijet versions)	F07 – MAXI FUSE	40
Lambda sensors (oxygen sensors)	F11	15
Engine cooling system relay	F18	7,5
Engine cooling system relay	F16	7,5
Passenger compartment fan	F08	30
Spare	F09	—

Spare	F23	—
-------	-----	---

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.