

Toyota Dyna (U600/U800; 2011-2018) fuses


The medium-duty truck Toyota Dyna (U600/U800) is available from 2011 to the present. Here you will find fuse box diagrams of **Toyota Dyna 2011, 2012, 2013, 2014, 2015, 2016, 2017 and 2018**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).

Fuse Layout Toyota Dyna 2011-2018



Fuse Box №1 (in the instrument panel)

Fuse box diagram

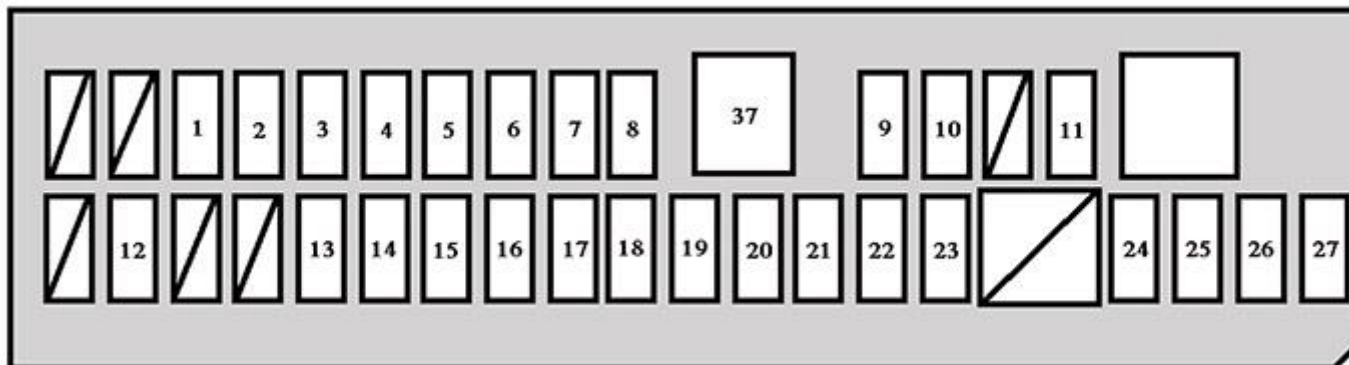

Assignment of the fuses in the Fuse Box №1

№	Name	Ampere rating [A]	Description
1	CIG	15	Cigarette lighter
2	DOOR	30	Power door lock system


№	Name	Ampere rating [A]	Description
3	IG1-NO.2	10	Gauges and meters, service reminder indicators and warning buzzer, back-up lights, back buzzer
4	WIP	30	Windshield wipers and washer
5	A/C	10	Air conditioning system
6	IG1	10	Back-up lights, back buzzer
7	TRN	10	Turn signal lights, emergency flashers
8	ECU-IG	10	Anti-lock brake system
9	RR-FOG	10	Rear fog light
10	OBD	10	On-board diagnosis system
11	DOME	10	Interior lights
12	ECU-B	10	Headlights, tail lights
13	TAIL	15	Tail lights, front position lights, license plate lights, instrument panel lights, rear fog light
14	H-LP LL	10	Left-hand headlight (low beam) (vehicle with daytime running light system)
15	H-LP RL	10	Right-hand headlight (low beam) (vehicle with daytime running light system)
16	H-LP LH	10	Left-hand headlight (high beam) (vehicle with daytime running light system)
16	H-LP LH	15	Left-hand headlight (high beam) (vehicle without daytime running light system)
17	H-LP RH	10	Right-hand headlight (high beam) (vehicle with daytime running light system)

No	Name	Ampere rating [A]	Description
17	H-LP RH	15	Right-hand headlight (high beam) (vehicle without daytime running light system)
18	HORN	10	Horns
19	HAZ	10	Emergency flashers
20	STOP	10	Stop lights
21	ST	10	Starting system
22	IG2	10	SRS airbag system
23	A/C NO.2	10	Air conditioning system
24	SPARE	10	Spare fuse
25	SPARE	15	Spare fuse
26	SPARE	20	Spare fuse
27	SPARE	30	Spare fuse
37	POWER	30	Power window, power door lock system

Advertisements

Fuse Box №2 (left side of the vehicle)

Fuse box diagram

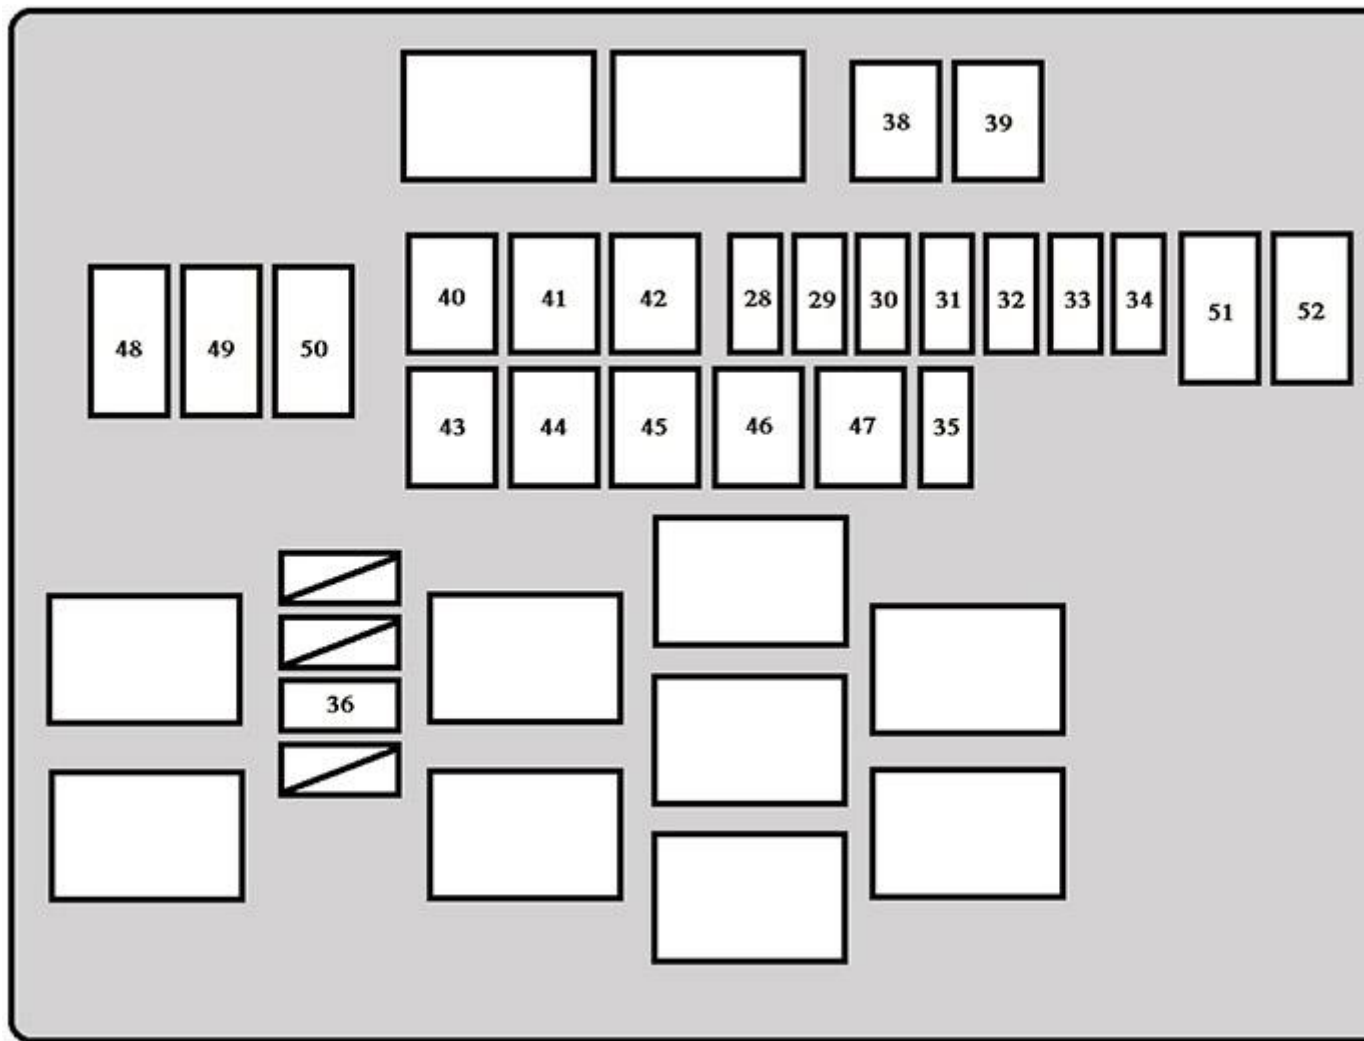

Assignment of the fuses in the Fuse Box №2

№	Name	Ampere rating [A]	Description
28	FOG	15	Fog light
29	F/HTR	30	Front heater
30	EFI1	10	Engine control system
31	ALT-S	10	Charging system, charging system warning light
32	AM2	10	Engine switch
33	A/F	15	A/F
34	ECD	25	Engine control system

№	Name	Ampere rating [A]	Description
35	E-FAN	30	Electric cooling fan
36	EDU	20	EDU
38	PTC1	50	PTC heater
39	PTC2	50	PTC heater
40	AM1	30	Engine switch, "CIG", "AIR BAG" and "GAUGE" fuses
41	HEAD	40	Headlights
42	MAIN1	30	"HAZ", "HORN", "STOP" and "ECU-B" fuses
43	ABS	50	Anti-lock brake system
44	HTR	40	Air conditioning system
45	P-MAIN	30	Electric cooling fan
46	P-COOL RR HTR	40	Air conditioning system
47	ABS2	30	Anti-lock brake system
48	MAIN3	50	"TRN", "ECU-IG", "IG1", "A/C", "WIP" and "DOOR" fuses
49	MAIN2	50	"OBD", "TAIL", "DOME", "RR-FOG" and "POWER" fuses
50	ALT	140	Charging system
51	GLOW	80	Engine glow system
52	ST	60	Starting system