 


Passenger Compartment Fuse Box

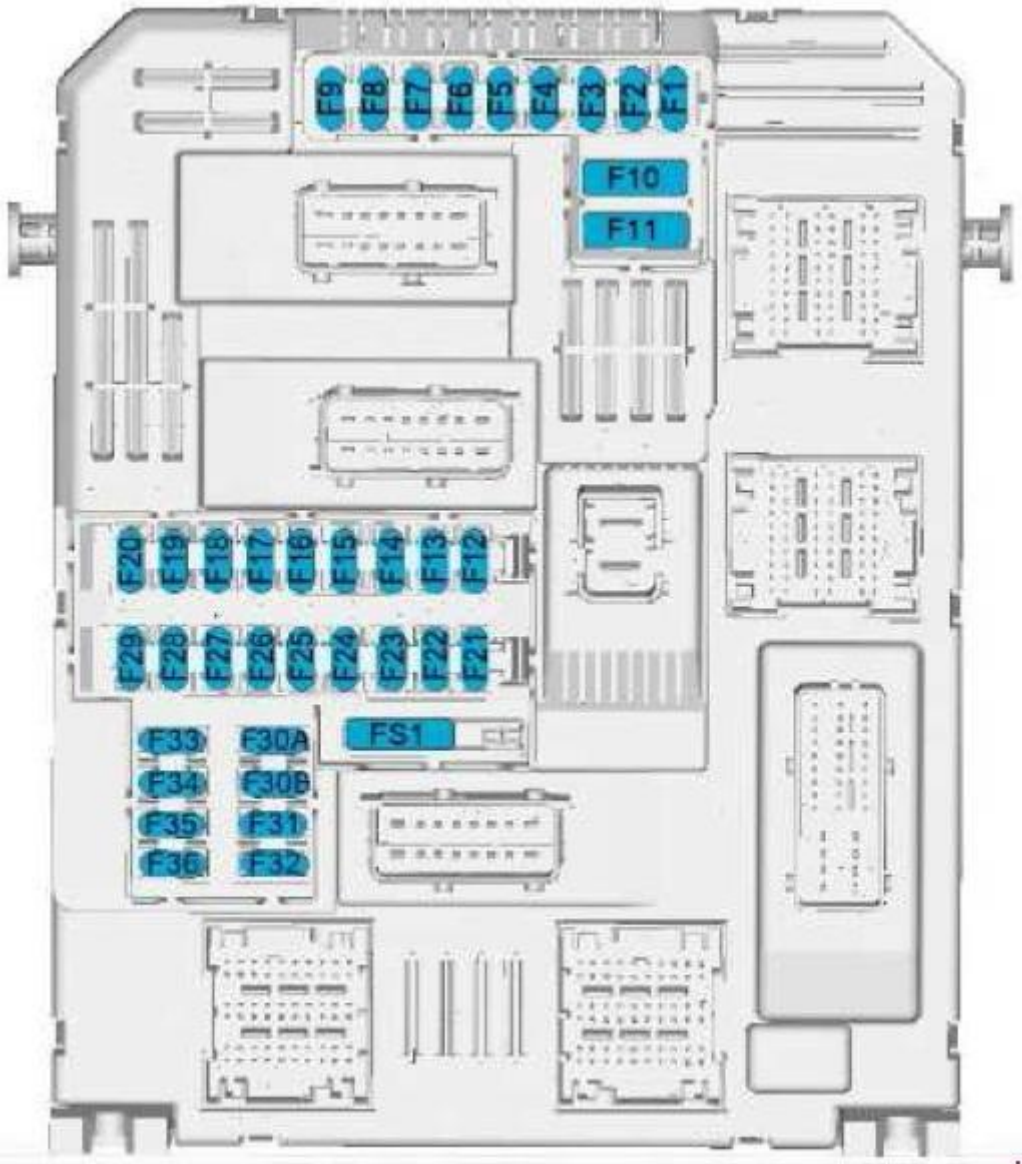


No.	A	Protected components
F1	3	Full: Ignition switch, Push starter ADML
	10	ECO: Photochromic interior mirror, Fuel additive pump, DAEH, Knurled wheel ASR+, CTC clutch
F2	3	Full: Steering wheel angle sensor
F3	3	Full: Instrumentation socket, Joystic Comelec
	5	ECO: BSG TC

F4	7,5	Full: Instrumentation socket, Diagnostic socket, Brake dual-function switch, Centralized voltage maintenance device
	15	ECO: Horn
F5	5	Full: Multifunction screen, Reversing camera, ECU's parking assistance
	20	ECO: Screen wash pump front/rear
F6	15	Full: -
	20	ECO: Screen wash pump front/rear
F7	10	Full: Audio amplifier, Rear BCC
	10	ECO: Front 12V socket
F8	20	Rear windscreen wiper
F9	5	Interior lamp
F10	30	Front and rear external/ internal mass power engine locks + Fuel catch
F11	30	Front and rear internal/external locks engine supply Fuel catch
F12	3	Full: Alarm, APV alarm strain
	7,5	ECO: CTC main stop, DMTC, Diagnostic socket
F13	3	Full: Module boiler control, Strain APV
	10	ECO: Front mux, CRT, BCC, VTH, MCP
F14	15	Full: -
	5	ECO: BTA, Alarm
F15	5	ECO: Diagnostic socket
F16	5	Full: -
	3	ECO: Stop switch, DMTR
F17	10	Full: 12V current socket trunk or load area
	5	ECO: CMB
F18	5	Full: Autonomous telematics box ECO: Passenger compartment coolant circuit heater
F19	5	Full: Rastreador

	3	ECO: BSG, HDC, VCI
F20	15	Full: Relay compartment fusebox 3
F21	3	Full: Nomadic lamp charging, card reader ECO: Steering lock, Push DEM (ADML)
F22	3	Full: Glove compartment lighting, Card reader ECO: CDPL, CVM
F23	3	Full: Platinum mirrors control gate driver, Taxi, Parking assistance with blind spot monitoring
	5	ECO: Seat belt not fastened warning light displays
F24	5	Full: Generic servitude case, Module de communication sous volant (CV00) ECO: AAS, Rear camera
F25	5	Full: Projector corrector switch, Electrochromic rearview mirror ECO: Air bag
F26	3	Full: Instrumentation sockets, Driver and passenger unfastened indicator display, Strain APV ECO: CAV
F27	3	Full: Light rain sensor, Switch under the steering wheel
	5	ECO: Heater control module
F28	10	Full: Front gear shift MCP- BCC, Front facade MUX, Audio- Head up display
	5	ECO: Rastreador
F29	5	Full: Engine wiring housing (PSF1)
	20	ECO: RD6, NAC, RCC
F30A	15	Full: Audio APV strain
F30B	15	Full: Audio APV strain
F31	5	Full: ECU's air bag
	15	ECO: 2nd build audio system
F32	5	Full: Left and right sliding side door
	15	ECO: Cigar lighter or 12V socket
F33	15	Full: Cigar lighter or 12V socket

F34	3	Full: Housing generic servitude
	5	ECO: Taxi unit, AAS with SAM, rear view mirror adjusting, Transformer APC body
F35	5	Full: Combinated ECU ECO: Headlamp height adjustment, BCP, coolant temperature level, Diagnostic socket
F36	20	Full: Audio
	5	ECO: Glove box lighting, Reloads device, map-reading light
Relays		
R1	Power + ACC	
R2	Power + CAN	
R3	Full: Rear screen wipe ECO: Supply +APC	
R4 R9	Full: Engine front and rear extriors/interiors locks	
R4	ECO: Rear wiper relay	
R5	ECO: Windscreen wash pump	
R6	ECO: Rear screen wash pump	
R7	ECO: Horn	
R8 R13	ECO: Engine front and rear extriors/interiors locks	

 Passenger Compartment Fuse Box No.2

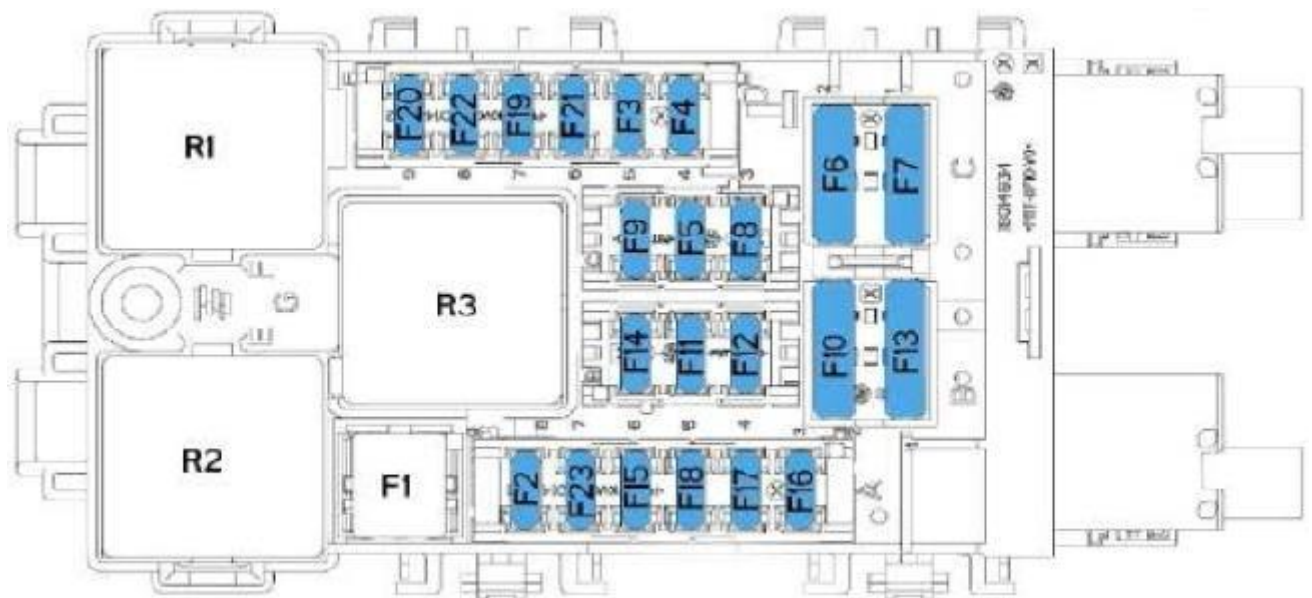


No.	A	Protected components
F1	40	Heated rear screen
F2	7,5	Full: Heated mirror
	10	ECO: Heated mirror
F3	20	Full: 230V Current socket
	30	ECO: Electric front windows
F4	15	Full: Folding rearview mirror
	30	Full: Folding rearview mirror, Si 2 LVE
	20	ECO: 12V socket, Kit APV 230V
F5	30	Full: -
	20	ECO: BSG RQ
F6	30	Full: Front electric window engine
	10	ECO: Fold-back mirrors
F7	30	Full: Heated seat
	10	ECO: Fold-back mirrors
F8	25	Full: Audio amplifier

	40	ECO: -
F9	20	Full: Dual screen wipe AR
	15	ECO: 12V plug RG2
F10	15	Full: 12V current socket
	3	ECO: BSG
F11	5	Full: Trailer servitude generic case 7/13 tracks
	20	Full: Trailer servitude generic case 7/13 tracks ECO: Heated cover, Double rear screen wiper
F12	30	Full: Driver electrical seat
	20	ECO: Heated seat or heated bench seat
F13	40	Full: -
F14	30	Full: Passenger electrical seat
F15	25	Full: -
F16	5	Full: -
F17	10	Full: -
F18	25	Full: -
F19	7,5	Full: -
F20	3	Full: ECU's parking assistance
F21	3	Full: Power left and right sliding side door
F22	20	Full: 12V current socket glove box, Kit APV 230V
F23	3	Full: Trailer servitude generic case
Relays		
R1	Full: Right folding mirror ECO: Rear screen + mirror demisting	
R2	Full: Left folding mirror ECO: Electric windows	
R3	Full: Heated mirror and rear ECO: Fold-back mirrors	

R4	ECO: Fold-back mirrors
R5	ECO: Heated cover
R6	ECO: 12V socket
R7	ECO: Heated seat

 Engine Compartment Fuse Box (ECO)

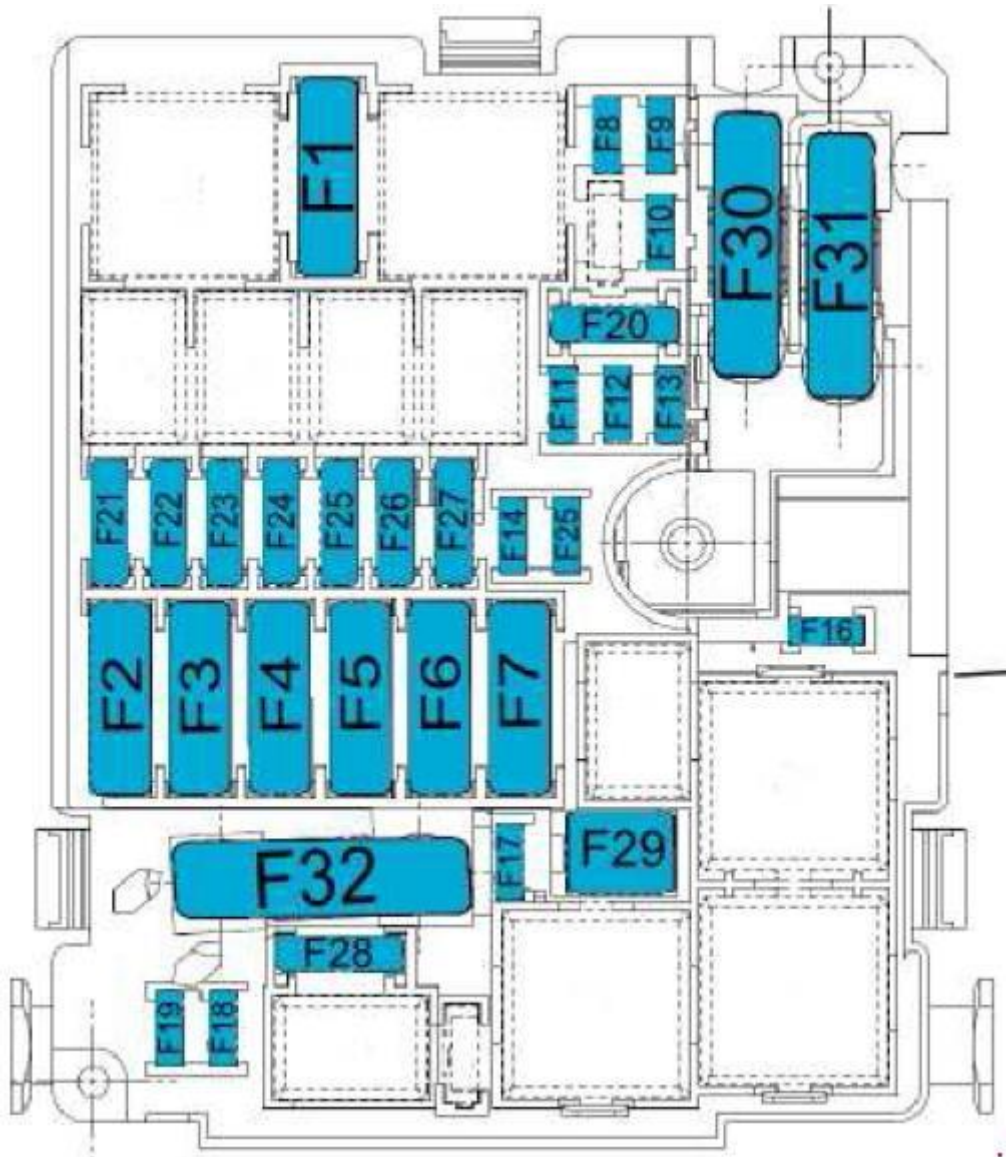



No.	A	Protected components
F1	40	Air conditioning blower
F10	15	Engine ECU
F11	20	Engine ECU

F12	5	Engine ECU, diagnostic socket, Fan unit, STT
F13	5	BSI
F14	5	Battery charge status unit
F15	20	BSG
F16	15	Front fog lamps
F17	5	Diagnostic relay, BFRM
F18	10	RH main beam
F19	10	LH main beam
F2	60	LHD: ESP ECU
	50	RHD: ESP ECU
F20	30	Engine ECU, booster pump (if EP6FDT)
F21	30	Starter motor
F22	40	LHD: Gearbox MCP, power steering electropump unit
	30	RHD: Gearbox MCP, power steering electropump unit
F23	40	Centralised voltage maintaining system
F24	40	Passenger compartment fuse box (BFH5)
F25	40	Passenger compartment fuse box (BFH3)
F26	15	Gearbox MCP
F27	25	BSI
F28	30	Injector power supply SCR, NOx sensor
F29	40	Windscreen wiper
F3	80	Passenger compartment fuse box (BFH3)
F30	125	Power steering electropump unit
F31	80	Protection switching unit
F32	80	BFM4
F4	30	ESP ECU

F5	50	BSI
F6	60	2-speed cooling fan (GMV) control unit
F7	70	BSI
F8	15	Engine ECU (if DV6FUC or EP6FDT), booster pump (if DV6F or DW10F)
F9	15	Engine ECU
PR	-	Engine ECU
PU	-	Engine ECU
Relays		
R1	SCR unit module power supply	
R2	Heated windscreen wash jets	
R3	Heat pre-conditioning service	
R4	Front fog lamps	
R5	Air conditioning blower	
R6	Starter motor	
R7	Windscreen wiper	
R8	Windscreen wiper	
R9	Main beam headlamps	

No.	A	Protected components
MF1	80	Pre-post heating
MF2	20	BSG
MF3	20	Headlamp wash
MF4	20	BFRM

  Engine Compartment Fuse Box (Full)

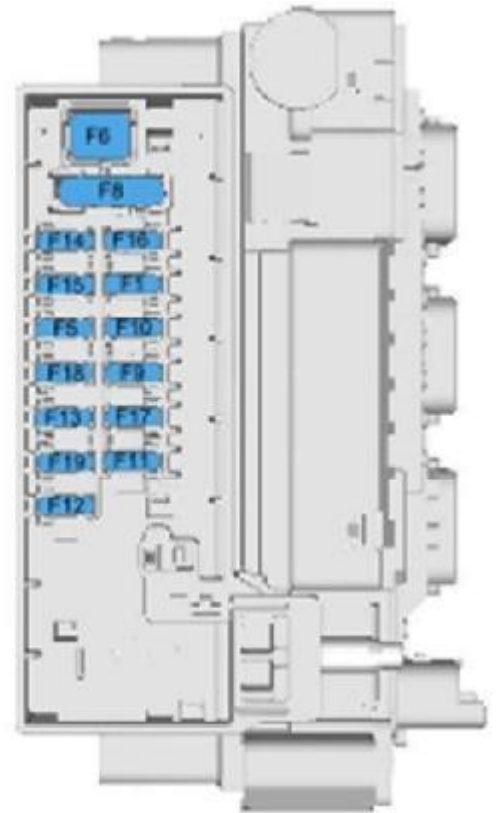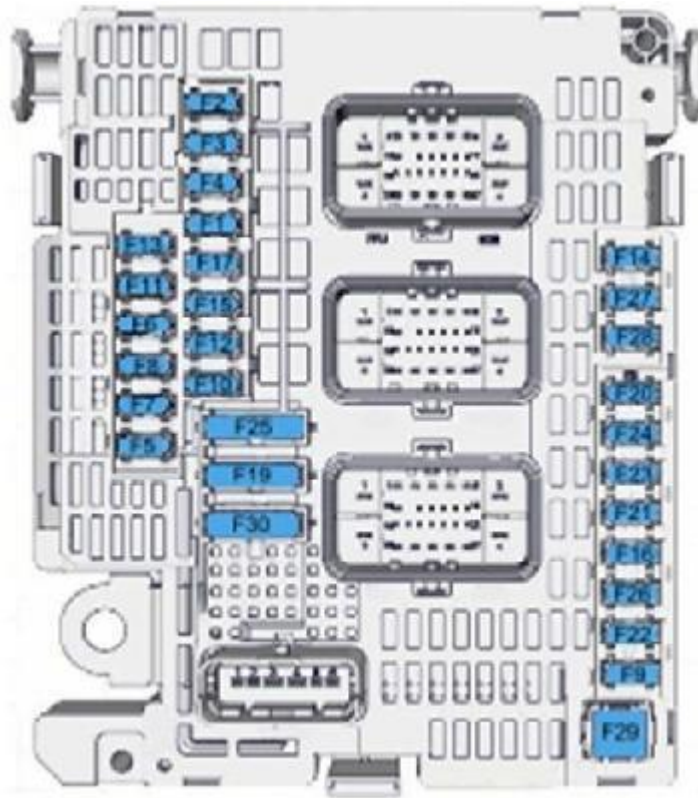


No.	A	Protected components
F1	5	-
F5	5	-
F6	40	-
F8	30	Diesel Euro 6: Sensor NOX and SCR
F9	10	-
F10	5	-
F11	5	-
F12	15	Wiper, Manual gearbox, Ax6 III ECU
F13	20	Coolant and passenger compartment heater
F14	5	COMTEC Ax6 III ECU's
F15	15	-
F16	15	-

F17	10	-
F18	5	Brake dual-function switch
F19	5	-
F1	15	Control of Centralised Power Switch relay 1032, Diesel injectors
F2	5	Control of cooling fan unit relay, Bike fan, unit
F3	5	Steering relays, Centralized voltage maintenance device, Reversible alternator
F4	5	Injector SCR
F5	15	Pump driven gavage
F6	20	Intake air flow meter, Solenoid Bypass interchange EGR
F7	10	Diesel pump solenoid flow control, Proportional solenoid TGV
F8	10	Water in diesel detector sensor Solenoid oil pump
F9	10	Electronic immobilizer
F10	5	-
F11	15	Steering protection switch housing 3, Micro projector engine correction, Fuel additive pump Sliding side power door
F12	5	Heating nozzle
F13	5	Rastreador DMTR
F14	25	Powerful pump mass Front and rear screen wash
F15	5	Calculating ARTIV, Diagnostic socket, Clutch switch, Coolant level sensor, Power steering computer
F16	20	Air conditioning pump group AR
F17	10	Built in system interface
F19	30	Front screen wipe
F20	15	Pump power, Front and rear screen wash
F21	20	Headlight washer pump
F22	15	Sonor alarm


F23	15	Right road lights
F24	15	Left road lights
F25	30	-
F26	-	-
F27	5	-
F28	5	-
F29	30	Starter
F30	30	Diesel heater, Blow-by diesel heater
Relays		
R1	Diesel engine ECU	
R2	Driving BSM	
R3	Driving BSM	
R4	Engine ECU, Steering relay CPC (1032), Centralized voltage maintenance device, Reversible alternator, Engine blower	
R5	Engine ECU, Additive pump FAP (DV6C-DV6D)	
R6	Supply + APC	
R7	Starter	
R8	Front screen wipe	
R9		
R10	Front and rear screen wash pump	
R11	Headlamp wash pump	
R12	Sonor alarm	
R13	-	
R14	Left road lights	
R15	Right road lights	
R16	-	

R17	-
-----	---

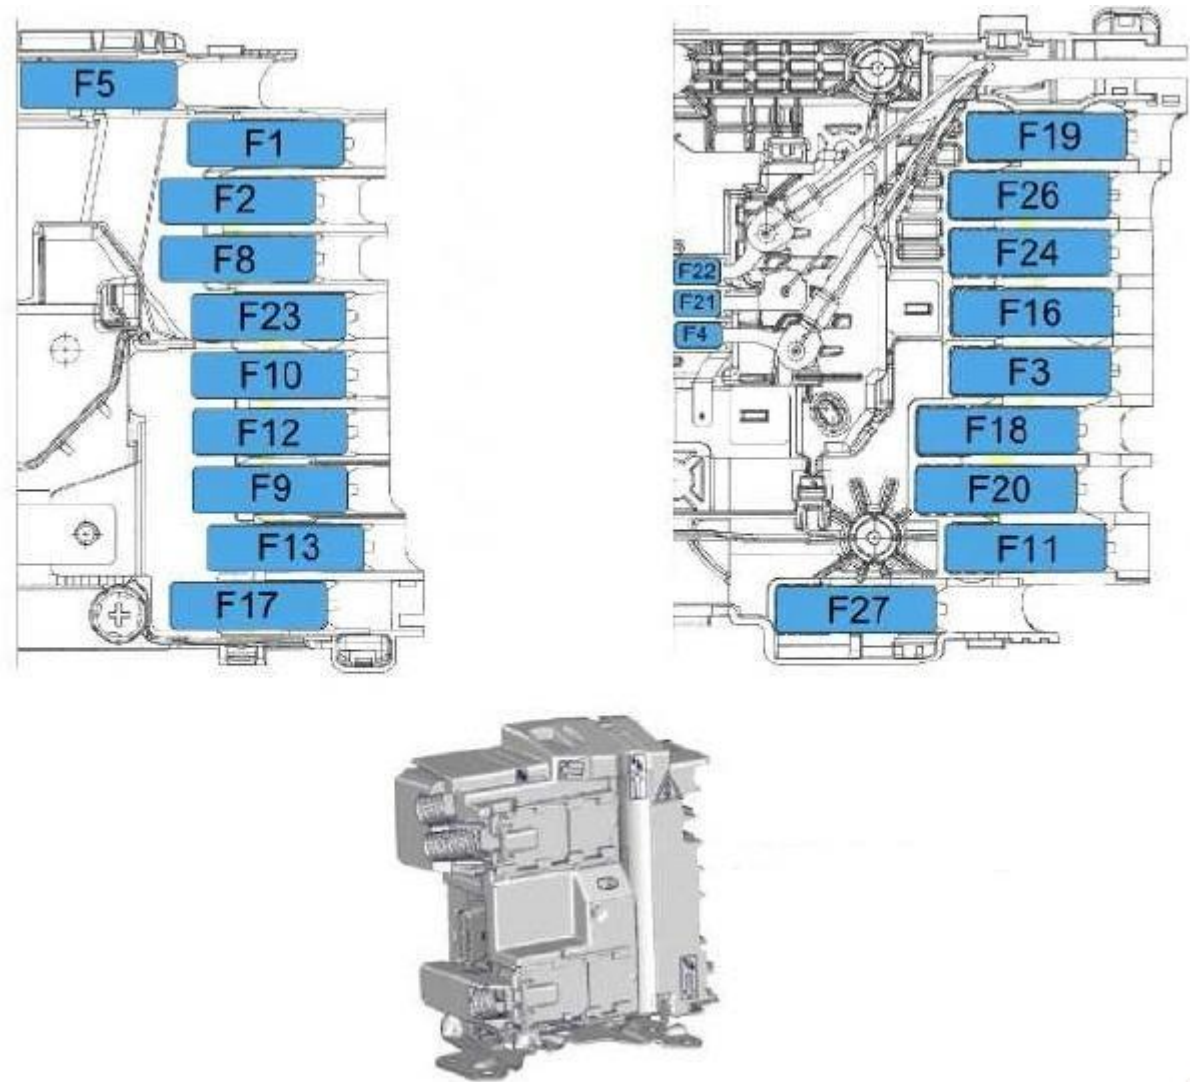 

No.	A	Protected components
F1	80	Relay compartment fusebox 3
F2	70	Buil in system interface
F3	50	ESP ECU's
F4	20	Generic servitude case
F5	30	ESP ECU's
F8	125	Power steering electric pump
F9	125	Fuses servitude platinum

F10	60	Built-in system interface
F11	40	Relay compartment fusebox 5 trailer
F12	60	Relay compartment fusebox 3
F13	60	Relay compartment fusebox 2
F16	70	Pre -post heating box
F17	100	Maxi fusebox 4
F18	40	AR Additional air conditioning group
F19	30	Starter
	40	Centralized voltage maintenance device
F20	40	Taxi Relay compartment fusebox 5
F21	20	Generic servitude case
F22	5	Battery charge case
F23	60	Control housing GMV
F24	40	Air conditioning kicker AV
F25	-	-
F26	30	MCP or Ax6 III ECU's gearbox
F27	80	Protection switching box 3

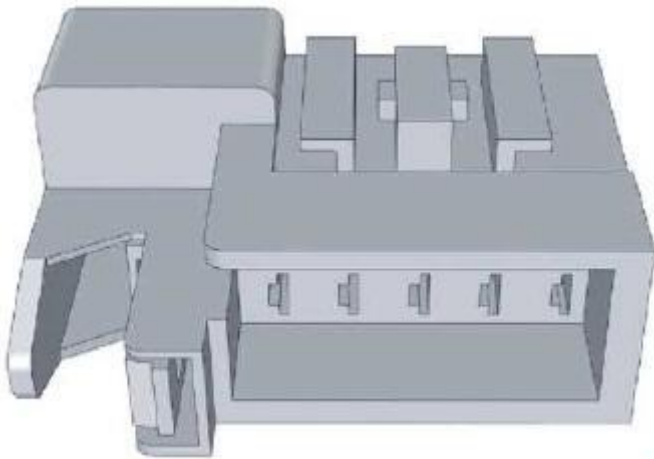 

No.	A	Protected components
F36	20	ECO: BSG Full: Trailer servitude generic case / Caravan
	10	Taxi: Taxi radio
F37	20	ECO: BSG Full: Trailer servitude generic case / Caravan
	5	Taxi: Taxi screen
F38	20	ECO: BSG Full: Trailer servitude generic case / Caravan
	5	Taxi: Taxi recorder
F39	5	Taxi: Taxi printer
F40	5	Taxi: Taxi time recorder requirements