


Back-Up Light

From Power Source System (See Page 54)

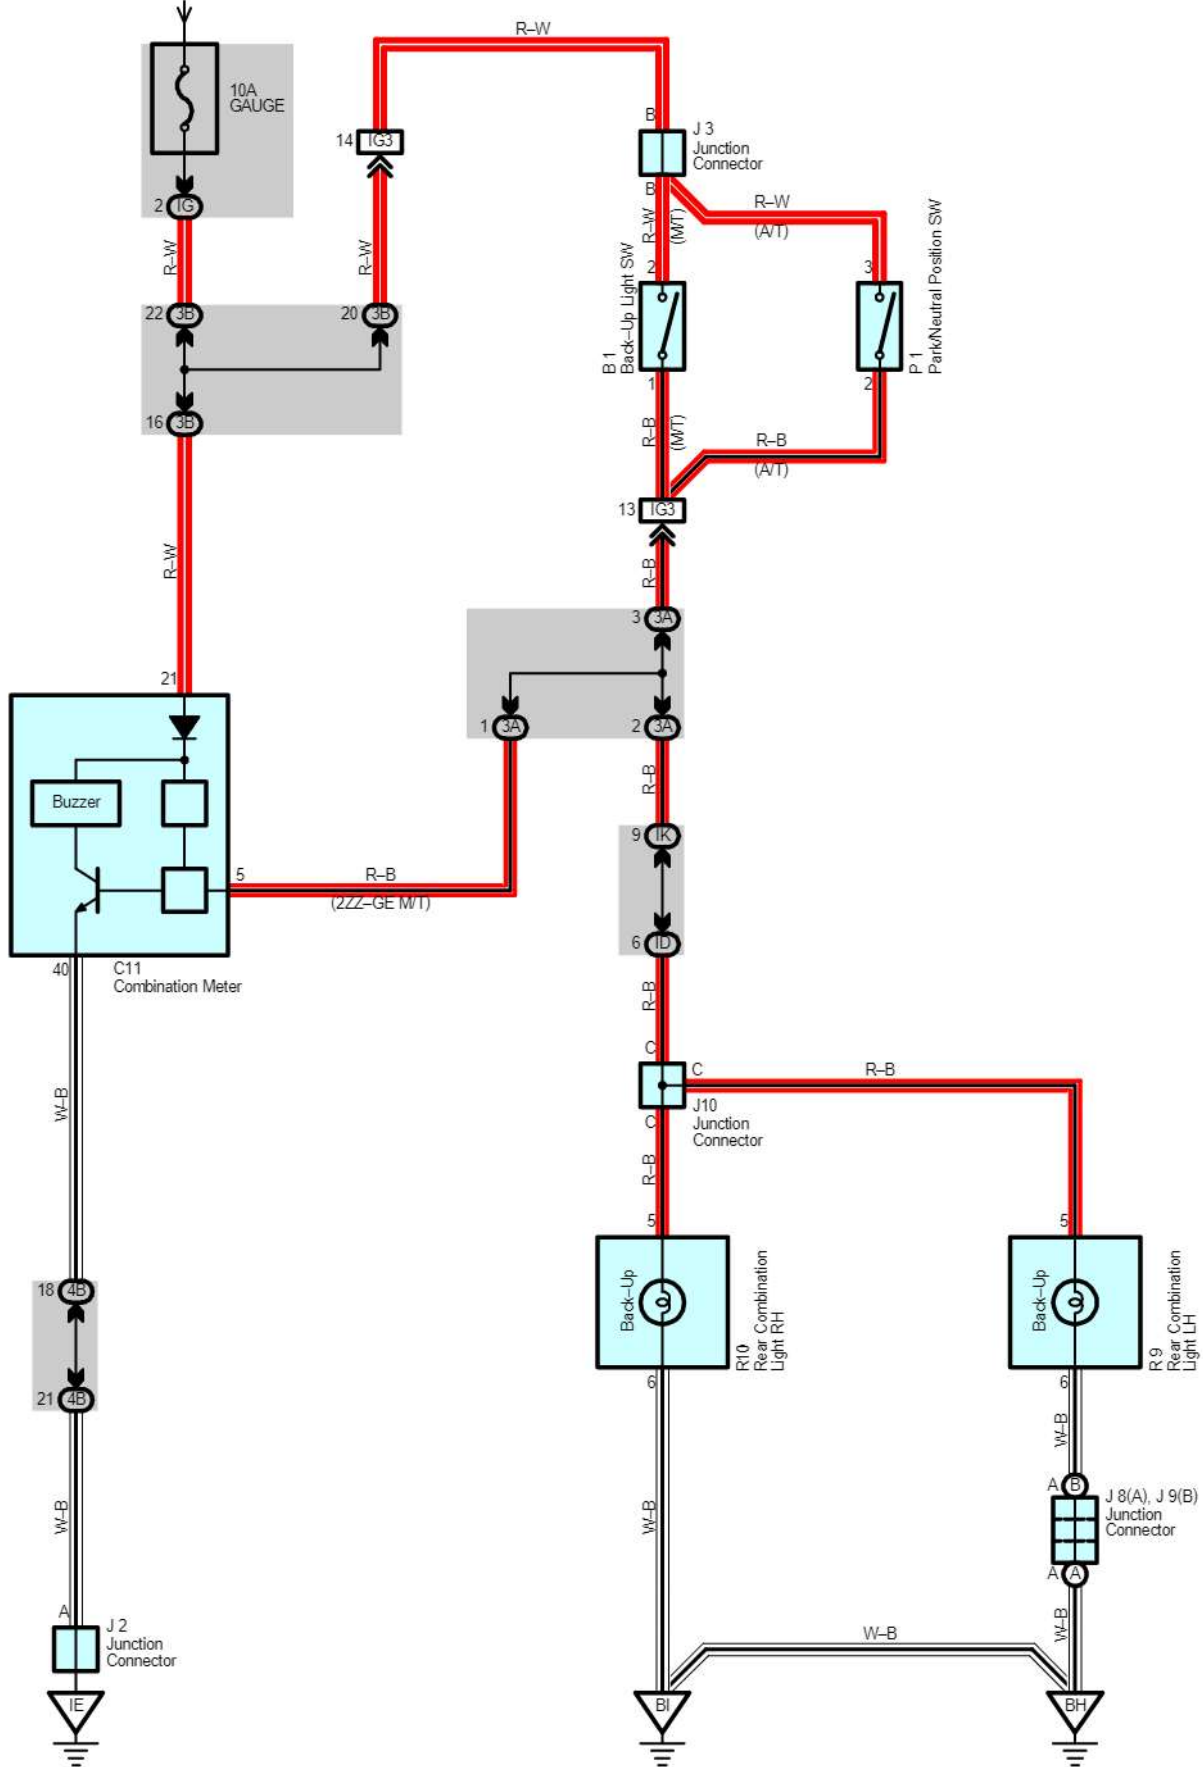

Service Hints

P1 Park/Neutral Position SW (A/T)

2-3 : Closed with the shift lever at R position

B1 Back-Up Light SW (M/T)

2-1 : Closed with the shift lever at R position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B1	34 (2ZZ-GE)	J3	39	P1	35 (2ZZ-GE)
	36 (1ZZ-FE)	J8 A	40		37 (1ZZ-FE)
C11	38	J9 B	40	R9	41
J2	39	J10	40	R10	41

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IK	24	
3A	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3B		
4B	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG3	48	Engine Wire and Instrument Panel Wire (Blower Unit RH)

▽ : Ground Points

Code	See Page	Ground Points Location
IE	46	Behind Combination Meter
BH	50	Left Quarter Panel
BI	50	Right Quarter Panel