



Last Modified: 9-7-2011	6.4 K	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM00000116P00MX
Title: LIGHTING: ROOM LIGHT ASSEMBLY (for Center): COMPONENTS (2011 RAV4)		

COMPONENTS

ILLUSTRATION

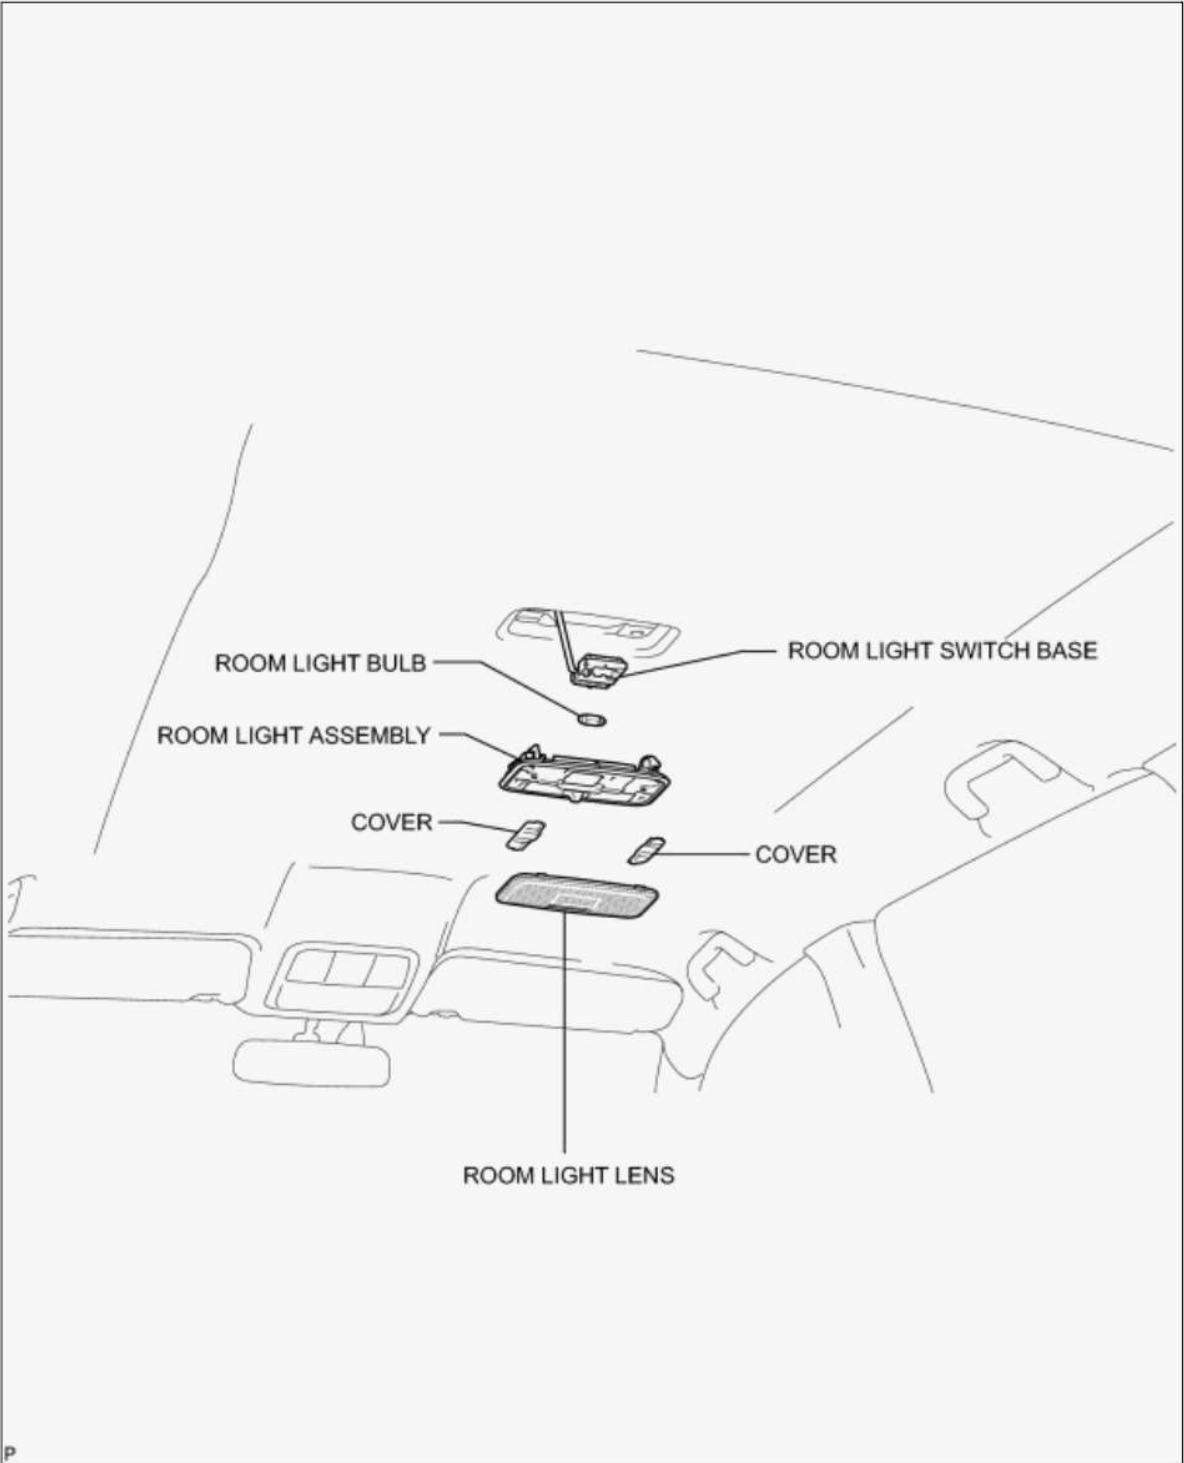


 LIGHTING: ROOM LIGHT ASSEMBLY (for Center): COMPONENTS... <https://techinfo.toyota.com/t3Portal/document/rm/RM16B0U/xhtml/RM...>



Last Modified: 9-7-2011	6.4 G	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM0000014M300MX
Title: LIGHTING: ROOM LIGHT ASSEMBLY (for Center): INSPECTION (2011 RAV4)		

INSPECTION

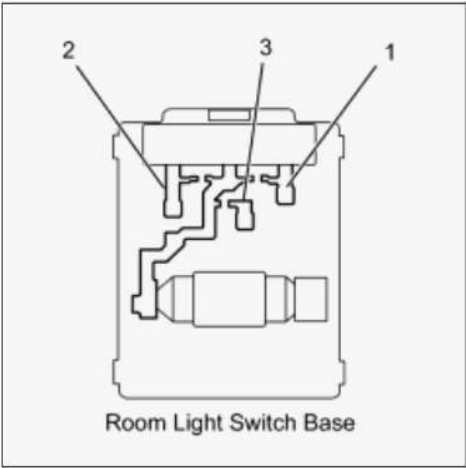

1. INSPECT ROOM LIGHT

(a) Connect the battery's positive (+) lead to terminal 1 and the negative (-) lead to terminal 2, and then check that the light comes on when the switch is in the DOOR position.

OK:

Light comes on.

 
If the result is not as specified, replace the light assembly.

(b) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 3, then check that the light comes on when the switch is in the ON position.

OK:

Light comes on.


If the result is not as specified, replace the light assembly.




Last Modified: 9-7-2011	6.4 A	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM00000113S00MX
Title: LIGHTING: ROOM LIGHT ASSEMBLY (for Center): INSTALLATION (2011 RAV4)		

INSTALLATION


1. INSTALL ROOM LIGHT ASSEMBLY

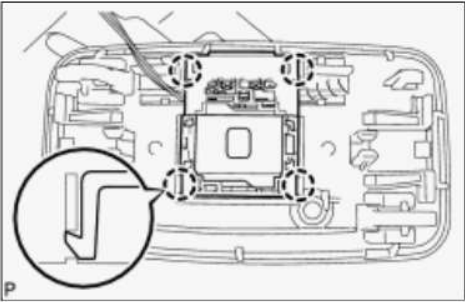

(a) Attach the 4 claws to install the room light switch base.


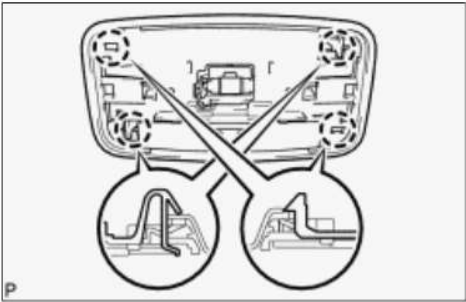


(b) Attach the 4 claws to install the room light.

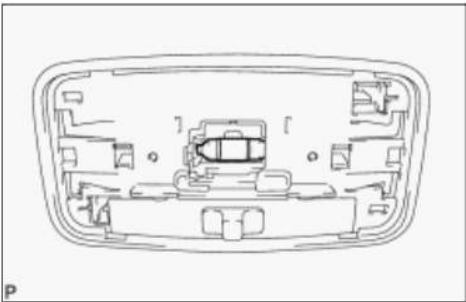

(c) Install the bulb to the room light switch base.


(d) Attach the 4 claws to install the 2 covers.

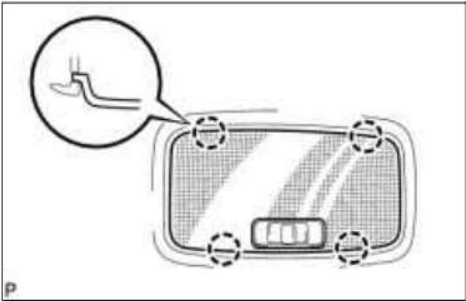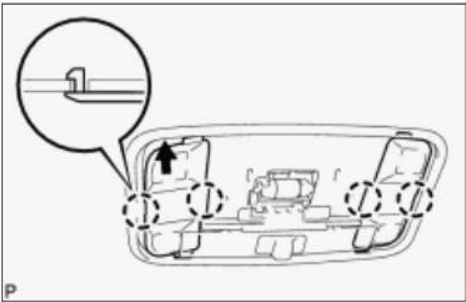

2. INSTALL ROOM LIGHT LENS

(a) Attach the 4 claws to install the lens.

 3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL




Last Modified: 9-7-2011	6.4 A	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM00000113T00MX
Title: LIGHTING: ROOM LIGHT ASSEMBLY (for Center): REMOVAL (2011 RAV4)		

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

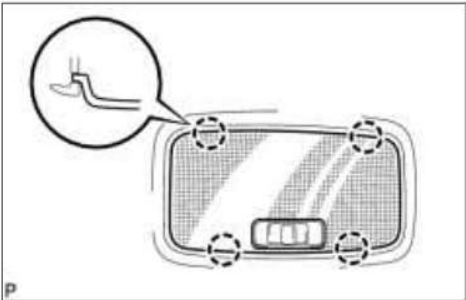


2. REMOVE ROOM LIGHT LENS

(a) Using a screwdriver, detach the 4 claws and remove the lens.


HINT:
Tape the screwdriver tip before use.

3. REMOVE ROOM LIGHT ASSEMBLY

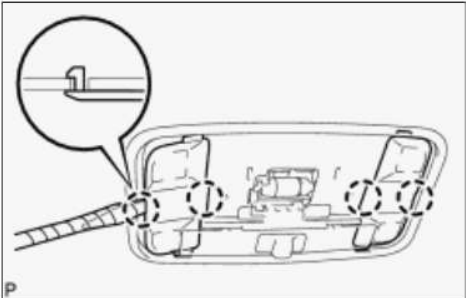


(a) Using a screwdriver, detach the 4 claws and remove the 2 covers.

HINT:
Tape the screwdriver tip before use.

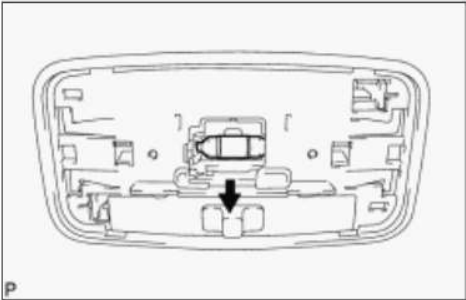


(b) Remove the bulb from the room light switch base.

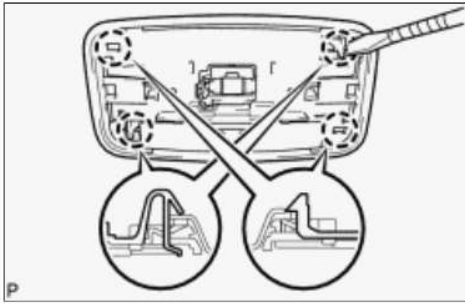

(c) Using a screwdriver, detach the 4 claws and remove the light.

HINT:


Tape the screwdriver tip before use.

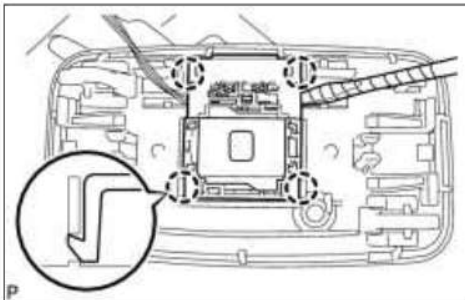

(d) Using a screwdriver, detach the 4 claws and remove the room light switch base.

HINT:

 
Tape the screwdriver tip before use.




Last Modified: 9-7-2011	6.4 K	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM000001GEC00IX
Title: LIGHTING: ROOM LIGHT ASSEMBLY (for Front): COMPONENTS (2011 RAV4)		

COMPONENTS

ILLUSTRATION

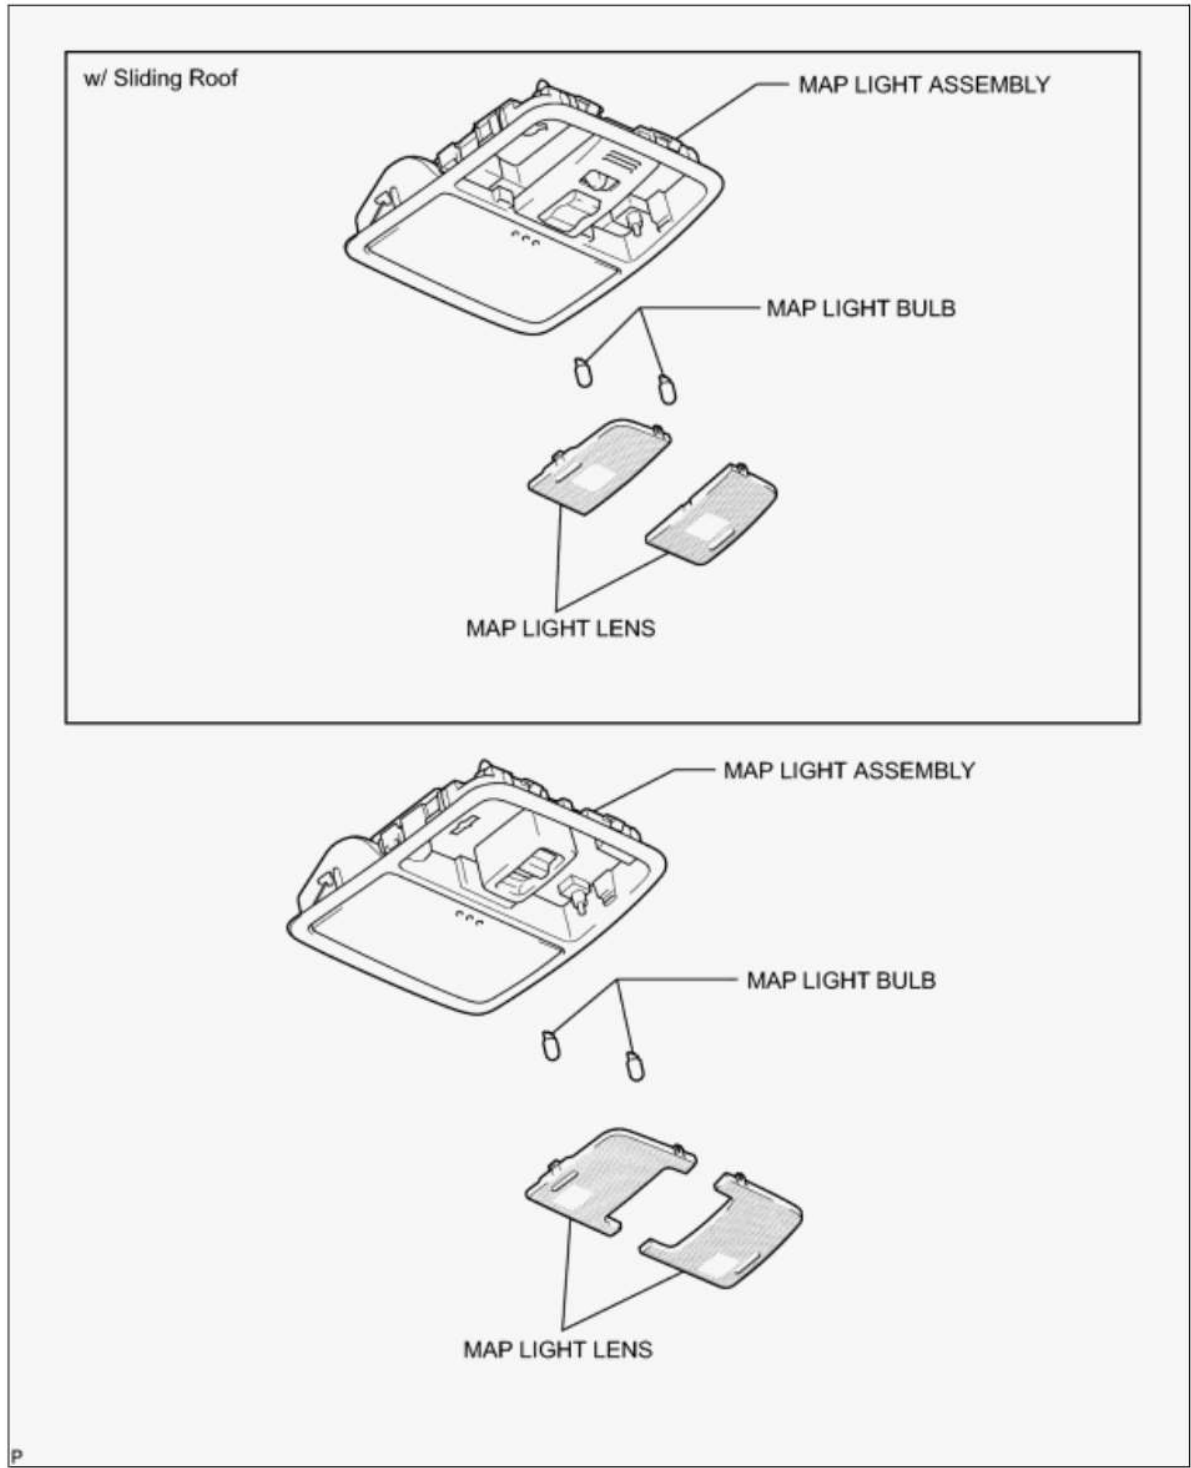


 LIGHTING: ROOM LIGHT ASSEMBLY (for Front): COMPONENTS ... <https://techinfo.toyota.com/t3Portal/document/rm/RM16B0U/xhtml/RM...>



Last Modified: 9-7-2011	6.4 A	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM000001GEE00IX
Title: LIGHTING: ROOM LIGHT ASSEMBLY (for Front): DISASSEMBLY (2011 RAV4)		

DISASSEMBLY

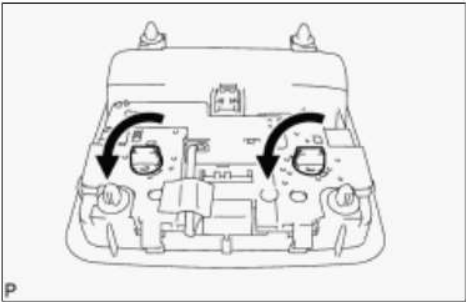

1. REMOVE MAP LIGHT BULB


(a) Remove the 2 bulbs from the light.



Last Modified: 9-7-2011	6.4 G	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM000001GEB00IX
Title: LIGHTING: ROOM LIGHT ASSEMBLY (for Front): INSPECTION (2011 RAV4)		

INSPECTION

1. INSPECT MAP LIGHT ASSEMBLY

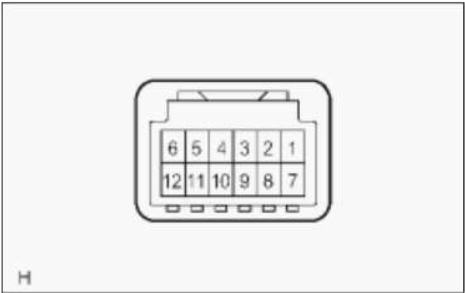

- (a) Connect the battery's positive (+) lead to terminal 6 and the negative (-) lead to terminal 1, and then check that the light comes on when the switch is in the DOOR position.

 
OK:
Light comes on.

If the result is not as specified, replace the light assembly.

- (b) Connect the battery's positive (+) lead to terminal 6 and the negative (-) lead to terminal 7, and then check that the light comes on when the switch is in the ON position.


OK:
Light comes on.

If the result is not as specified, replace the light assembly.




Last Modified: 9-7-2011	6.4 A	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM000001GEA00IX
Title: LIGHTING: ROOM LIGHT ASSEMBLY (for Front): INSTALLATION (2011 RAV4)		

INSTALLATION

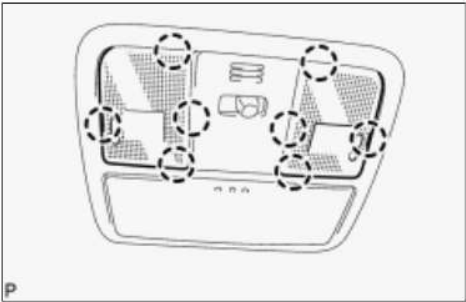

1. INSTALL MAP LIGHT LENS


- (a) Attach the 8 claws to install the map light lens.

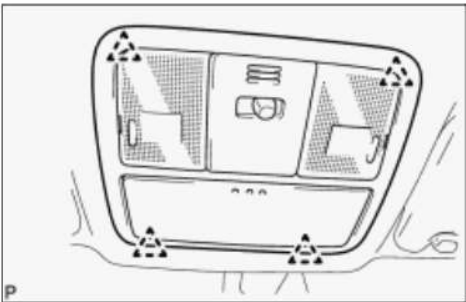

2. INSTALL MAP LIGHT ASSEMBLY


- (a) Connect the light connector.
- (b) Attach the 4 clips to install the map light.

 3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL




Last Modified: 9-7-2011	6.4 A	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM000001GEF00IX
Title: LIGHTING: ROOM LIGHT ASSEMBLY (for Front): REASSEMBLY (2011 RAV4)		

REASSEMBLY

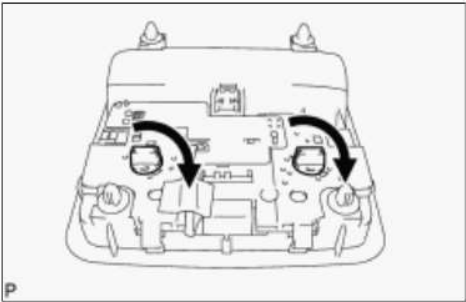

1. INSTALL MAP LIGHT BULB

 (a) Install the 2 bulbs to the light.




Last Modified: 9-7-2011	6.4 A	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM000001GED00IX
Title: LIGHTING: ROOM LIGHT ASSEMBLY (for Front): REMOVAL (2011 RAV4)		

REMOVAL


1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

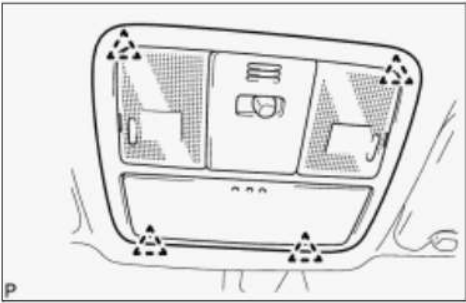

2. REMOVE MAP LIGHT ASSEMBLY


- (a) Detach the 4 clips and remove the map light.
- (b) Disconnect the light connector.

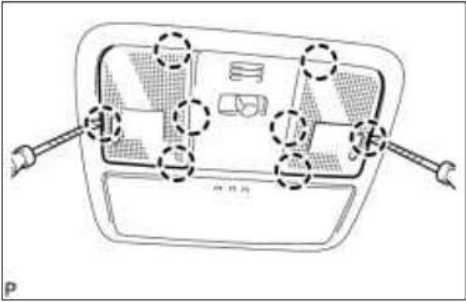

3. REMOVE MAP LIGHT LENS

- (a) Using a screwdriver, pry out the 8 claws and remove the map light lens.

 
HINT:
Tape the screwdriver tip before use.




Last Modified: 9-7-2011	6.4 K	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM0000023J200BX
Title: LIGHTING: ROOM LIGHT ASSEMBLY (for Rear): COMPONENTS (2011 RAV4)		

COMPONENTS

ILLUSTRATION

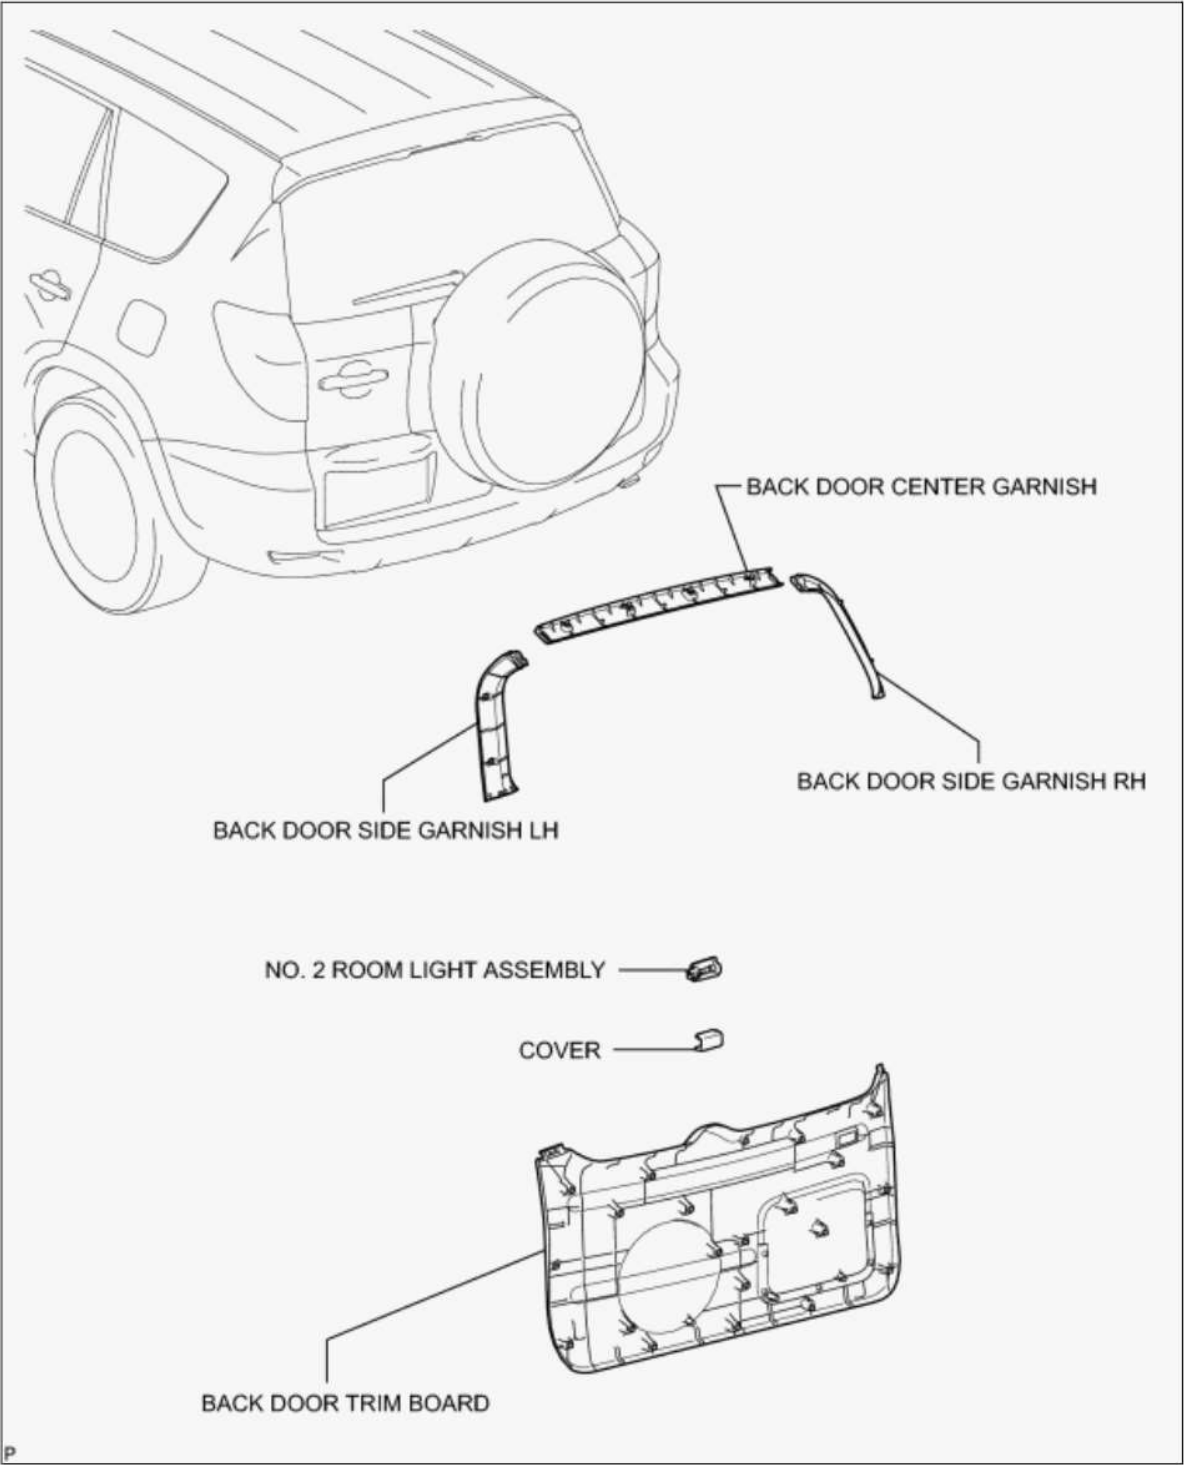

 
LIGHTING: ROOM LIGHT ASSEMBLY (for Rear): COMPONENTS ... <https://techinfo.toyota.com/t3Portal/document/rm/RM16B0U/xhtml/RM...>




Last Modified: 9-7-2011	6.4 A	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM0000023J100BX
Title: LIGHTING: ROOM LIGHT ASSEMBLY (for Rear): INSTALLATION (2011 RAV4)		

INSTALLATION


1. INSTALL NO. 2 ROOM LIGHT ASSEMBLY

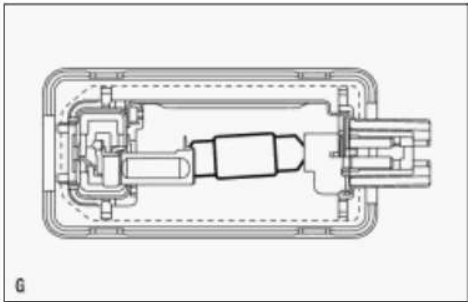

(a) Install the bulb to the light.

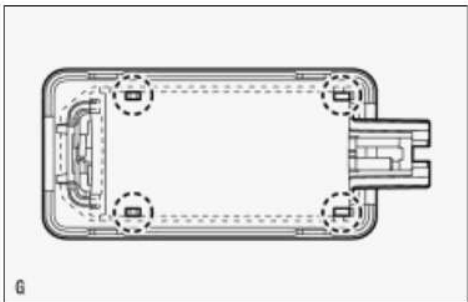

(b) Attach the 4 claws to install the light shade.

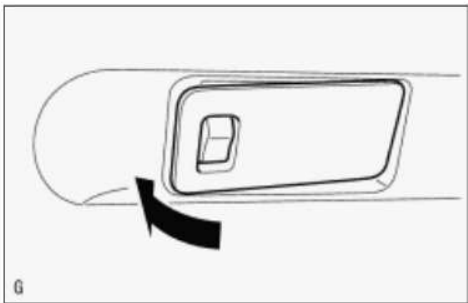

(c) Install the light as shown in the illustration.

 
2. INSTALL BACK DOOR TRIM BOARD [INFO](#)

3. INSTALL BACK DOOR SIDE GARNISH RH [INFO](#)

4. INSTALL BACK DOOR SIDE GARNISH LH [INFO](#)

5. INSTALL BACK DOOR CENTER GARNISH [INFO](#)

6. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL



Last Modified: 9-7-2011	6.4 A	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM0000023J300BX
Title: LIGHTING: ROOM LIGHT ASSEMBLY (for Rear): REMOVAL (2011 RAV4)		

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent
airbag and seat belt pretensioner activation.


2. REMOVE BACK DOOR CENTER GARNISH INFO

3. REMOVE BACK DOOR SIDE GARNISH LH INFO

4. REMOVE BACK DOOR SIDE GARNISH RH INFO


5. REMOVE BACK DOOR TRIM BOARD INFO

6. REMOVE NO. 2 ROOM LIGHT ASSEMBLY

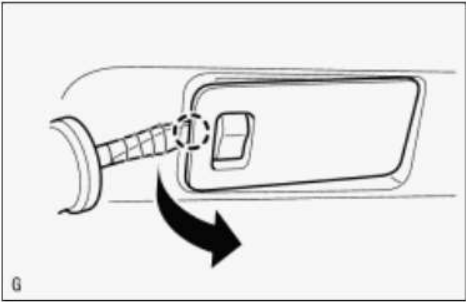

(a) Using a screwdriver, pry out the light as shown in the illustration.

HINT:
Tape the screwdriver tip before use.

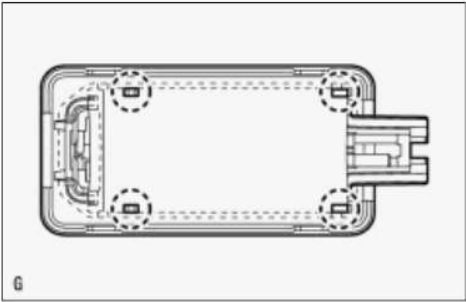

(b) Detach the 4 claws and remove the light shade.

(c) Remove the light bulb from the light.

LIGHTING: ROOM LIGHT ASSEMBLY (for Rear): REMOVAL (201... <https://techinfo.toyota.com/t3Portal/document/rm/RM16B0U/xhtml/RM...>

