

2. Cruise Control Module

A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

Refer to “Engine Section” for removal/installation procedures of the control module.

B: REMOVAL

- 2.5 L turbo model <Ref. to FU(H4DOTC)-46, REMOVAL, Engine Control Module (ECM).>
- 2.5 L non-turbo model <Ref. to FU(H4SO)-39, REMOVAL, Engine Control Module (ECM).>

C: INSTALLATION

- 2.5 L turbo model <Ref. to FU(H4DOTC)-46, INSTALLATION, Engine Control Module (ECM).>
- 2.5 L non-turbo model <Ref. to FU(H4SO)-39, INSTALLATION, Engine Control Module (ECM).>