

7. Inhibitor Switch

A: NOTE

Refer to “4AT section” for inhibitor switch. <Ref. to 4AT-46, INSPECTION, Inhibitor Switch.>

Inhibitor Switch

CRUISE CONTROL SYSTEM

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

CC(diag)

	Page
1. Basic Diagnostic Procedure	2
2. General Description	4
3. Electrical Component Location	5
4. Engine Control Module (ECM) I/O Signal	6
5. Subaru Select Monitor	7
6. Read Cancel Code	8
7. Diagnostics with Phenomenon	10
8. List of Cancel Code	12
9. Diagnostic Procedure without Diagnostic Trouble Code (DTC)	15