

## PASSIVE RESTRAINT SYSTEM INSPECTION

1993 Toyota Celica

### GENERAL INFORMATION

Passive Restraint System Inspection - Asian

### \* PLEASE READ THIS FIRST \*

Follow all manufacturers servicing precautions when working with air bag systems. See SERVICE PRECAUTIONS in the appropriate AIR BAG RESTRAINT SYSTEM article in the ACCESSORIES/SAFETY EQUIPMENT section.

### INTRODUCTION

When a vehicle equipped with passive restraint system has been involved in a collision, certain systems and components must be inspected and or replaced regardless of whether or not the air bag has deployed. Follow the manufacturer's guidelines provided in this article.

### ACURA (1988-98)

#### AIR BAG APPLICATION

AIR BAG APPLICATION TABLE - ACURA (1988-98)

| Model         | Year          | (1) Location |
|---------------|---------------|--------------|
| Integra ..... | 1994-98 ..... | D/P          |
| Legend .....  | 1991-95 ..... | D/P          |
|               | 1988-90 ..... | DS           |
| NSX .....     | 1993-98 ..... | D/P          |
|               | 1991-92 ..... | DS           |
| Vigor .....   | 1993-94 ..... | D/P          |
|               | 1992 .....    | DS           |
| 2.2CL .....   | 1997 .....    | D/P          |
| 2.3CL .....   | 1998 .....    | D/P          |
| 2.5TL .....   | 1995-98 ..... | D/P          |
| 3.0CL .....   | 1997-98 ..... | D/P          |
| 3.2TL .....   | 1996-98 ..... | D/P          |
| 3.5RL .....   | 1996-98 ..... | D/P          |
| SLX .....     | 1996-98 ..... | D/P          |

(1) - Location Definitions: D/P = Driver's & Passenger's Side, DS = Driver's Side Only, SI = Side Impact.

### INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - ACURA (1988-98 EXCEPT SLX)

| Action                                  | Component or System                                                                                                                             |
|-----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Seat Belt Tensioners (If Equipped)</li> <li>* SRS Control Unit</li> </ul> |
| Inspect & If Damaged, Replace Component | <ul style="list-style-type: none"> <li>* Cable Reel</li> <li>* Dash or Impact Sensors (If Equipped)</li> <li>* Seat Belts</li> </ul>            |

|                                  |                                                                                                                                                                                                                                                                                                                                            |
|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* SRS Control Unit</li> <li>* Wiring Harness</li> </ul>                                                                                                                                                                                                                                             |
| Comments                         | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* DO NOT attempt SRS wiring repairs. If SRS wiring or harness connectors are faulty, replace faulty wiring harness.</li> <li>* After vehicle is repaired, ensure AIR BAG warning light is functioning properly.</li> </ul> |

INSPECTION PROCEDURES TABLE - ACURA (1996-98 SLX)

| Action                                                                   | Component or System                                                                                                                                                                                                                                                                                                        |
|--------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Sensing &amp; Diagnostic Module (SDM)</li> </ul>                                                                                                                                                                                                     |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* Instrument Panel Braces</li> <li>* Instrument Panel Steering Column Reinforcement Plate</li> <li>* Seat Belts &amp; Mounting Points</li> <li>* Knee Bolsters &amp; Mounting Points</li> <li>* Steering Column</li> <li>* SRS Coil Assembly</li> <li>* Wiring Harnesses</li> </ul> |
| Comments                                                                 | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* DO NOT attempt wiring harness repairs. Replace harness.</li> </ul>                                                                                                                                       |

**HONDA (1991-98)****AIR BAG APPLICATION**

AIR BAG APPLICATION TABLE - HONDA (1991-98)

| Model               | Year              | (1) Location |
|---------------------|-------------------|--------------|
| Accord .....        | 1993-98 .....     | D/P          |
|                     | 1991-92 .....     | DS           |
| Civic .....         | 1994-98 .....     | D/P          |
|                     | 1992-93 .....     | DS           |
| Civic del Sol ..... | 1994-97 .....     | D/P          |
|                     | 1993 .....        | DS           |
| CR-V .....          | 1997-98 .....     | D/P          |
| Odyssey .....       | 1995-98 .....     | D/P          |
| Prelude .....       | 1994-98 .....     | D/P          |
| SI 4WS .....        | 1992-93 .....     | D/P          |
| Except SI 4WS ..... | 1992-93 .....     | DS           |
| Passport .....      | 1995 1/2-98 ..... | D/P          |

(1) - Location Definitions: D/P = Driver's & Passenger's Side, DS = Driver's Side Only, SI = Side Impact.

**INSPECTION PROCEDURES**

INSPECTION PROCEDURES TABLE - HONDA (1991-98 EXCEPT PASSPORT)

| Action                                                                   | Component or System                                                                                                                                                                                                                                                                                                                        |
|--------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Seat Belt Tensioners (If Equipped)</li> <li>* SRS Control Unit</li> </ul>                                                                                                                                                                                            |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* Cable Reel</li> <li>* Dash Sensors (1991-94)</li> <li>* Seat Belts</li> <li>* SRS Control Unit</li> <li>* Wiring Harness</li> </ul>                                                                                                                                                               |
| Comments                                                                 | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* DO NOT attempt SRS wiring repairs. If SRS wiring or harness connectors are faulty, replace faulty wiring harness.</li> <li>* After vehicle is repaired, ensure AIR BAG warning light is functioning properly.</li> </ul> |

INSPECTION PROCEDURES TABLE - HONDA (1995 1/2-98 PASSPORT)

| Action                                                                   | Component or System                                                                                                                                                                                                                                                                                                        |
|--------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Sensing &amp; Diagnostic Module (SDM)</li> </ul>                                                                                                                                                                                                     |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* Instrument Panel Braces</li> <li>* Instrument Panel Steering Column Reinforcement Plate</li> <li>* Seat Belts &amp; Mounting Points</li> <li>* Knee Bolsters &amp; Mounting Points</li> <li>* Steering Column</li> <li>* SRS Coil Assembly</li> <li>* Wiring Harnesses</li> </ul> |
| Comments                                                                 | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* DO NOT attempt wiring harness repairs. Replace harness.</li> </ul>                                                                                                                                       |

**HYUNDAI (1994-98)****AIR BAG APPLICATION**

AIR BAG APPLICATION TABLE - HYUNDAI (1994-98)

| Model         | Year          | (1) Location |
|---------------|---------------|--------------|
| Accent .....  | 1995-98 ..... | D/P          |
| Elantra ..... | 1996-98 ..... | D/P          |
|               | 1994-95 ..... | DS           |
| Sonata .....  | 1995-98 ..... | D/P          |
| Tiburon ..... | 1997-98 ..... | D/P          |

(1) - Location Definitions: D/P = Driver's & Passenger's Side, DS = Driver's Side Only, SI = Side Impact.

## INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - HYUNDAI (1994-98)

| Action                                                                   | Component or System                                                                                                                                                                                                                            |
|--------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Control Module</li> <li>* Steering Column Clockspring</li> </ul>                                                                                                         |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* Any Seat Belt In Use At Time Of Collision</li> <li>* Steering Column</li> <li>* Steering Wheel</li> <li>* Wiring Harness</li> </ul>                                                                   |
| Comments                                                                 | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* DO NOT attempt SRS wiring repairs. If SRS wiring or harness connectors are faulty, replace faulty wiring harness.</li> </ul> |

## INFINITI (1990-98)

### AIR BAG APPLICATION

AIR BAG APPLICATION TABLE - INFINITI (1990-98)

| Model | Year    | (1) Location | Inspection Table |
|-------|---------|--------------|------------------|
| G20   | 1993-96 | D/P          | INFINITI-2       |
| I30   | 1998    | D/P, SI      | INFINITI-1       |
|       | 1997    | D/P          | INFINITI-1       |
|       | 1996    | D/P          | INFINITI-2       |
| J30   | 1997    | D/P          | INFINITI-1       |
|       | 1994-96 | D/P          | INFINITI-2       |
|       | 1993    | D/P          | INFINITI-3       |
| M30   | 1990-92 | DS           | INFINITI-3       |
| Q45   | 1998    | D/P, SI      | INFINITI-1       |
|       | 1997    | D/P          | INFINITI-1       |
|       | 1994-96 | D/P          | INFINITI-2       |
|       | 1990-93 | DS           | INFINITI-3       |
| QX4   | 1997-98 | D/P          | INFINITI-1       |

(1) - Location Definitions: D/P = Driver's & Passenger's Side,  
DS = Driver's Side Only, SI = Side Impact.

## INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - INFINITI-1

| Action                   | Component or System                                                                                                                                                             |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Control Unit, Diagnosis</li> <li>* Satellite Sensor (1)</li> <li>* Seat Belt Pretensioners (2)</li> </ul> |

|                                                                          |                                                                                                                                                                      |
|--------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                          | * Side Air Bag Module (1)                                                                                                                                            |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Center Pillar Inner (1)<br>* Instrument Panel<br>* Seat (1)<br>* Seat Belt Pretensioners (2)<br>* Spiral Cable<br>* Steering Wheel<br>* Wiring Harnesses           |
| Comments                                                                 | * Inspect all SRS components for dents, deformities or rust.<br>* After repairs are completed, check AIR BAG warning light to ensure system is functioning properly. |
| (1) - On side of impact.<br>(2) - Except I30 and QX4.                    |                                                                                                                                                                      |

INSPECTION PROCEDURES TABLE - INFINITI-2

| Action                                                                   | Component or System                                                                                                                                                  |
|--------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | * Air Bag Module(s)<br>* Control Unit, Diagnosis<br>* Instrument Panel<br>* Seat Belt Pretensioners (1)                                                              |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * All Sensors (2)<br>* Spiral Cable<br>* Steering Wheel<br>* Wiring Harnesses                                                                                        |
| Comments                                                                 | * Inspect all SRS components for dents, deformities or rust.<br>* After repairs are completed, check AIR BAG warning light to ensure system is functioning properly. |
| (1) - Except I30.<br>(2) - Except 1996 I30, 1995-96 J30 and 1995-96 Q45. |                                                                                                                                                                      |

INSPECTION PROCEDURES TABLE - INFINITI-3

| Action                                                                   | Component or System                                                                      |
|--------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | * Air Bag Module(s)<br>* Control Unit, Diagnosis<br>* Sensors In Affected Collision Area |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * All Sensors<br>* Spiral Cable<br>* Steering Wheel<br>* Wiring Harnesses                |
| Comments                                                                 | * Inspect all SRS components for dents, deformities or rust.                             |

|                                                                                                      |
|------------------------------------------------------------------------------------------------------|
| * After repairs are completed, check AIR BAG warning light to ensure system is functioning properly. |
|------------------------------------------------------------------------------------------------------|

## ISUZU (1990-98)

### AIR BAG APPLICATION

AIR BAG APPLICATION TABLE - ISUZU (1990-98)

| Model         | Year     | (1) Location | Inspection Table |
|---------------|----------|--------------|------------------|
| Hombre .....  | 1996-97  | DS           | ISUZU-1          |
| Impulse ..... | 1990-92  | DS           | ISUZU-5          |
| Oasis .....   | 1996-98  | D/P          | ISUZU-2          |
| Rodeo .....   | 1996-98  | D/P          | ISUZU-3          |
|               | 1995 1/2 | D/P          | ISUZU-3          |
| Stylus .....  | 1991-93  | DS           | ISUZU-5          |
| Trooper ..... | 1996-98  | D/P          | ISUZU-3          |
|               | 1995     | D/P          | ISUZU-4          |

(1) - Location Definitions: D/P = Driver's & Passenger's Side,  
DS = Driver's Side Only, SI = Side Impact.

### INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - ISUZU-1

| Action                                                                   | Component or System                                                                                                                                                                                                                         |
|--------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | * Air Bag Module(s)<br>* Sensors In Area Of Accident Damage                                                                                                                                                                                 |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Instrument Panel Braces<br>* Instrument Panel Steering Column Reinforcement Plate<br>* Seat Belts & Mounting Points<br>* Knee Bolster<br>* Sensors In Area Of Accident Damage<br>* SRS Coil Assembly                                      |
| Comments                                                                 | * Any sensor which the Diagnostic Energy Reserve Module (DERM) indicates as bad must be replaced.<br>* If any components are damaged or bent, they must be replaced.<br>* SRS wiring can be repaired following manufacturer's instructions. |

INSPECTION PROCEDURES TABLE - ISUZU-2

| Action                        | Component or System                                                               |
|-------------------------------|-----------------------------------------------------------------------------------|
| Replace After Deployment      | * Air Bag Module(s)<br>* Seat Belt Tensioners (If Equipped)<br>* SRS Control Unit |
| Inspect & If Damaged, Replace | * Cable Reel<br>* Dash Sensors (1991-94)                                          |

|                                                     |                                                                                                                                                                                                                                                                                                                                            |
|-----------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Component<br>(Even If Air<br>Bag Did Not<br>Deploy) | <ul style="list-style-type: none"> <li>* Seat Belts</li> <li>* SRS Control Unit</li> <li>* Wiring Harness</li> </ul>                                                                                                                                                                                                                       |
| Comments                                            | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* DO NOT attempt SRS wiring repairs. If SRS wiring or harness connectors are faulty, replace faulty wiring harness.</li> <li>* After vehicle is repaired, ensure AIR BAG warning light is functioning properly.</li> </ul> |

INSPECTION PROCEDURES TABLE - ISUZU-3

| Action                                                                                  | Component or System                                                                                                                                                                                                                                                                                                        |
|-----------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After<br>Deployment                                                             | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Sensing &amp; Diagnostic Module (SDM)</li> </ul>                                                                                                                                                                                                     |
| Inspect & If<br>Damaged, Replace<br>Component<br>(Even If Air<br>Bag Did Not<br>Deploy) | <ul style="list-style-type: none"> <li>* Instrument Panel Braces</li> <li>* Instrument Panel Steering Column Reinforcement Plate</li> <li>* Seat Belts &amp; Mounting Points</li> <li>* Knee Bolsters &amp; Mounting Points</li> <li>* Steering Column</li> <li>* SRS Coil Assembly</li> <li>* Wiring Harnesses</li> </ul> |
| Comments                                                                                | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* DO NOT attempt wiring harness repairs. Replace harness.</li> </ul>                                                                                                                                       |

INSPECTION PROCEDURES TABLE - ISUZU-4

| Action                                                                                  | Component or System                                                                                                                                                                                                                                                                                              |
|-----------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After<br>Deployment                                                             | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* All Sensors</li> </ul>                                                                                                                                                                                                                     |
| Inspect & If<br>Damaged, Replace<br>Component<br>(Even If Air<br>Bag Did Not<br>Deploy) | <ul style="list-style-type: none"> <li>* SRS Coil Assembly</li> <li>* Instrument Panel Steering Column Reinforcement Panel</li> <li>* Instrument Panel Braces</li> <li>* Knee Bolsters</li> <li>* Seat Belts Mounting Points</li> <li>* Sensors In Area of Accident Damage</li> <li>* Steering Column</li> </ul> |
| Comments                                                                                | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* DO NOT attempt wiring harness repairs. Replace harness.</li> </ul>                                                                                                                             |

INSPECTION PROCEDURES TABLE - ISUZU-5

| Action        | Component or System |
|---------------|---------------------|
| Replace After | * Air Bag Module    |

|                                                                          |                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Deployment                                                               |                                                                                                                                                                                                                                                                                                                                                                      |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* Arming Sensor</li> <li>* Coil Assembly</li> <li>* Diagnostic Energy Reserve Module (DERM)</li> <li>* Forward Sensor</li> <li>* Instrument Panel-To-Steering Column Reinforcement</li> <li>* Knee Pad</li> <li>* Passenger Compartment Sensor</li> <li>* Steering Column</li> <li>* Wiring Harness &amp; Brackets</li> </ul> |
| Comments                                                                 | * If any components are damaged or bent, they must be replaced.                                                                                                                                                                                                                                                                                                      |

### KIA (1995-98)

#### AIR BAG APPLICATION

AIR BAG APPLICATION TABLE - KIA (1995-98)

| Model          | Year           | (1) Location |
|----------------|----------------|--------------|
| Sephia .....   | 1996-98 .....  | D/P          |
|                | 1995 1/2 ..... | D/P          |
| Sportage ..... | 1996-98 .....  | D/P          |

(1) - Location Definitions: D/P = Driver's & Passenger's Side, DS = Driver's Side Only, SI = Side Impact.

#### INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - KIA (1995-98)

| Action                                                                   | Component or System                                                                                                                                                                                                                     |
|--------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | * Air Bag Module(s)                                                                                                                                                                                                                     |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* Air Bag Diagnosis Control Unit</li> <li>* Clockspring</li> <li>* Impact Sensors Sensor Mountings (1)</li> <li>* Steering Column</li> <li>* Steering Wheel</li> <li>* Wiring Harness</li> </ul> |
| Comments                                                                 | * After repairs a completed, ensure Warning Light is functioning properly.                                                                                                                                                              |
| (1) - 1995 1/2 Sephia only.                                              |                                                                                                                                                                                                                                         |

### LEXUS (1990-98)

#### AIR BAG APPLICATION

AIR BAG APPLICATION TABLE - LEXUS (1990-98)

| Model | Year    | (1) Location | Inspection Table |
|-------|---------|--------------|------------------|
| ES250 | 1990-91 | DS           | LEXUS-6          |
| ES300 | 1998    | D/P, SI      | LEXUS-3          |
|       | 1997    | D/P          | LEXUS-1          |
|       | 1994-96 | D/P          | LEXUS-4          |
|       | 1992-93 | DS           | LEXUS-5          |
| GS300 | 1998    | D/P, SI      | LEXUS-3          |
|       | 1993-97 | D/P          | LEXUS-4          |
| GS400 | 1998    | D/P, SI      | LEXUS-3          |
| LS400 | 1997-98 | D/P, SI      | LEXUS-3          |
|       | 1995-96 | D/P          | LEXUS-1          |
|       | 1993-94 | D/P          | LEXUS-4          |
|       | 1990-92 | DS           | LEXUS-6          |
| LX450 | 1996-97 | D/P          | LEXUS-1          |
| LX470 | 1998    | D/P          | LEXUS-2          |
| SC300 | 1996-98 | D/P          | LEXUS-1          |
|       | 1993-95 | D/P          | LEXUS-4          |
|       | 1992    | DS           | LEXUS-5          |
| SC400 | 1996-98 | D/P          | LEXUS-1          |
|       | 1993-95 | D/P          | LEXUS-4          |
|       | 1992    | DS           | LEXUS-5          |

(1) - Location Definitions: D/P = Driver's & Passenger's Side,  
DS = Driver's Side Only, SI = Side Impact.

## INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - LEXUS-1

| Action                                                                   | Component or System                                                                                                                                                                                                                               |
|--------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Air Bag Sensor Assembly</li> <li>* Front Seat Belt Pretensioners (1)</li> </ul>                                                                                             |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* Glove Compartment Door (2)</li> <li>* Instrument Panel</li> <li>* Instrument Panel Reinforcement</li> <li>* Spiral Cable</li> <li>* Steering Wheel</li> <li>* Wiring Harness &amp; Connectors</li> </ul> |
| Comments                                                                 | * If any components are damaged or bent, they must be replaced.                                                                                                                                                                                   |
| (1) - 1995 LS400 only.                                                   |                                                                                                                                                                                                                                                   |
| (2) - 1997 ES300, 1996 LS400 and 1996-97 LX450 only.                     |                                                                                                                                                                                                                                                   |

INSPECTION PROCEDURES TABLE - LEXUS-2

| Action                                  | Component or System                                                                                                                                                         |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Air Bag Sensor Assembly</li> <li>* Front Air Bag Sensors</li> <li>* Seat Belt Pretensioner</li> </ul> |
| Inspect & If Damaged, Replace Component | <ul style="list-style-type: none"> <li>* Instrument Panel</li> <li>* Instrument Panel Reinforcement</li> <li>* Seat Belt Pretensioner</li> </ul>                            |

|                                  |                                                                                                                                                                                                    |
|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* Spiral Cable Steering Wheel</li> <li>* Wiring Harness &amp; Connectors</li> </ul>                                                                         |
| Comments                         | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* DO NOT attempt wiring harness repairs. Replace entire wiring harness.</li> </ul> |

INSPECTION PROCEDURES TABLE - LEXUS-3

| Action                                                                   | Component or System                                                                                                                                                                                                                                                          |
|--------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Air Bag Sensor Assembly</li> <li>* Seat Belt Pretensioner (1)</li> <li>* Side Air Bag Modules</li> <li>* Side Air Bag Sensor Assembly</li> </ul>                                                       |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* Glove Compartment Door (2)</li> <li>* Instrument Panel Instrument Panel Reinforcement</li> <li>* Seat Belt Pretensioner (1)</li> <li>* Spiral Cable</li> <li>* Steering Wheel</li> <li>* Wiring Harness &amp; Connectors</li> </ul> |
| Comments                                                                 | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* DO NOT attempt wiring harness repairs. Replace entire wiring harness.</li> </ul>                                                                           |
| (1) - Except 1997 LS400.<br>(2) - 1997 LS400 only.                       |                                                                                                                                                                                                                                                                              |

INSPECTION PROCEDURES TABLE - LEXUS-4

| Action                                                                          | Component or System                                                                                                                                                                                                                               |
|---------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                        | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Center Air Bag Sensor Assembly</li> <li>* Front Air Bag Sensors</li> <li>* Front Seat Belt Tensioners (1)</li> </ul>                                                        |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy)        | <ul style="list-style-type: none"> <li>* Glove Compartment Door (2)</li> <li>* Instrument Panel</li> <li>* Instrument Panel Reinforcement</li> <li>* Spiral Cable</li> <li>* Steering Wheel</li> <li>* Wiring Harness &amp; Connectors</li> </ul> |
| Comments                                                                        | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* Wiring for Front Air Bag Sensors can be repaired following manufacturer's instructions.</li> </ul>                              |
| (1) - 1993-95 GS300 and 1993-94 LS400.<br>(2) - Except 1994-95 SC300 and SC400. |                                                                                                                                                                                                                                                   |

INSPECTION PROCEDURES TABLE - LEXUS-5

| Action                                                                   | Component or System                                                                                                                                                                                                  |
|--------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module</li> <li>* Center Air Bag Sensor Assembly</li> <li>* Front Air Bag Sensors</li> </ul>                                                                        |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* Spiral Cable</li> <li>* Steering Wheel</li> <li>* Wiring Harness &amp; Connectors</li> </ul>                                                                                |
| Comments                                                                 | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* Wiring for Front Air Bag Sensors can be repaired following manufacturer's instructions.</li> </ul> |

INSPECTION PROCEDURES TABLE - LEXUS-6

| Action                                                                   | Component or System                                                                                                                                                                                                  |
|--------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module</li> <li>* Front Air Bag Sensors</li> </ul>                                                                                                                  |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* Center Air Bag Sensor Assembly</li> <li>* Spiral Cable</li> <li>* Steering Wheel</li> <li>* Wiring Harness &amp; Connectors</li> </ul>                                      |
| Comments                                                                 | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* Wiring for Front Air Bag Sensors can be repaired following manufacturer's instructions.</li> </ul> |

**MAZDA (1990-98)****AIR BAG APPLICATION**

AIR BAG APPLICATION TABLE - MAZDA (1990-98)

| Model          | Year          | (1) Location | Inspection Table |
|----------------|---------------|--------------|------------------|
| Miata .....    | 1995-97 ..... | D/P .....    | MAZDA-1          |
|                | 1994 .....    | D/P .....    | MAZDA-2          |
|                | 1990-93 ..... | DS .....     | MAZDA-2          |
| Millenia ..... | 1995-98 ..... | D/P .....    | MAZDA-1          |
| MPV .....      | 1996-98 ..... | D/P .....    | MAZDA-1          |
|                | 1995 .....    | DS .....     | MAZDA-1          |
|                | 1994 .....    | DS .....     | MAZDA-2          |
| MX-3 .....     | 1994-95 ..... | D/P .....    | MAZDA-2          |
| MX-6 .....     | 1995-98 ..... | D/P .....    | MAZDA-1          |
|                | 1994 .....    | D/P .....    | MAZDA-2          |
|                | 1993 .....    | DS .....     | MAZDA-2          |

|         |         |     |         |
|---------|---------|-----|---------|
| Pickup  | 1996-98 | D/P | MAZDA-2 |
|         | 1995-96 | DS  | MAZDA-2 |
| Protege | 1995-98 | D/P | MAZDA-1 |
| RX7     | 1994-95 | D/P | MAZDA-2 |
|         | 1990-93 | DS  | MAZDA-2 |
| 626     | 1995-98 | D/P | MAZDA-1 |
|         | 1994    | D/P | MAZDA-2 |
|         | 1993    | DS  | MAZDA-2 |
| 929     | 1992-95 | D/P | MAZDA-2 |

(1) - Location Definitions: D/P = Driver's & Passenger's Side,  
DS = Driver's Side Only, SI = Side Impact.

## INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - MAZDA-1

| Action                                                                   | Component or System                                                                                                                                                   |
|--------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | * Air Bag Module(s)<br>* Air Bag Sensor Unit                                                                                                                          |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Clockspring<br>* Impact Sensors & Sensors Mountings<br>* Steering Column<br>* Steering Wheel<br>* Wiring Harness                                                    |
| Comments                                                                 | * DO NOT attempt wiring harness repairs.<br>Replace entire wiring harness.<br>* Impact sensors must always be installed with arrow on sensor facing front of vehicle. |

INSPECTION PROCEDURES TABLE - MAZDA-2

| Action                                                                   | Component or System                                                                                                                                                   |
|--------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | * Air Bag Module(s)<br>* Air Bag Diagnosis Control Unit                                                                                                               |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Clockspring<br>* Impact Sensors & Sensors Mountings<br>* Steering Column Steering Wheel Wiring Harness                                                              |
| Comments                                                                 | * DO NOT attempt wiring harness repairs.<br>Replace entire wiring harness.<br>* Impact sensors must always be installed with arrow on sensor facing front of vehicle. |

## MITSUBISHI (1990-98)

### AIR BAG APPLICATION

AIR BAG APPLICATION TABLE - MITSUBISHI (1990-98)

| Model         | Year    | (1) Location | Inspection Table |
|---------------|---------|--------------|------------------|
| Diamante      | 1997-98 | D/P          | MITSUBISHI-1     |
|               | 1994-96 | D/P          | MITSUBISHI-2     |
|               | 1992-93 | DS           | MITSUBISHI-2     |
| Eclipse       | 1996-98 | D/P          | MITSUBISHI-1     |
|               | 1995    | D/P          | MITSUBISHI-3     |
| Expo          | 1994-95 | DS           | MITSUBISHI-1     |
| Galant        | 1997-98 | D/P          | MITSUBISHI-1     |
|               | 1994-96 | D/P          | MITSUBISHI-2     |
| Mirage        | 1997-98 | D/P          | MITSUBISHI-1     |
|               | 1995-96 | D/P          | MITSUBISHI-4     |
|               | 1994    | DS           | MITSUBISHI-4     |
| Montero       | 1996-98 | D/P          | MITSUBISHI-2     |
|               | 1994-95 | DS           | MITSUBISHI-2     |
| Montero Sport | 1997-98 | D/P          | MITSUBISHI-2     |
| Sigma         | 1990    | DS           | MITSUBISHI-3     |
| 3000GT        | 1997-98 | D/P          | MITSUBISHI-1     |
|               | 1994-96 | D/P          | MITSUBISHI-2     |
|               | 1991-93 | DS           | MITSUBISHI-2     |

(1) - Location Definitions: D/P = Driver's & Passenger's Side,  
DS = Driver's Side Only, SI = Side Impact.

## INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - MITSUBISHI-1

| Action                                                                   | Component or System                                                                             |
|--------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | * Air Bag Module(s)<br>* SRS Control Unit                                                       |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Clockspring<br>* Steering Column & Intermediate Joint<br>* Steering Wheel<br>* Wiring Harness |
| Comments                                                                 | * If any components are damaged or bent, they must be replaced.                                 |

INSPECTION PROCEDURES TABLE - MITSUBISHI-2

| Action                                                                   | Component or System                                                                             |
|--------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | * Air Bag Module(s)<br>* Front Impact Sensors<br>* SRS Control Unit                             |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Clockspring<br>* Steering Column & Intermediate Joint<br>* Steering Wheel<br>* Wiring Harness |
| Comments                                                                 | * If any components are damaged or bent, they must be replaced.                                 |

INSPECTION PROCEDURES TABLE - MITSUBISHI-3

| Action                                                                   | Component or System                                                                                                                                                                                                                    |
|--------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Clockspring</li> <li>* Front Impact Sensors</li> <li>* SRS Control Unit</li> <li>* Steering Column &amp; Intermediate Joint</li> <li>* Steering Wheel</li> </ul> |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Wiring Harness                                                                                                                                                                                                                       |
| Comments                                                                 | * If any components are damaged or bent, they must be replaced.                                                                                                                                                                        |

INSPECTION PROCEDURES TABLE - MITSUBISHI-4

| Action                                                                   | Component or System                                                                                                                            |
|--------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Air Bag Control Unit</li> </ul>                                          |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* Clockspring</li> <li>* Steering Column</li> <li>* Steering Wheel</li> <li>* Wiring Harness</li> </ul> |
| Comments                                                                 | * If any components are damaged or bent, they must be replaced.                                                                                |

**NISSAN (1989-98)****AIR BAG APPLICATION**

AIR BAG APPLICATION TABLE - NISSAN (1989-98)

| Model            | Year          | (1) Location  | Inspection Table |
|------------------|---------------|---------------|------------------|
| Altima .....     | 1998 .....    | D/P .....     | NISSAN-3         |
|                  | 1995-97 ..... | D/P .....     | NISSAN-4         |
|                  | 1994 .....    | D/P .....     | NISSAN-6         |
|                  | 1993 .....    | DS .....      | NISSAN-6         |
| Frontier .....   | 1998 .....    | D/P .....     | NISSAN-1         |
| Maxima .....     | 1998 .....    | D/P, SI ..... | NISSAN-2         |
|                  | 1997 .....    | D/P .....     | NISSAN-3         |
|                  | 1995-96 ..... | D/P .....     | NISSAN-4         |
|                  | 1994 .....    | D/P .....     | NISSAN-5         |
|                  | 1992-93 ..... | DS .....      | NISSAN-6         |
| NX Coupe .....   | 1991-93 ..... | DS .....      | NISSAN-6         |
| Pathfinder ..... | 1996-98 ..... | D/P .....     | NISSAN-5         |

|           |         |     |          |
|-----------|---------|-----|----------|
| Pickup    | 1996-97 | DS  | NISSAN-5 |
| Pulsar NX | 1989-90 | DS  | NISSAN-6 |
| Quest     | 1997-98 | D/P | NISSAN-3 |
|           | 1996    | D/P | NISSAN-4 |
|           | 1994-95 | DS  | NISSAN-5 |
| Sentra    | 1997-98 | D/P | NISSAN-3 |
|           | 1995-96 | D/P | NISSAN-4 |
|           | 1994    | DS  | NISSAN-5 |
|           | 1993    | DS  | NISSAN-6 |
| 200SX     | 1997-98 | D/P | NISSAN-3 |
|           | 1995-96 | D/P | NISSAN-4 |
| 240SX     | 1997-98 | D/P | NISSAN-3 |
|           | 1995-96 | D/P | NISSAN-4 |
| 300ZX     | 1994-96 | D/P | NISSAN-4 |
|           | 1991-93 | DS  | NISSAN-6 |

(1) - Location Definitions: D/P = Driver's & Passenger's Side,  
DS = Driver's Side Only, SI = Side Impact.

## INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - NISSAN-1

| Action                                                                   | Component or System                                                                                                                          |
|--------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | * Air Bag Module(s)<br>* Control Unit, Diagnosis                                                                                             |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Crash Zone Sensor (1)<br>* Instrument Panel<br>* Passenger Deactivation Switch<br>* Spiral Cable<br>* Steering Wheel<br>* Wiring Harnesses |
| Comments                                                                 | * If any components are damaged or bent, they must be replaced.<br>* DO NOT attempt SRS wiring harness repairs.                              |
| (1) - 4WD only.                                                          |                                                                                                                                              |

INSPECTION PROCEDURES TABLE - NISSAN-2

| Action                                                                   | Component or System                                                                                                       |
|--------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | * Air Bag Module(s)<br>* Control Unit, Diagnosis<br>* Side Air Bag Module (1)<br>* Satellite Sensor (1)                   |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Center Pillar Inner (1)<br>* Instrument Panel<br>* Seat (1)<br>* Spiral Cable<br>* Steering Wheel<br>* Wiring Harnesses |
| Comments                                                                 | * If any components are damaged or bent, they must be replaced.                                                           |

|                          |                                              |
|--------------------------|----------------------------------------------|
|                          | * DO NOT attempt SRS wiring harness repairs. |
| (1) - On side of impact. |                                              |

INSPECTION PROCEDURES TABLE - NISSAN-3

| Action                                                                   | Component or System                                                                                             |
|--------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | * Air Bag Module(s)<br>* Control Unit, Diagnosis                                                                |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Instrument Panel<br>* Spiral Cable<br>* Steering Wheel<br>* Wiring Harnesses                                  |
| Comments                                                                 | * If any components are damaged or bent, they must be replaced.<br>* DO NOT attempt SRS wiring harness repairs. |

INSPECTION PROCEDURES TABLE - NISSAN-4

| Action                                                                   | Component or System                                                                                             |
|--------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | * Air Bag Module(s)<br>* Control Unit, Diagnosis                                                                |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * All Sensors (1)<br>* Instrument Panel<br>* Spiral Cable<br>* Steering Wheel<br>* Wiring Harnesses             |
| Comments                                                                 | * If any components are damaged or bent, they must be replaced.<br>* DO NOT attempt SRS wiring harness repairs. |
| (1) - 300ZX Only.                                                        |                                                                                                                 |

INSPECTION PROCEDURES TABLE - NISSAN-5

| Action                                                                   | Component or System                                                                                                                |
|--------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | * Air Bag Module(s)<br>* Control Unit, Diagnosis                                                                                   |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * All Sensors (1)<br>* Crash Zone Sensor (2)<br>* Instrument Panel (3)<br>* Spiral Cable<br>* Steering Wheel<br>* Wiring Harnesses |
| Comments                                                                 | * If any components are damaged or bent, they must be replaced. DO NOT attempt SRS wiring harness repairs.                         |

- |                                                                                         |
|-----------------------------------------------------------------------------------------|
| (1) - Except Pathfinder and Pickup.<br>(2) - 4WD Pickup only.<br>(3) - Pathfinder only. |
|-----------------------------------------------------------------------------------------|

INSPECTION PROCEDURES TABLE - NISSAN-6

| Action                                                                   | Component or System                                                                                             |
|--------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | * Air Bag Module(s)<br>* Control Unit, Diagnosis<br>* Sensors In Affected Collision Area                        |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * All Sensors Spiral Cable<br>* Steering Wheel<br>* Wiring Harnesses                                            |
| Comments                                                                 | * If any components are damaged or bent, they must be replaced.<br>* DO NOT attempt SRS wiring harness repairs. |

**SUBARU (1992-98)****AIR BAG APPLICATION**

AIR BAG APPLICATION TABLE - SUBARU (1992-98)

| Model          | Year          | (1) Location |
|----------------|---------------|--------------|
| Forester ..... | 1998 .....    | D/P          |
| Impreza .....  | 1994-98 ..... | D/P          |
|                | 1993 .....    | DS           |
| Legacy .....   | 1995-98 ..... | D/P          |
|                | 1992-94 ..... | DS           |
| SVX .....      | 1994-97 ..... | D/P          |
|                | 1992-93 ..... | DS           |

(1) - Location Definitions: D/P = Driver's & Passenger's Side, DS = Driver's Side Only, SI = Side Impact.

**INSPECTION PROCEDURES**

INSPECTION PROCEDURES TABLE - SUBARU (1992-98)

| Action                                                                   | Component or System                                                                                         |
|--------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | * Air Bag Module(s)<br>* Air Bag Control Module<br>* Front Impact Sensors (1)<br>* Side Air Bag Sensors (2) |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Air Bag Control Module<br>* Combination Switch & Clockspring<br>* Front Impact Sensors                    |

|                                                                 |                                                                                                                                                                 |
|-----------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Comments                                                        | <ul style="list-style-type: none"> <li>* DO NOT attempt SRS wiring repairs.</li> <li>* If any components are damaged or bent, they must be replaced.</li> </ul> |
| (1) - If Equipped.<br>(2) - 1998 Legacy, on side of deployment. |                                                                                                                                                                 |

## SUZUKI (1995-98)

### AIR BAG APPLICATION

AIR BAG APPLICATION TABLE - SUZUKI (1995-98)

| Model          | Year          | (1) Location |
|----------------|---------------|--------------|
| Esteem .....   | 1995-98 ..... | D/P          |
| Sidekick ..... | 1996-98 ..... | D/P          |
| Swift .....    | 1995-98 ..... | D/P          |
| X90 .....      | 1996-98 ..... | D/P          |

(1) - Location Definitions: D/P = Driver's & Passenger's Side, DS = Driver's Side Only, SI = Side Impact.

## INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - SUZUKI (1995-98)

| Action                                                                   | Component or System                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Sensing &amp; Diagnostic Module (SDM)</li> </ul>                                                                                                                                                                                                                                                                                                                                           |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* Air Bag Warning Light</li> <li>* Combination Switch Assembly</li> <li>* Contact Coil</li> <li>* Forward Discriminating Sensor (1)</li> <li>* Instrument Panel Reinforcement</li> <li>* Knee Bolsters</li> <li>* Seat Belts &amp; Mounting Points</li> <li>* SDM Bracket</li> <li>* Steering Column Bracket</li> <li>* Steering Column &amp; Shaft Joints</li> <li>* Steering Wheel</li> <li>* Wiring Harness</li> </ul> |
| Comments                                                                 | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> </ul>                                                                                                                                                                                                                                                                                                                                                |
| (1) - Swift Only                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

## TOYOTA (1990-98)

## AIR BAG APPLICATION

AIR BAG APPLICATION TABLE - TOYOTA (1990-98)

| Model        | Year    | (1) Location | Inspection Table |
|--------------|---------|--------------|------------------|
| Avalon       | 1998    | D/P, SI      | TOYOTA-1         |
|              | 1996-97 | D/P          | TOYOTA-3         |
|              | 1995    | D/P          | TOYOTA-4         |
| Camry        | 1998    | D/P, SI      | TOYOTA-1         |
|              | 1997    | D/P          | TOYOTA-3         |
|              | 1996    | D/P          | TOYOTA-5         |
|              | 1994-95 | D/P          | TOYOTA-6         |
|              | 1992-93 | DS           | TOYOTA-9         |
| Celica       | 1998    | D/P          | TOYOTA-2         |
|              | 1996-97 | D/P          | TOYOTA-5         |
|              | 1994-95 | D/P          | TOYOTA-7         |
|              | 1990-93 | DS           | TOYOTA-10        |
| Corolla      | 1998    | D/P, SI      | TOYOTA-1         |
|              | 1996-97 | D/P          | TOYOTA-3         |
|              | 1994-95 | D/P          | TOYOTA-6         |
|              | 1993    | DS           | TOYOTA-9         |
| Land Cruiser | 1998    | D/P          | TOYOTA-2         |
|              | 1995-97 | D/P          | TOYOTA-4         |
| MR2          | 1994-95 | D/P          | TOYOTA-5         |
|              | 1991-93 | DS           | TOYOTA-10        |
| Paseo        | 1996-97 | D/P          | TOYOTA-3         |
|              | 1993-95 | DS           | TOYOTA-9         |
| Previa       | 1996-97 | D/P          | TOYOTA-3         |
|              | 1994-95 | D/P          | TOYOTA-6         |
|              | 1992-93 | DS           | TOYOTA-9         |
| RAV4         | 1996-98 | D/P          | TOYOTA-3         |
| Sienna       | 1998    | D/P          | TOYOTA-1         |
| Supra        | 1997-98 | D/P          | TOYOTA-3         |
|              | 1993-96 | D/P          | TOYOTA-5         |
|              | 1990-92 | DS           | TOYOTA-10        |
| Terrel       | 1998    | D/P          | TOYOTA-2         |
|              | 1996-97 | D/P          | TOYOTA-3         |
|              | 1995    | D/P          | TOYOTA-8         |
|              | 1993-94 | DS           | TOYOTA-9         |
| Tacoma       | 1998    | D/P          | TOYOTA-3         |
|              | 1996-97 | DS           | TOYOTA-3         |
| T100         | 1994-98 | DS           | TOYOTA-9         |
| 4Runner      | 1996-98 | D/P          | TOYOTA-4         |

(1) - Location Definitions: D/P = Driver's & Passenger's Side,  
DS = Driver's Side Only, SI = Side Impact.

## INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - TOYOTA-1

| Action                   | Component or System                                                                                                                                                                                                                                                                                                                  |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Air Bag Sensor Assembly</li> <li>* Front Air Bag Sensors (1)</li> <li>* Seat Belt Pretensioner (2)</li> <li>* Seatback Assembly (2) (3)</li> <li>* Side Air Bag Modules (If Equipped) (2)</li> <li>* Side Air Bag Sensor Assembly (If equipped) (1)</li> </ul> |

|                                                                                                        |                                                                                                                                                                                                                                                                                    |
|--------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy)                               | <ul style="list-style-type: none"> <li>* Instrument Panel</li> <li>* Instrument Panel Reinforcement</li> <li>* Seatback Assembly (2)</li> <li>* Seat Belt Pretensioner (2)</li> <li>* Spiral Cable</li> <li>* Steering Wheel</li> <li>* Wiring Harness &amp; Connectors</li> </ul> |
| Comments                                                                                               | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* DO NOT attempt wiring harness repairs. Replace entire wiring harness.</li> </ul>                                                                                 |
| (1) - Corolla and Sienna only. Replace both sensors.<br>(2) - On side of impact.<br>(3) - Avalon only. |                                                                                                                                                                                                                                                                                    |

INSPECTION PROCEDURES TABLE - TOYOTA-2

| Action                                                                   | Component or System                                                                                                                                                                                                                               |
|--------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Air Bag Sensor Assembly</li> <li>* Front Air Bag Sensors</li> <li>* Seat Belt Pretensioner (1)</li> </ul>                                                                   |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* Instrument Panel</li> <li>* Instrument Panel Reinforcement</li> <li>* Seat Belt Pretensioner (1)</li> <li>* Spiral Cable</li> <li>* Steering Wheel</li> <li>* Wiring Harness &amp; Connectors</li> </ul> |
| Comments                                                                 | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* DO NOT attempt wiring harness repairs. Replace entire wiring harness.</li> </ul>                                                |
| (1) - Land Cruiser and Tercel only.                                      |                                                                                                                                                                                                                                                   |

INSPECTION PROCEDURES TABLE - TOYOTA-3

| Action                                                                   | Component or System                                                                                                                                                                                                                                                                  |
|--------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Air Bag Sensor Assembly</li> <li>* Front Air Bag Sensor (1)</li> <li>* Instrument Panel (2)</li> <li>* Instrument Panel Reinforcement (2)</li> <li>* Spiral Cable (3)</li> <li>* Steering Wheel (3)</li> </ul> |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* Spiral Cable (4)</li> <li>* Steering Wheel (4)</li> <li>* Wiring Harness &amp; Connectors</li> </ul>                                                                                                                                        |
| Comments                                                                 | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they</li> </ul>                                                                                                                                                                                      |

|                                                                                                                         |                   |
|-------------------------------------------------------------------------------------------------------------------------|-------------------|
|                                                                                                                         | must be replaced. |
| (1) - 1998 RAV4 only.<br>(2) - Except 1996-97 Tacoma and 1998 Supra.<br>(3) - Except 1998 Tacoma.<br>(4) - 1998 Tacoma. |                   |

INSPECTION PROCEDURES TABLE - TOYOTA-4

| Action                                                                   | Component or System                                                                                                                                                                                                                                                |
|--------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Air Bag Sensor Assembly</li> <li>* Glove Compartment Door</li> <li>* Instrument Panel</li> <li>* Instrument Panel Reinforcement</li> <li>* Spiral Cable</li> <li>* Steering Wheel</li> </ul> |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Wiring Harness & Connectors                                                                                                                                                                                                                                      |
| Comments                                                                 | * If any components are damaged or bent, they must be replaced.                                                                                                                                                                                                    |

INSPECTION PROCEDURES TABLE - TOYOTA-5

| Action                                                                   | Component or System                                                                                                                                                                                                                                                      |
|--------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Center Air Bag Sensor Assembly</li> <li>* Front Air Bag Sensors</li> <li>* Instrument Panel</li> <li>* Instrument Panel Reinforcement</li> <li>* Spiral Cable</li> <li>* Steering Wheel</li> </ul> |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Wiring Harness & Connectors                                                                                                                                                                                                                                            |
| Comments                                                                 | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* Wiring for Front Air Bag Sensors can be repaired following manufacturer's instructions.</li> </ul>                                                     |

INSPECTION PROCEDURES TABLE - TOYOTA-6

| Action                   | Component or System                                                                                             |
|--------------------------|-----------------------------------------------------------------------------------------------------------------|
| Replace After Deployment | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Center Air Bag Sensor Assembly</li> </ul> |

|                                                                          |                                                                                                                                                                                                                                                                  |
|--------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                          | <ul style="list-style-type: none"> <li>* Front Air Bag Sensors</li> <li>* Glove Compartment</li> <li>* Glove Compartment Door</li> <li>* Instrument Panel</li> <li>* Instrument Panel Reinforcement</li> <li>* Spiral Cable</li> <li>* Steering Wheel</li> </ul> |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Wiring Harness & Connectors                                                                                                                                                                                                                                    |
| Comments                                                                 | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* Wiring for Front Air Bag Sensors can be repaired following manufacturer's instructions.</li> </ul>                                             |

INSPECTION PROCEDURES TABLE - TOYOTA-7

| Action                                                                   | Component or System                                                                                                                                                                                                                                                      |
|--------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Center Air Bag Sensor Assembly</li> <li>* Center Console Bracket Support</li> <li>* Front Air Bag Sensors</li> <li>* Instrument Panel</li> <li>* Spiral Cable</li> <li>* Steering Wheel</li> </ul> |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Wiring Harness & Connectors                                                                                                                                                                                                                                            |
| Comments                                                                 | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* Wiring for Front Air Bag Sensors can be repaired following manufacturer's instructions.</li> </ul>                                                     |

INSPECTION PROCEDURES TABLE - TOYOTA-8

| Action                                                                   | Component or System                                                                                                                                                                                                   |
|--------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Air Bag Sensor Assembly</li> <li>* Center Console Bracket Support</li> <li>* Instrument Panel Spiral Cable</li> <li>* Steering Wheel</li> </ul> |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Wiring Harness & Connectors                                                                                                                                                                                         |

|          |                                                                 |
|----------|-----------------------------------------------------------------|
| Deploy)  |                                                                 |
| Comments | * If any components are damaged or bent, they must be replaced. |

INSPECTION PROCEDURES TABLE - TOYOTA-9

| Action                                                                   | Component or System                                                                                                                                                                                                  |
|--------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Center Air Bag Sensor Assembly</li> <li>* Front Air Bag Sensors</li> <li>* Spiral Cable</li> <li>* Steering Wheel</li> </ul>                   |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | * Wiring Harness & Connectors                                                                                                                                                                                        |
| Comments                                                                 | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* Wiring for Front Air Bag Sensors can be repaired following manufacturer's instructions.</li> </ul> |

INSPECTION PROCEDURES TABLE - TOYOTA-10

| Action                                                                   | Component or System                                                                                                                                                                                                  |
|--------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Replace After Deployment                                                 | <ul style="list-style-type: none"> <li>* Air Bag Module(s)</li> <li>* Front Air Bag Sensors</li> <li>* Spiral Cable</li> <li>* Steering Wheel</li> </ul>                                                             |
| Inspect & If Damaged, Replace Component (Even If Air Bag Did Not Deploy) | <ul style="list-style-type: none"> <li>* Center Air Bag Sensor Assembly</li> <li>* Wiring Harness &amp; Connectors</li> </ul>                                                                                        |
| Comments                                                                 | <ul style="list-style-type: none"> <li>* If any components are damaged or bent, they must be replaced.</li> <li>* Wiring for Front Air Bag Sensors can be repaired following manufacturer's instructions.</li> </ul> |