 
 


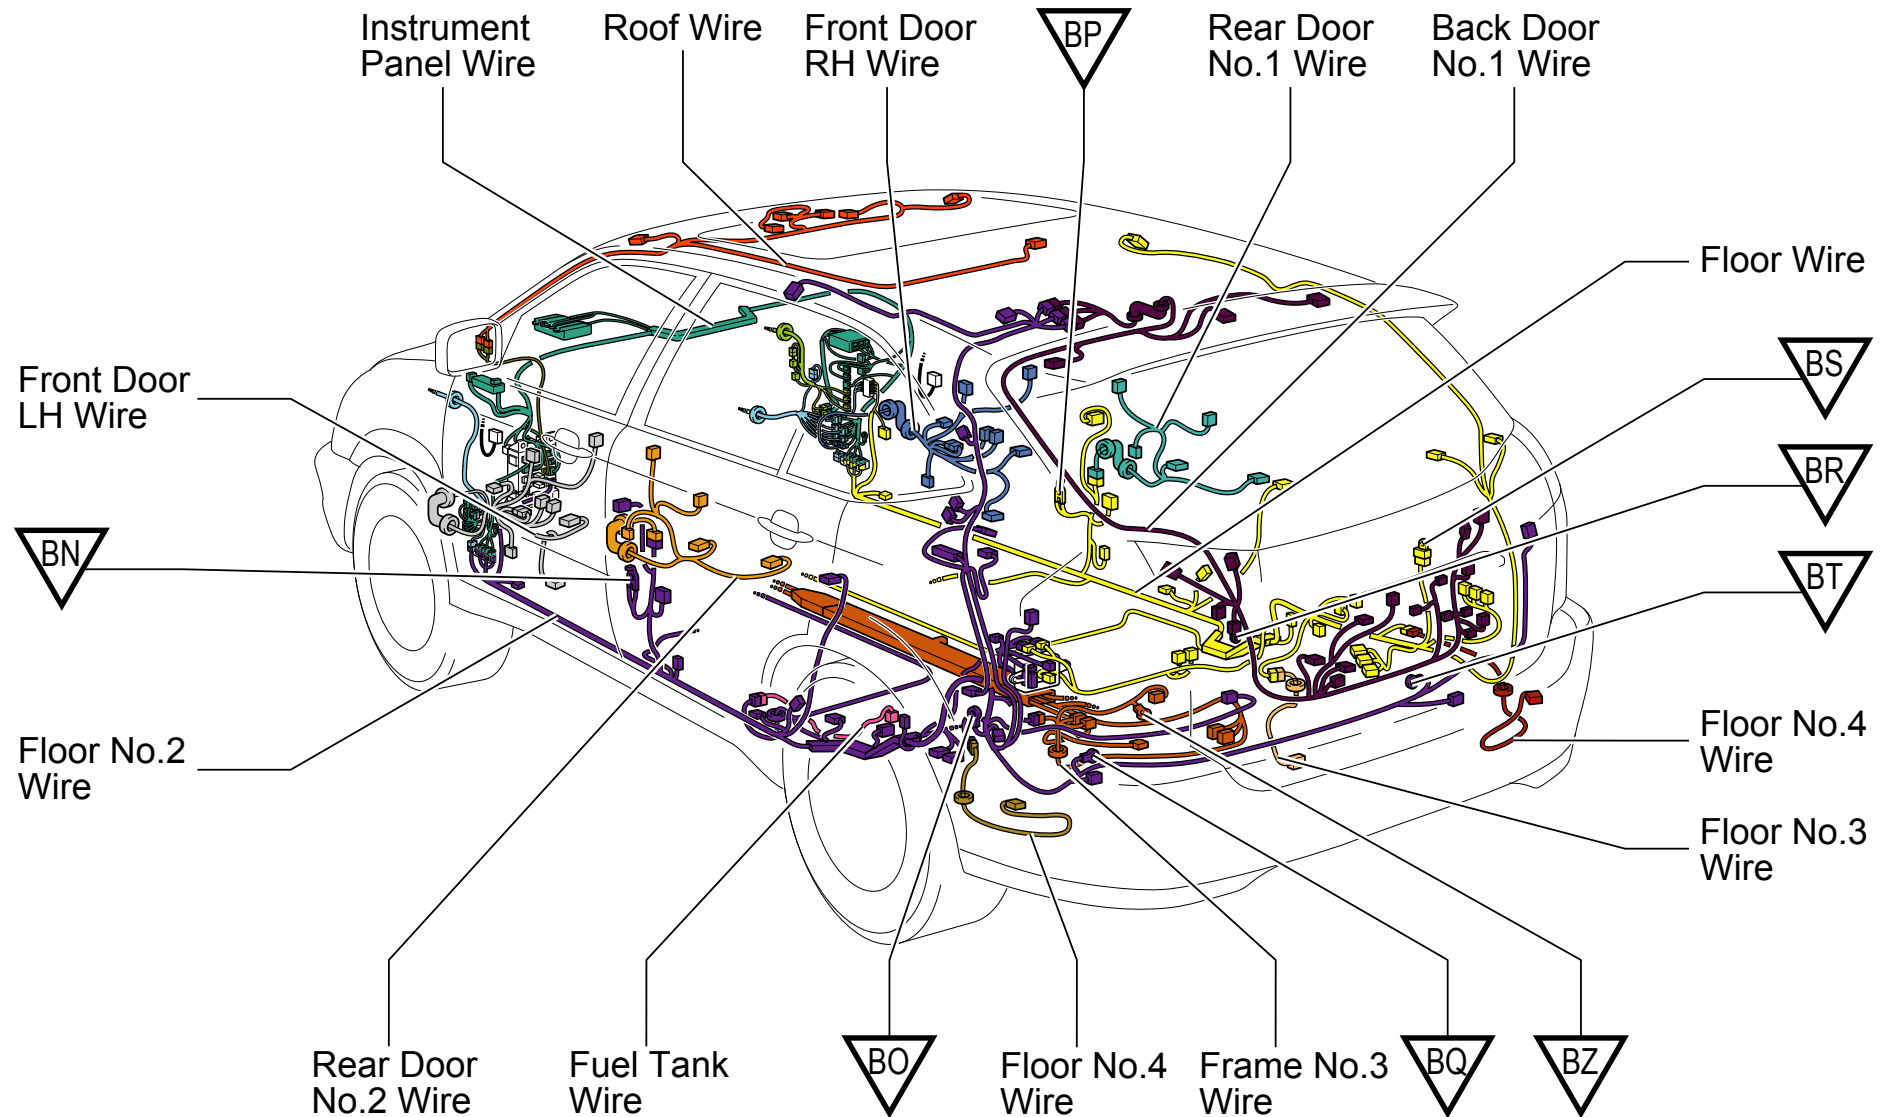

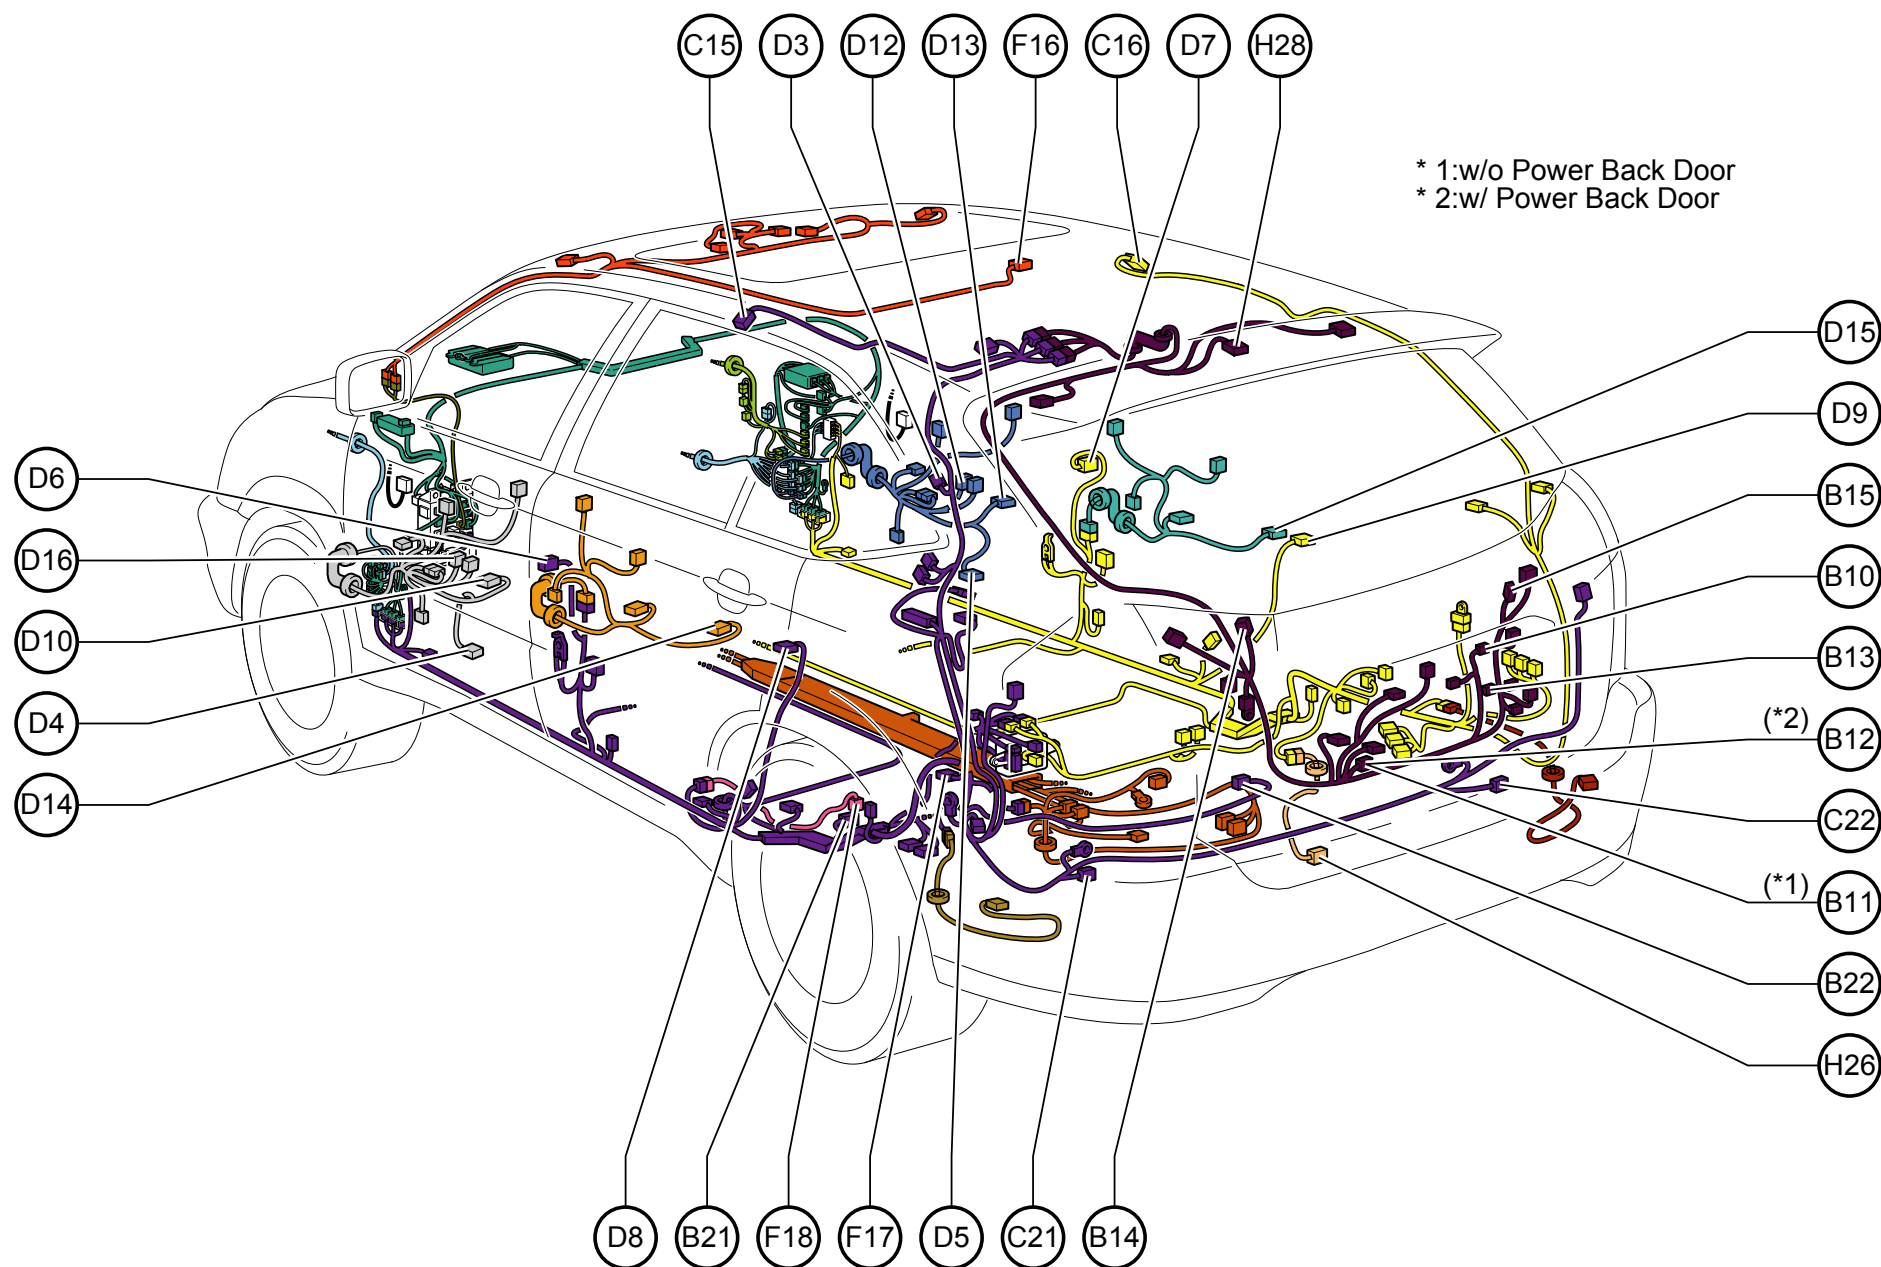

- B 10 Back Door Courtesy Light
- B 11 Back Door Courtesy SW , Back Door Opener Motor
- B 12 Back Door Lock Assembly
- B 13 Back Door Opener SW
- B 14 Back-Up Light LH
- B 15 Back-Up Light RH
- B 21 Battery Blower Motor (LH)
- B 22 Brake Control Power Supply Assembly

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- C 15 Curtain Shield Airbag Squib LH
- C 16 Curtain Shield Airbag Squib RH
- C 21 Circuit Breaker Sensor (Rear LH)
- C 22 Circuit Breaker Sensor (Rear RH)

 
- D 3 Door Control Receiver
- D 4 Door Courtesy Light Front LH
- D 5 Door Courtesy Light Front RH
- D 6 Door Courtesy SW Front LH
- D 7 Door Courtesy SW Front RH
- D 8 Door Courtesy SW Rear LH
- D 9 Door Courtesy SW Rear RH
- D 10 Door Key Lock and Unlock SW (Driver's Side) , Door Lock Motor (Driver's Side) , Door Unlock Detection SW (Driver's Side) , Double Lock Motor (Driver's Side) , Double Lock Position SW (Driver's Side)
- D 12 Door Lock Control SW Front RH
- D 13 Door Lock Motor (Front Passenger's Side) , Door Unlock Detection SW (Front Passenger's Side), Double Lock Motor (Front Passenger's Side) , Double Lock Position SW (Front Passenger's Side)
- D 14 Door Lock Motor Rear LH , Door Unlock Detection SW Rear LH, Double Lock Motor Rear LH , Double Lock Position SW Rear LH
- D 15 Door Lock Motor Rear RH , Door Unlock Detection SW Rear RH, Double Lock Motor Rear RH , Double Lock Position SW Rear RH
- D 16 Driving Position Memory SW

- F 16 Front Interior Light
- F 17 Fuel Lid Opener Motor
- F 18 Fuel Pump , Fuel Sender (Main)

- H 26 Height Control Sensor Rear RH
- H 28 High Mounted Stop Light

Position of Parts in Body <LHD>

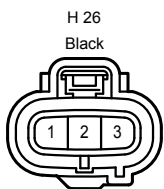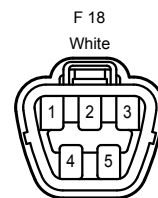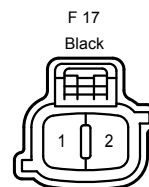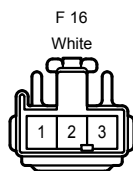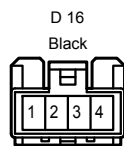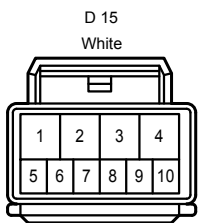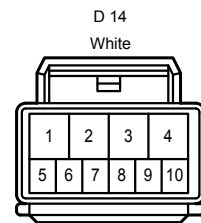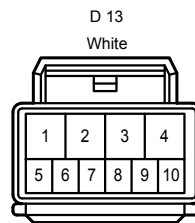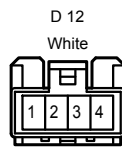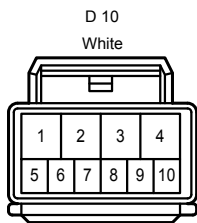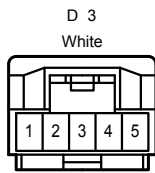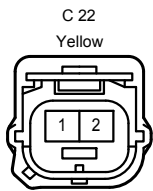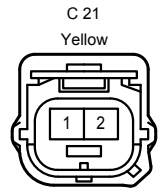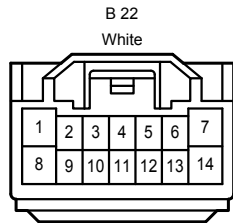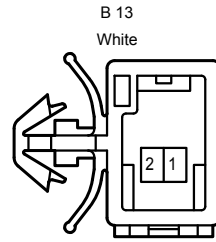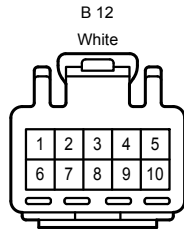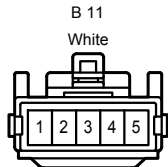

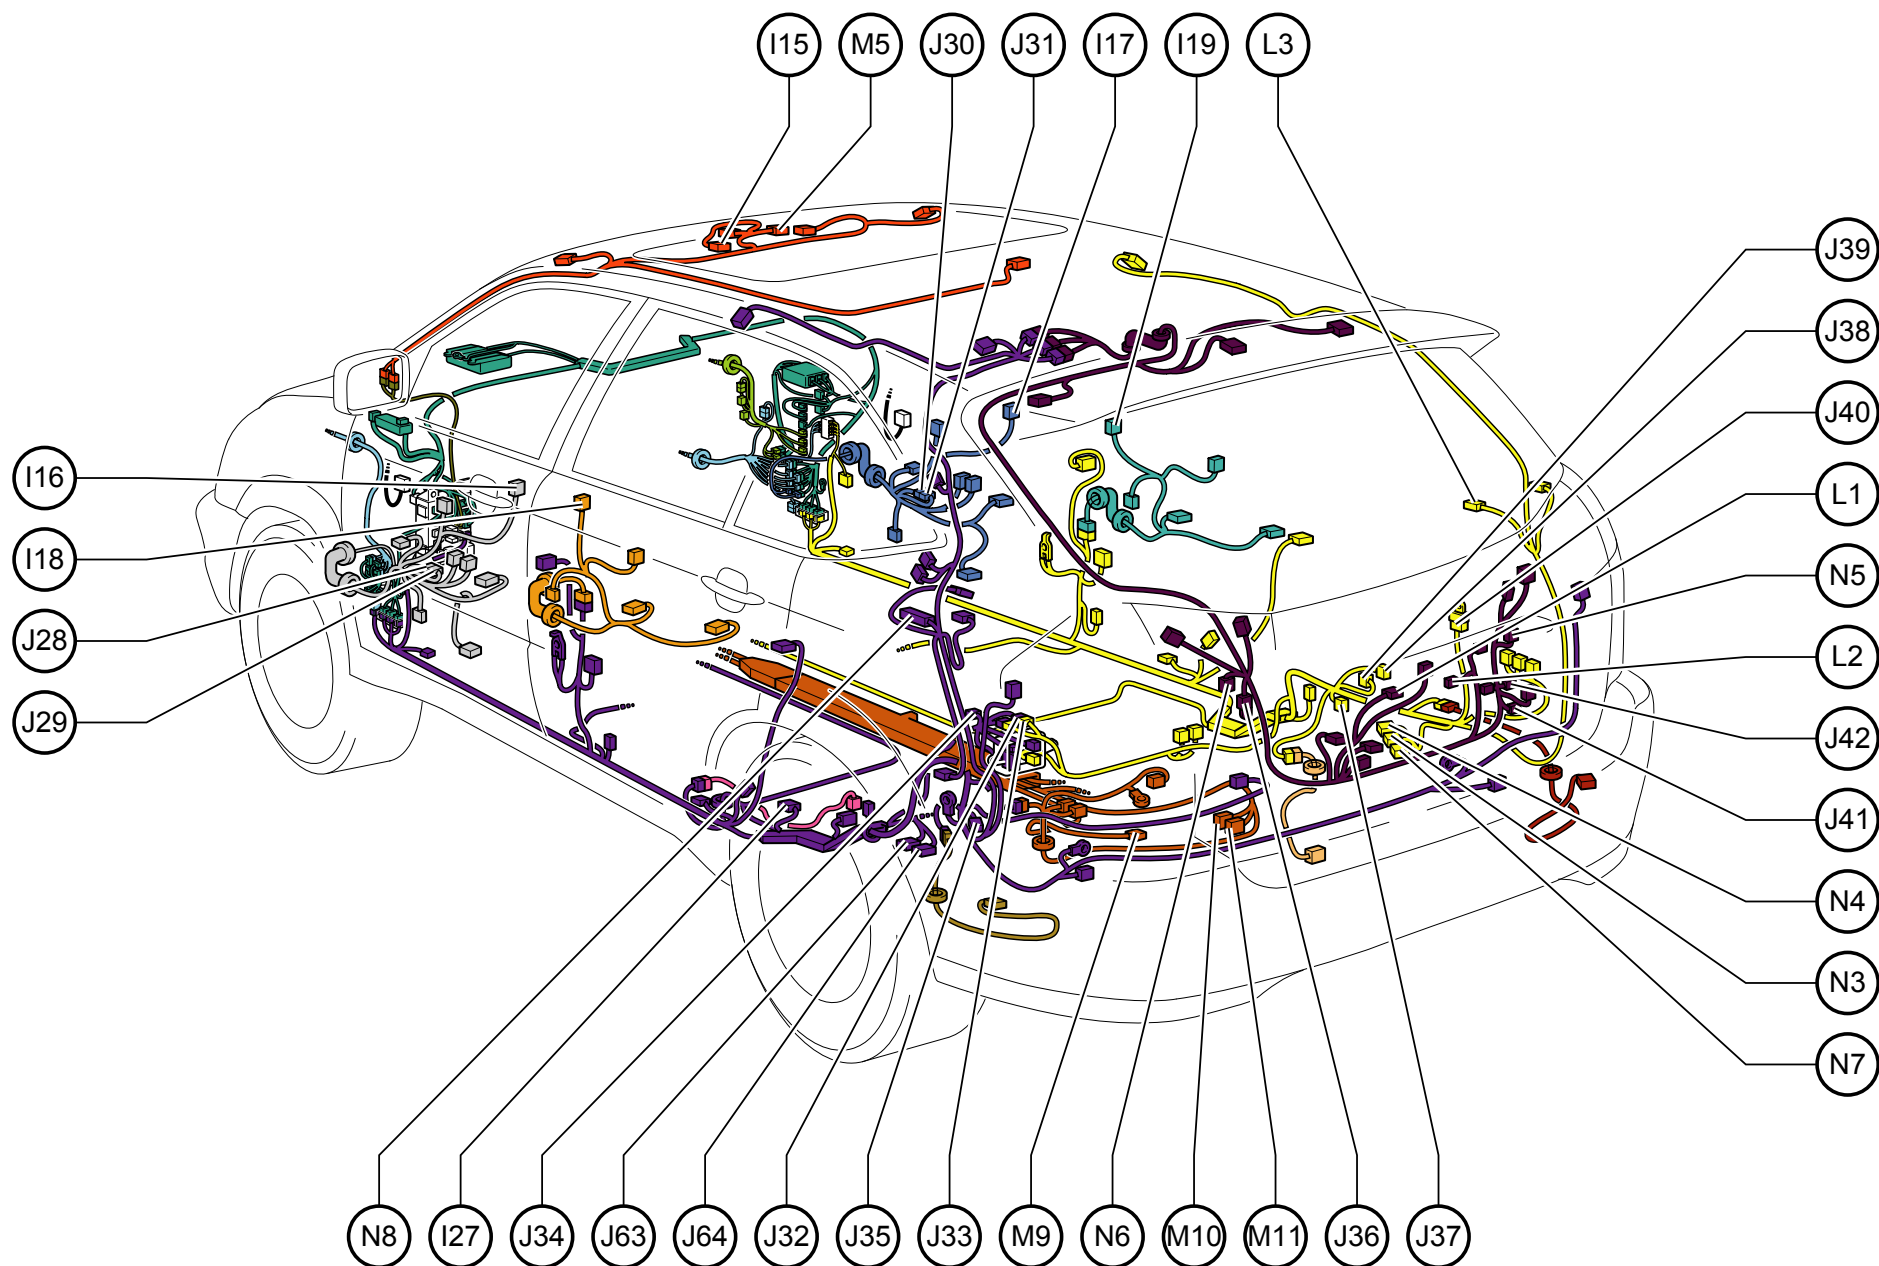

- I 15 Inner Mirror
- I 16 Inside Handle Illumination Front LH
- I 17 Inside Handle Illumination Front RH
- I 18 Inside Handle Illumination Rear LH
- I 19 Inside Handle Illumination Rear RH
- I 27 Inter Lock SW

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- J 28 Junction Connector
- J 29 Junction Connector
- J 30 Junction Connector
- J 31 Junction Connector
- J 32 Junction Connector
- J 33 Junction Connector
- J 34 Junction Connector
- J 35 Junction Connector
- J 36 Junction Connector
- J 37 Junction Connector
- J 38 Junction Connector
- J 39 Junction Connector
- J 40 Junction Connector
- J 41 Junction Connector
- J 42 Junction Connector
- J 63 Junction Connector
- J 64 Junction Connector

- L 1 License Plate Light LH
- L 2 License Plate Light RH
- L 3 Luggage Compartment Light


- M 5 Moon Roof Control ECU
- M 9 Motor Generator (Rear)
- M 10 Motor Generator (Rear)
- M 11 Motor Generator (Rear)

- N 3 Navigation ECU
- N 4 Navigation ECU
- N 5 Noise Filter and Rear Window Defogger
- N 6 Noise Filter and Rear Window Defogger
- N 7 Navigation ECU
- N 8 Noise Filter (Rear Window Defogger)

Position of Parts in Body <LHD>

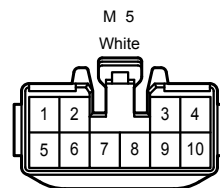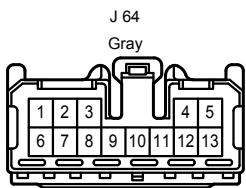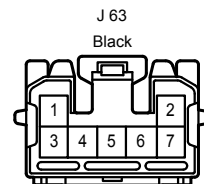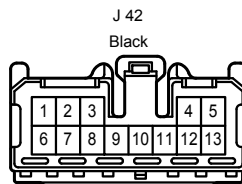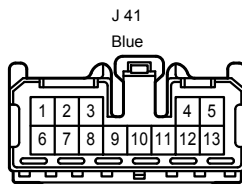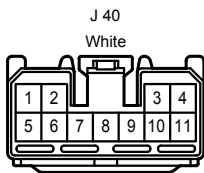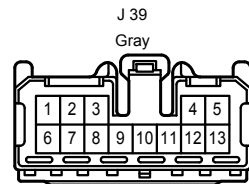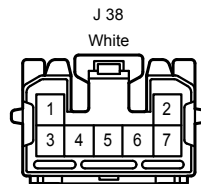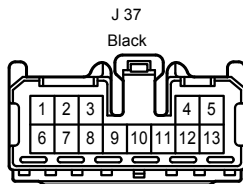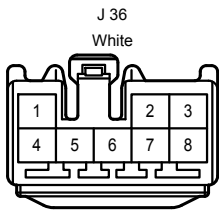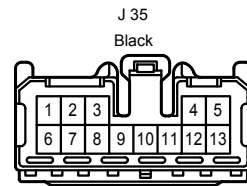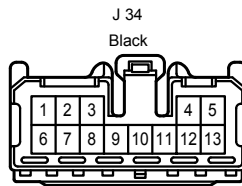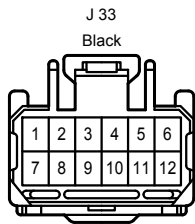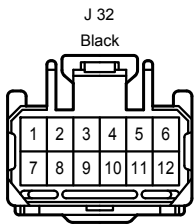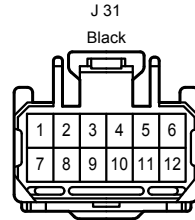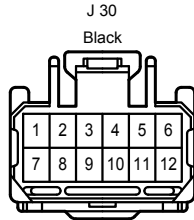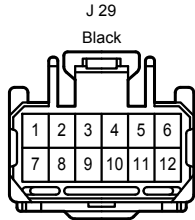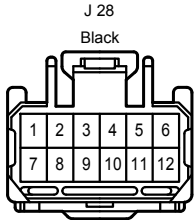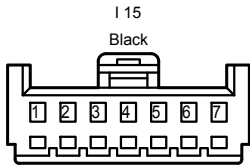

M 9
Orange

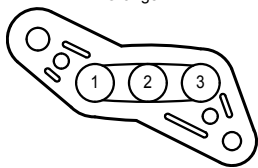 


M 10
Gray




M 11
Gray



 N 3
White

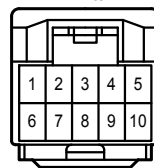

N 4
White

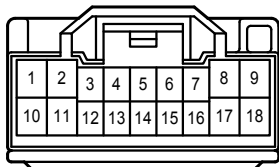 


N 5
White




N 6
White



 
N 7
White

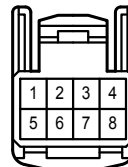

N 8
White

 

Position of Parts in Body <LHD>



























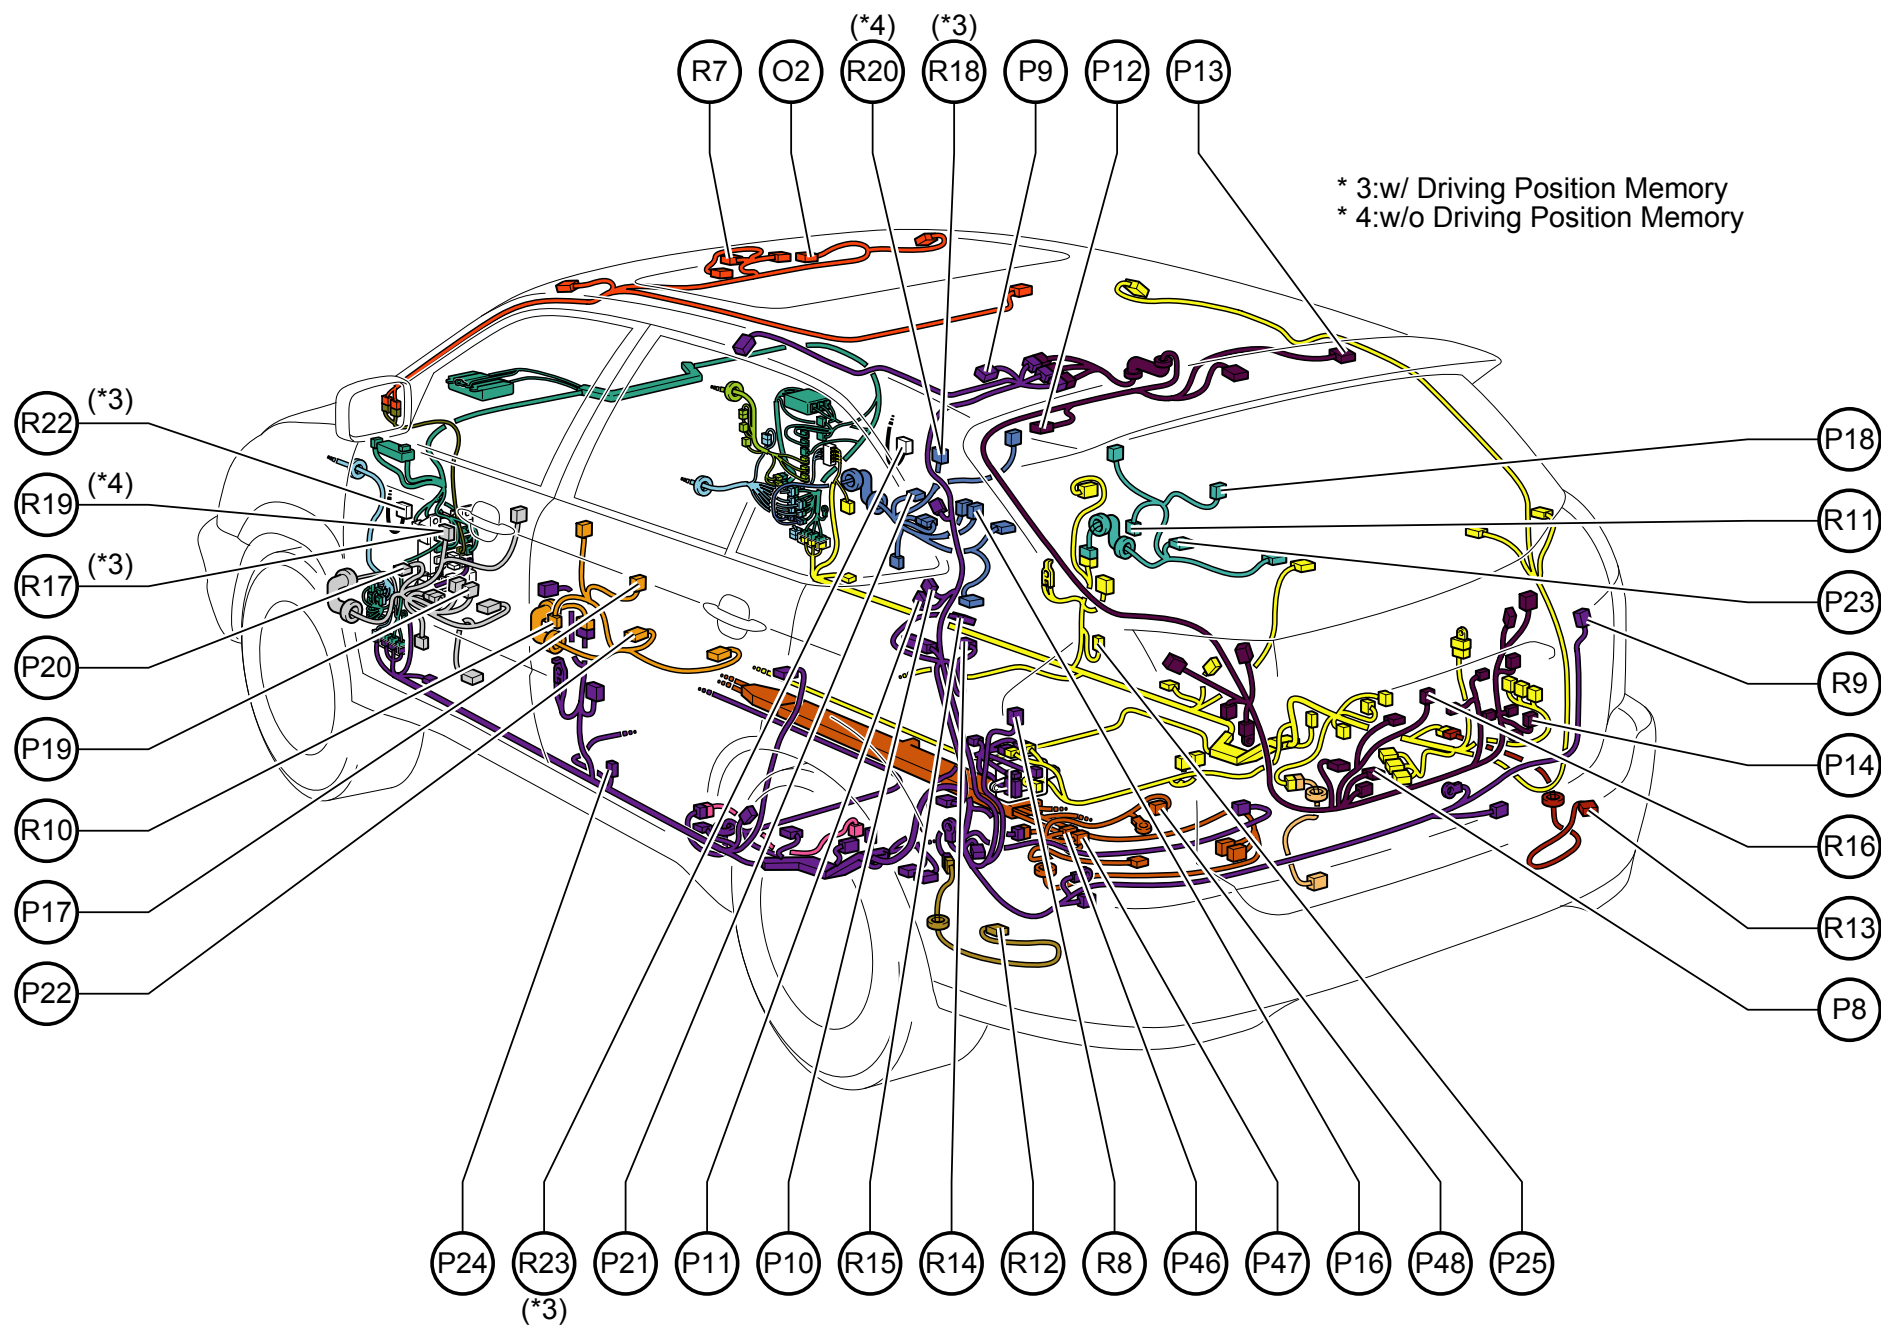 


O 2 Overhead J/B










- P 8 Power Back Door Closer SW
- P 9 Power Back Door Drive Unit
- P 10 Power Back Door ECU
- P 11 Power Back Door ECU
- P 12 Power Back Door Touch Sensor LH
- P 13 Power Back Door Touch Sensor RH
- P 14 Power Back Door Warning Buzzer
- P 16 Power Window Control SW Front RH
- P 17 Power Window Control SW Rear LH
- P 18 Power Window Control SW Rear RH
- P 19 Power Window Master SW
- P 20 Power Window Motor Front LH
- P 21 Power Window Motor Front RH
- P 22 Power Window Motor Rear LH
- P 23 Power Window Motor Rear RH
- P 24 Pretensioner LH
- P 25 Pretensioner RH
- P 46 Power Steering Converter
- P 47 Power Steering Converter
- P 48 Power Steering Converter

- R 7 Rain Sensor
- R 8 Rear Combination Light LH
- R 9 Rear Combination Light RH
- R 10 Rear Door Speaker LH
- R 11 Rear Door Speaker RH
- R 12 Rear Fog Light LH
- R 13 Rear Fog Light RH
- R 14 Rear Interior Light
- R 15 Rear Power Outlet
- R 16 Rear Wiper Motor and Relay
- R 17 Remote Control Mirror ECU LH
- R 18 Remote Control Mirror ECU RH
- R 19 Remote Control Mirror LH (w/o Driving Position Memory)
- R 20 Remote Control Mirror RH (w/o Driving Position Memory)
- R 22 Remote Control Mirror ECU LH , Remote Control Mirror LH (w/ Driving Position Memory)
- R 23 Remote Control Mirror ECU RH , Remote Control Mirror RH (w/ Driving Position Memory)

                           
Position of Parts in Body <LHD>

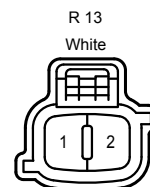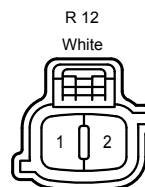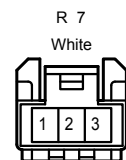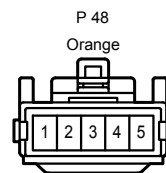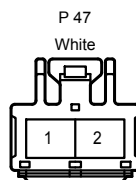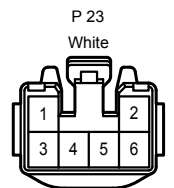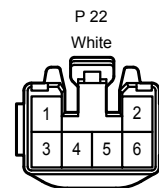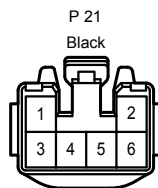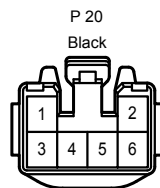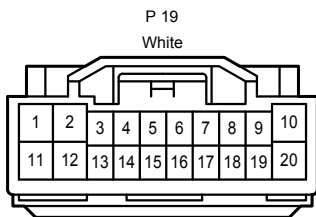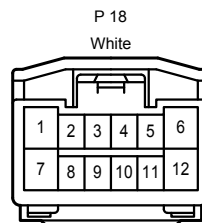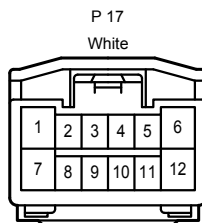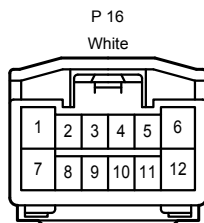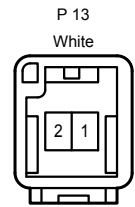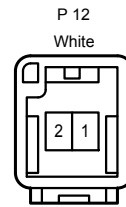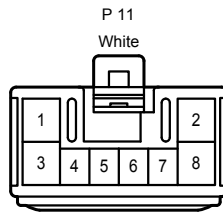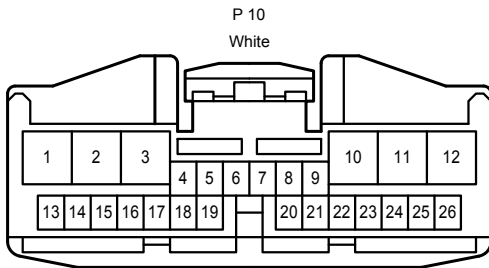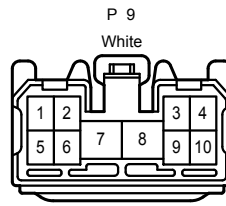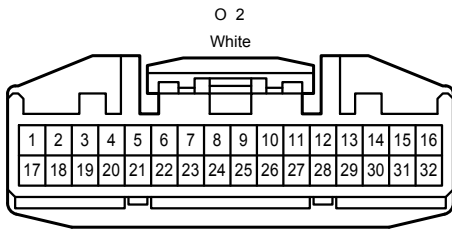

Position of Parts in Body <LHD>

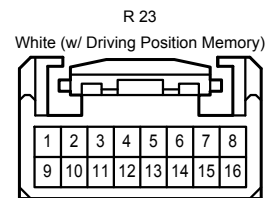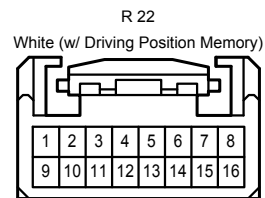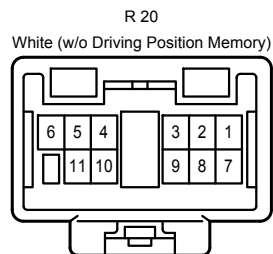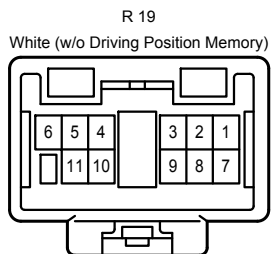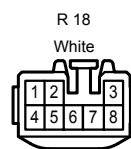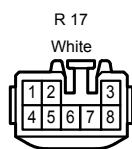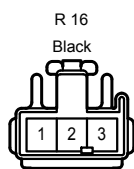         

Position of Parts in Body <LHD>

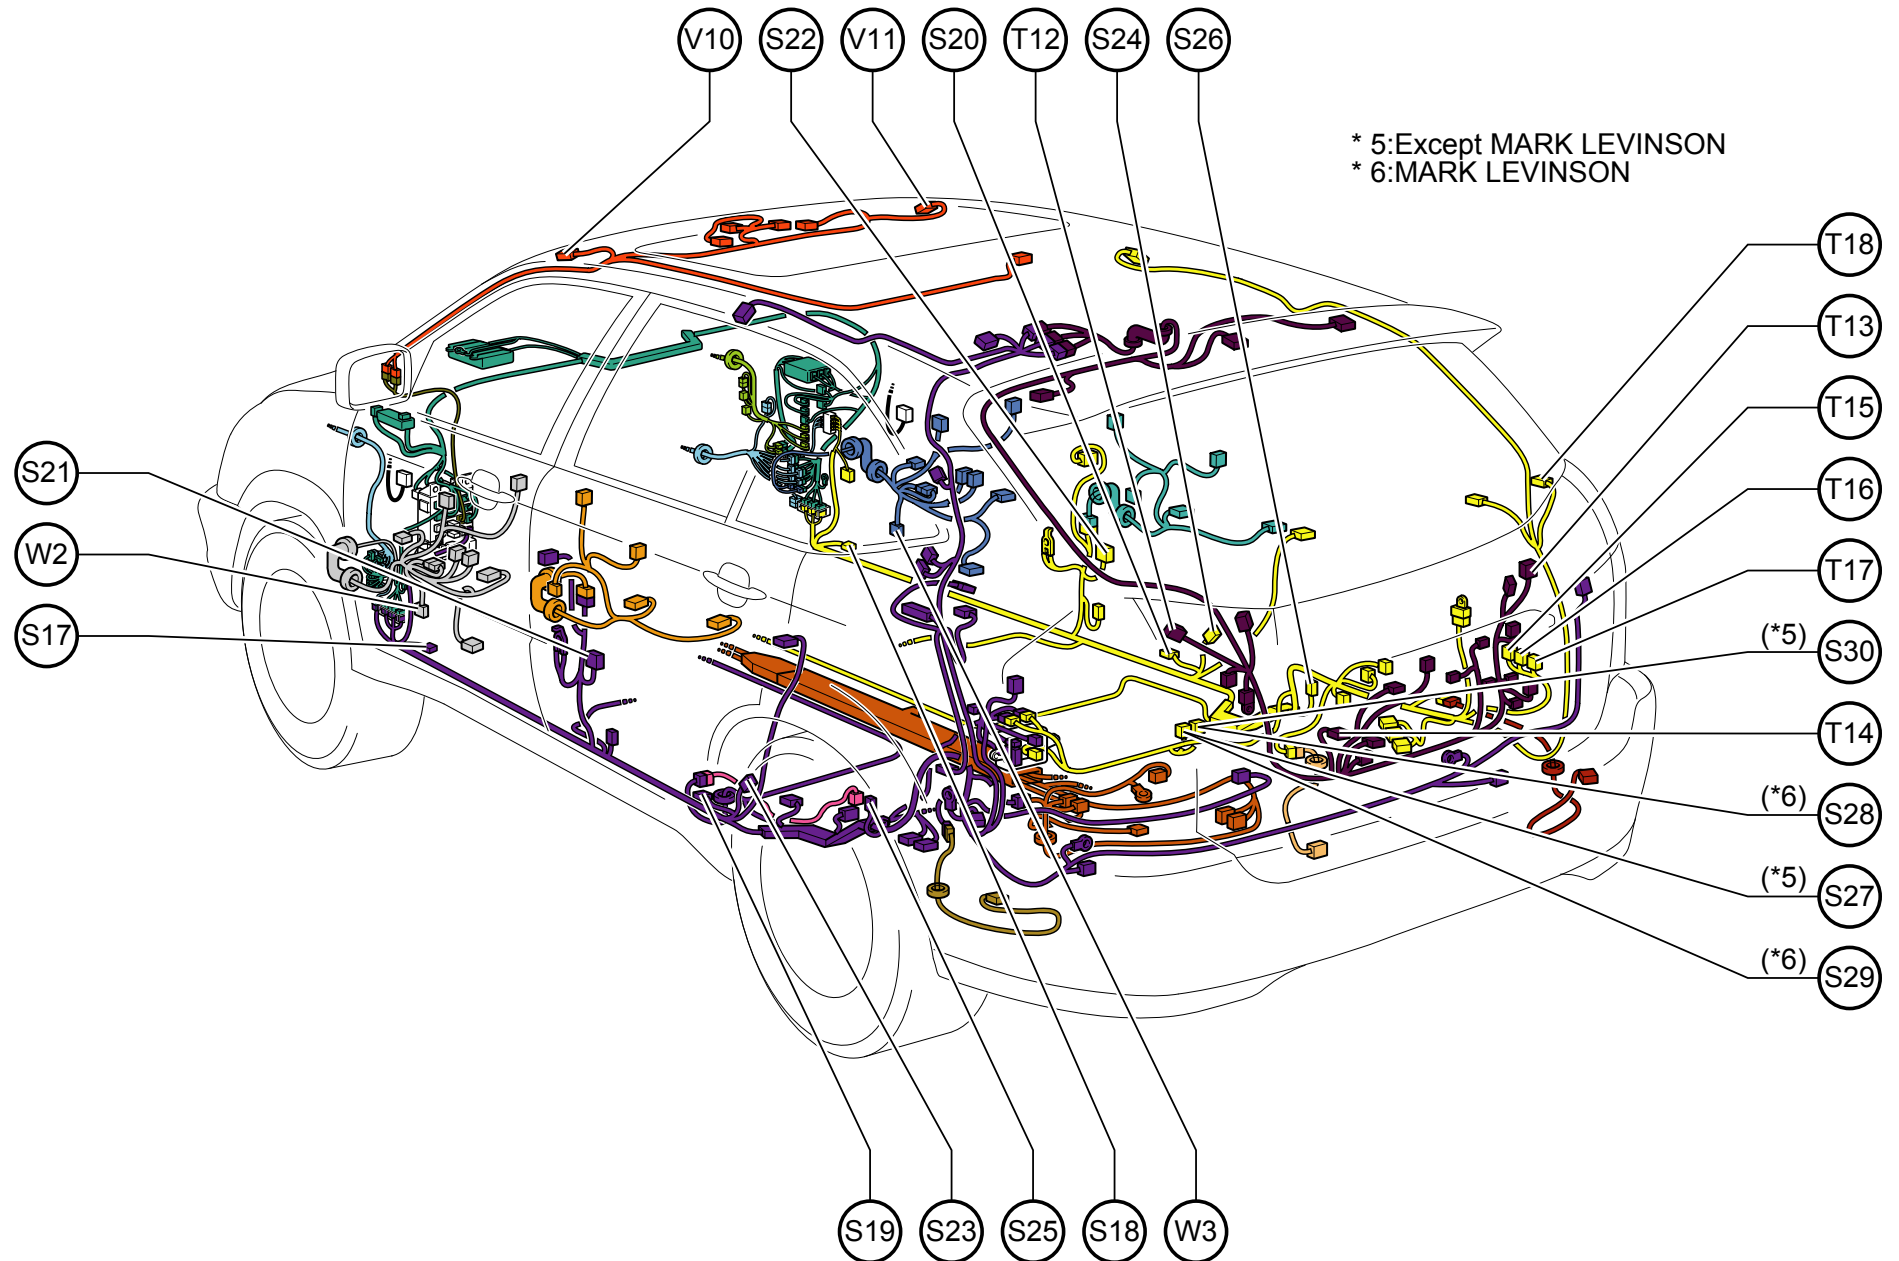 























S 17 Scuff Plate Light Front LH
S 18 Scuff Plate Light Front RH
S 19 Scuff Plate Light Rear LH
S 20 Scuff Plate Light Rear RH
S 21 Side Airbag Sensor Front LH
S 22 Side Airbag Sensor Front RH
S 23 Side Airbag Sensor Rear LH
S 24 Side Airbag Sensor Rear RH
S 25 Speed Sensor Rear LH
S 26 Speed Sensor Rear RH
S 27 Stereo Component Amplifier
S 28 Stereo Component Amplifier
S 29 Stereo Component Amplifier
S 30 Stereo Component Amplifier


T 12 Taillight LH
T 13 Taillight RH
T 14 Television Camera
T 15 Television Camera ECU
T 16 Television Camera ECU
T 17 Television Camera ECU
T 18 Theft Deterrent Siren


V 10 Vanity Light LH
V 11 Vanity Light RH


W 2 Woofer (Front LH)
W 3 Woofer (Front RH)

                          
Position of Parts in Body <LHD>

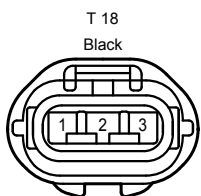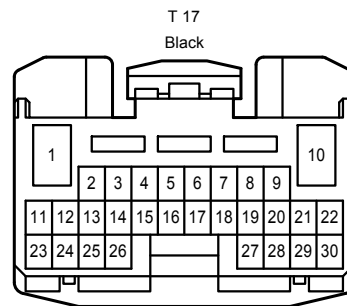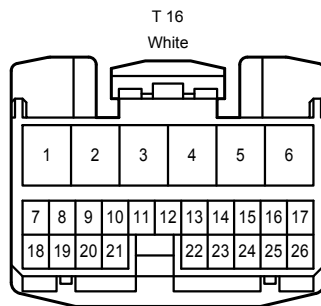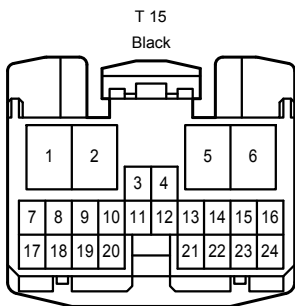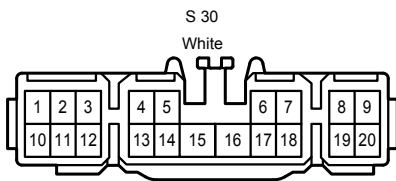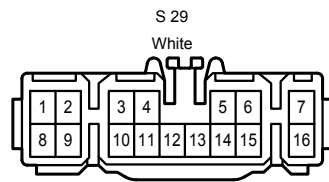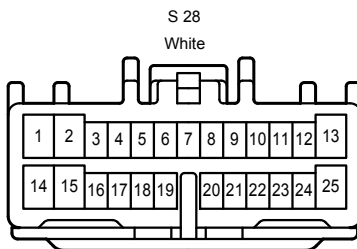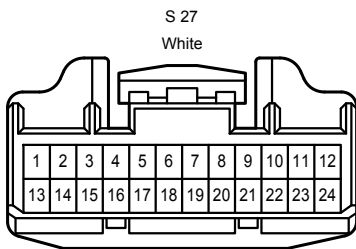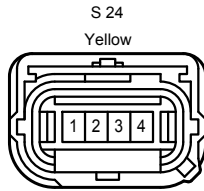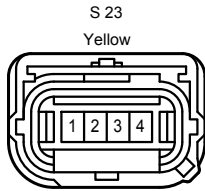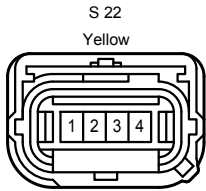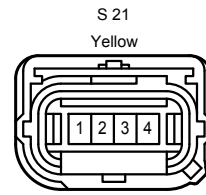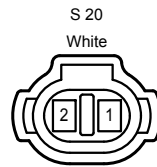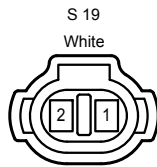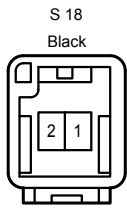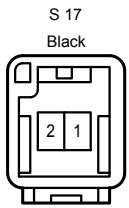 


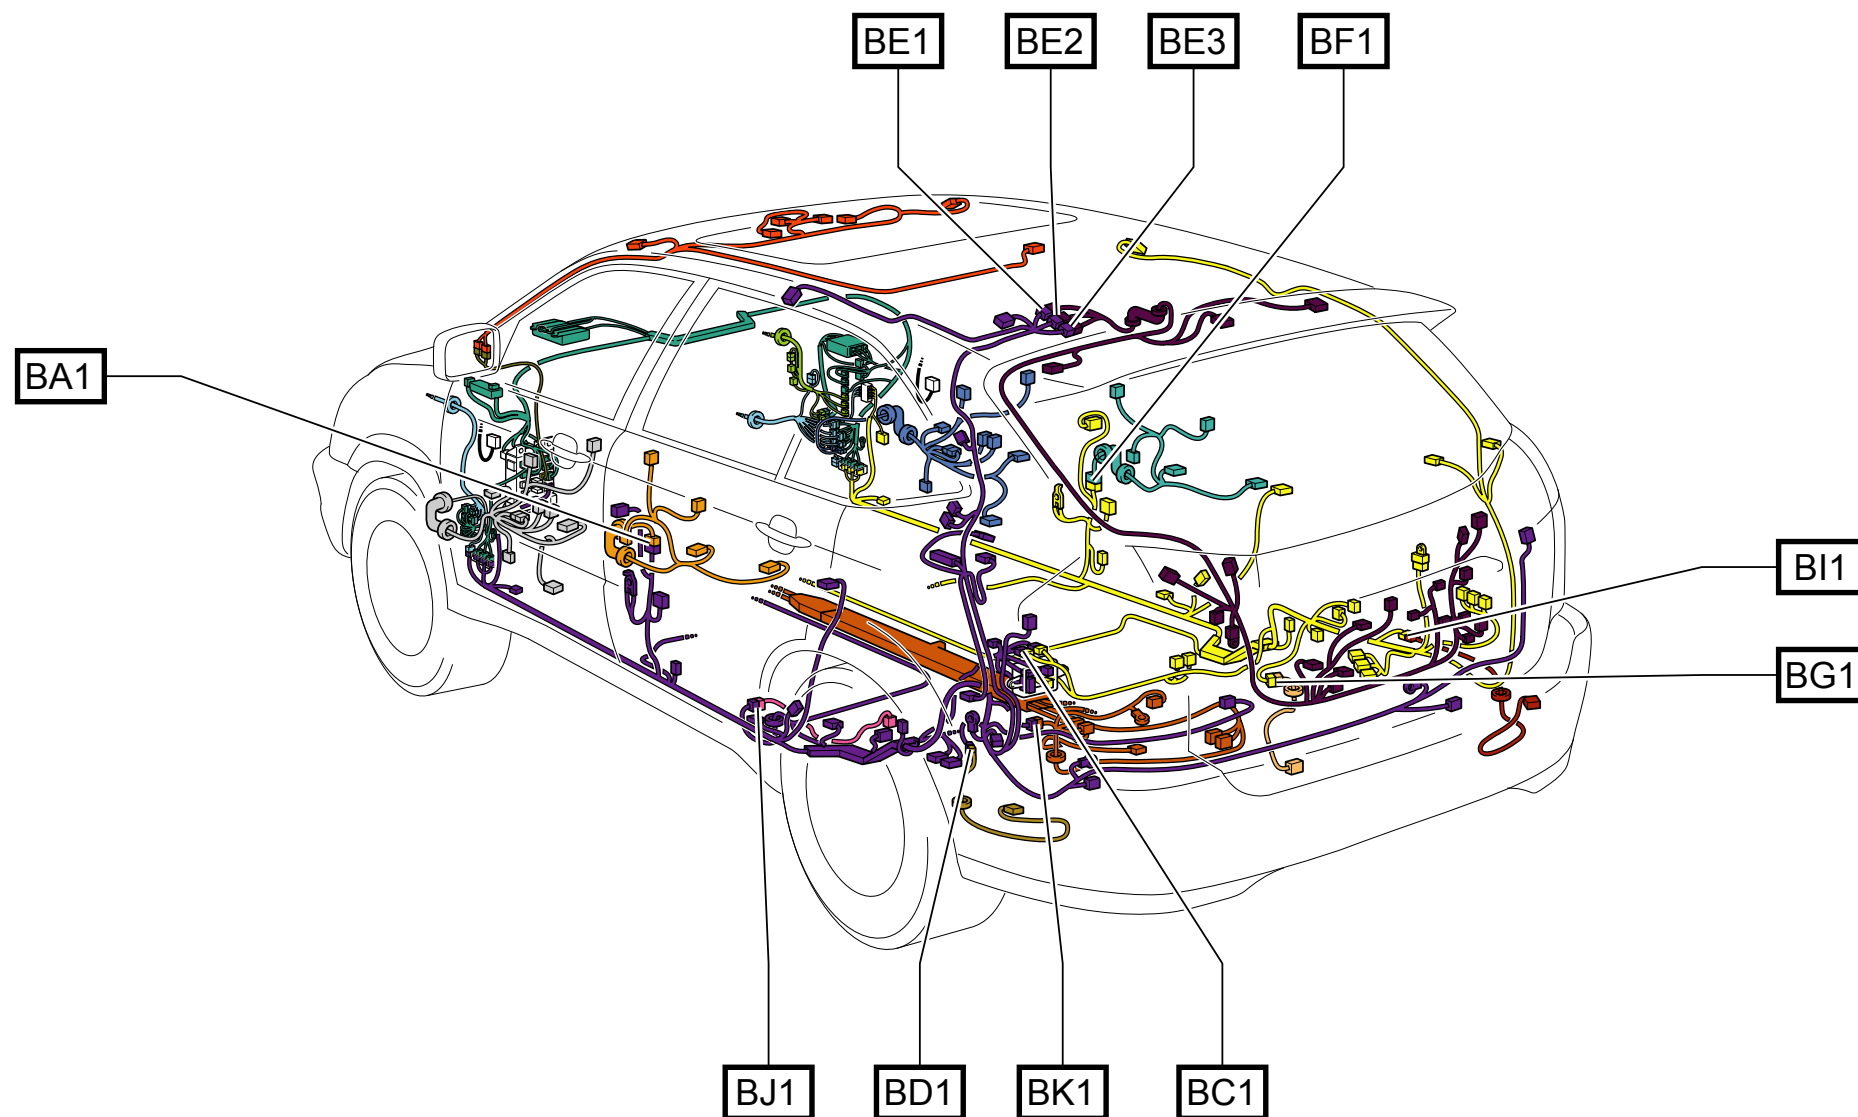

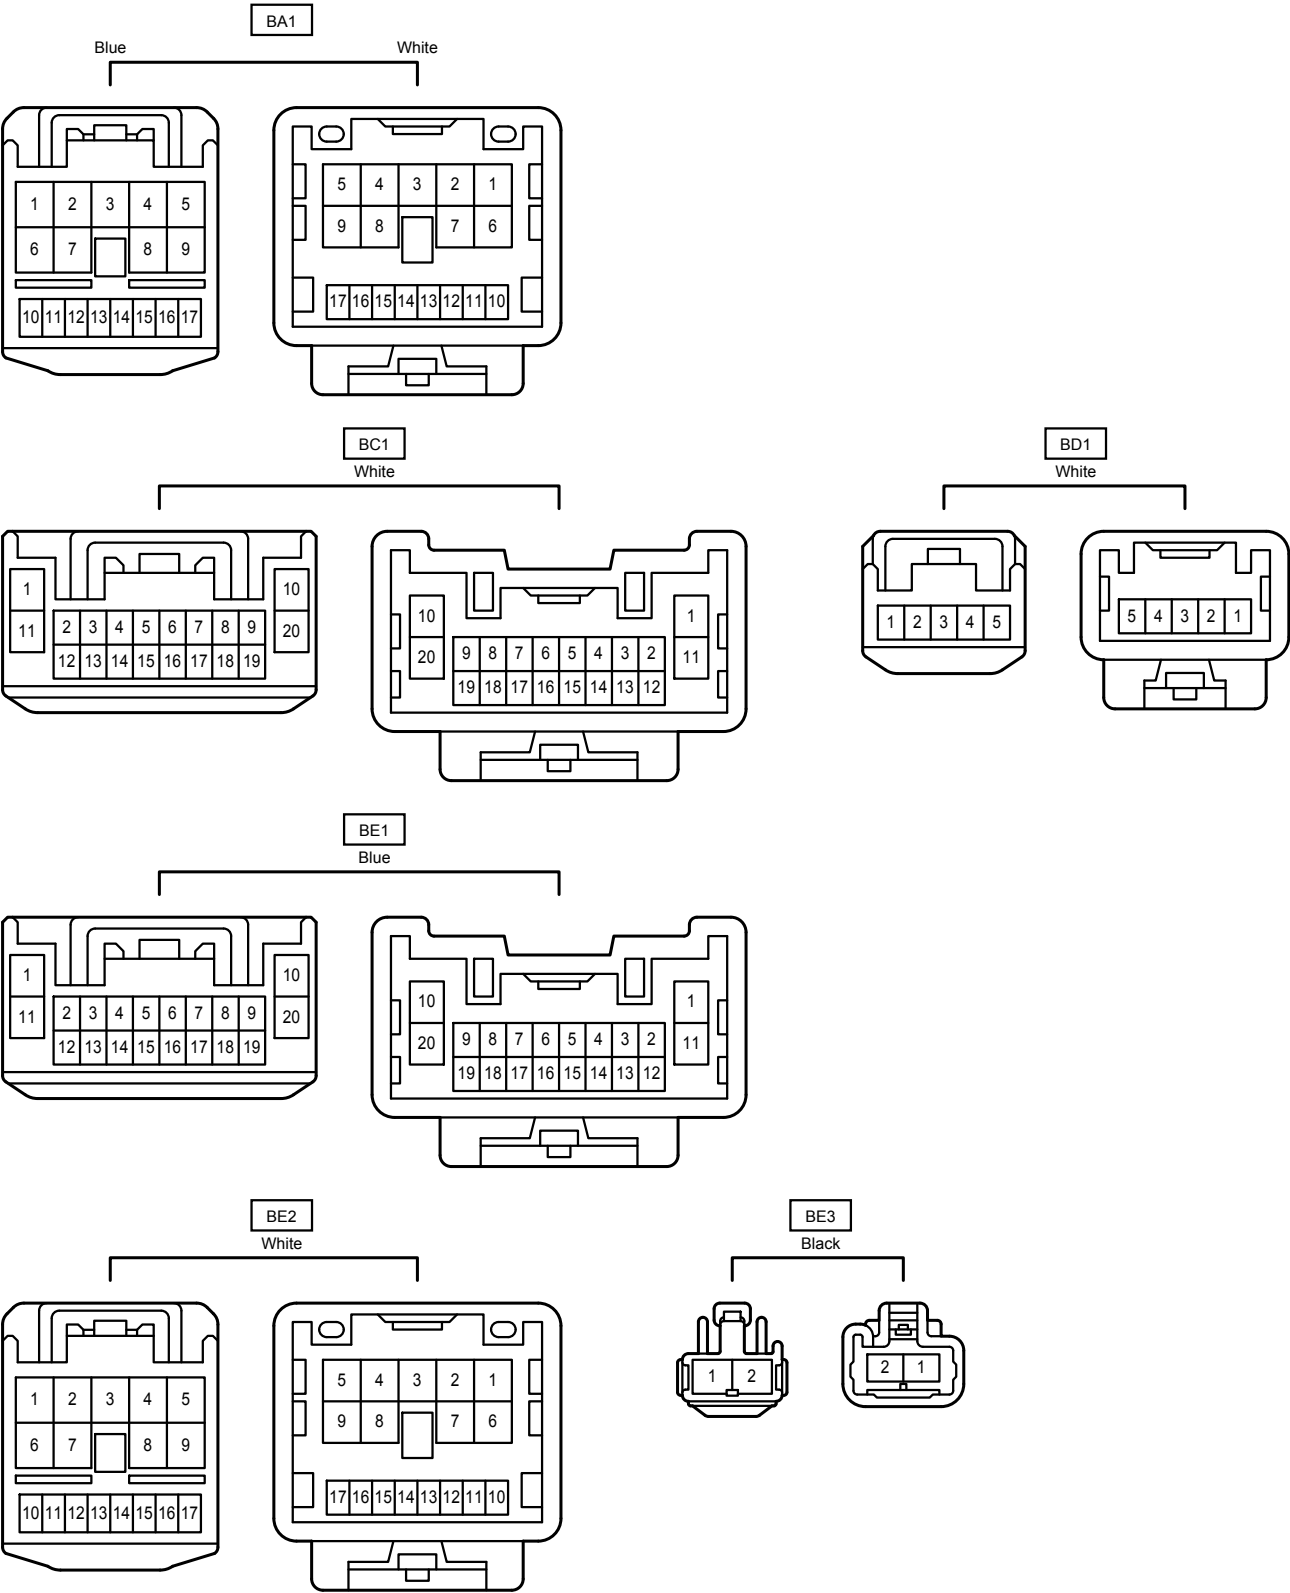

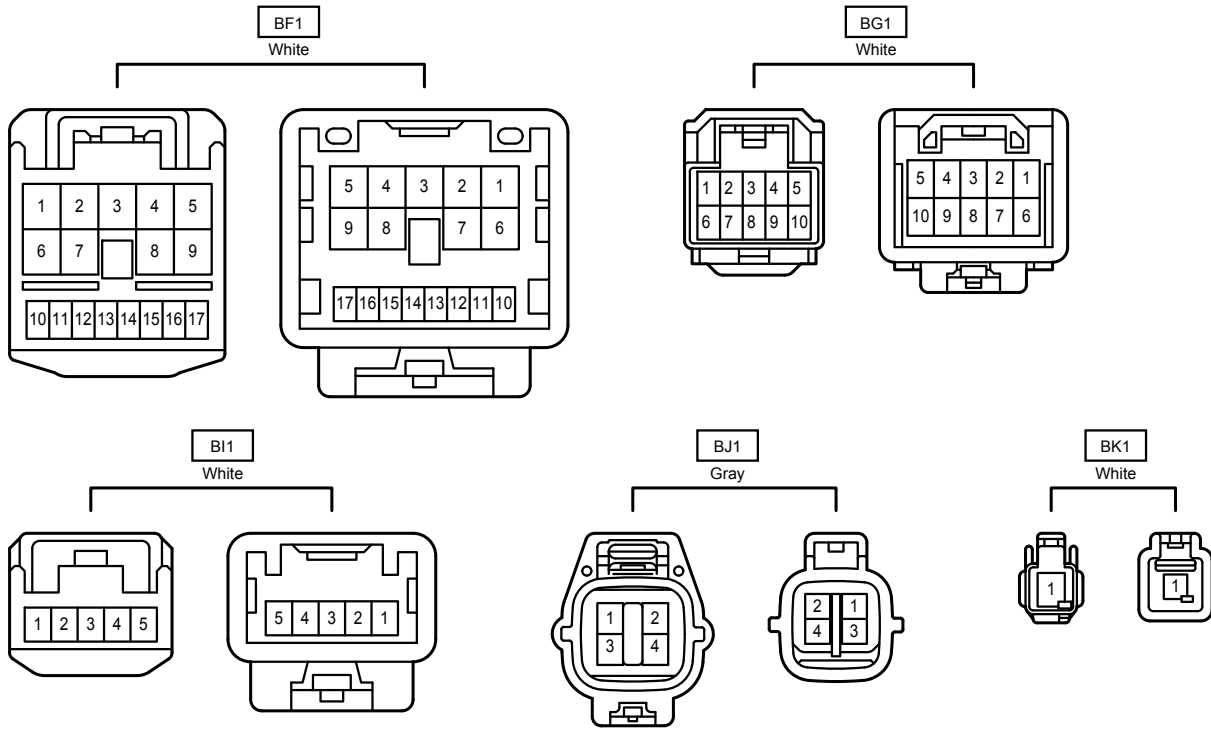

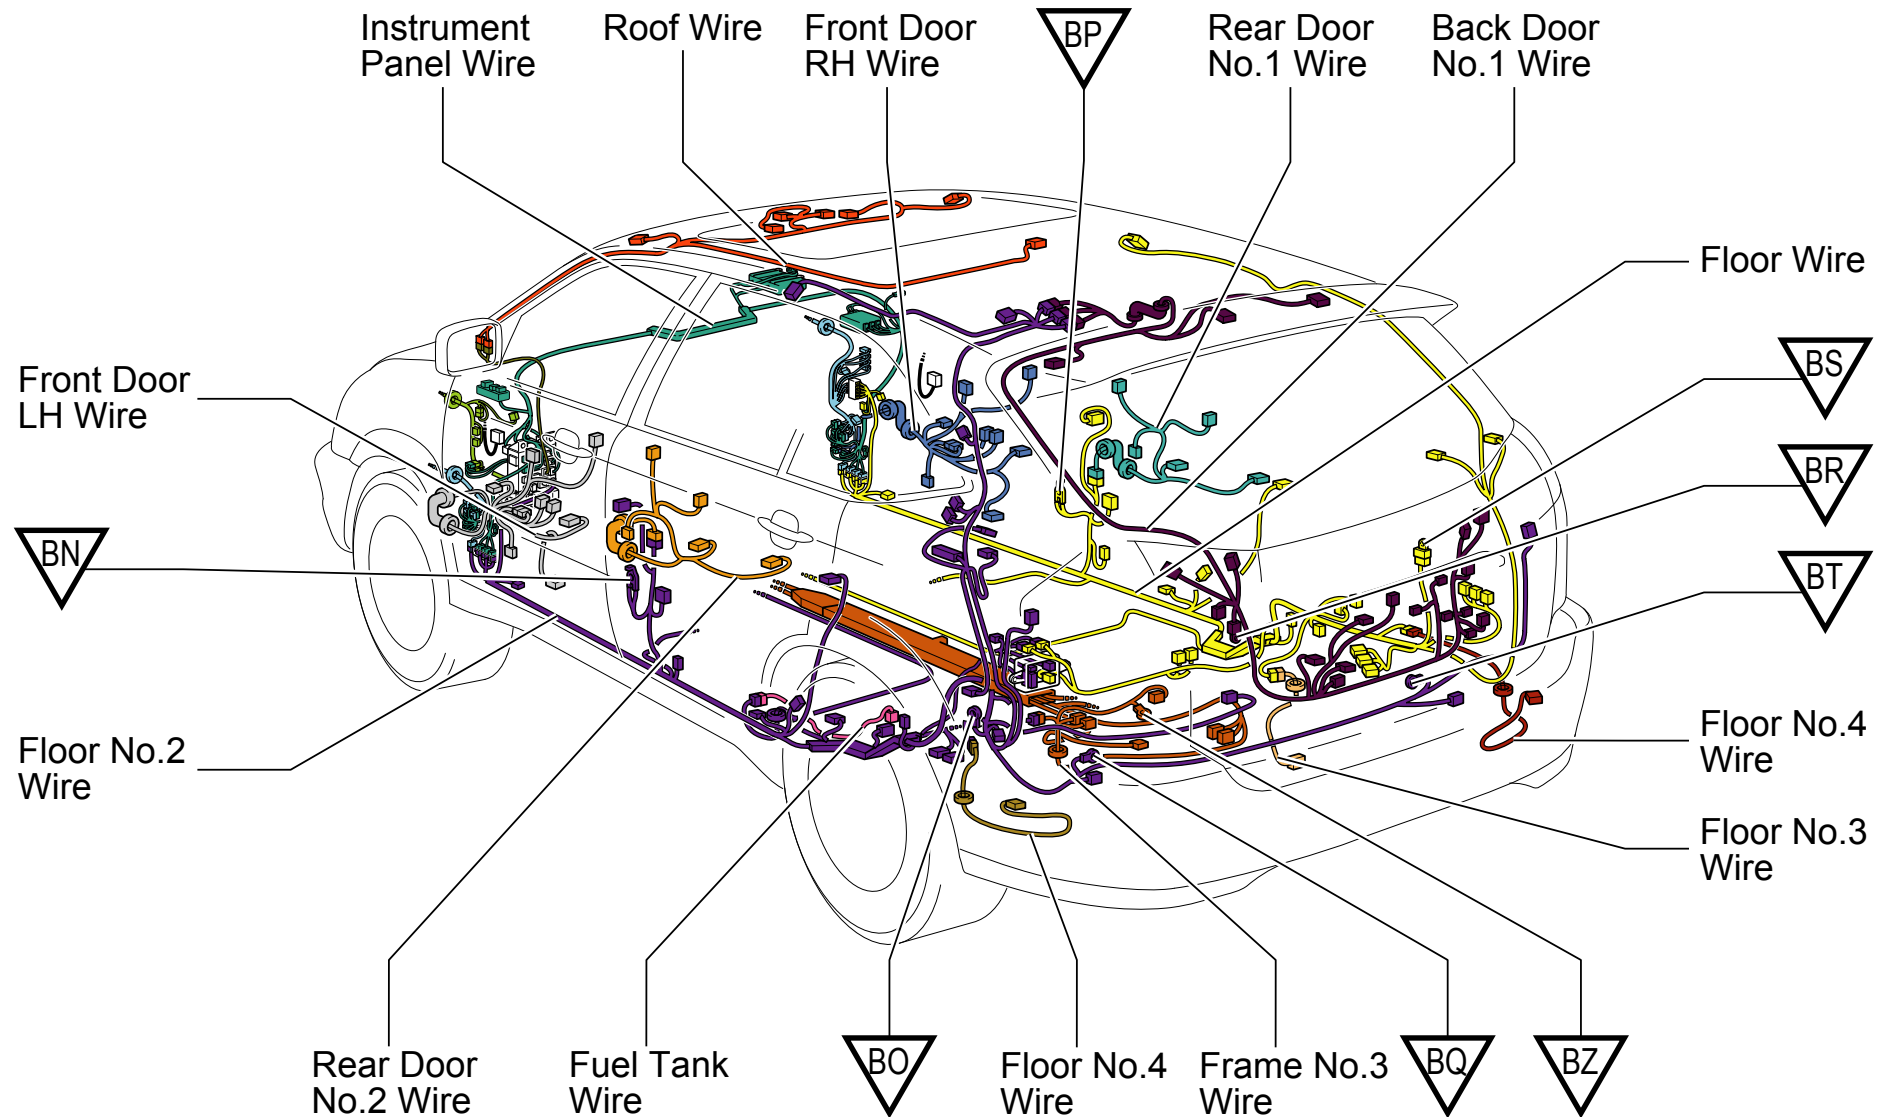

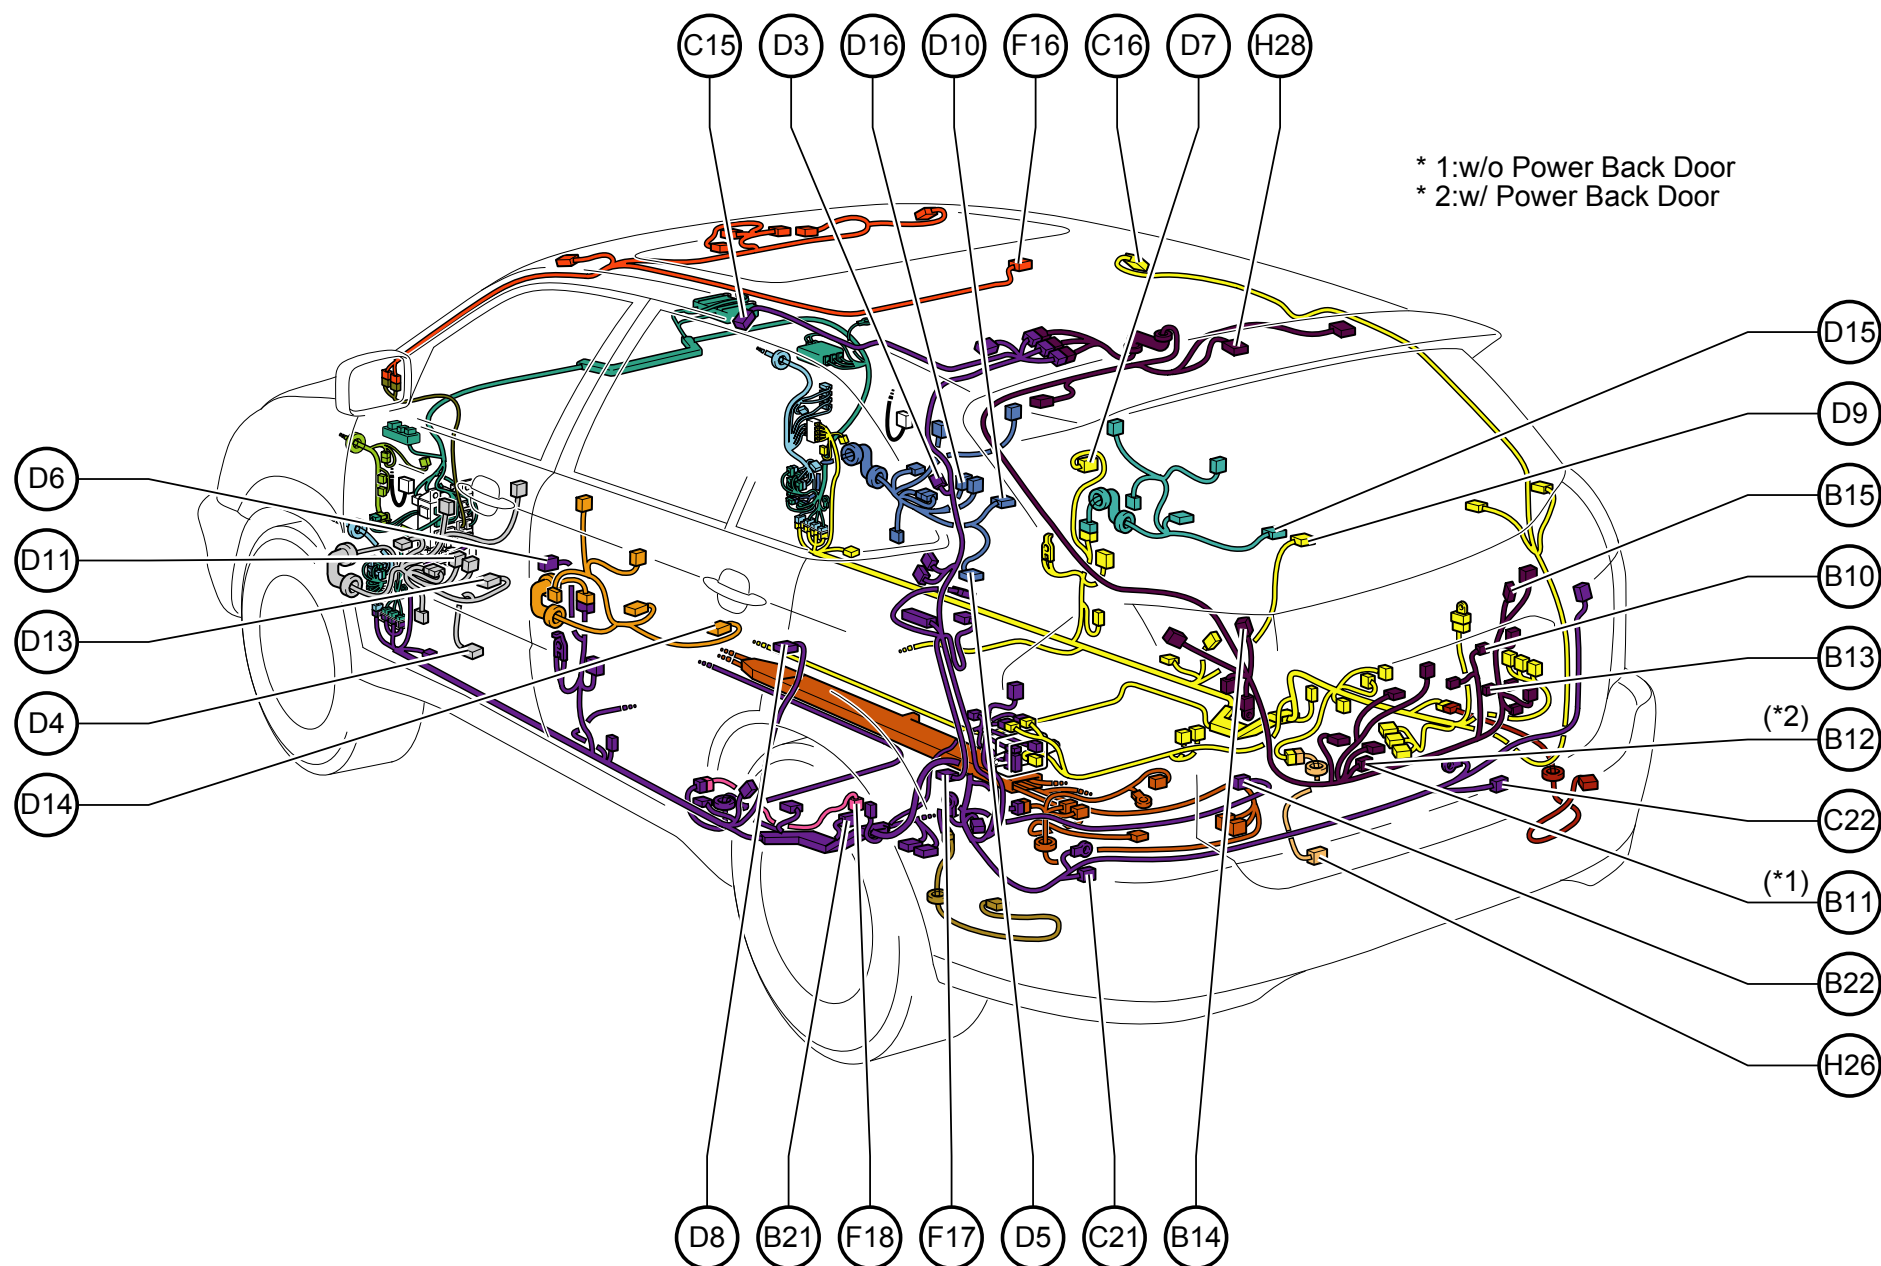

- B 10 Back Door Courtesy Light
- B 11 Back Door Courtesy SW , Back Door Opener Motor
- B 12 Back Door Lock Assembly
- B 13 Back Door Opener SW
- B 14 Back-Up Light LH
- B 15 Back-Up Light RH
- B 21 Battery Blower Motor (LH)
- B 22 Brake Control Power Supply Assembly

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- C 15 Curtain Shield Airbag Squib LH
- C 16 Curtain Shield Airbag Squib RH
- C 21 Circuit Breaker Sensor (Rear LH)
- C 22 Circuit Breaker Sensor (Rear RH)

 
- D 3 Door Control Receiver
- D 4 Door Courtesy Light Front LH
- D 5 Door Courtesy Light Front RH
- D 6 Door Courtesy SW Front LH
- D 7 Door Courtesy SW Front RH
- D 8 Door Courtesy SW Rear LH
- D 9 Door Courtesy SW Rear RH
- D 10 Door Key Lock and Unlock SW (Driver's Side) , Door Lock Motor (Driver's Side) , Door Unlock Detection SW (Driver's Side) , Double Lock Motor (Driver's Side) , Double Lock Position SW (Driver's Side)
- D 11 Door Lock Control SW Front LH
- D 13 Door Lock Motor (Front Passenger's Side) , Door Unlock Detection SW (Front Passenger's Side), Double Lock Motor (Front Passenger's Side) , Double Lock Position SW (Front Passenger's Side)
- D 14 Door Lock Motor Rear LH , Door Unlock Detection SW Rear LH, Double Lock Motor Rear LH , Double Lock Position SW Rear LH
- D 15 Door Lock Motor Rear RH , Door Unlock Detection SW Rear RH, Double Lock Motor Rear RH , Double Lock Position SW Rear RH
- D 16 Driving Position Memory SW

- F 16 Front Interior Light
- F 17 Fuel Lid Opener Motor
- F 18 Fuel Pump , Fuel Sender (Main)

- H 26 Height Control Sensor Rear RH
- H 28 High Mounted Stop Light

Position of Parts in Body <RHD>

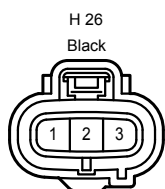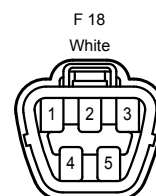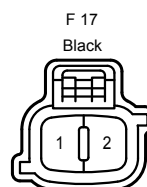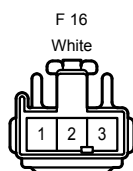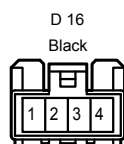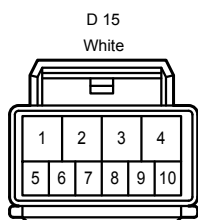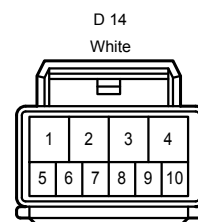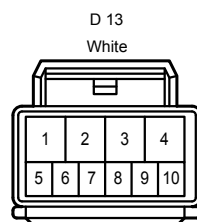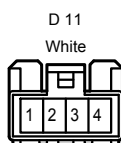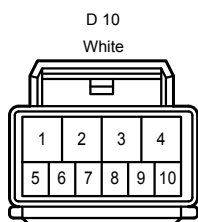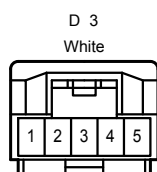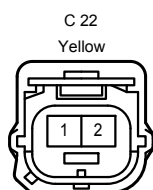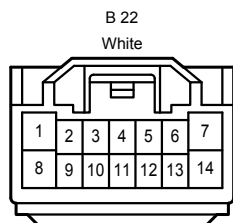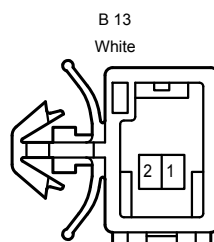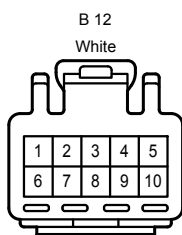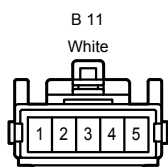

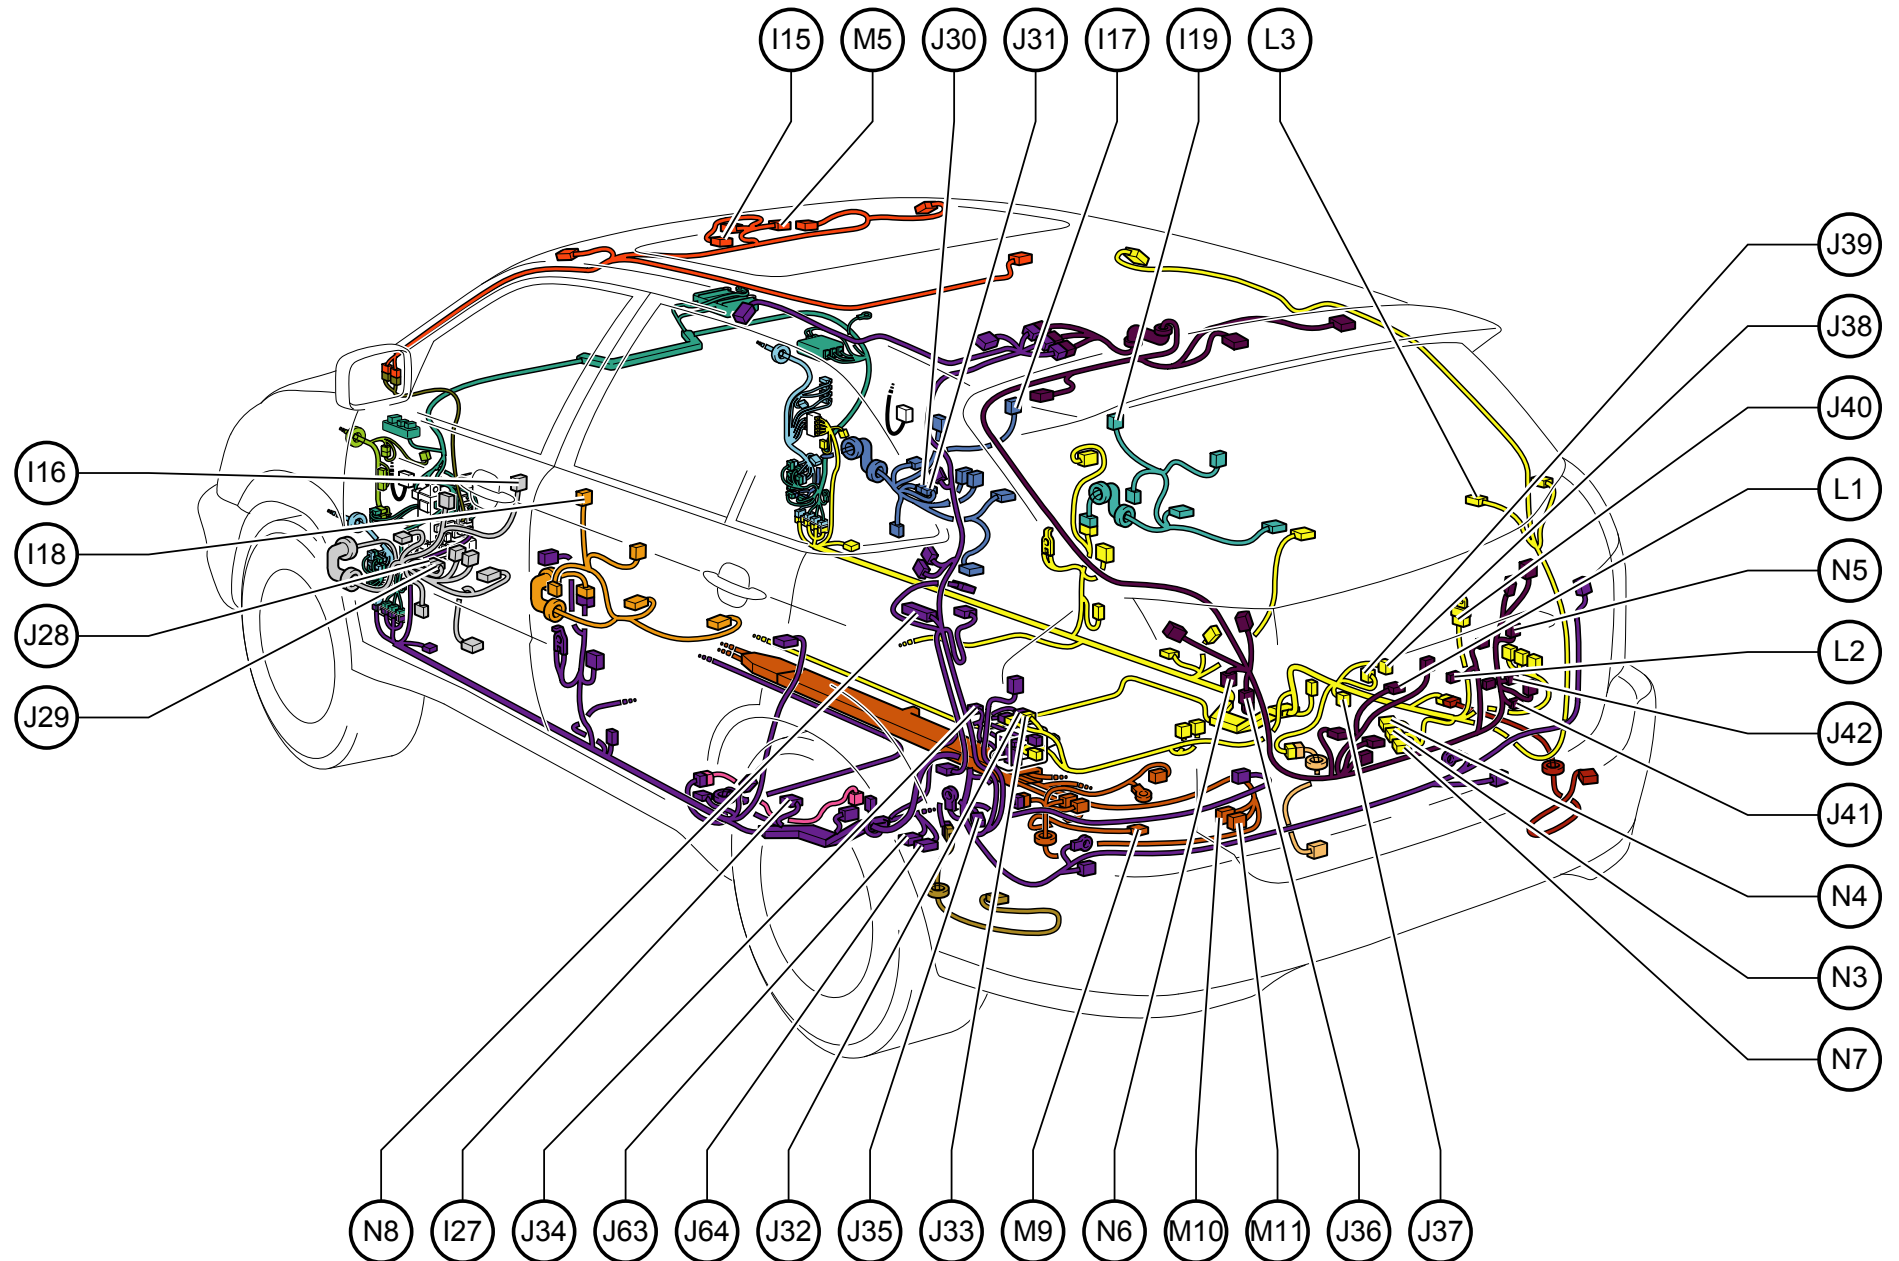

- I 15 Inner Mirror
- I 16 Inside Handle Illumination Front LH
- I 17 Inside Handle Illumination Front RH
- I 18 Inside Handle Illumination Rear LH
- I 19 Inside Handle Illumination Rear RH
- I 27 Inter Lock SW

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- J 28 Junction Connector
- J 29 Junction Connector
- J 30 Junction Connector
- J 31 Junction Connector
- J 32 Junction Connector
- J 33 Junction Connector
- J 34 Junction Connector
- J 35 Junction Connector
- J 36 Junction Connector
- J 37 Junction Connector
- J 38 Junction Connector
- J 39 Junction Connector
- J 40 Junction Connector
- J 41 Junction Connector
- J 42 Junction Connector
- J 63 Junction Connector
- J 64 Junction Connector

- L 1 License Plate Light LH
- L 2 License Plate Light RH
- L 3 Luggage Compartment Light


- M 5 Moon Roof Control ECU
- M 9 Motor Generator (Rear)
- M 10 Motor Generator (Rear)
- M 11 Motor Generator (Rear)

- N 3 Navigation ECU
- N 4 Navigation ECU
- N 5 Noise Filter and Rear Window Defogger
- N 6 Noise Filter and Rear Window Defogger
- N 7 Navigation ECU
- N 8 Noise Filter (Rear Window Defogger)

Position of Parts in Body <RHD>

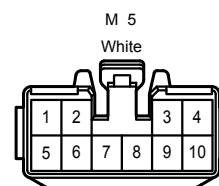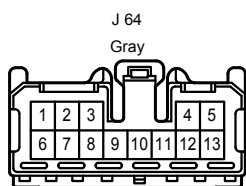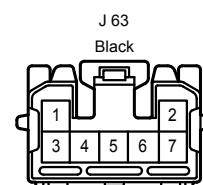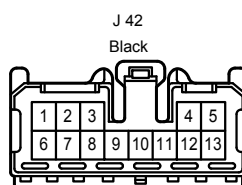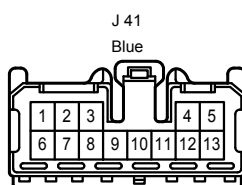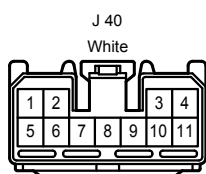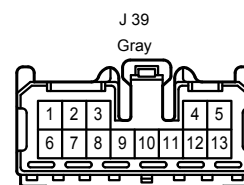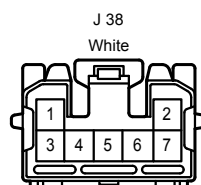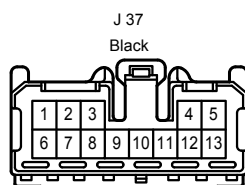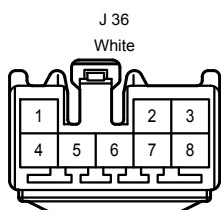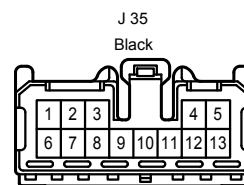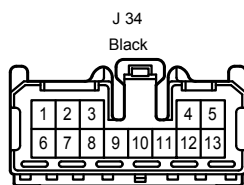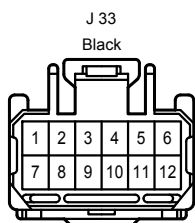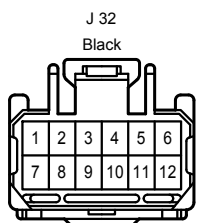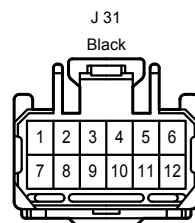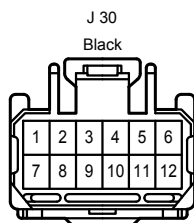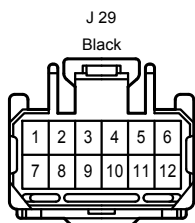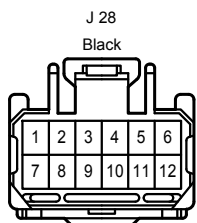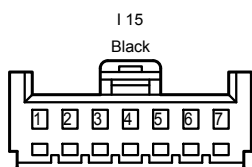

M 9
Orange

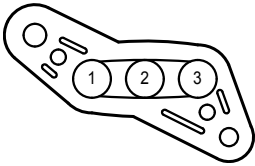 


M 10
Gray




M 11
Gray



 N 3
White

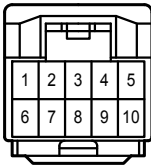

N 4
White

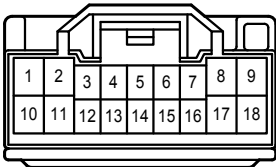 


N 5
White




N 6
White



 
N 7
White

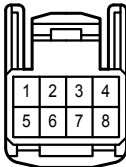

N 8
White

 

Position of Parts in Body <RHD>

























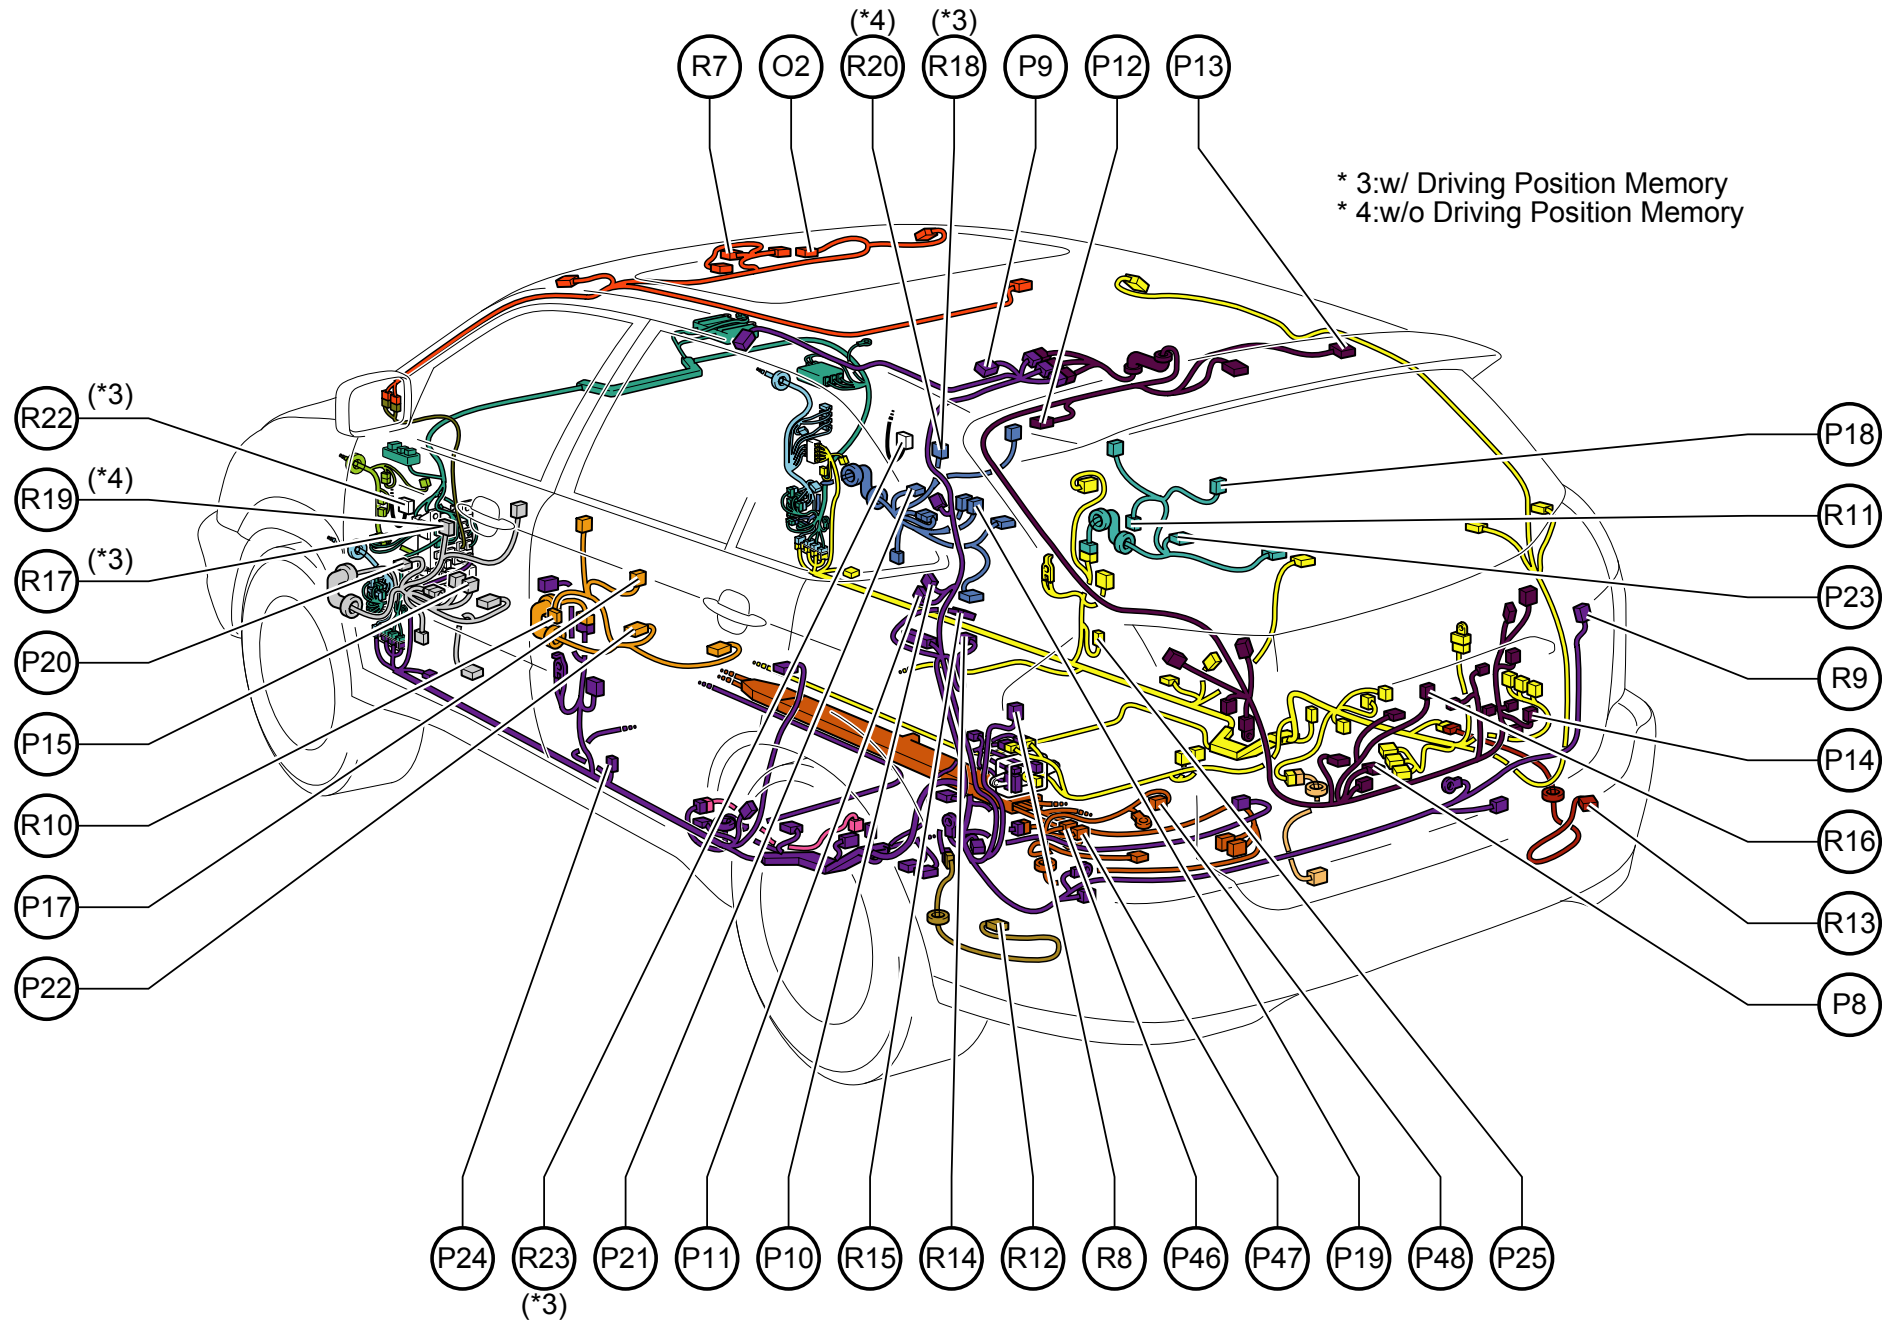 


O 2 Overhead J/B









- P 8 Power Back Door Closer SW
- P 9 Power Back Door Drive Unit
- P 10 Power Back Door ECU
- P 11 Power Back Door ECU
- P 12 Power Back Door Touch Sensor LH
- P 13 Power Back Door Touch Sensor RH
- P 14 Power Back Door Warning Buzzer
- P 15 Power Window Control SW Front LH
- P 17 Power Window Control SW Rear LH
- P 18 Power Window Control SW Rear RH
- P 19 Power Window Master SW
- P 20 Power Window Motor Front LH
- P 21 Power Window Motor Front RH
- P 22 Power Window Motor Rear LH
- P 23 Power Window Motor Rear RH
- P 24 Pretensioner LH
- P 25 Pretensioner RH
- P 46 Power Steering Converter
- P 47 Power Steering Converter
- P 48 Power Steering Converter


- R 7 Rain Sensor
- R 8 Rear Combination Light LH
- R 9 Rear Combination Light RH
- R 10 Rear Door Speaker LH
- R 11 Rear Door Speaker RH
- R 12 Rear Fog Light LH
- R 13 Rear Fog Light RH
- R 14 Rear Interior Light
- R 15 Rear Power Outlet
- R 16 Rear Wiper Motor and Relay
- R 17 Remote Control Mirror ECU LH
- R 18 Remote Control Mirror ECU RH
- R 19 Remote Control Mirror LH (w/o Driving Position Memory)
- R 20 Remote Control Mirror RH (w/o Driving Position Memory)
- R 22 Remote Control Mirror ECU LH , Remote Control Mirror LH (w/ Driving Position Memory)
- R 23 Remote Control Mirror ECU RH , Remote Control Mirror RH (w/ Driving Position Memory)

                         Position of Parts in Body <RHD>

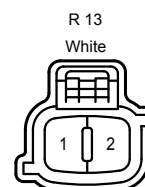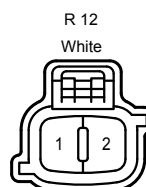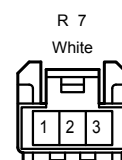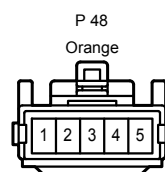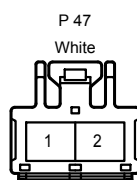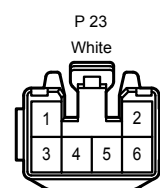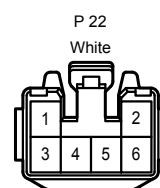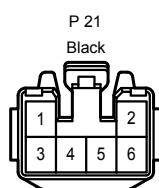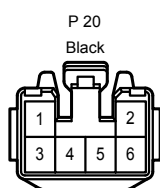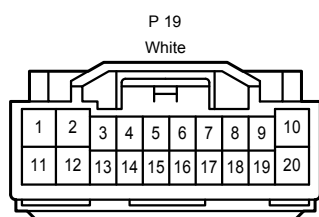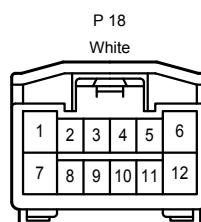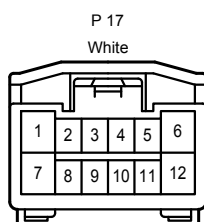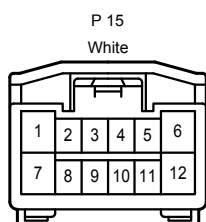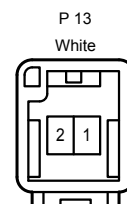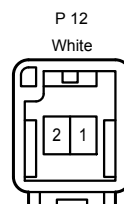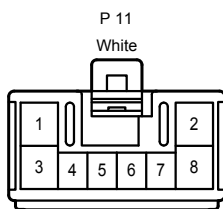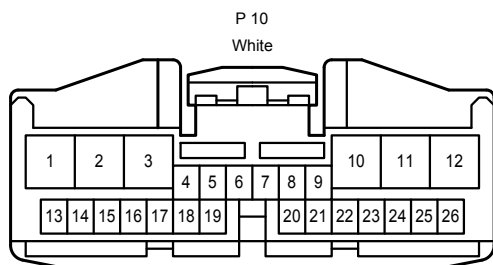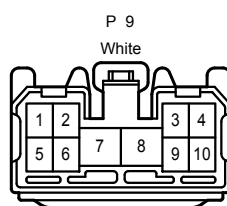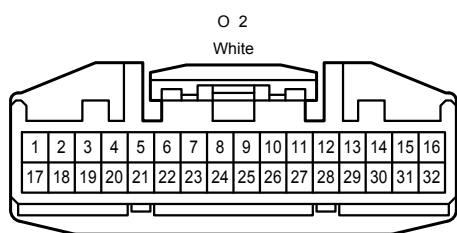

Position of Parts in Body <RHD>

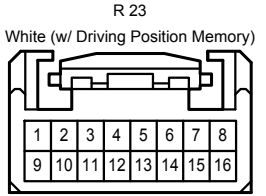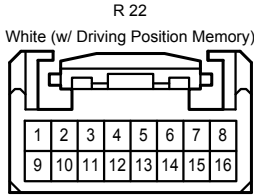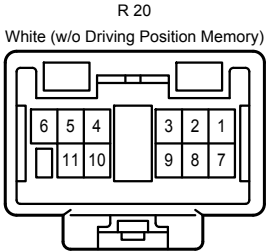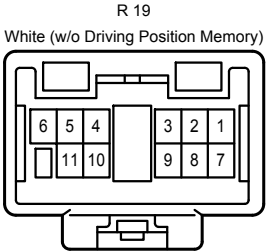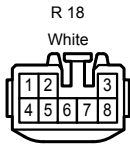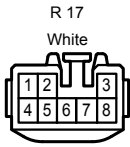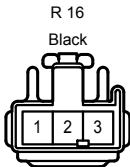        

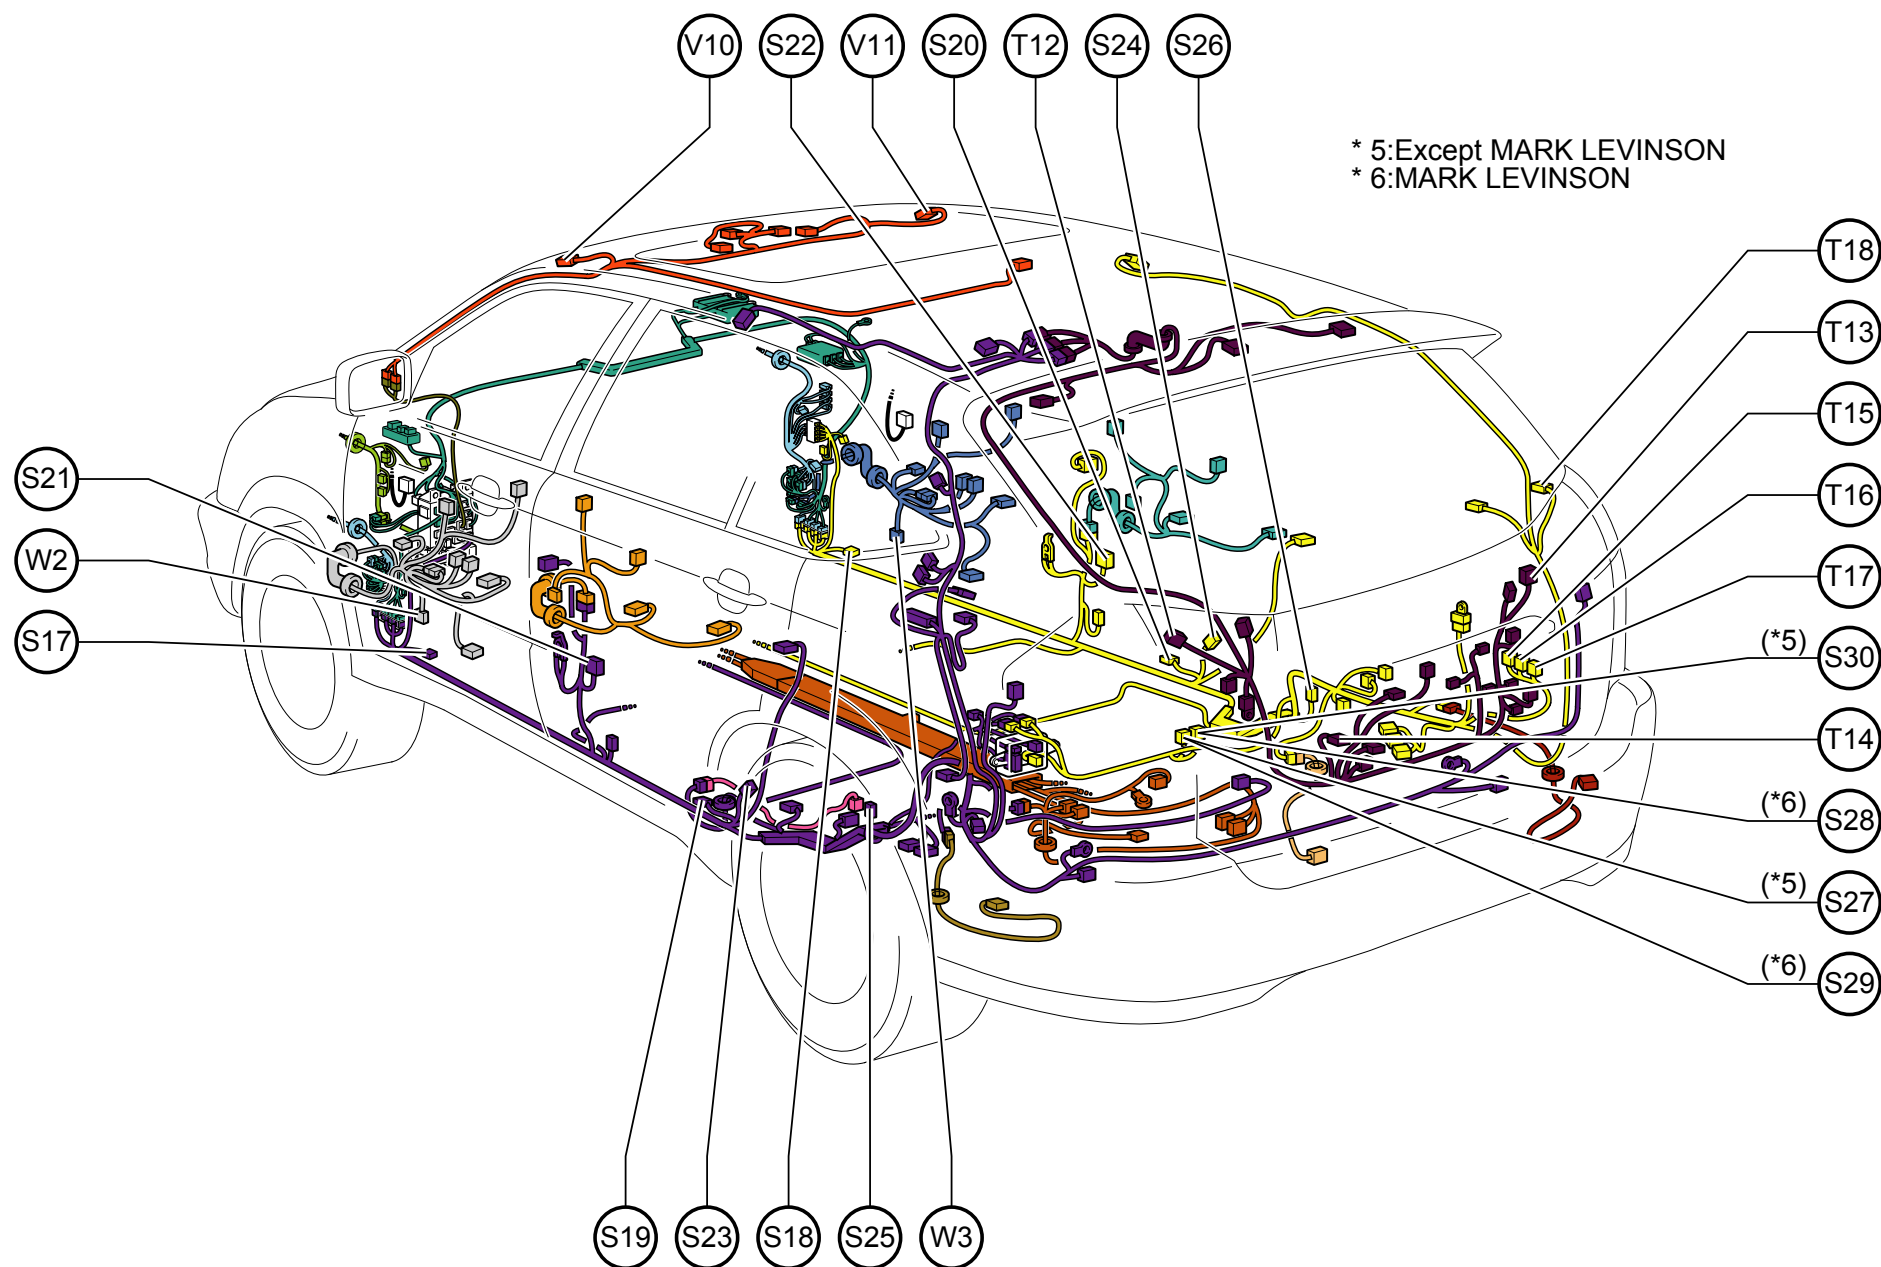 

S 17 Scuff Plate Light Front LH
S 18 Scuff Plate Light Front RH
S 19 Scuff Plate Light Rear LH
S 20 Scuff Plate Light Rear RH
S 21 Side Airbag Sensor Front LH
S 22 Side Airbag Sensor Front RH
S 23 Side Airbag Sensor Rear LH
S 24 Side Airbag Sensor Rear RH
S 25 Speed Sensor Rear LH
S 26 Speed Sensor Rear RH
S 27 Stereo Component Amplifier
S 28 Stereo Component Amplifier
S 29 Stereo Component Amplifier
S 30 Stereo Component Amplifier

 
T 12 Taillight LH
T 13 Taillight RH
T 14 Television Camera
T 15 Television Camera ECU
T 16 Television Camera ECU
T 17 Television Camera ECU
T 18 Theft Deterrent Siren

V 10 Vanity Light LH
V 11 Vanity Light RH


W 2 Woofer (Front LH)
W 3 Woofer (Front RH)

Position of Parts in Body <RHD>

S 17
Black

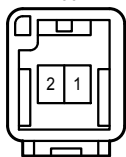

S 18
Black

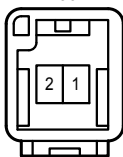 


S 19
White




S 20
White



 
S 21
Yellow

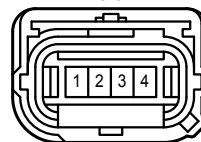


S 22
Yellow

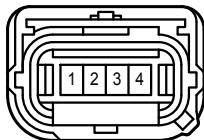 

S 23
Yellow

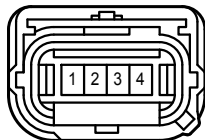 

S 24
Yellow

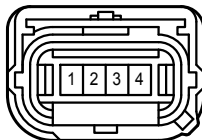 


S 25
Black




S 26
Black



 
S 27
White

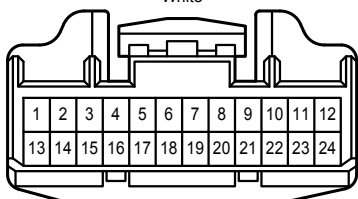


S 28
White

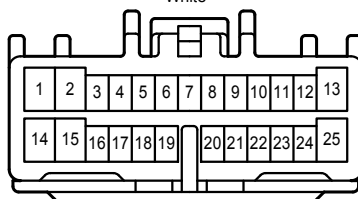 

S 29
White

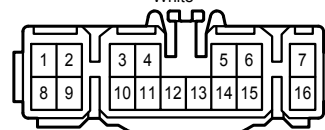 

S 30
White

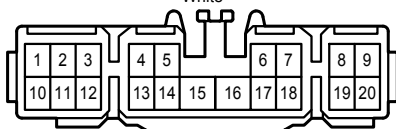 


T 12
White




T 13
White



 
T 14
White




T 15
Black

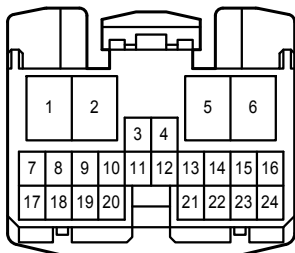 


T 16
White

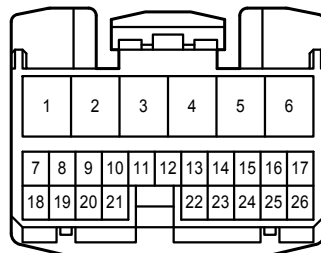 

T 17
Black

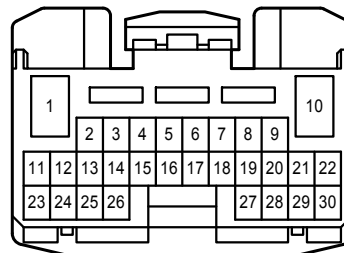 

T 18
Black

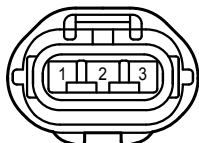 

V 10
White



V 11
White

 


 
W 2
White

 


 
W 3
White



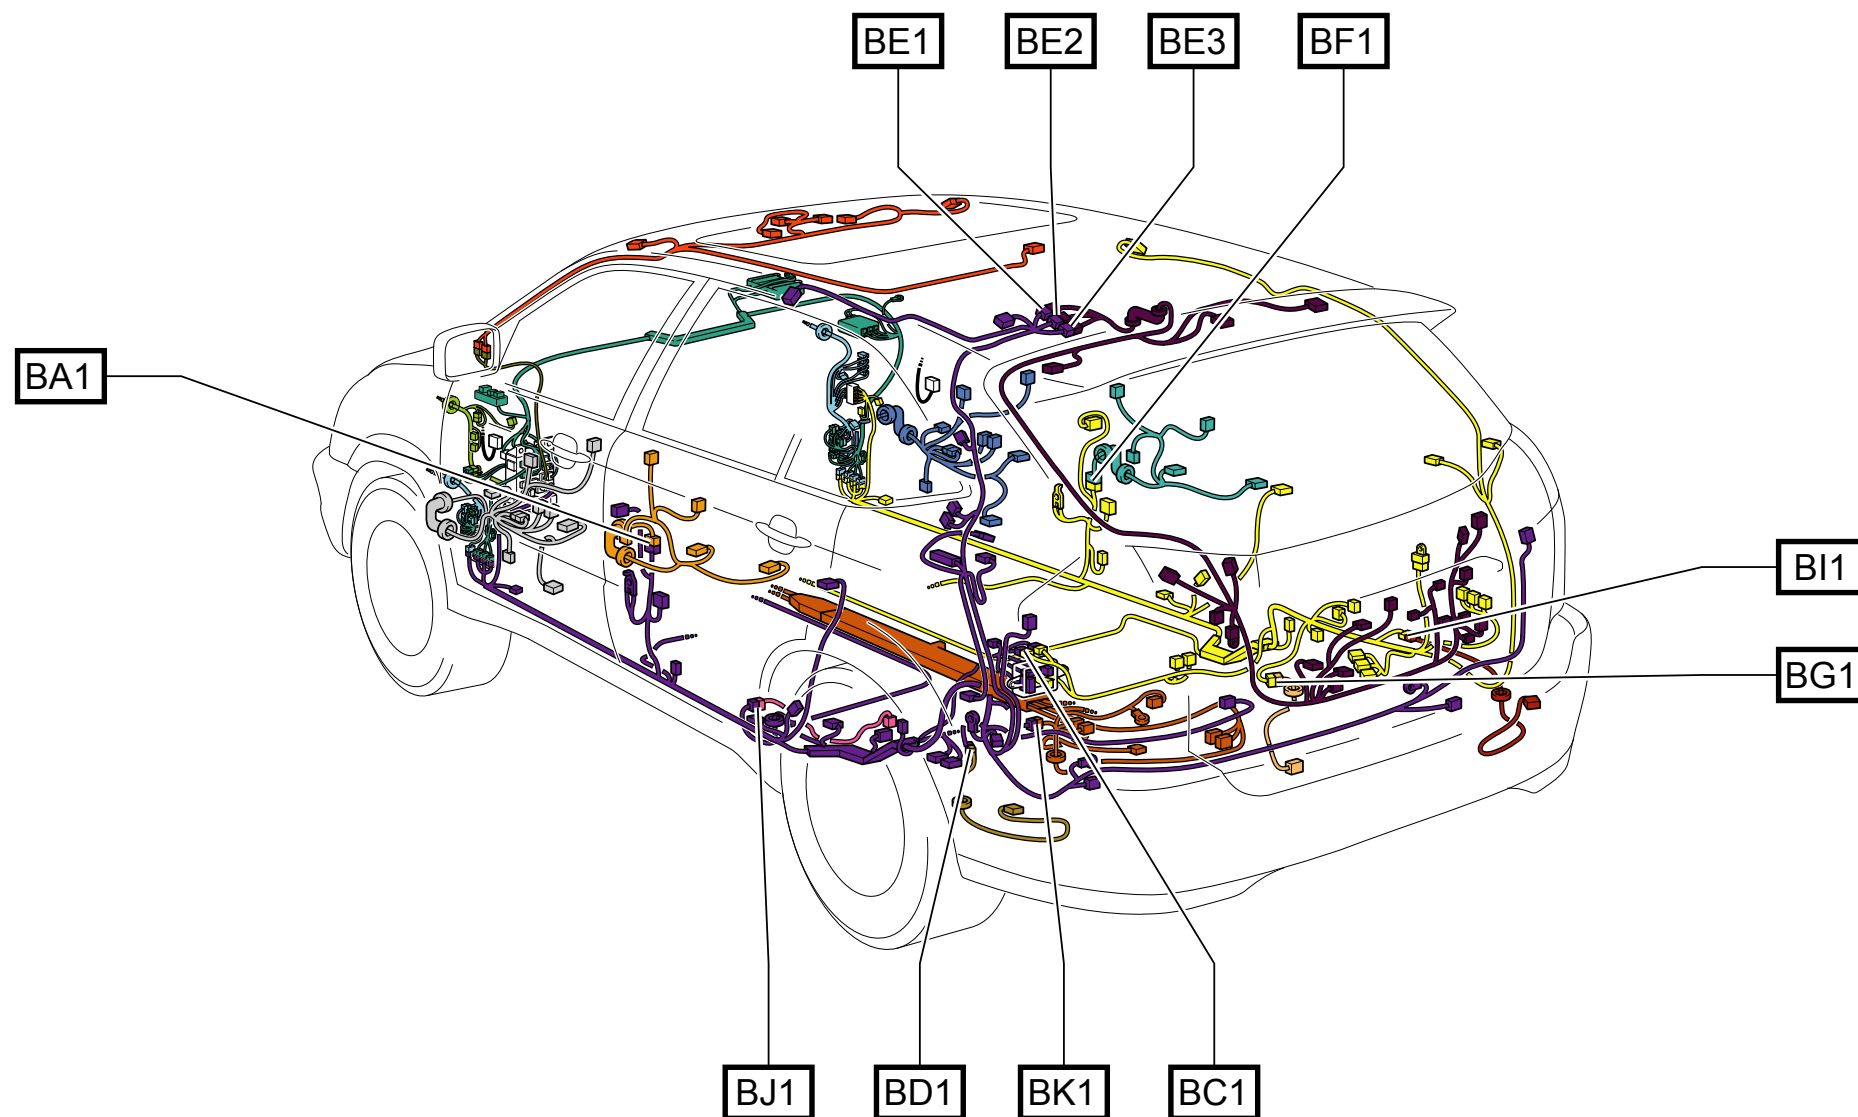


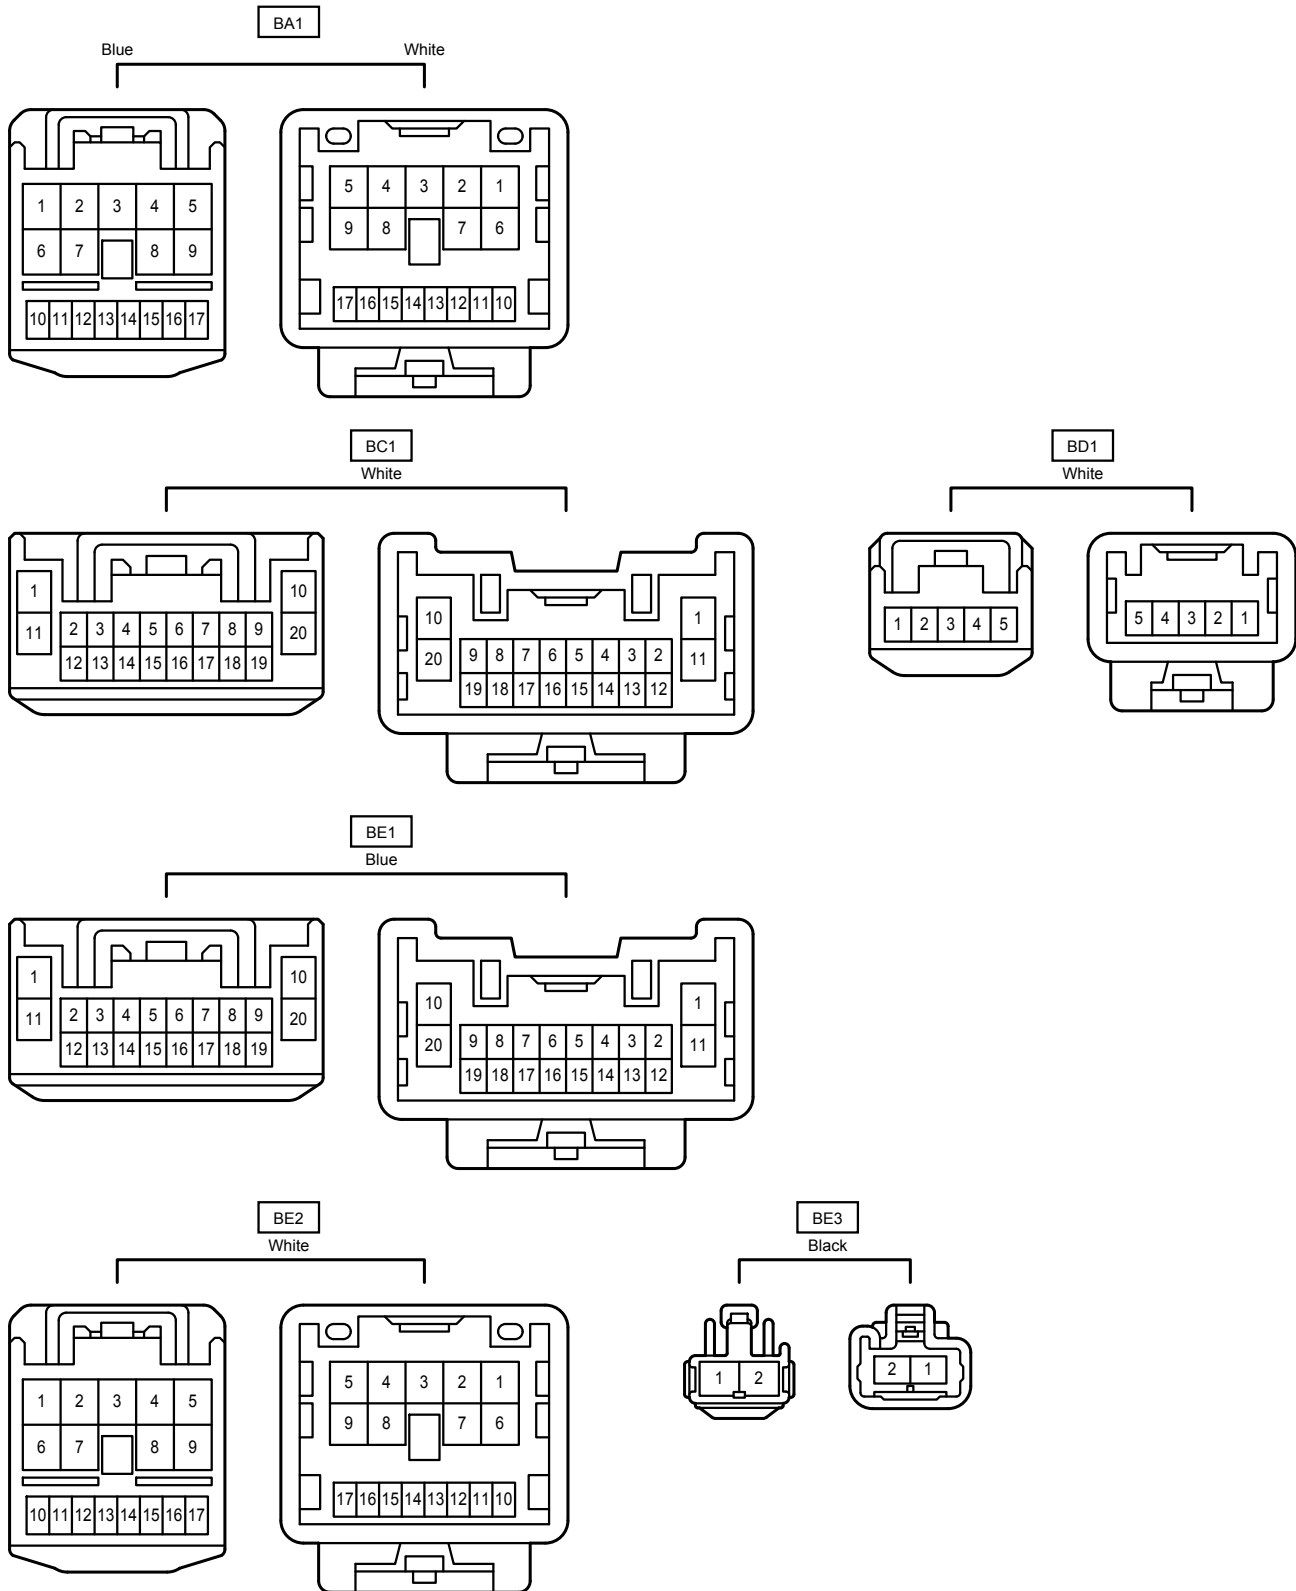

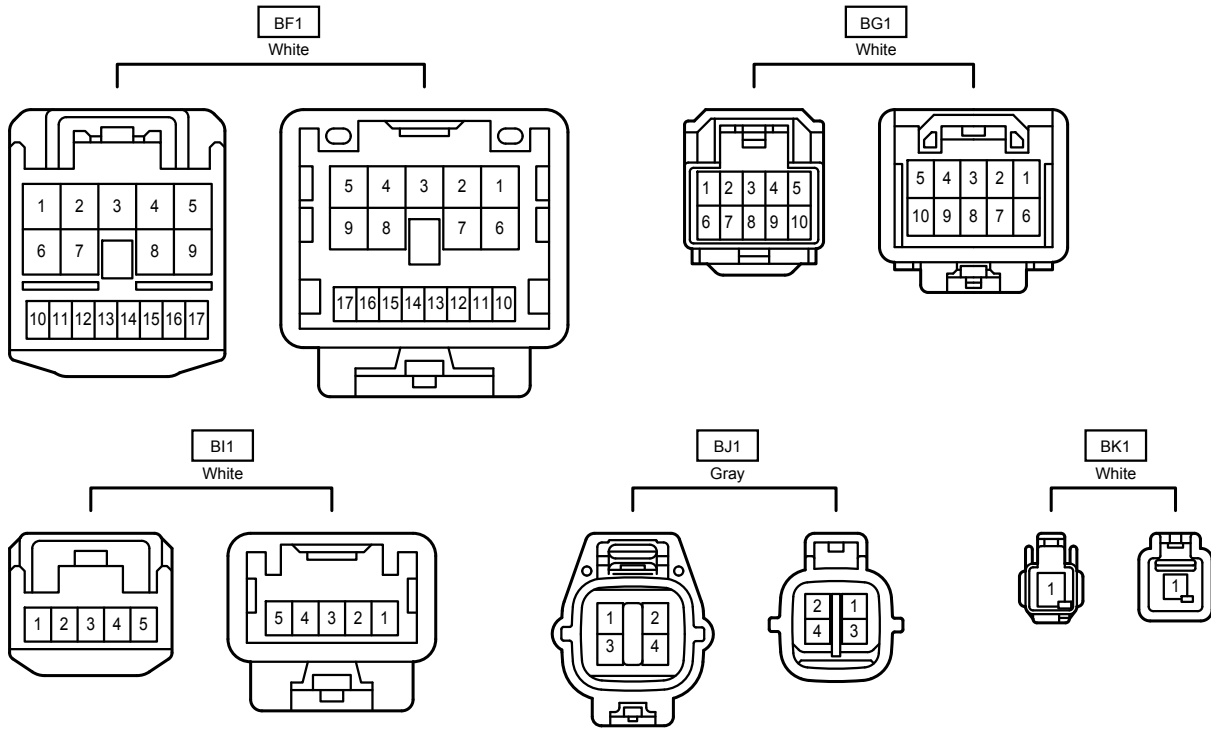

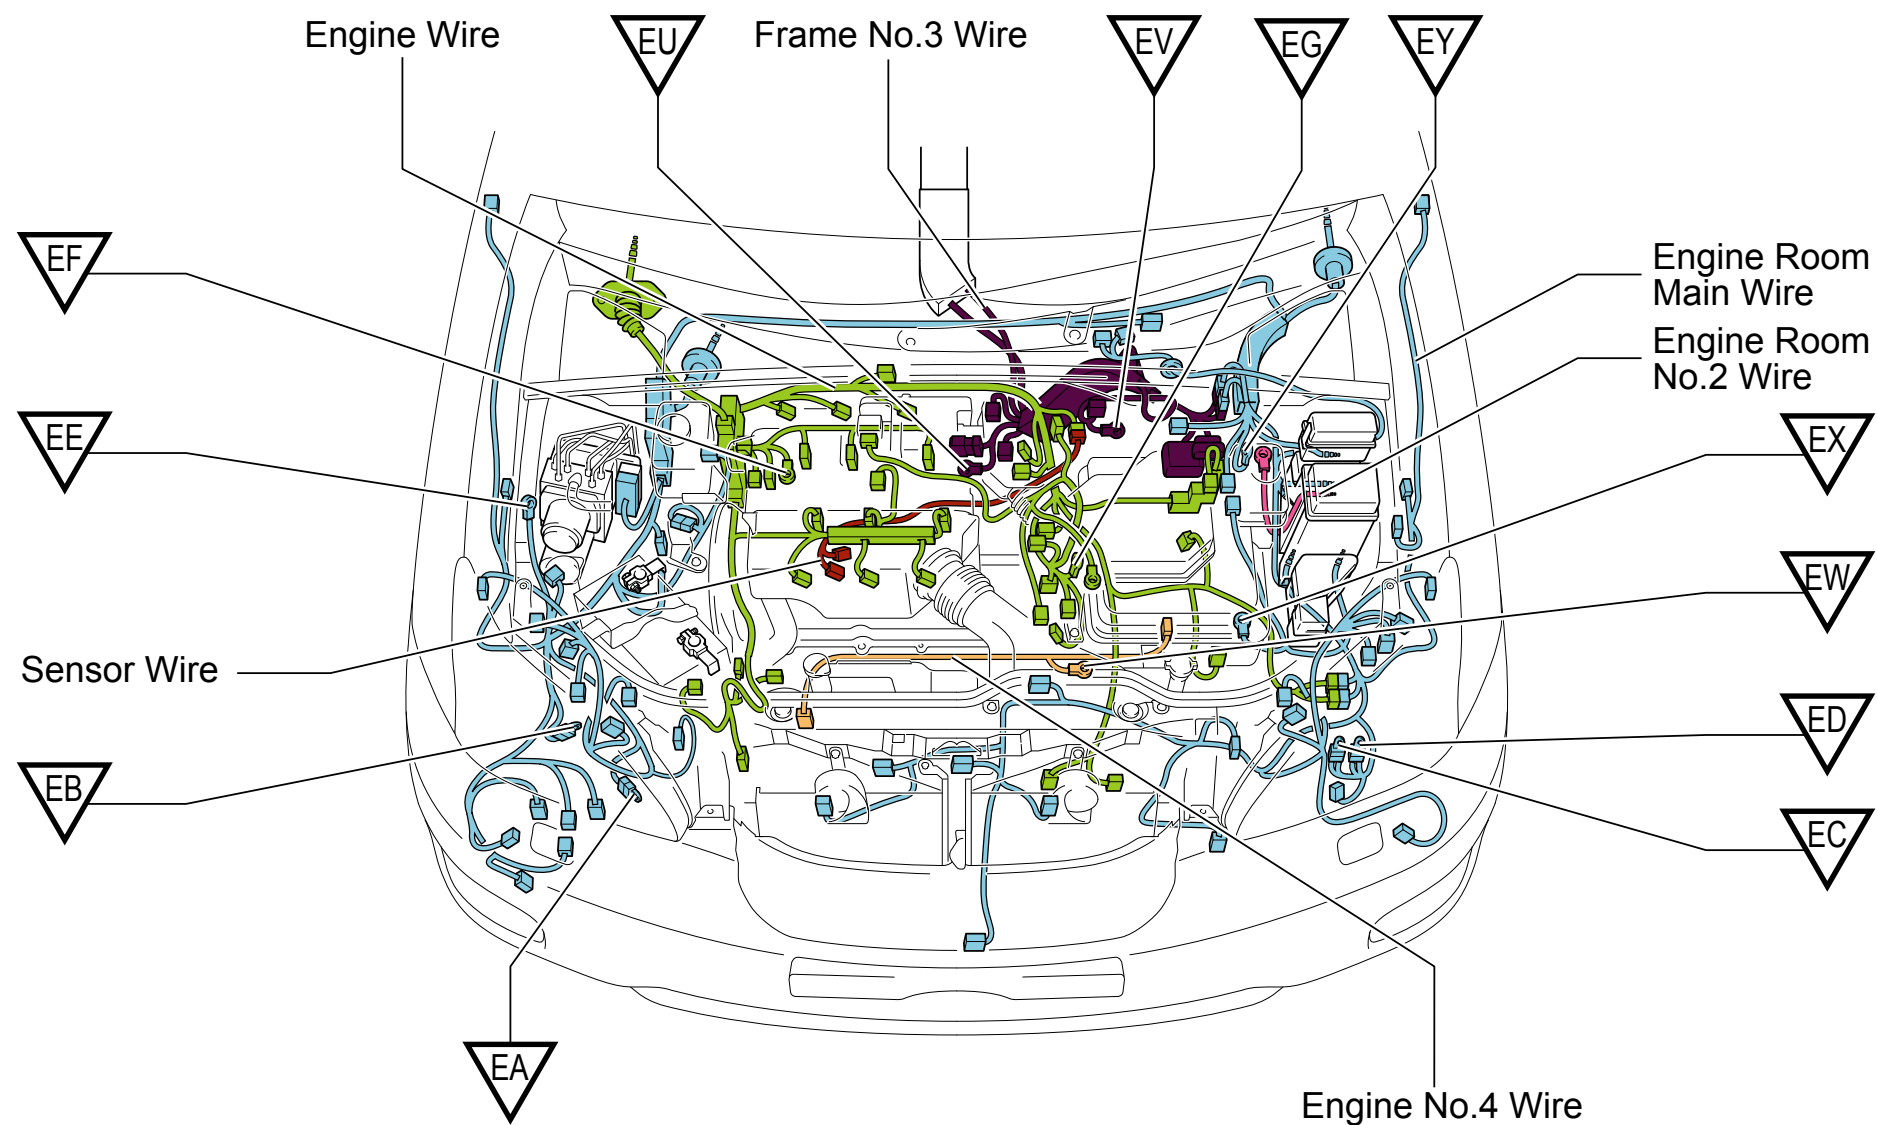

 Position of Parts in Engine Compartment <LHD>

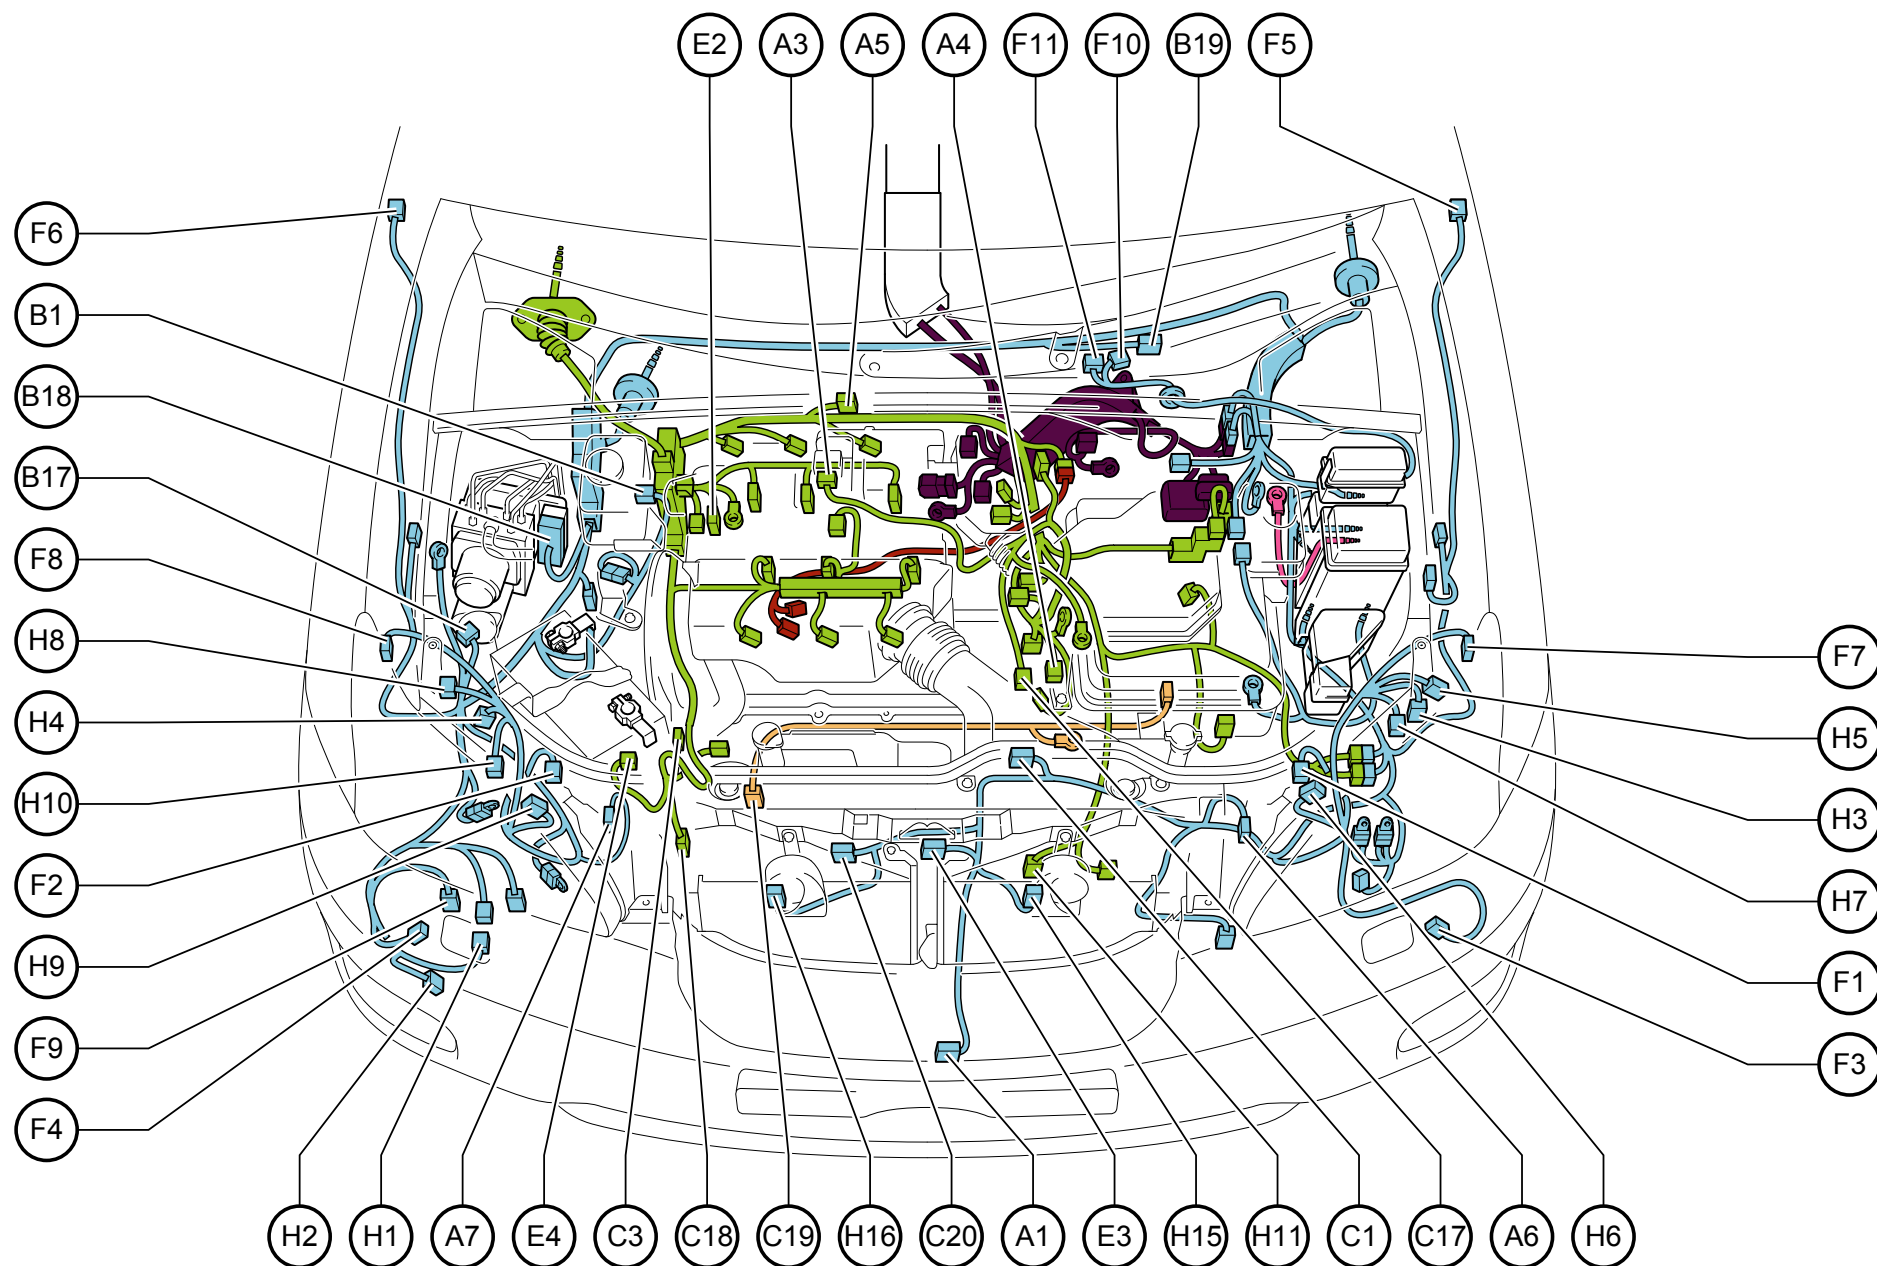

- A 1 A/C Ambient Temp. Sensor
- A 3 Air Flow Meter
- A 4 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- A 5 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- A 6 Airbag Sensor Front LH
- A 7 Airbag Sensor Front RH

- B 1 Brake Fluid Level Warning SW
- B 17 Battery Thermometer Sensor
- B 18 Brake Actuator
- B 19 Brake Stroke Simulator Cylinder

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- C 1 Cooling Fan ECU (LH)
- C 3 Crankshaft Position Sensor
- C 17 Circuit Breaker Sensor (Front)
- C 18 Compressor Motor
- C 19 Compressor Motor
- C 20 Cooling Fan ECU (RH)

- E 2 EFI Water Temp. Sensor
- E 3 Engine Hood Courtesy SW
- E 4 Engine Oil Level Sensor

- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH
- F 3 Front Fog Light LH (LHD)
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Washer Motor
- F 10 Front Window Deicer
- F 11 Front Wiper Motor

- H 1 Headlight Cleaner Control Relay
- H 2 Headlight Cleaner Motor
- H 3 Headlight LH (w/o Adaptive Front-Lighting System)
- H 3 Headlight LH (w/ Adaptive Front-Lighting System)
- H 4 Headlight RH (w/o Adaptive Front-Lighting System)
- H 4 Headlight RH (w/ Adaptive Front-Lighting System)
- H 5 Headlight LH
- H 6 Headlight LH
- H 7 Headlight LH
- H 8 Headlight RH
- H 9 Headlight RH
- H 10 Headlight RH
- H 11 Heated Oxygen Sensor (Bank 2 Sensor 2)
- H 15 Horn LH
- H 16 Horn RH

Position of Parts in Engine Compartment <LHD>

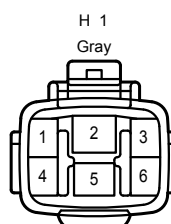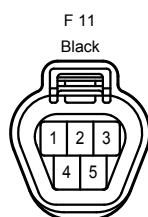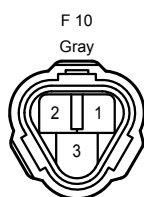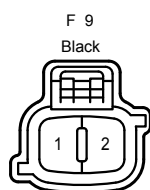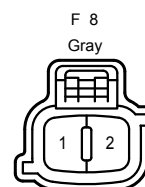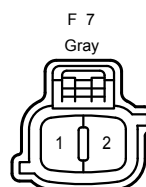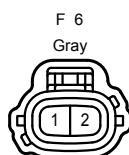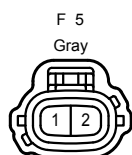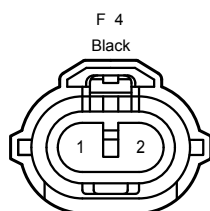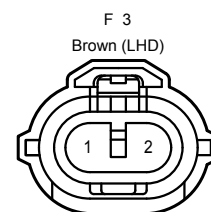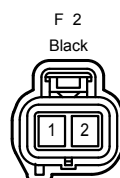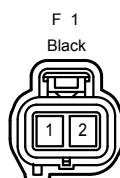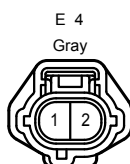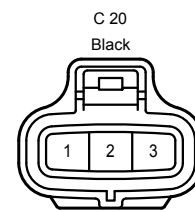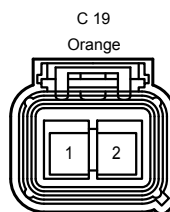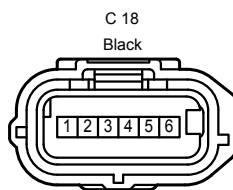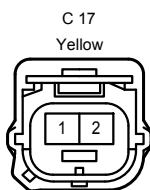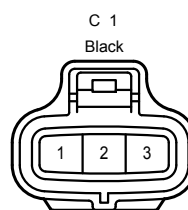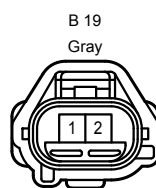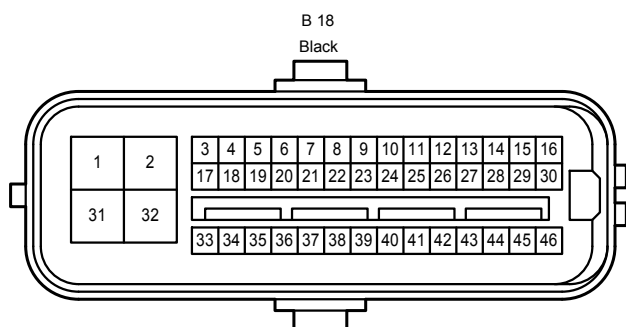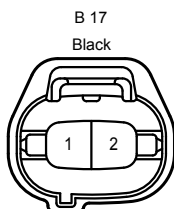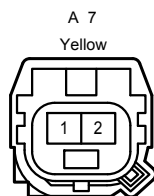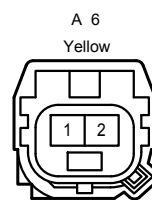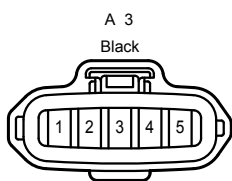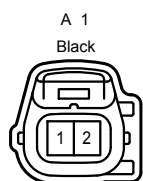

H 3
Black (w/o Adaptive Front-Lighting System)



 
 
H 3
Black (w/ Adaptive Front-Lighting System)




H 4
Black (w/o Adaptive Front-Lighting System)



H 4
Black (w/ Adaptive Front-Lighting System)

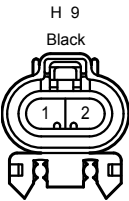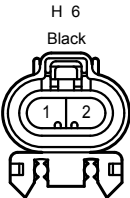

 
Position of Parts in Engine Compartment <LHD>














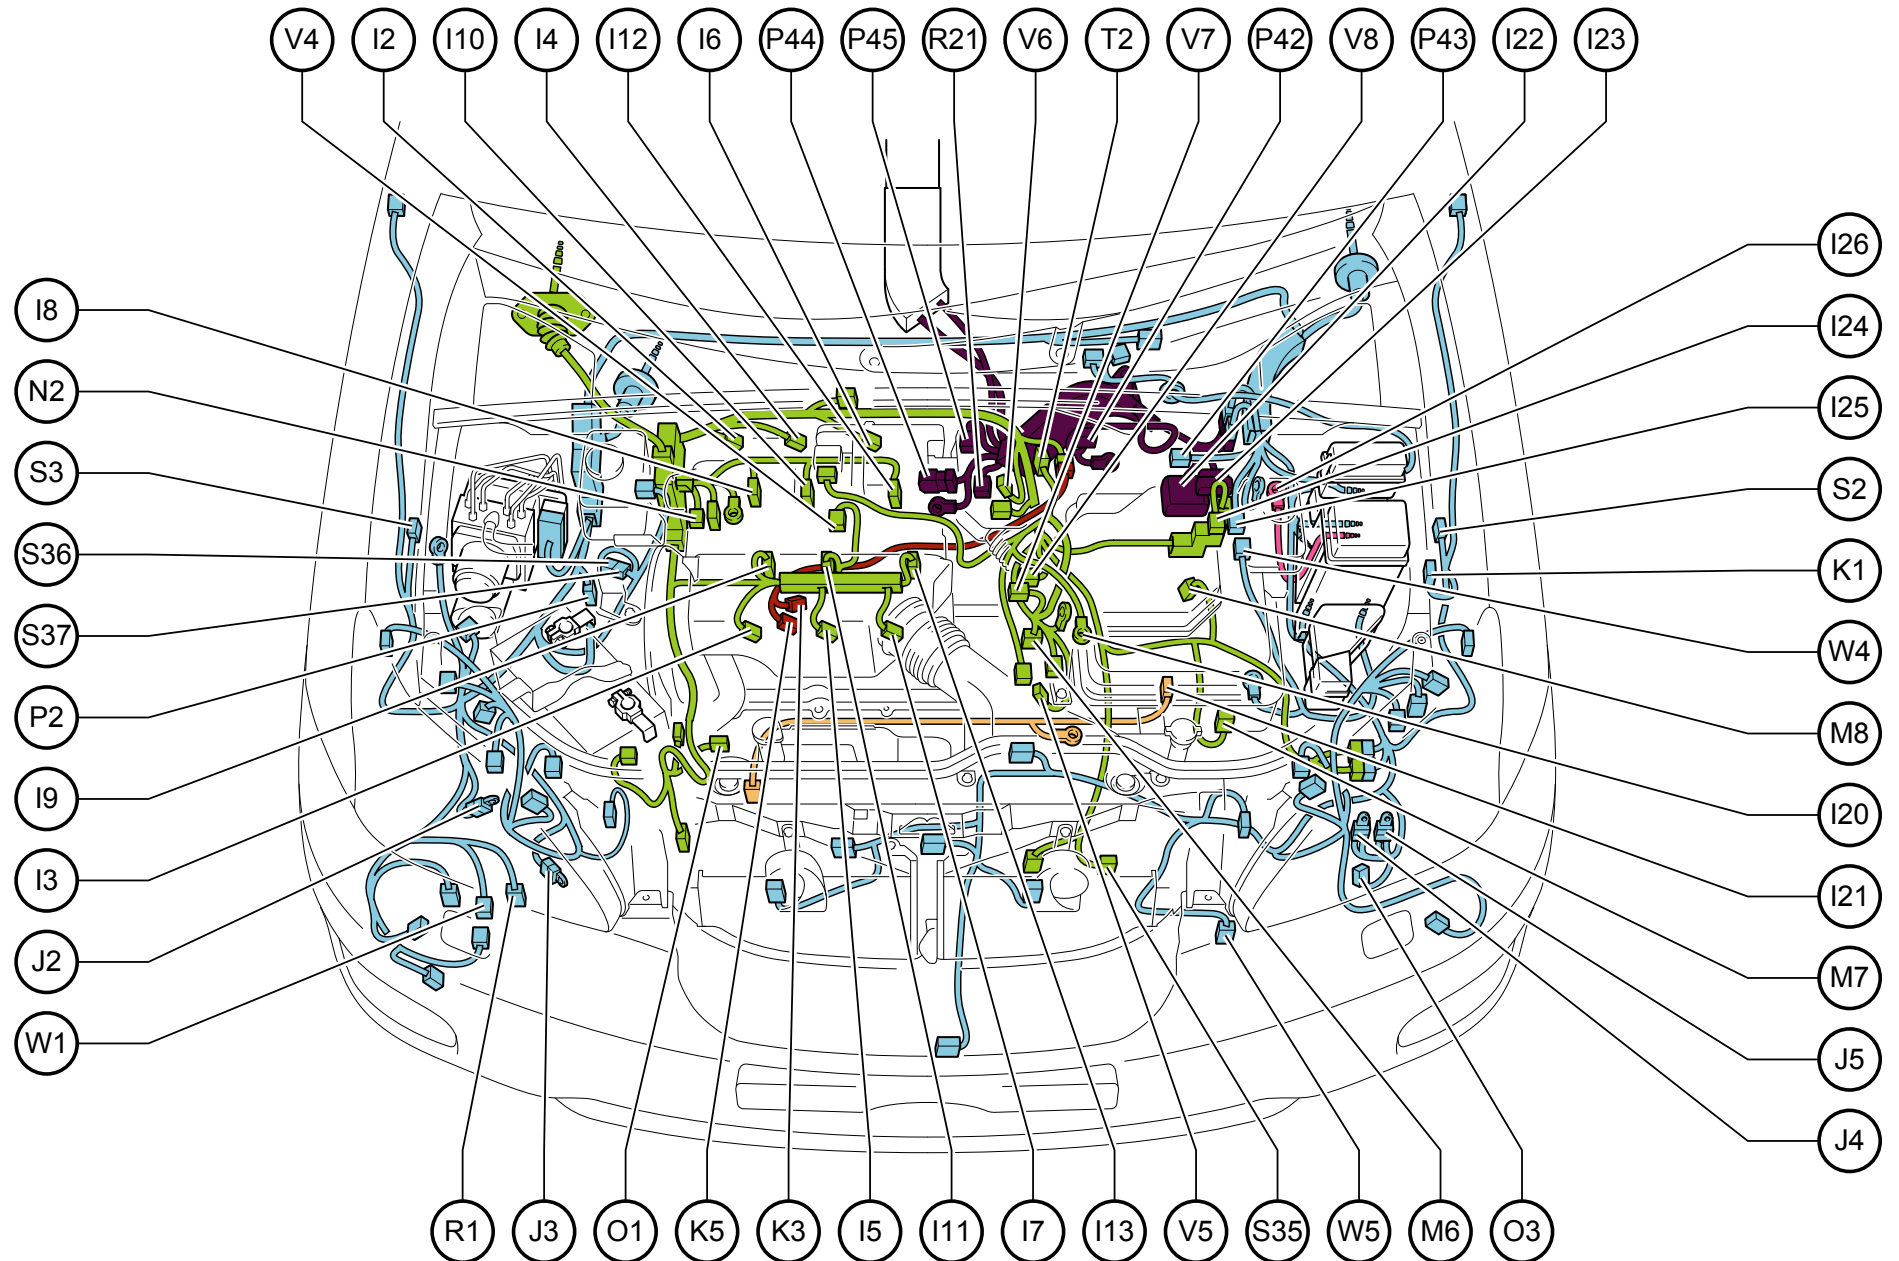



I	2	Ignition Coil and Igniter No.1
I	3	Ignition Coil and Igniter No.2
I	4	Ignition Coil and Igniter No.3
I	5	Ignition Coil and Igniter No.4
I	6	Ignition Coil and Igniter No.5
I	7	Ignition Coil and Igniter No.6
I	8	Injector No.1
I	9	Injector No.2
I	10	Injector No.3
I	11	Injector No.4
I	12	Injector No.5
I	13	Injector No.6
I	20	Inverter
I	21	Inverter
I	22	Inverter
I	23	Inverter
I	24	Inverter
I	25	Inverter
I	26	Inverter
J	2	Junction Connector
J	3	Junction Connector
J	4	Junction Connector
J	5	Junction Connector
K	1	Keyless Buzzer
K	3	Knock Sensor (Bank 1)
K	5	Knock Sensor (Bank 2)
M	6	Motor Generator No.1 (Front)
M	7	Motor Generator No.2 (Front)
M	8	Motor Generator No.2 (Front)
N	2	Noise Filter
O	1	Oil Pressure SW
O	3	Oil Pump Motor (Transaxle)
P	2	Pressure SW
P	42	Power Steering ECU
P	43	Power Steering ECU
P	44	Power Steering Motor
P	45	Power Steering Torque Sensor
R	1	Rear Washer Motor
R	21	Rotation Angle Sensor
S	2	Speed Sensor Front LH
S	3	Speed Sensor Front RH
S	35	Shift Lever Position Sensor (Park/Neutral Position SW)
S	36	Short Connector
S	37	Short Connector
T	2	Throttle Position Sensor and Motor
V	4	VSV (EVAP)
V	5	VVT Sensor LH
V	6	VVT Sensor RH
V	7	VVT Solenoid LH


- V 8 VVT Solenoid RH
- W 1 Washer Level Warning SW
- W 4 Water Pump Motor (A/C)
- W 5 Water Pump Motor (Inverter)

                  
Position of Parts in Engine Compartment <LHD>

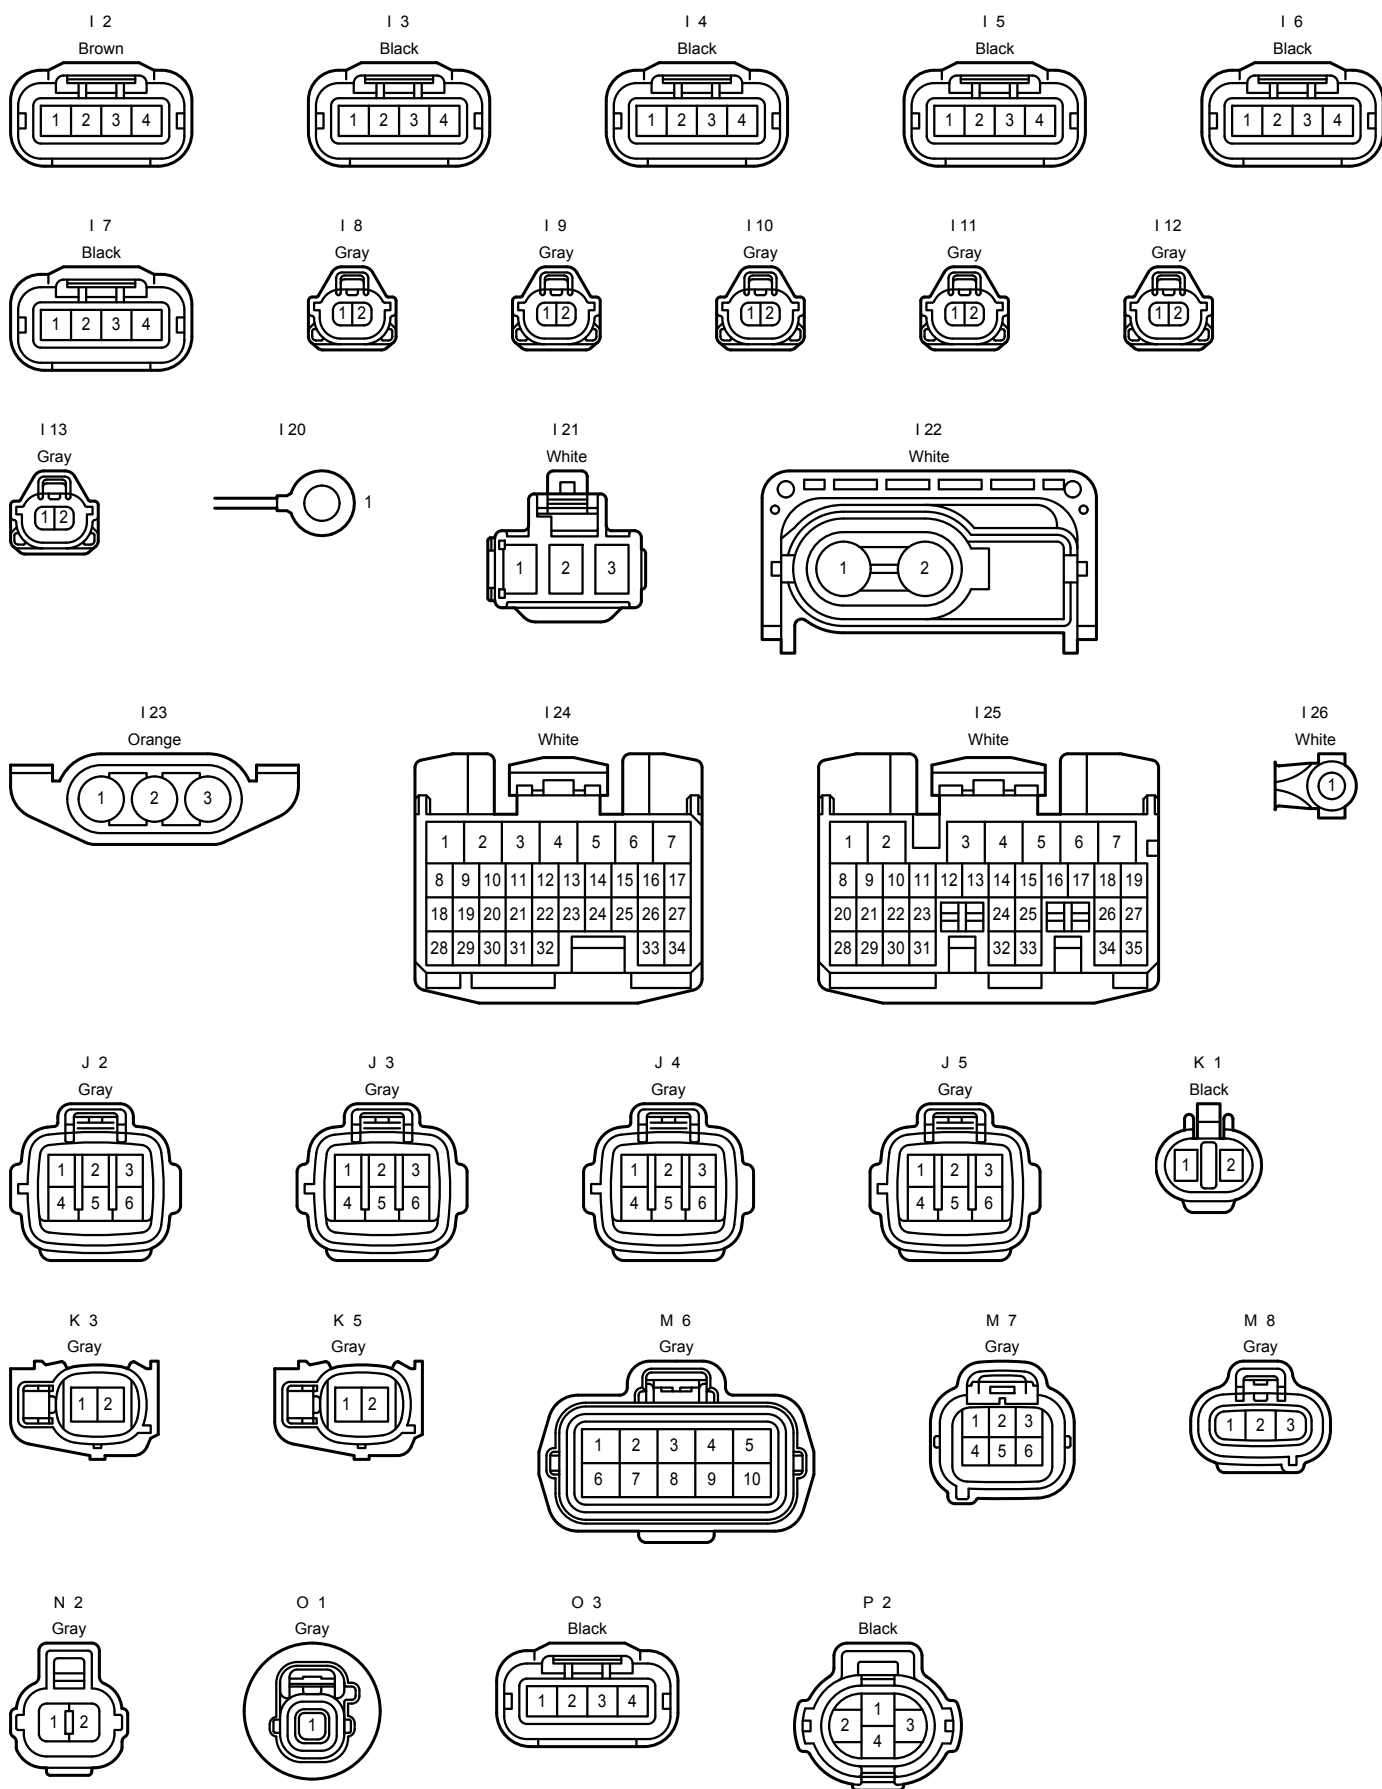

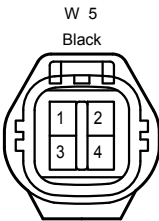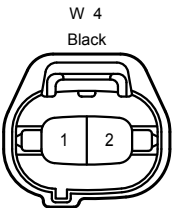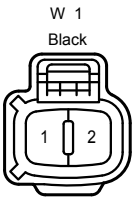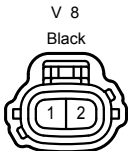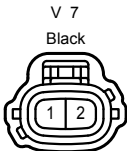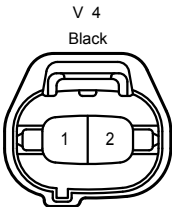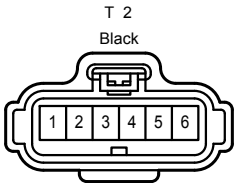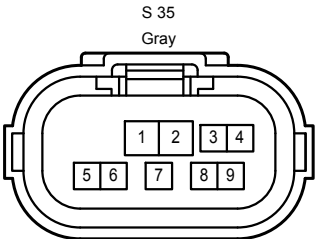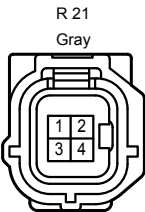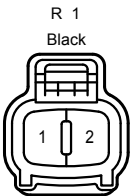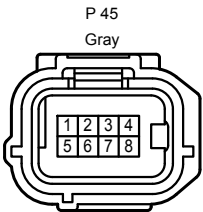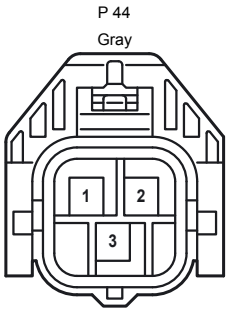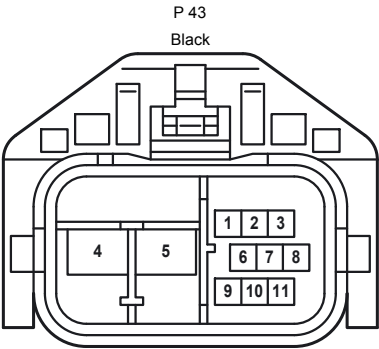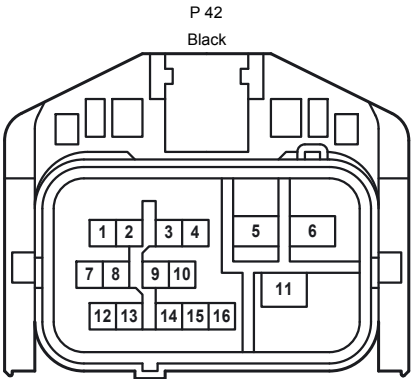


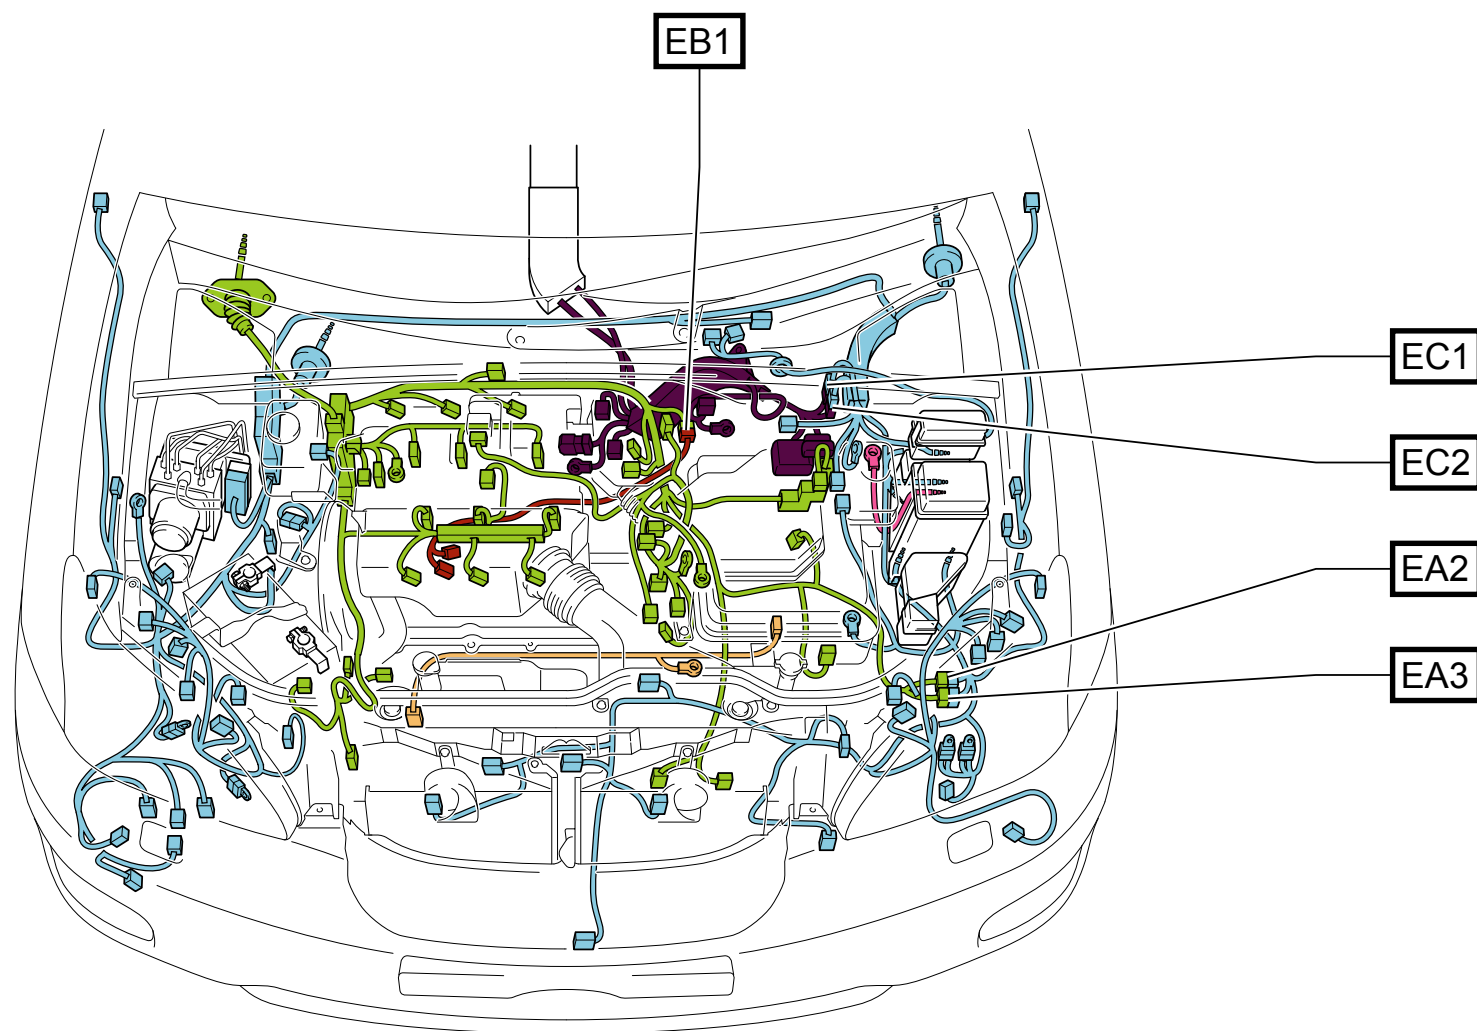

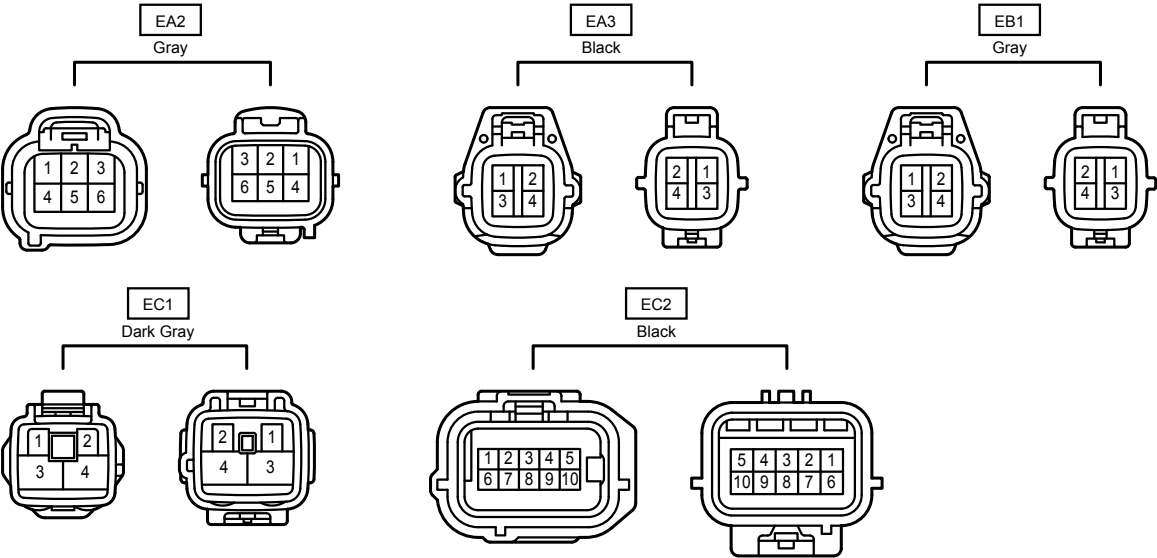

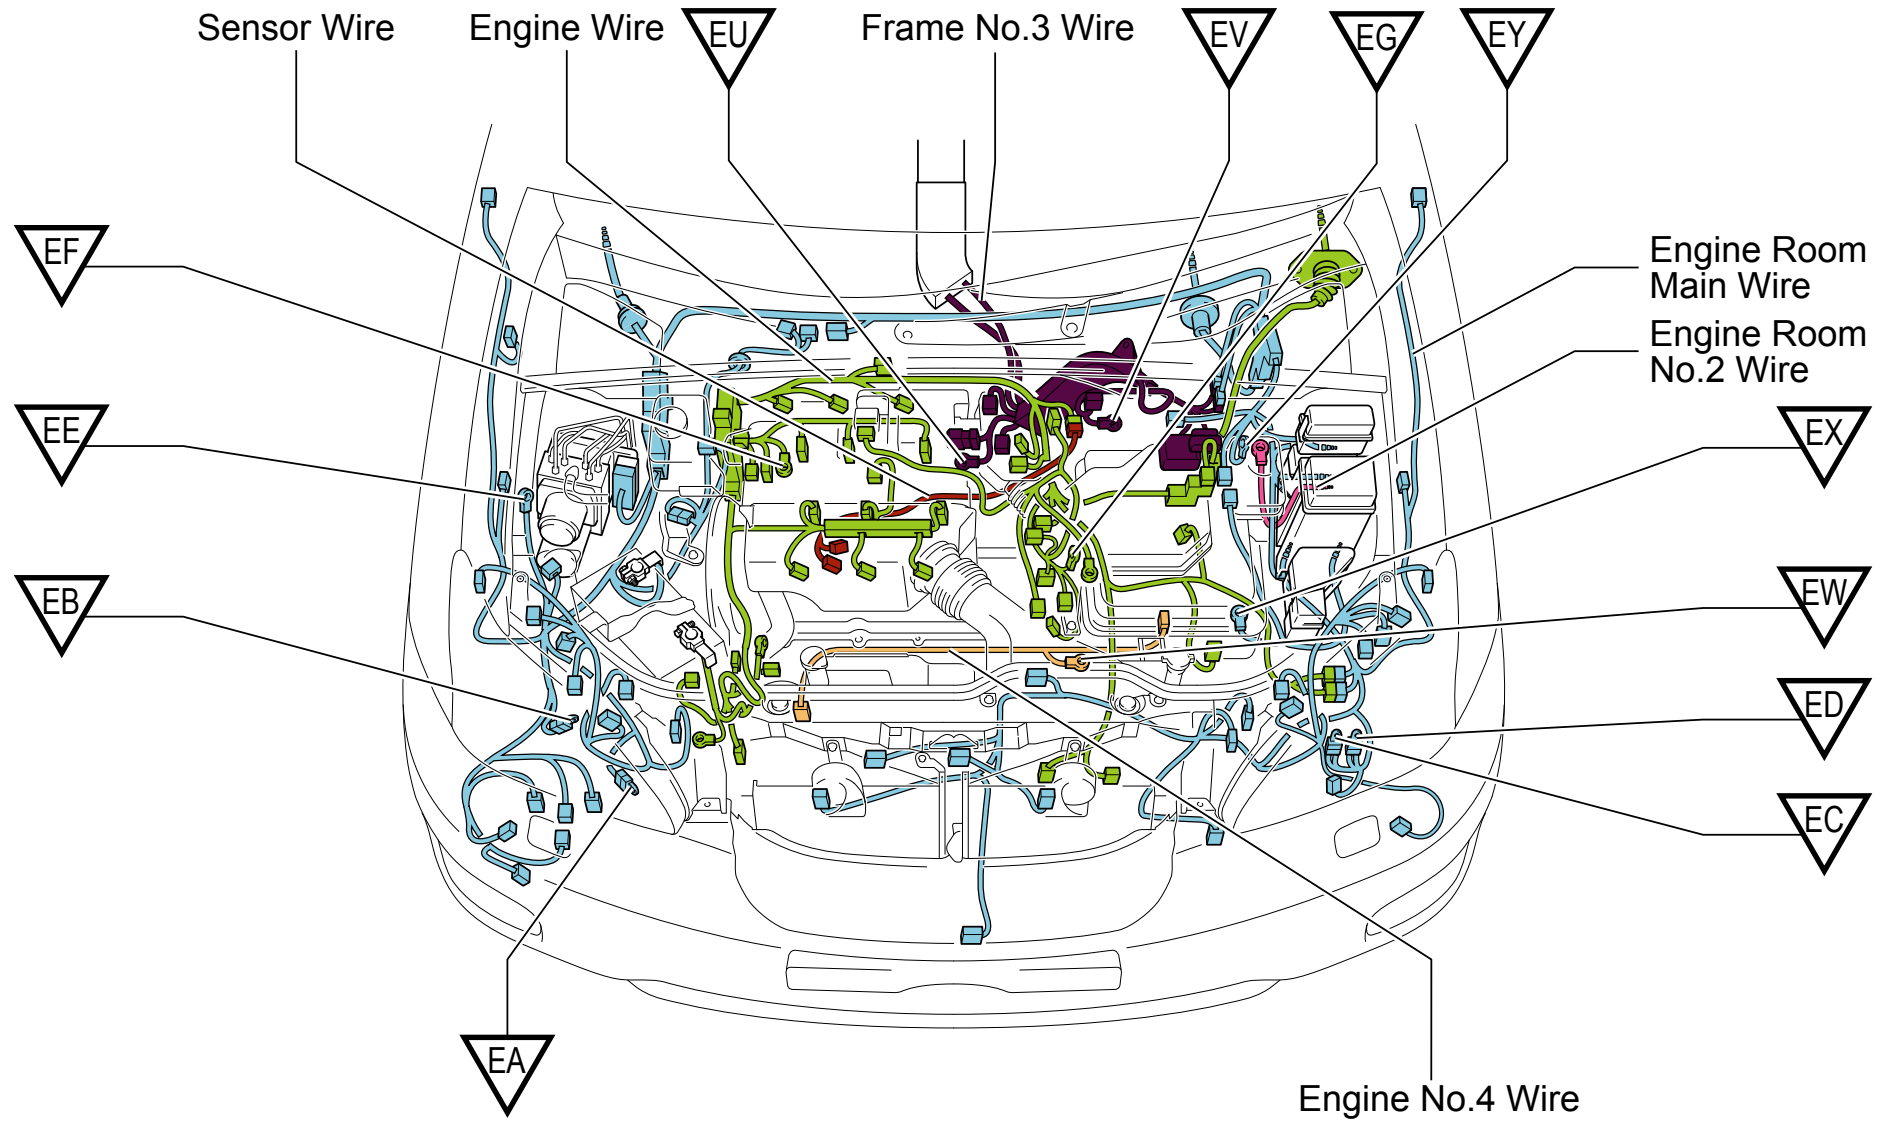

 Position of Parts in Engine Compartment <RHD>

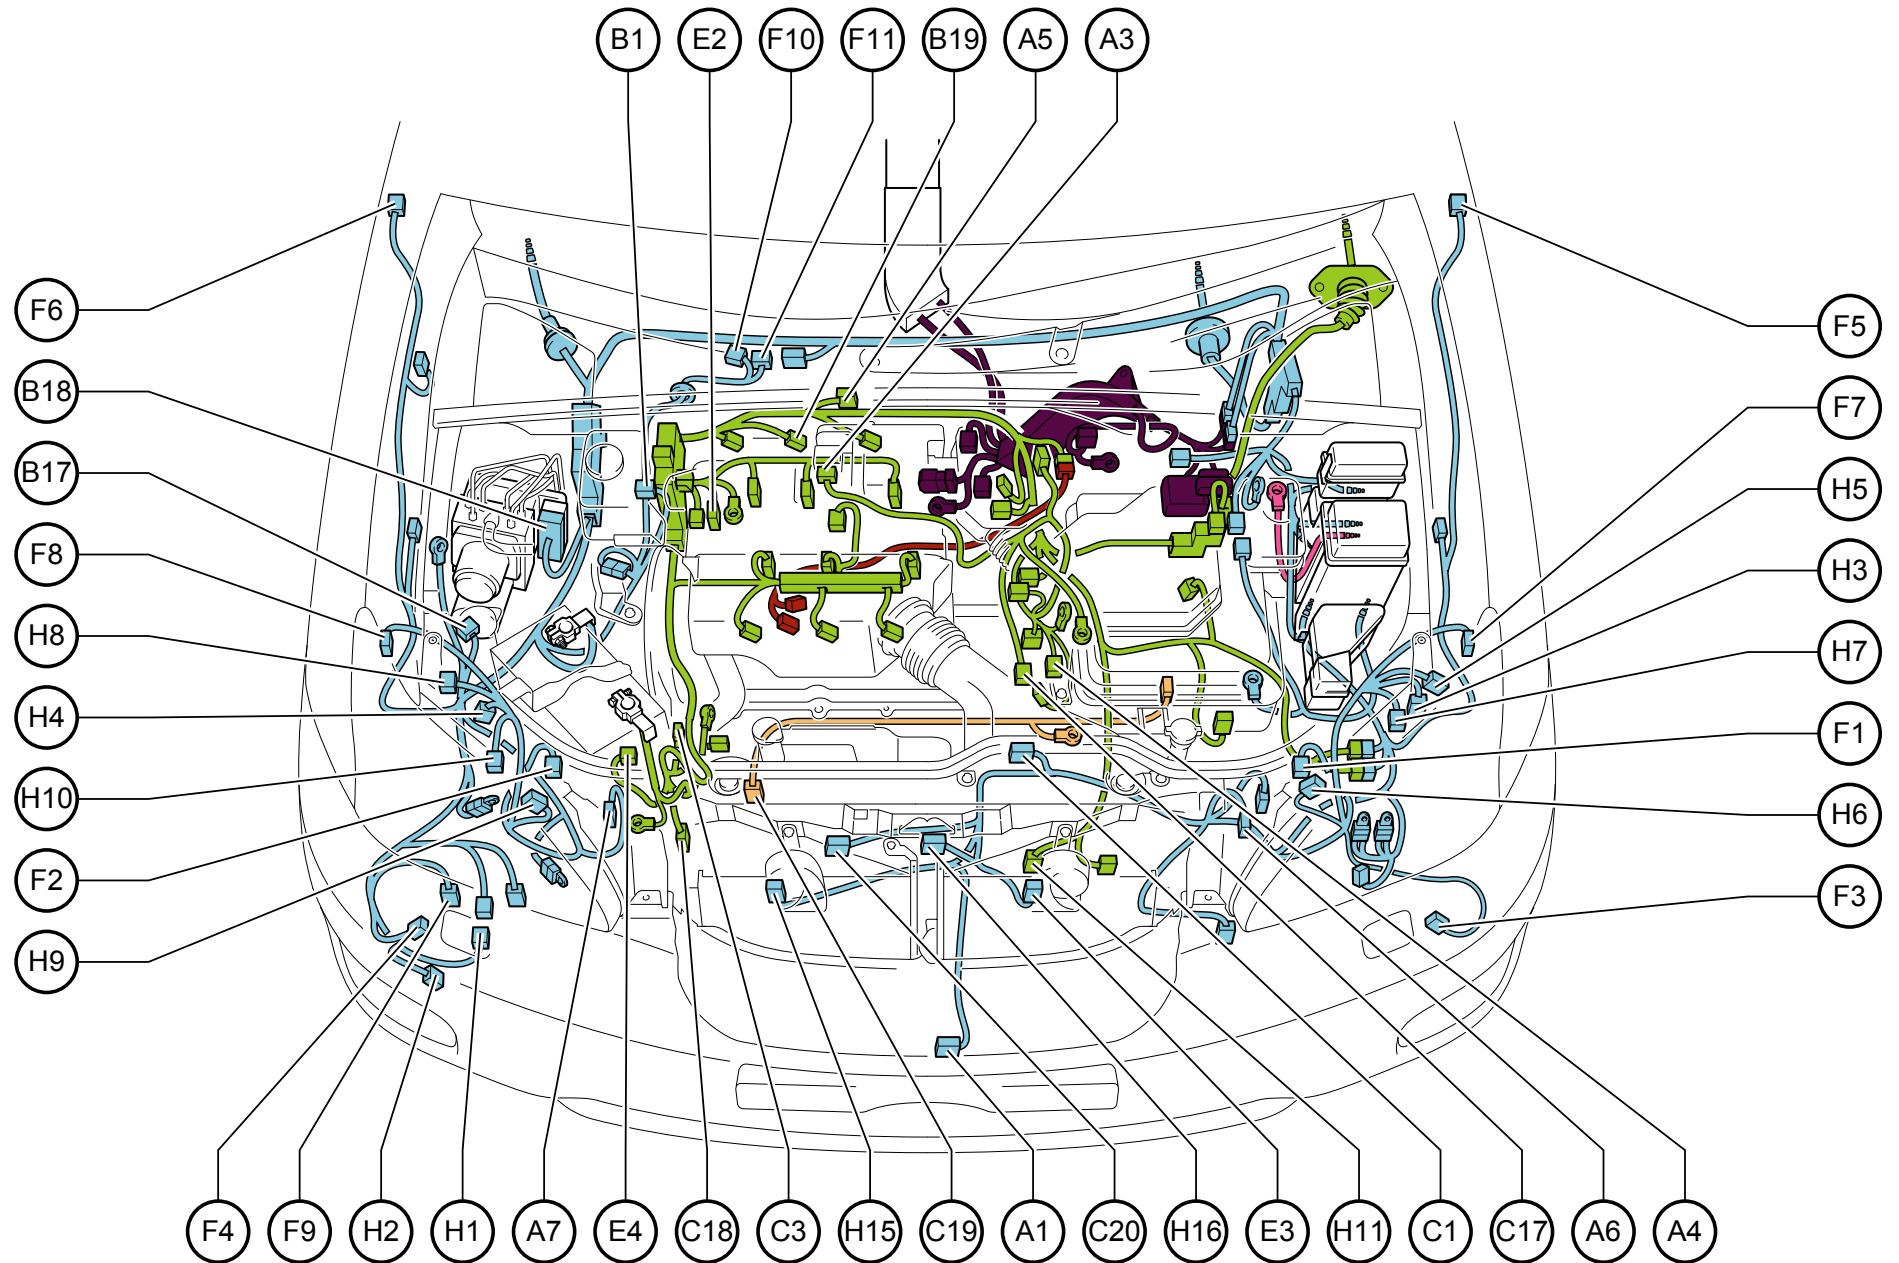

- A 1 A/C Ambient Temp. Sensor
- A 3 Air Flow Meter
- A 4 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- A 5 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- A 6 Airbag Sensor Front LH
- A 7 Airbag Sensor Front RH

- B 1 Brake Fluid Level Warning SW
- B 17 Battery Thermometer Sensor
- B 18 Brake Actuator
- B 19 Brake Stroke Simulator Cylinder

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- C 1 Cooling Fan ECU (LH)
- C 3 Crankshaft Position Sensor
- C 17 Circuit Breaker Sensor (Front)
- C 18 Compressor Motor
- C 19 Compressor Motor
- C 20 Cooling Fan ECU (RH)

- E 2 EFI Water Temp. Sensor
- E 3 Engine Hood Courtesy SW
- E 4 Engine Oil Level Sensor

- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH
- F 3 Front Fog Light LH (RHD)
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Washer Motor
- F 10 Front Window Deicer
- F 11 Front Wiper Motor

- H 1 Headlight Cleaner Control Relay
- H 2 Headlight Cleaner Motor
- H 3 Headlight LH (w/o Adaptive Front-Lighting System)
- H 3 Headlight LH (w/ Adaptive Front-Lighting System)
- H 4 Headlight RH (w/ Adaptive Front-Lighting System)
- H 4 Headlight RH (w/o Adaptive Front-Lighting System)
- H 5 Headlight LH
- H 6 Headlight LH
- H 7 Headlight LH
- H 8 Headlight RH
- H 9 Headlight RH
- H 10 Headlight RH
- H 11 Heated Oxygen Sensor (Bank 2 Sensor 2)
- H 15 Horn LH
- H 16 Horn RH

Position of Parts in Engine Compartment <RHD>

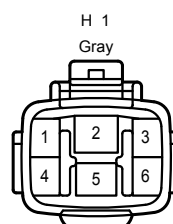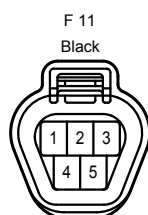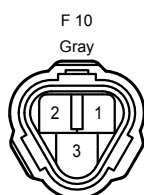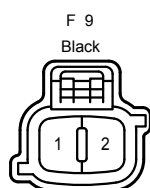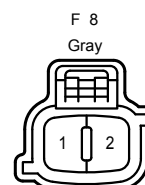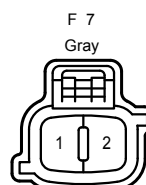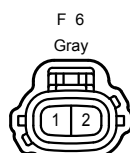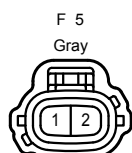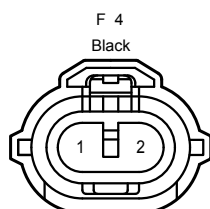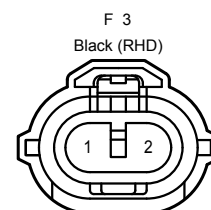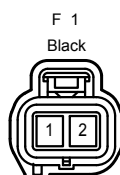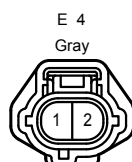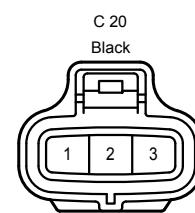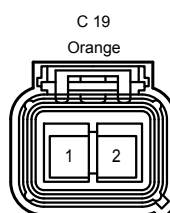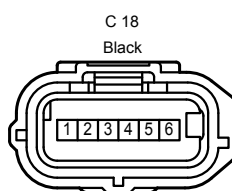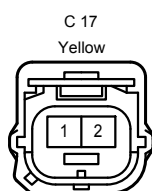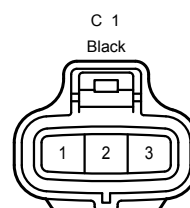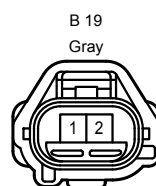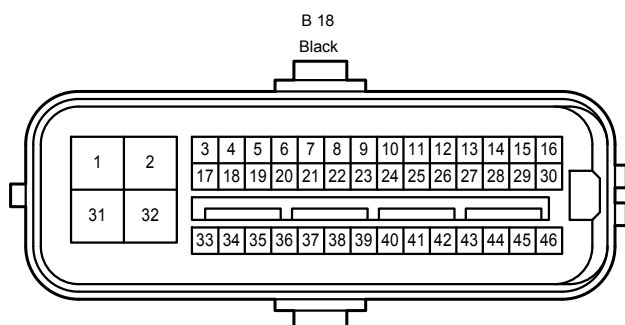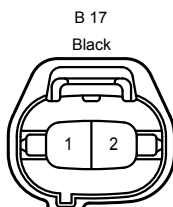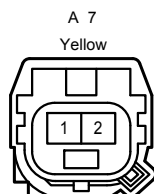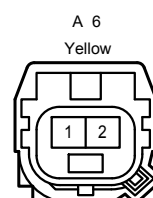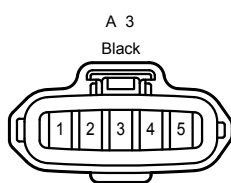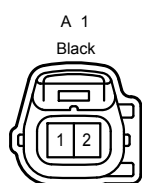

Position of Parts in Engine Compartment <RHD>

H 3
Black (w/o Adaptive Front-Lighting System)



H 3
Black (w/ Adaptive Front-Lighting System)



 
 
H 4
Black (w/ Adaptive Front-Lighting System)




H 4
Black (w/o Adaptive Front-Lighting System)



H 5
White

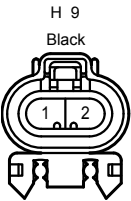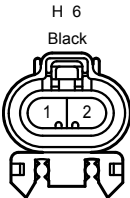
















 
Position of Parts in Engine Compartment <RHD>

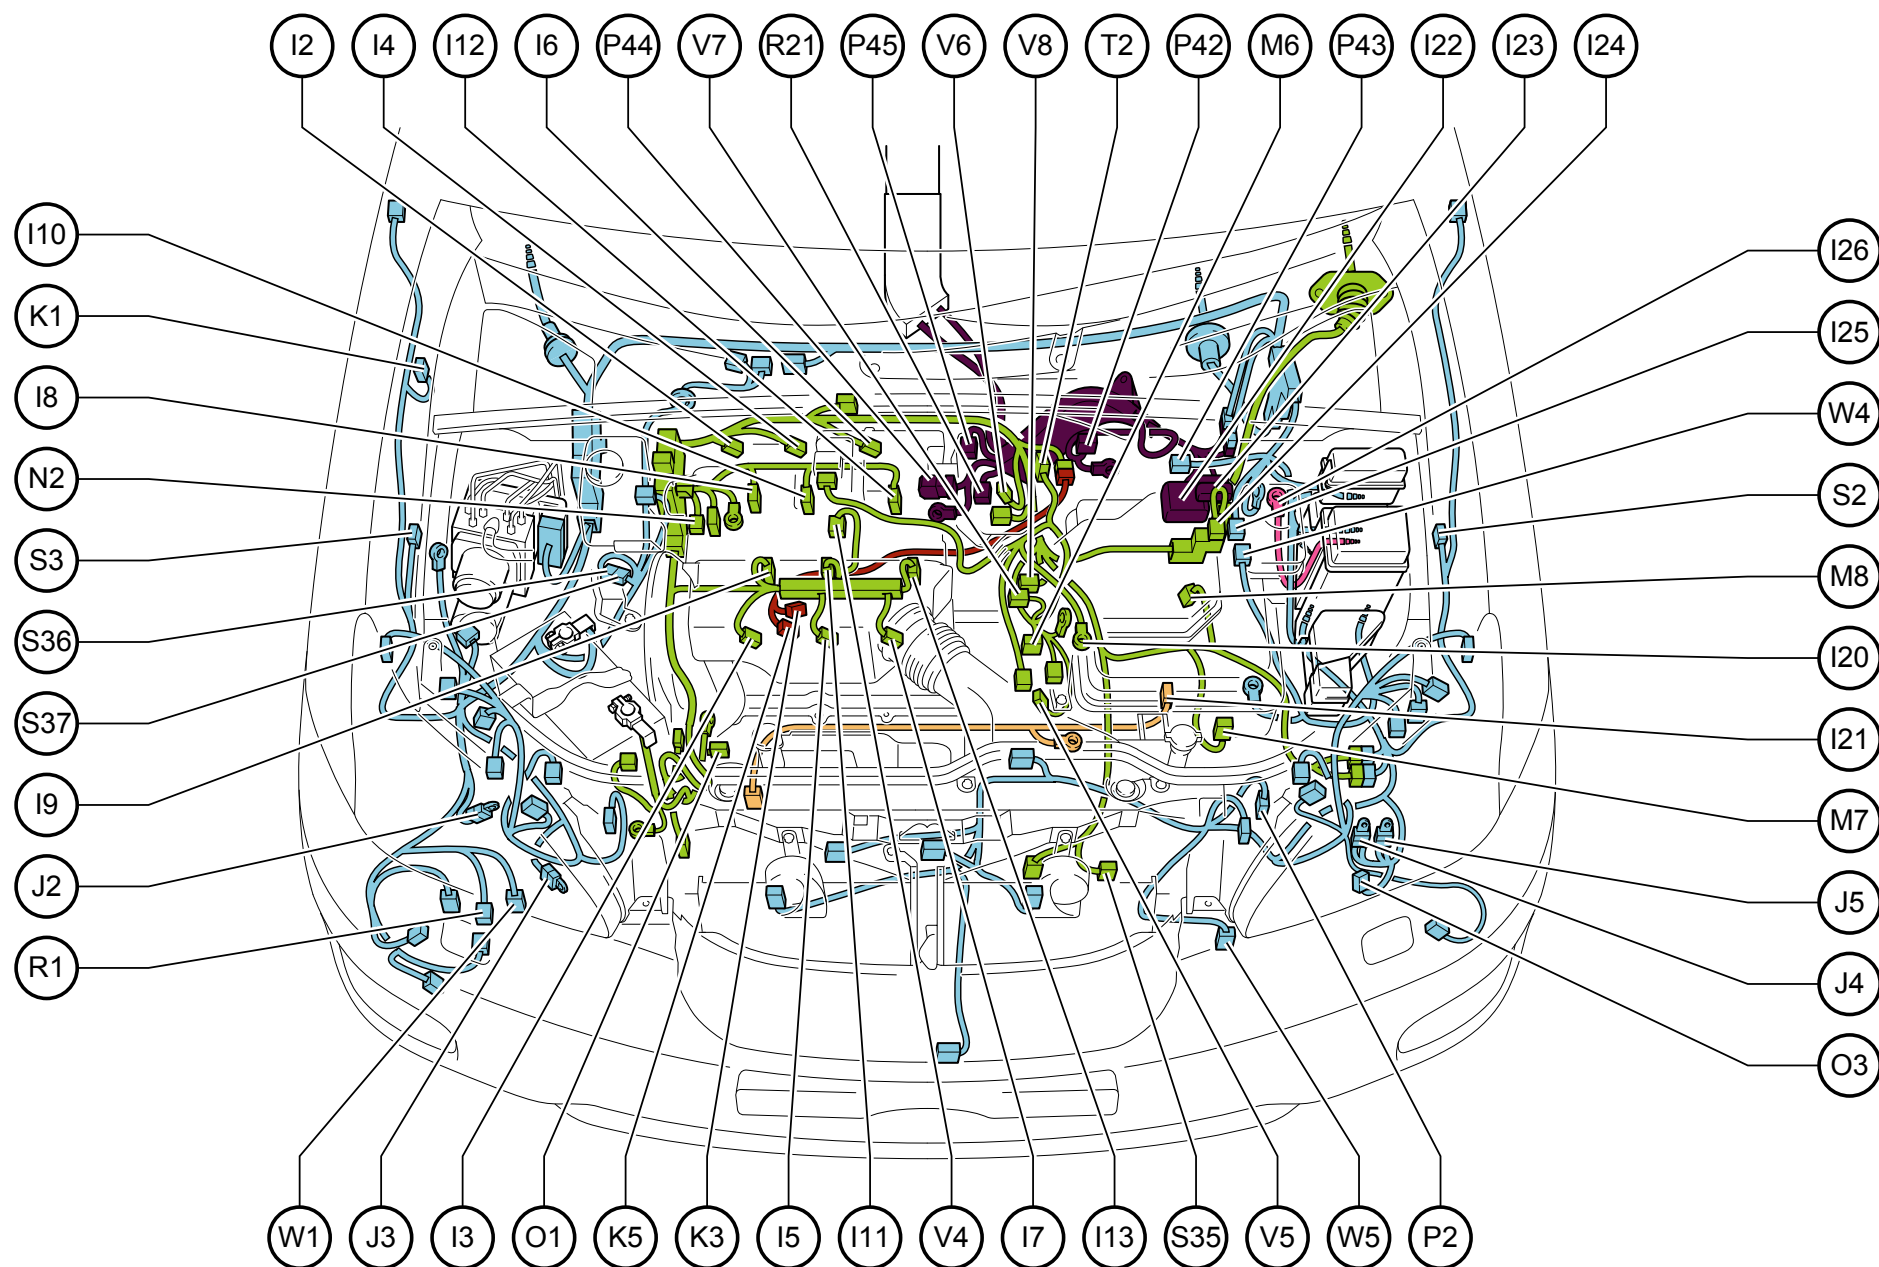



I	2	Ignition Coil and Igniter No.1
I	3	Ignition Coil and Igniter No.2
I	4	Ignition Coil and Igniter No.3
I	5	Ignition Coil and Igniter No.4
I	6	Ignition Coil and Igniter No.5
I	7	Ignition Coil and Igniter No.6
I	8	Injector No.1
I	9	Injector No.2
I	10	Injector No.3
I	11	Injector No.4
I	12	Injector No.5
I	13	Injector No.6
I	20	Inverter
I	21	Inverter
I	22	Inverter
I	23	Inverter
I	24	Inverter
I	25	Inverter
I	26	Inverter
J	2	Junction Connector
J	3	Junction Connector
J	4	Junction Connector
J	5	Junction Connector
K	1	Keyless Buzzer
K	3	Knock Sensor (Bank 1)
K	5	Knock Sensor (Bank 2)
M	6	Motor Generator No.1 (Front)
M	7	Motor Generator No.2 (Front)
M	8	Motor Generator No.2 (Front)
N	2	Noise Filter
O	1	Oil Pressure SW
O	3	Oil Pump Motor (Transaxle)
P	2	Pressure SW
P	42	Power Steering ECU
P	43	Power Steering ECU
P	44	Power Steering Motor
P	45	Power Steering Torque Sensor
R	1	Rear Washer Motor
R	21	Rotation Angle Sensor
S	2	Speed Sensor Front LH
S	3	Speed Sensor Front RH
S	35	Shift Lever Position Sensor (Park/Neutral Position SW)
S	36	Short Connector
S	37	Short Connector
T	2	Throttle Position Sensor and Motor
V	4	VSV (EVAP)
V	5	VVT Sensor LH
V	6	VVT Sensor RH
V	7	VVT Solenoid LH

                   
- V 8 VVT Solenoid RH
- W 1 Washer Level Warning SW
- W 4 Water Pump Motor (A/C)
- W 5 Water Pump Motor (Inverter)

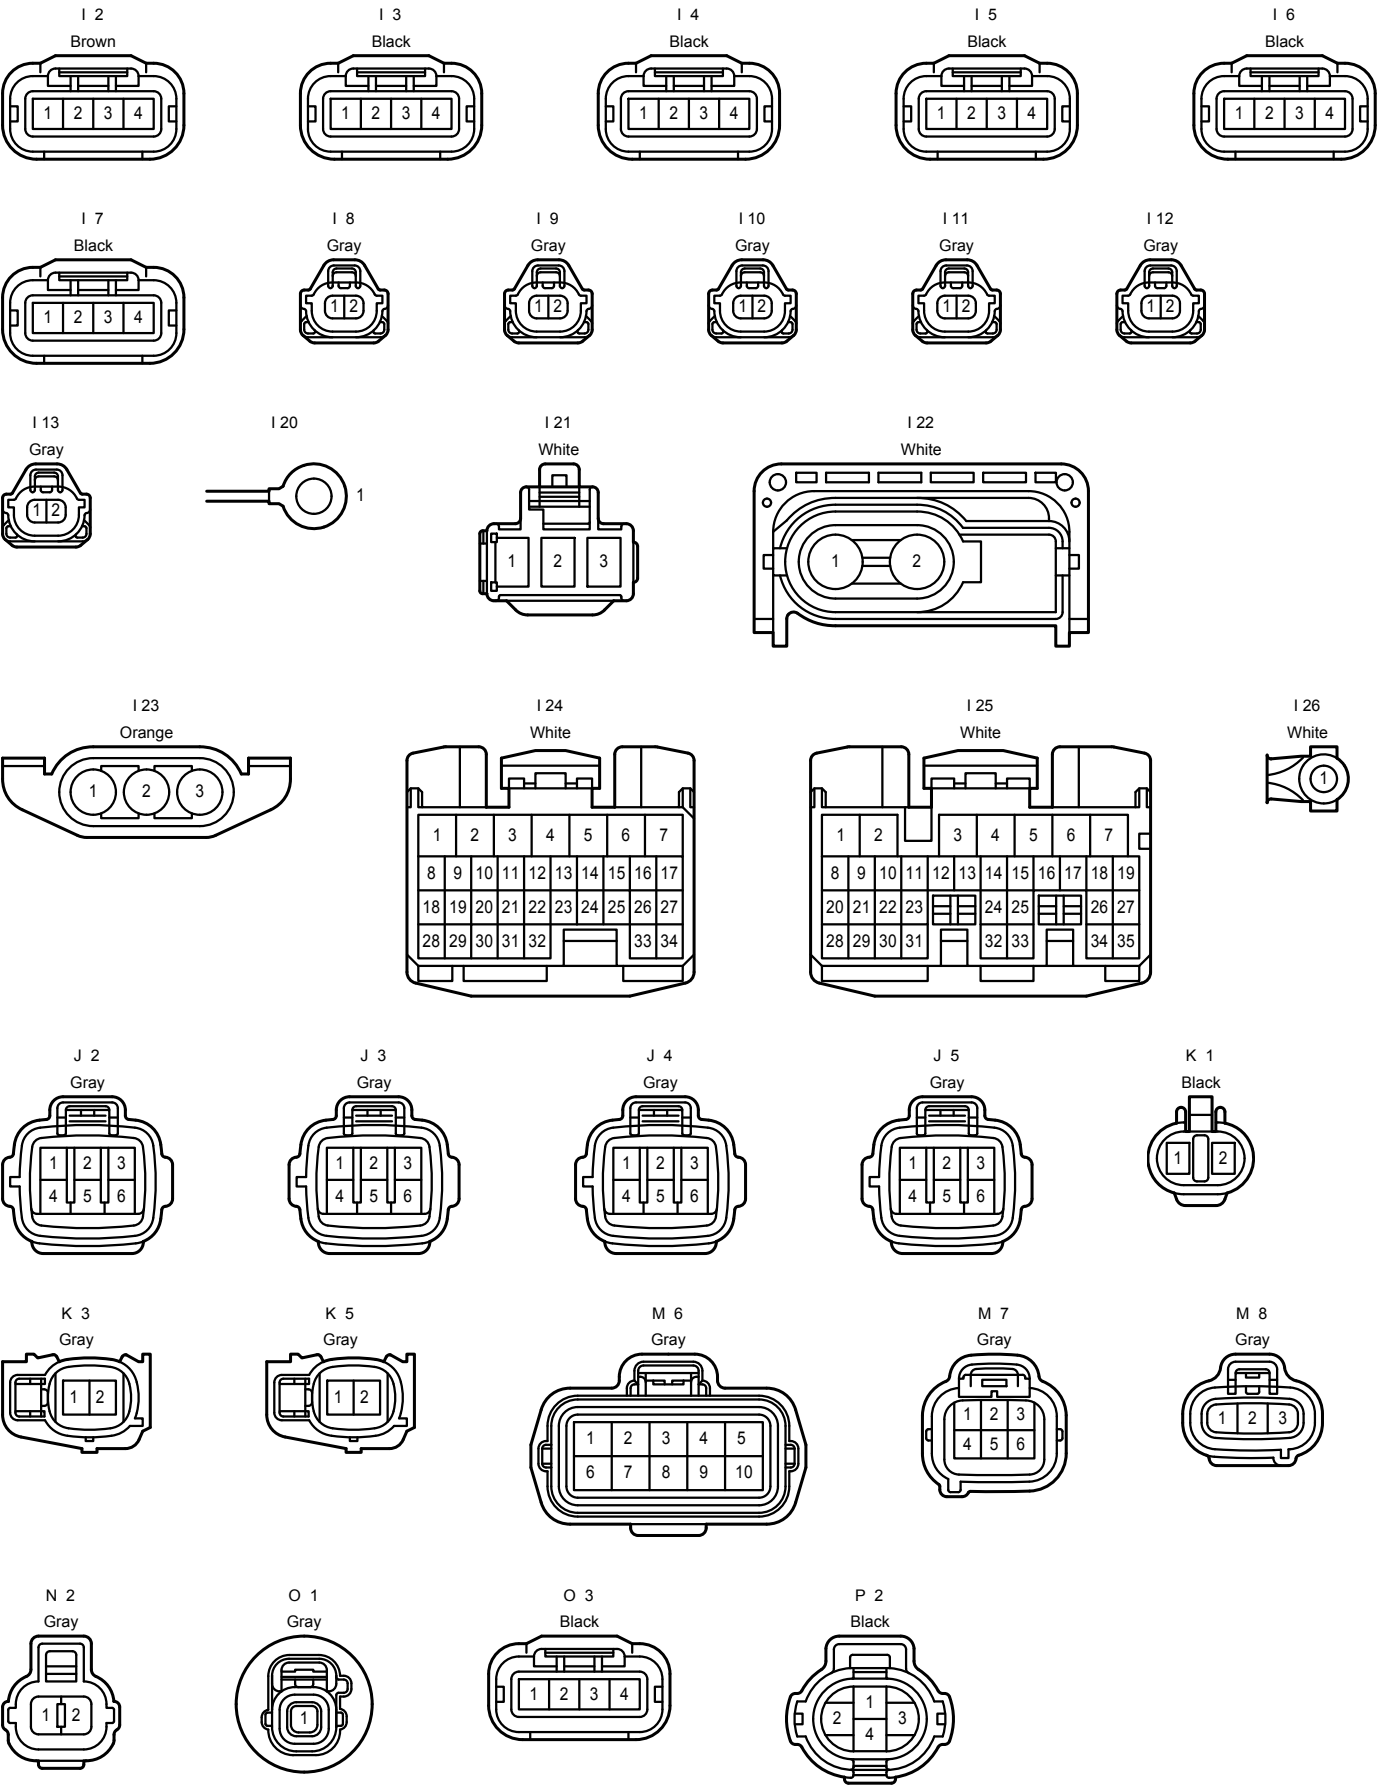 


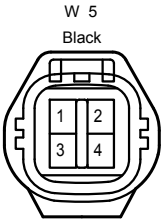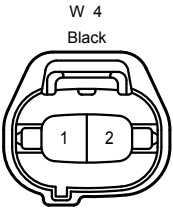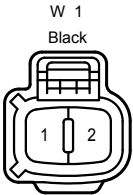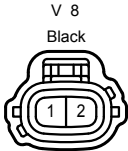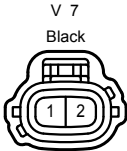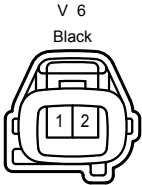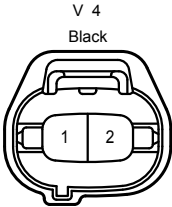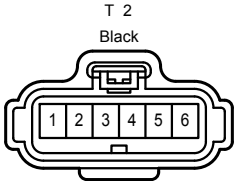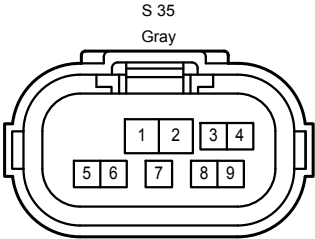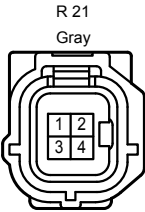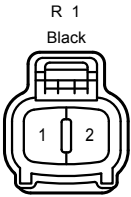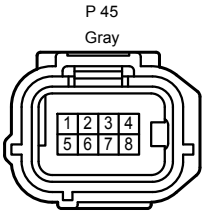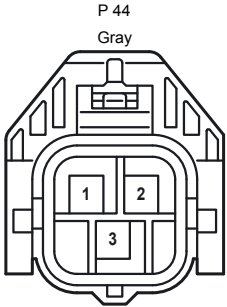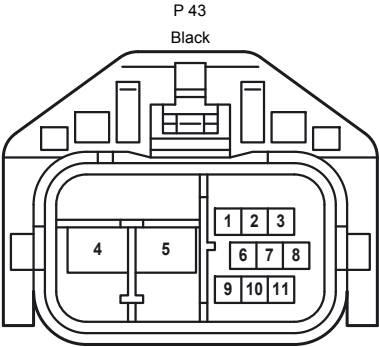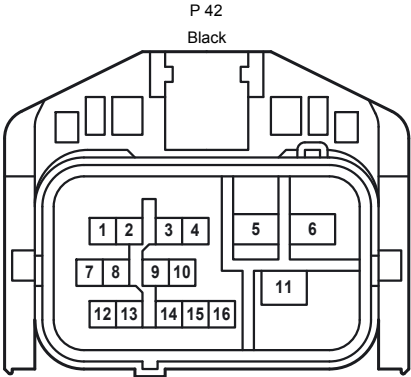 


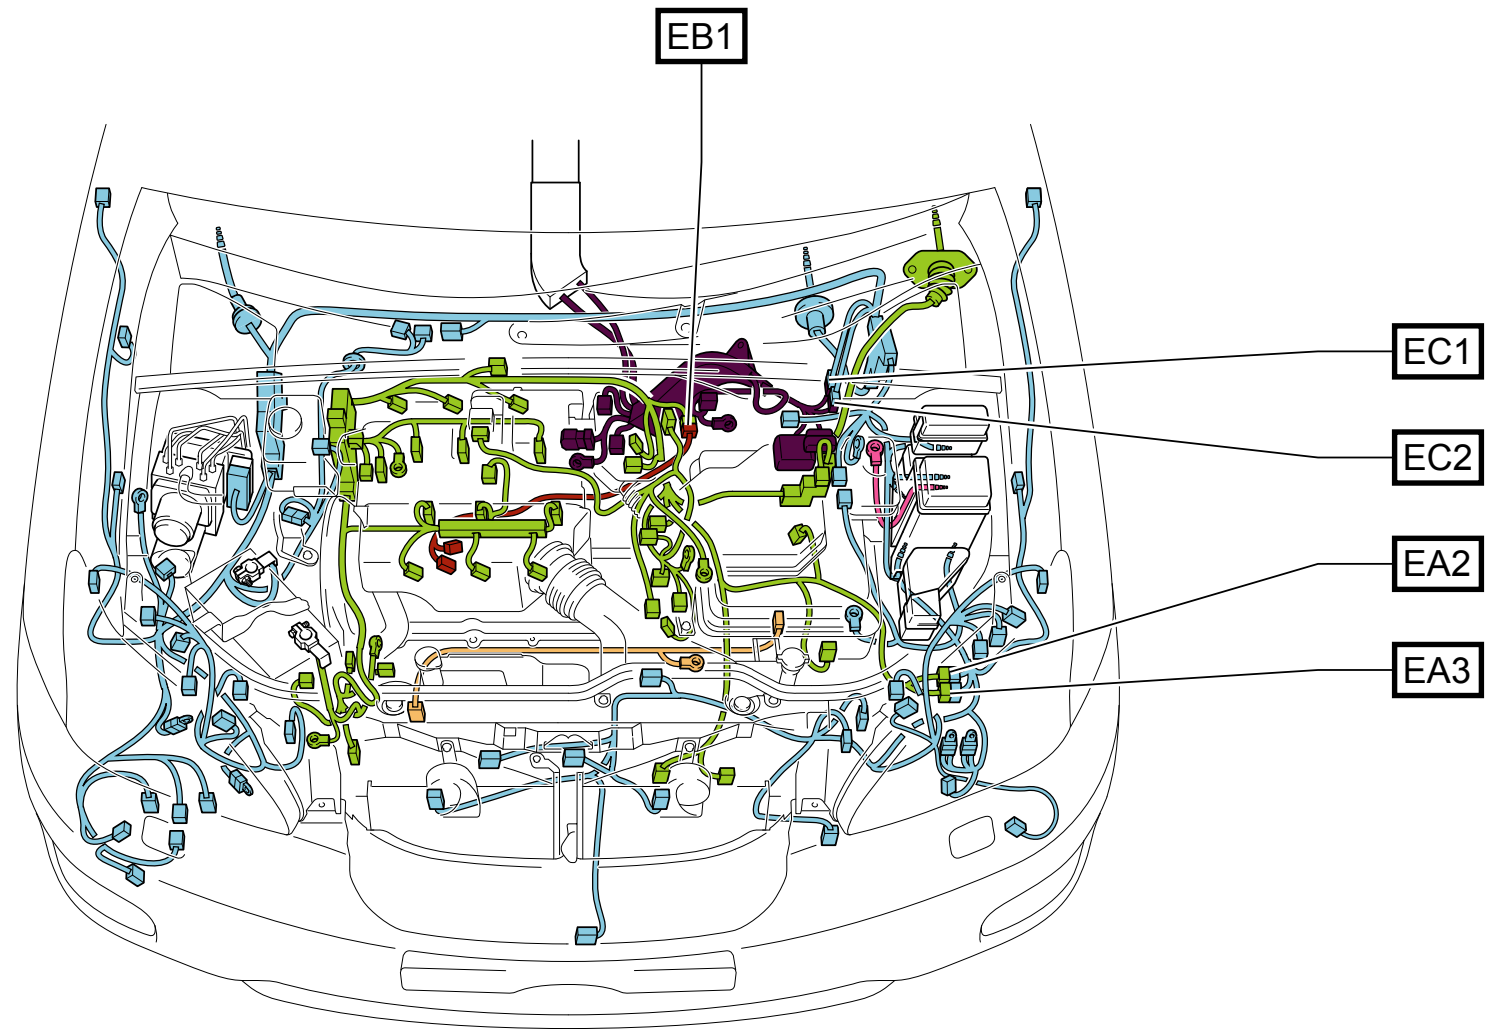

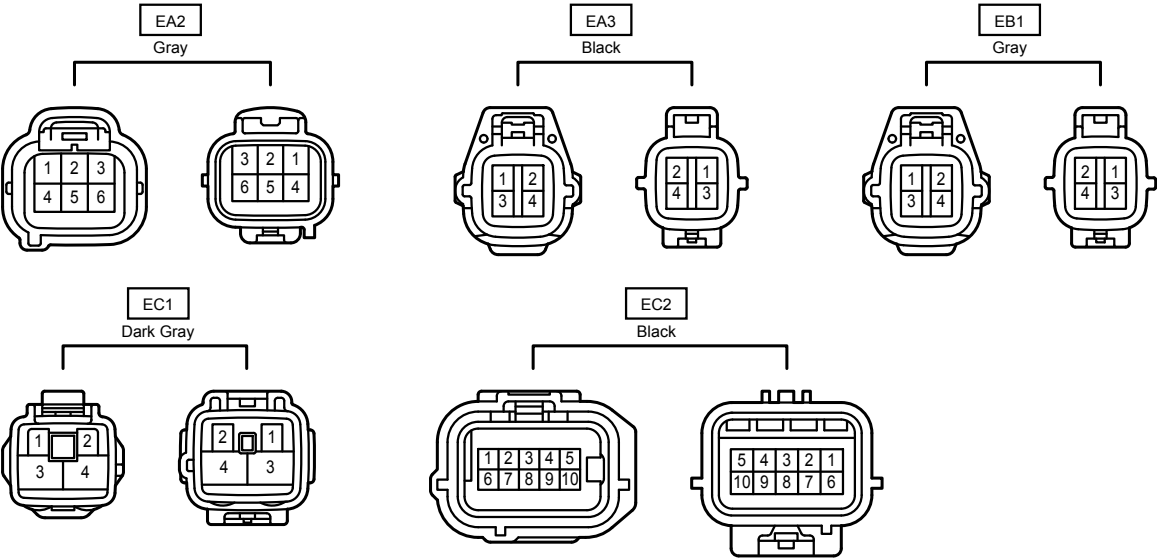

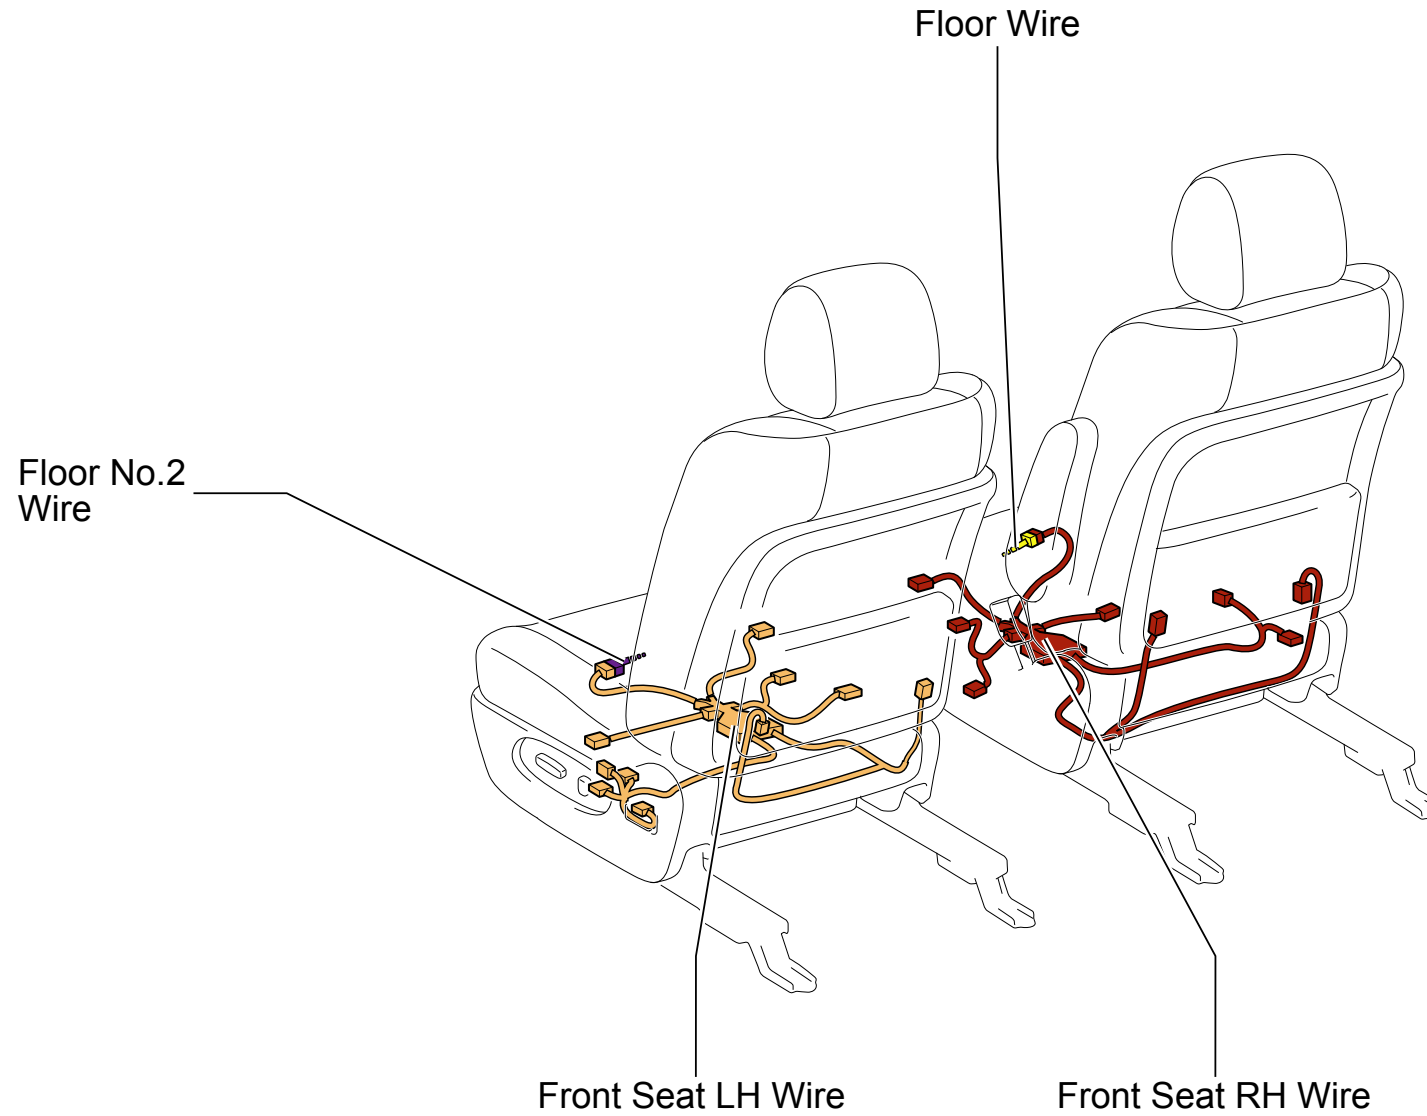

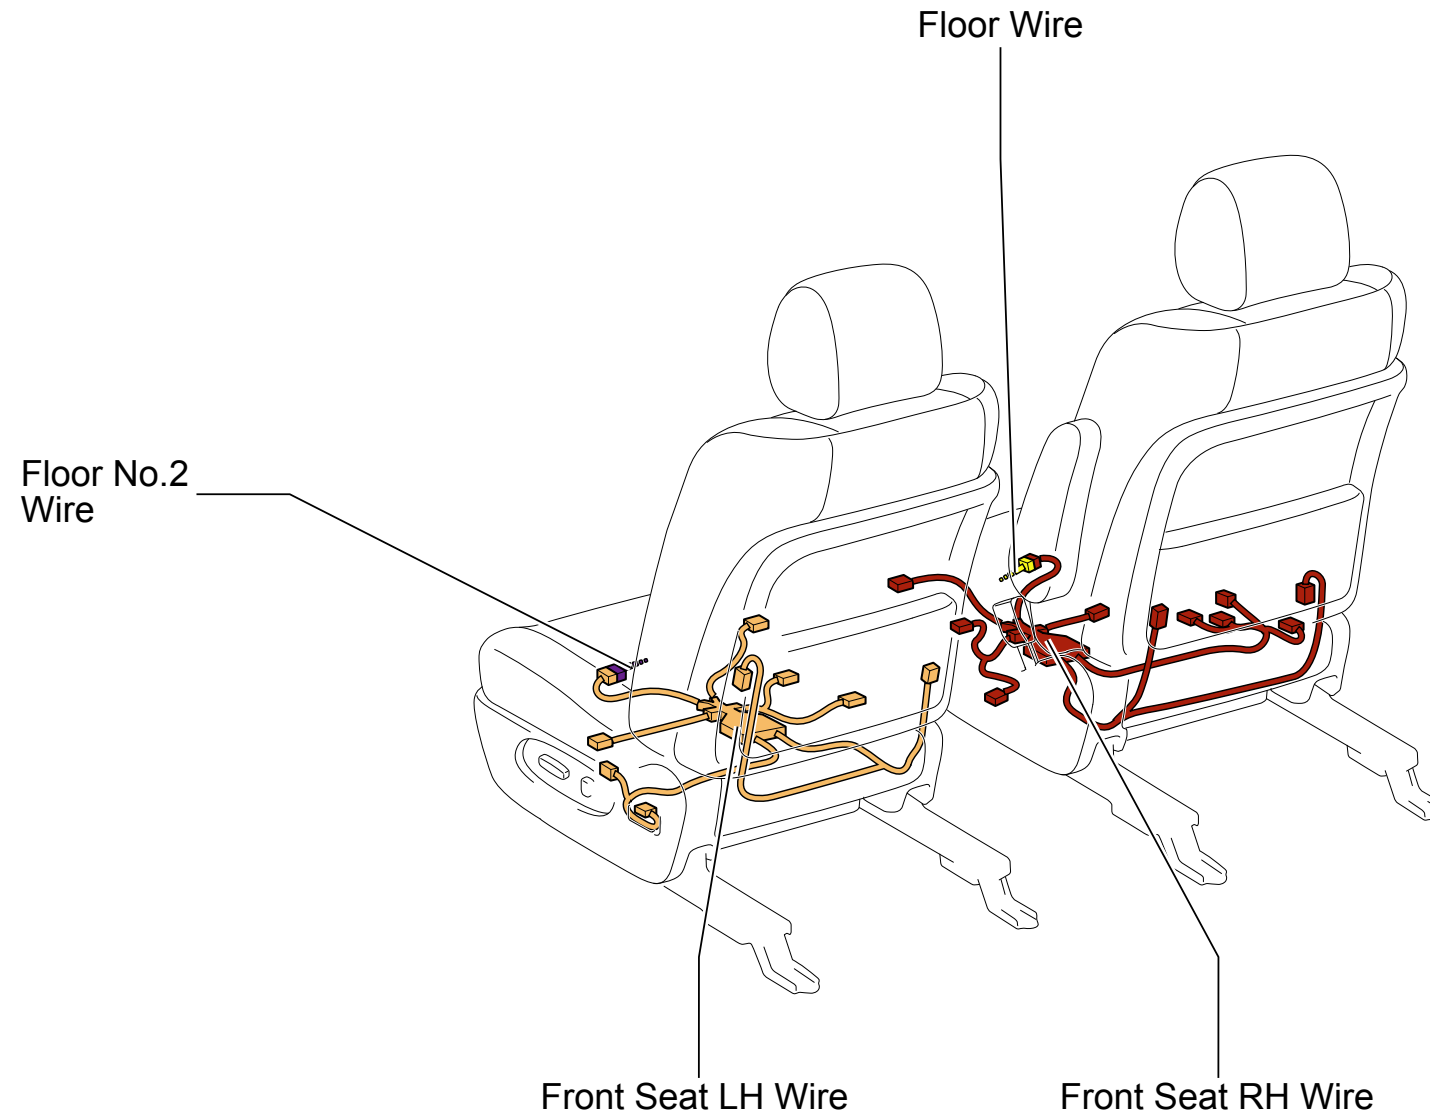


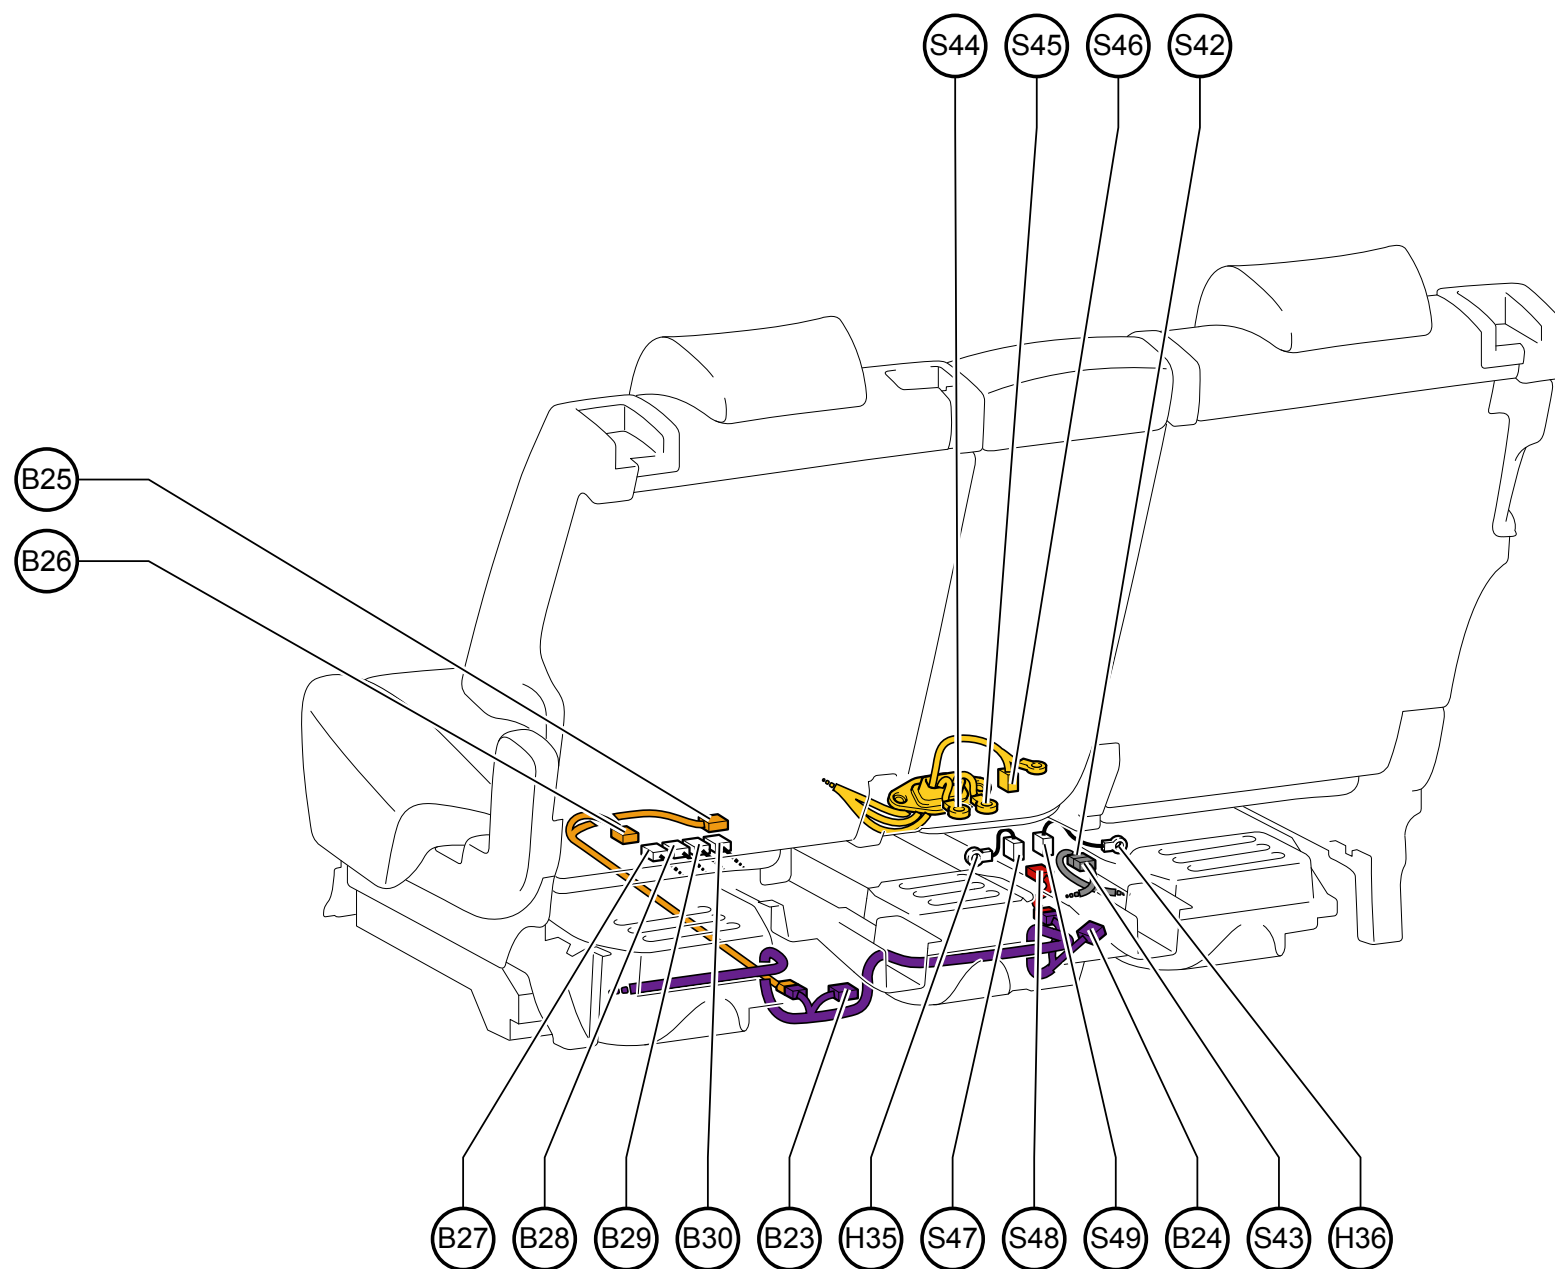



B 23 Battery Blower Motor (Center)
B 24 Battery Blower Motor (RH)
B 25 Battery Current Sensor , Hybrid Vehicle Battery
B 26 Battery Voltage Sensor , Hybrid Vehicle Battery
B 27 Battery Voltage Sensor , Hybrid Vehicle Battery
B 28 Battery Voltage Sensor , Hybrid Vehicle Battery
B 29 Battery Voltage Sensor , Hybrid Vehicle Battery
B 30 Battery Voltage Sensor , Hybrid Vehicle Battery


H 35 Hybrid Vehicle Battery
H 36 Hybrid Vehicle Battery

    S 42 Short Connector , Hybrid Vehicle Battery
S 43 Short Connector , Hybrid Vehicle Battery
S 44 System Main Relay
S 45 System Main Relay
S 46 System Main Relay
S 47 System Main Relay
S 48 System Main Relay
S 49 System Main Relay

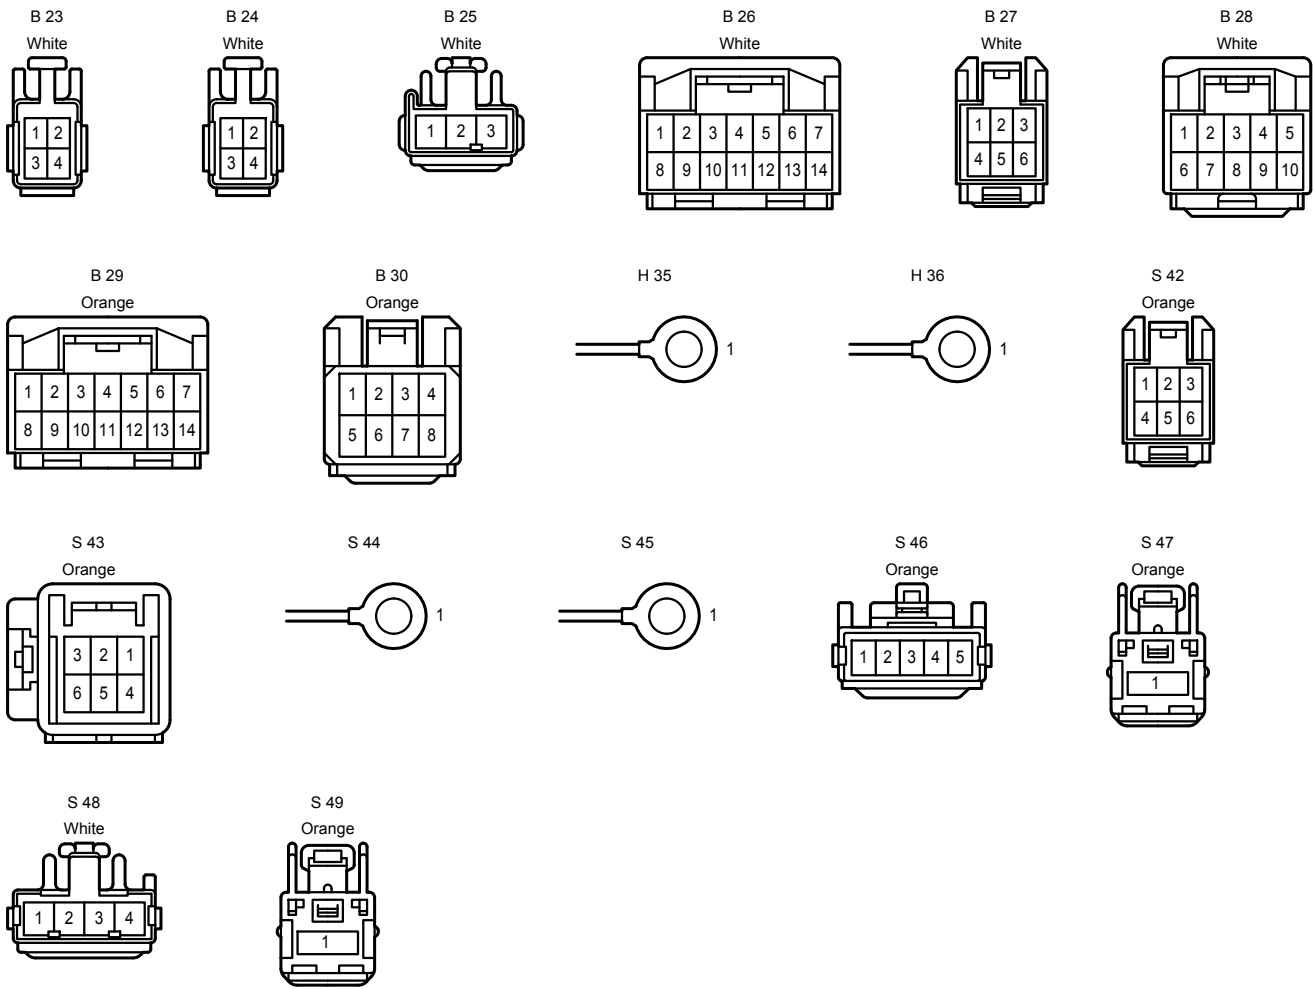

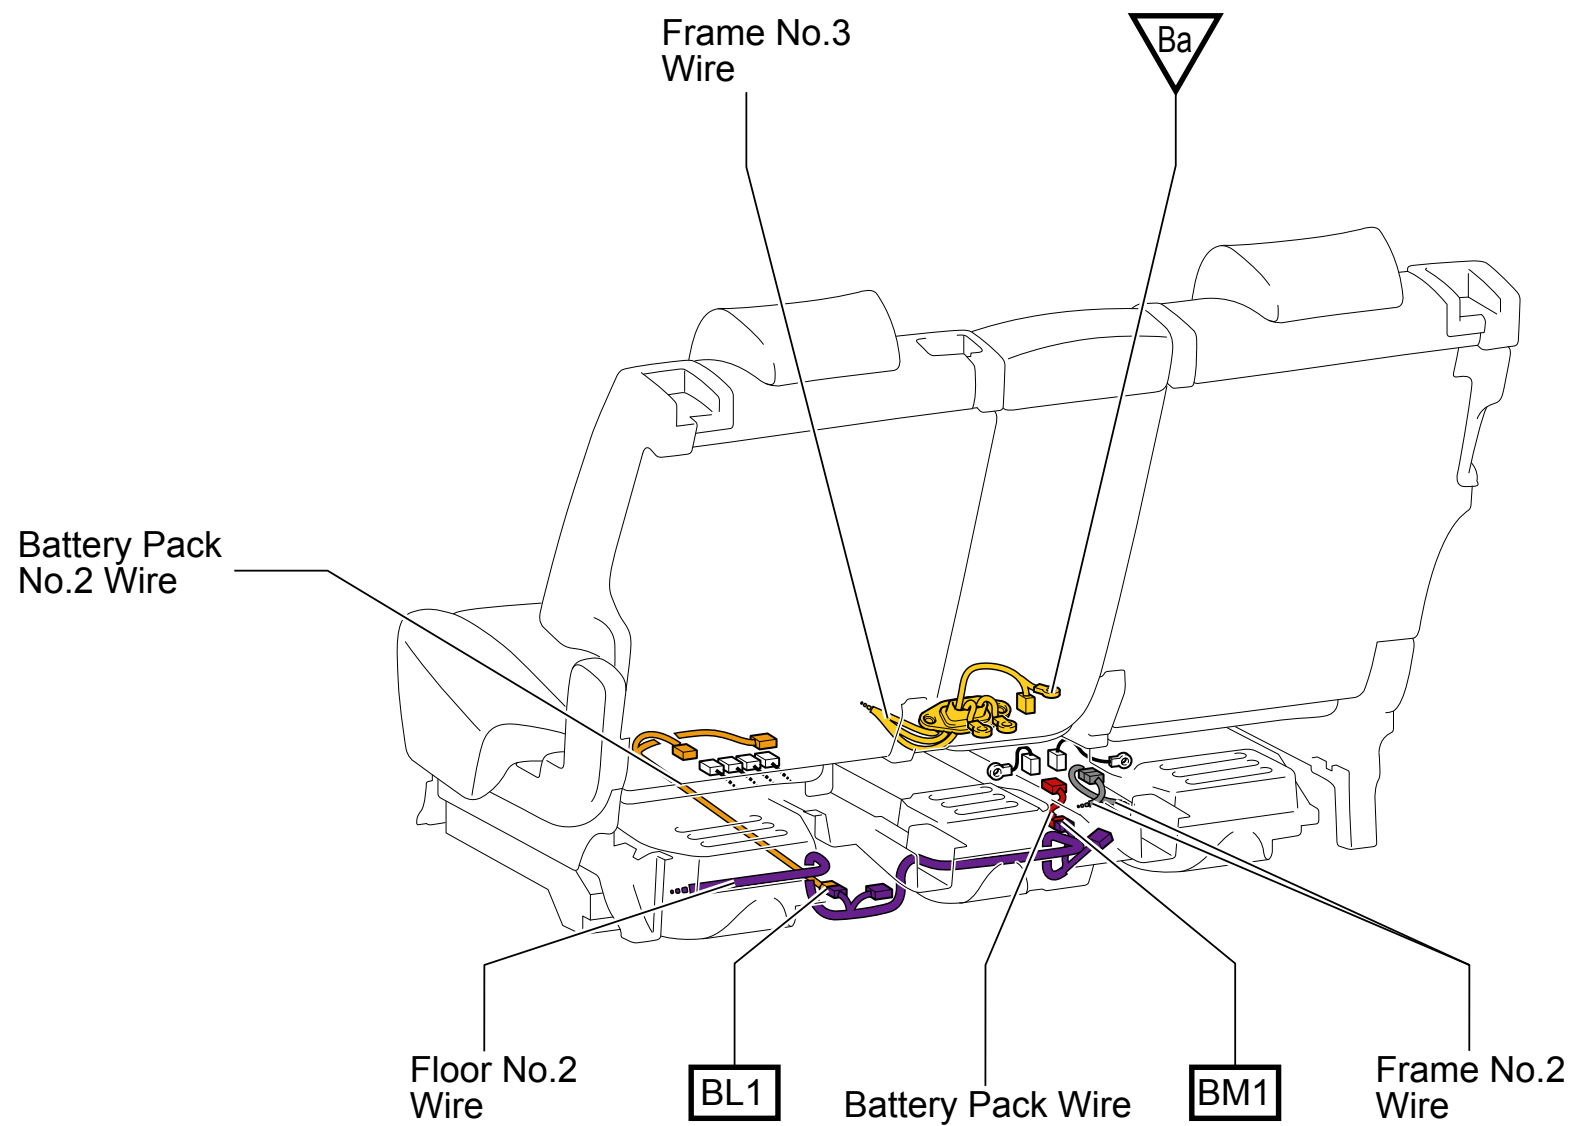

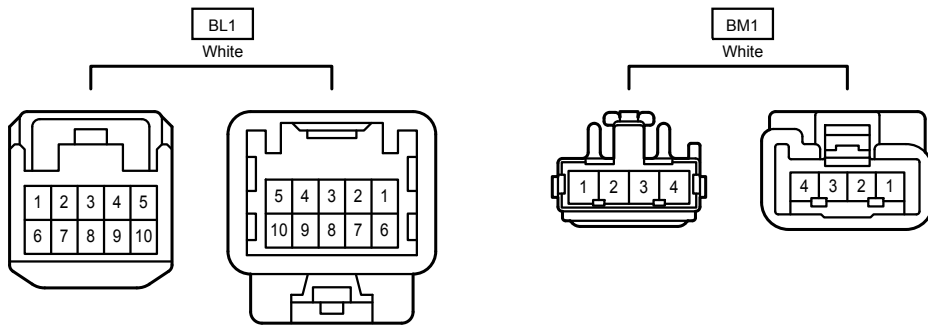

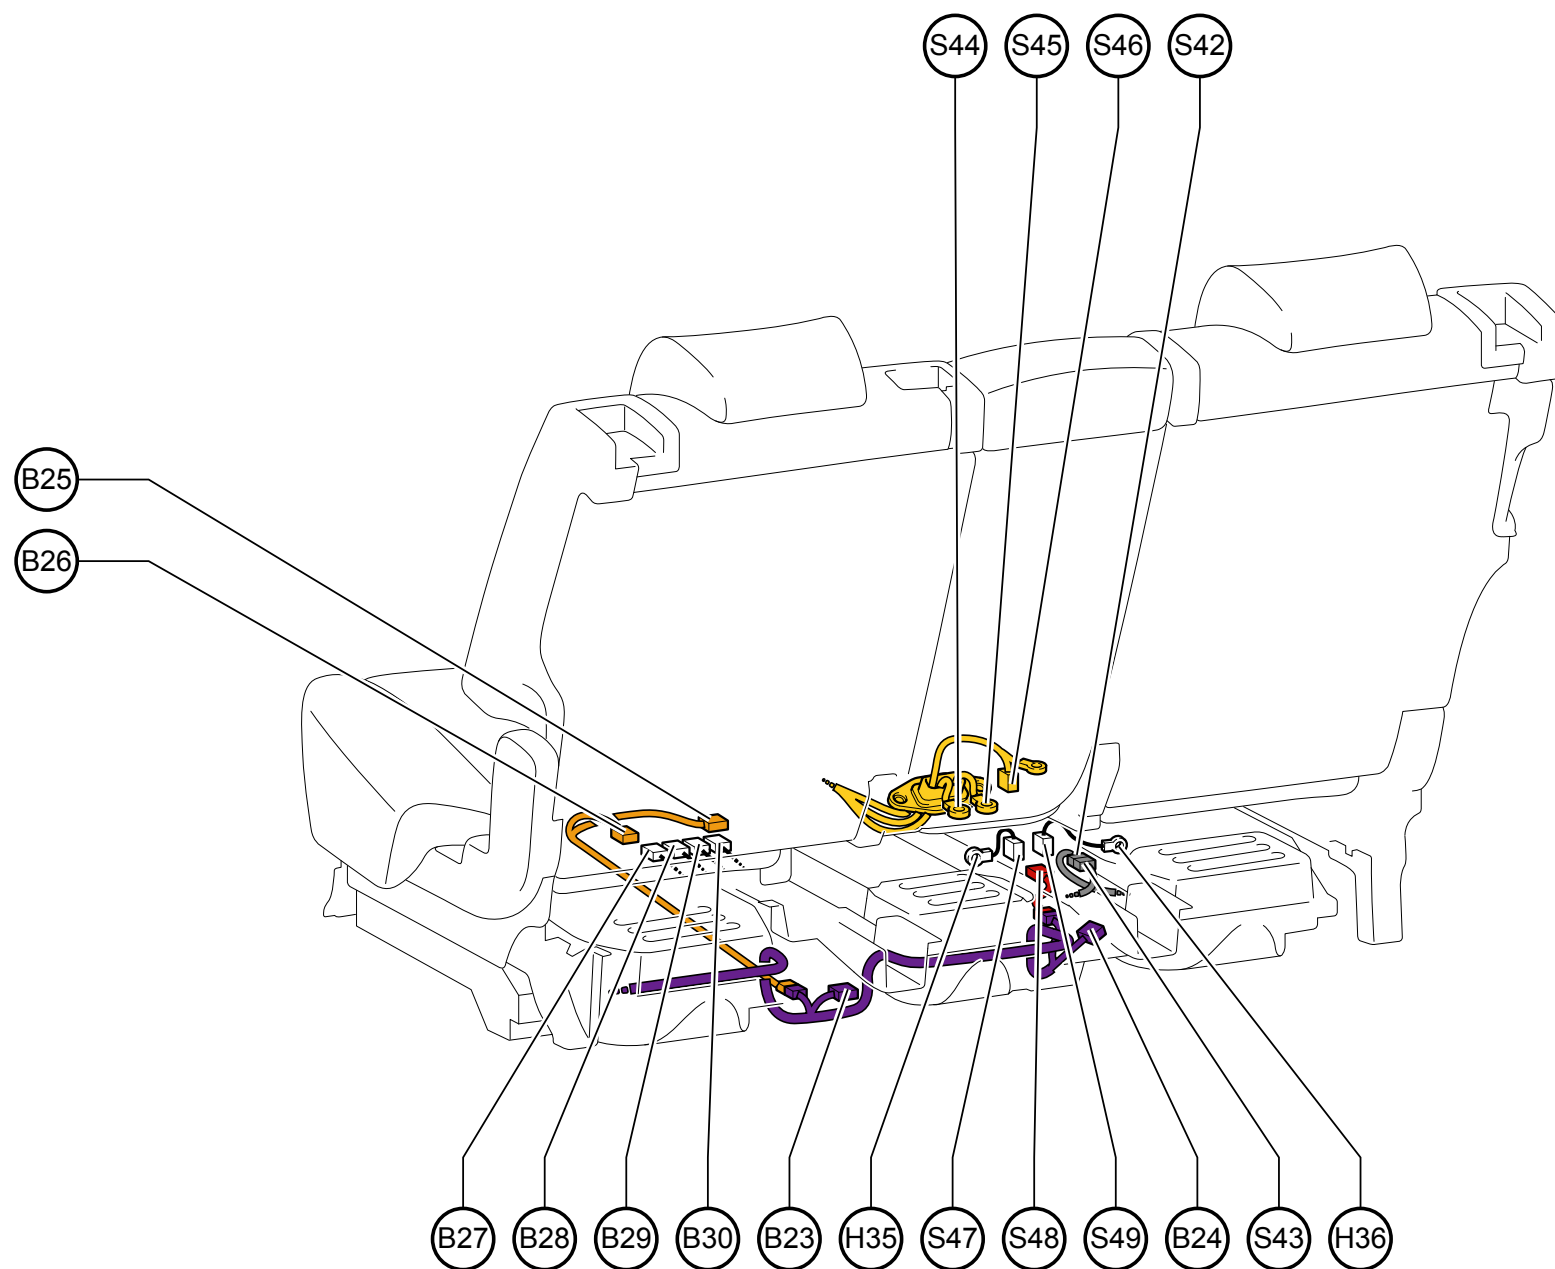



B 23 Battery Blower Motor (Center)
B 24 Battery Blower Motor (RH)
B 25 Battery Current Sensor , Hybrid Vehicle Battery
B 26 Battery Voltage Sensor , Hybrid Vehicle Battery
B 27 Battery Voltage Sensor , Hybrid Vehicle Battery
B 28 Battery Voltage Sensor , Hybrid Vehicle Battery
B 29 Battery Voltage Sensor , Hybrid Vehicle Battery
B 30 Battery Voltage Sensor , Hybrid Vehicle Battery


H 35 Hybrid Vehicle Battery
H 36 Hybrid Vehicle Battery


S 42 Short Connector , Hybrid Vehicle Battery
S 43 Short Connector , Hybrid Vehicle Battery
S 44 System Main Relay
S 45 System Main Relay
S 46 System Main Relay
S 47 System Main Relay
S 48 System Main Relay
S 49 System Main Relay

    Position of Parts in Seat <RHD:Rear Seat>

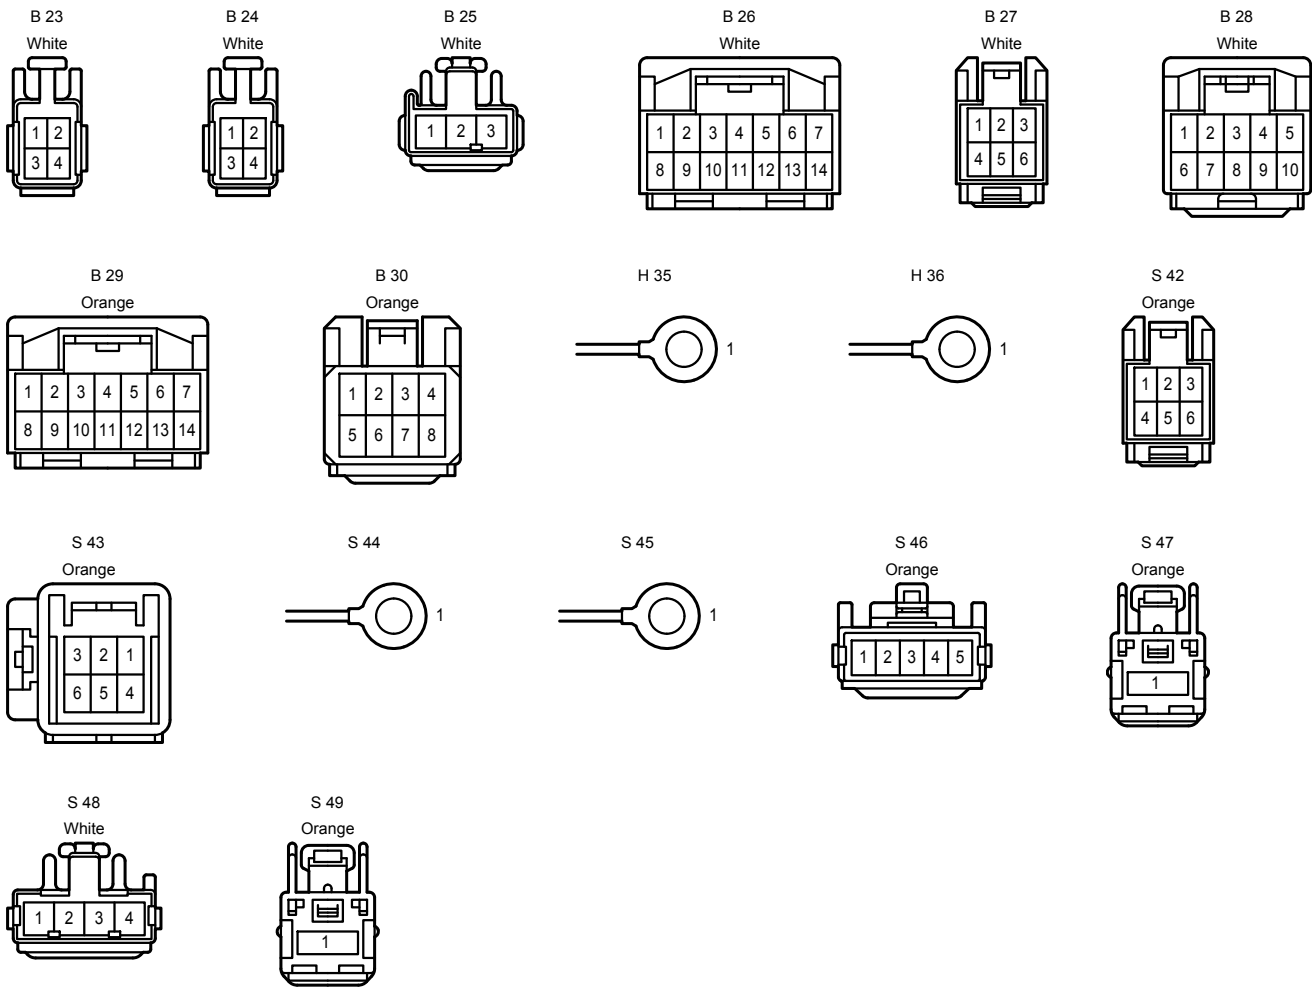


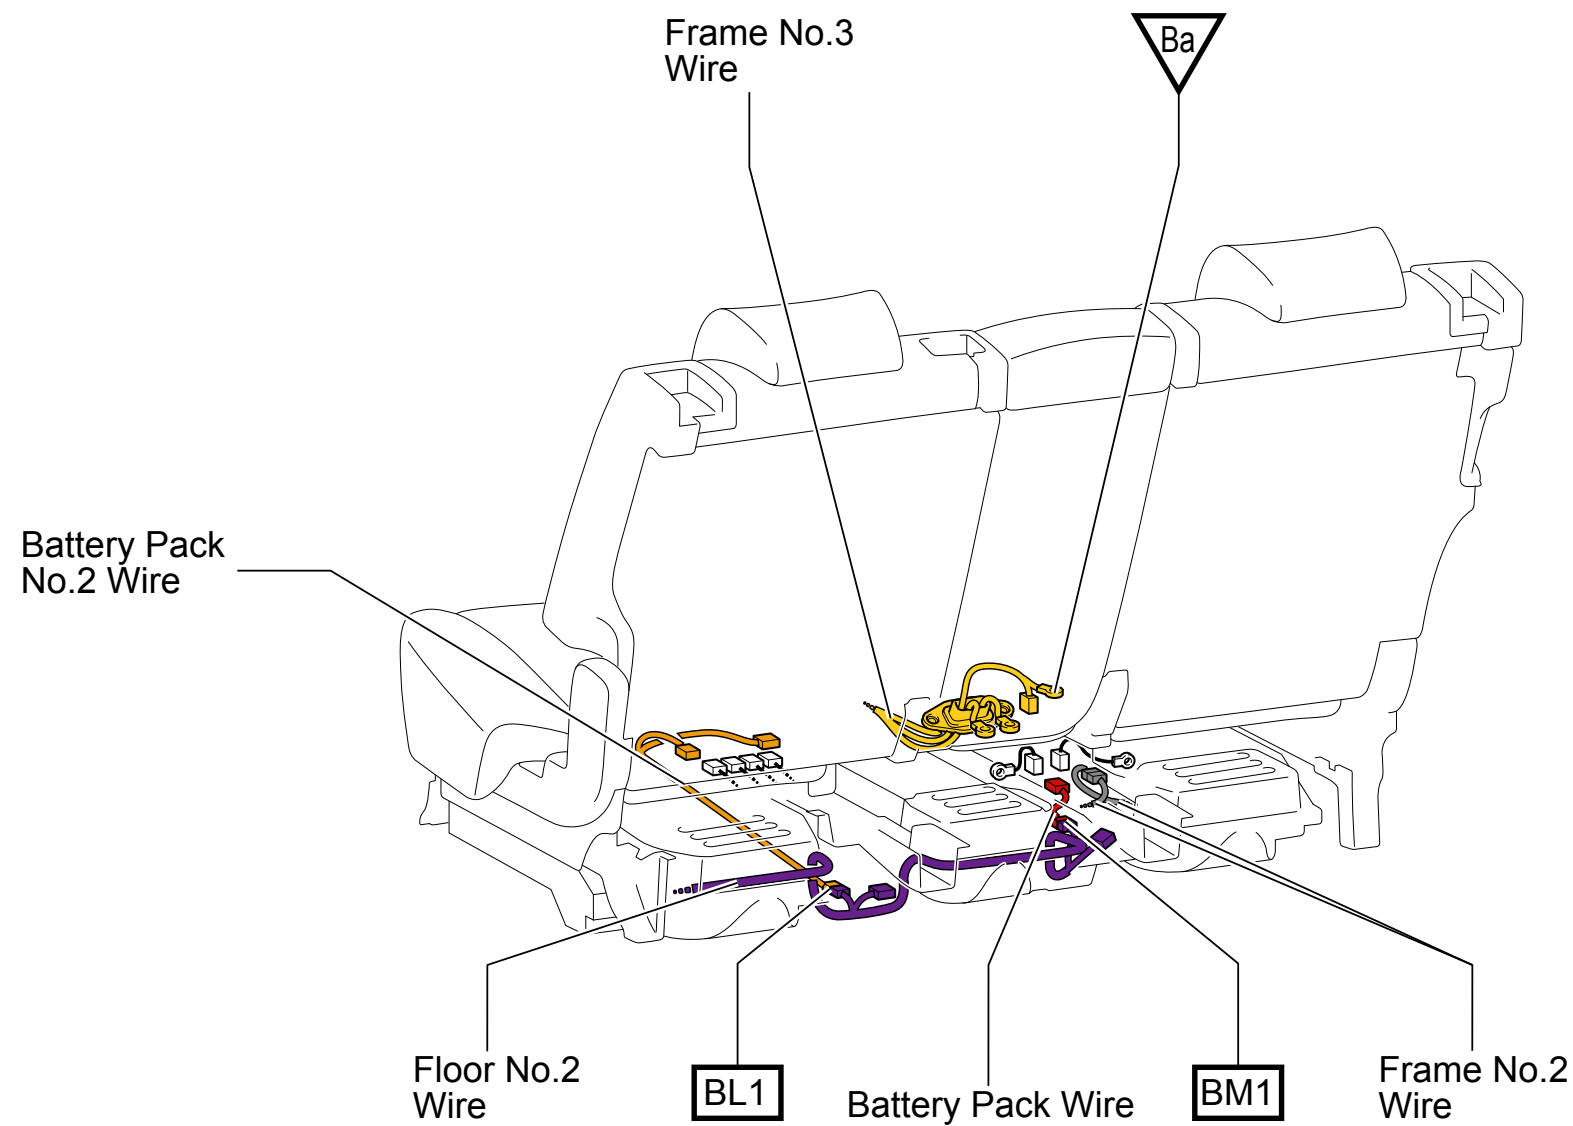

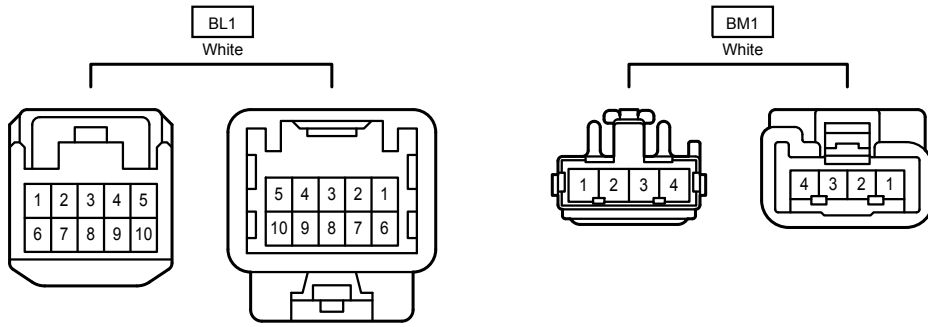

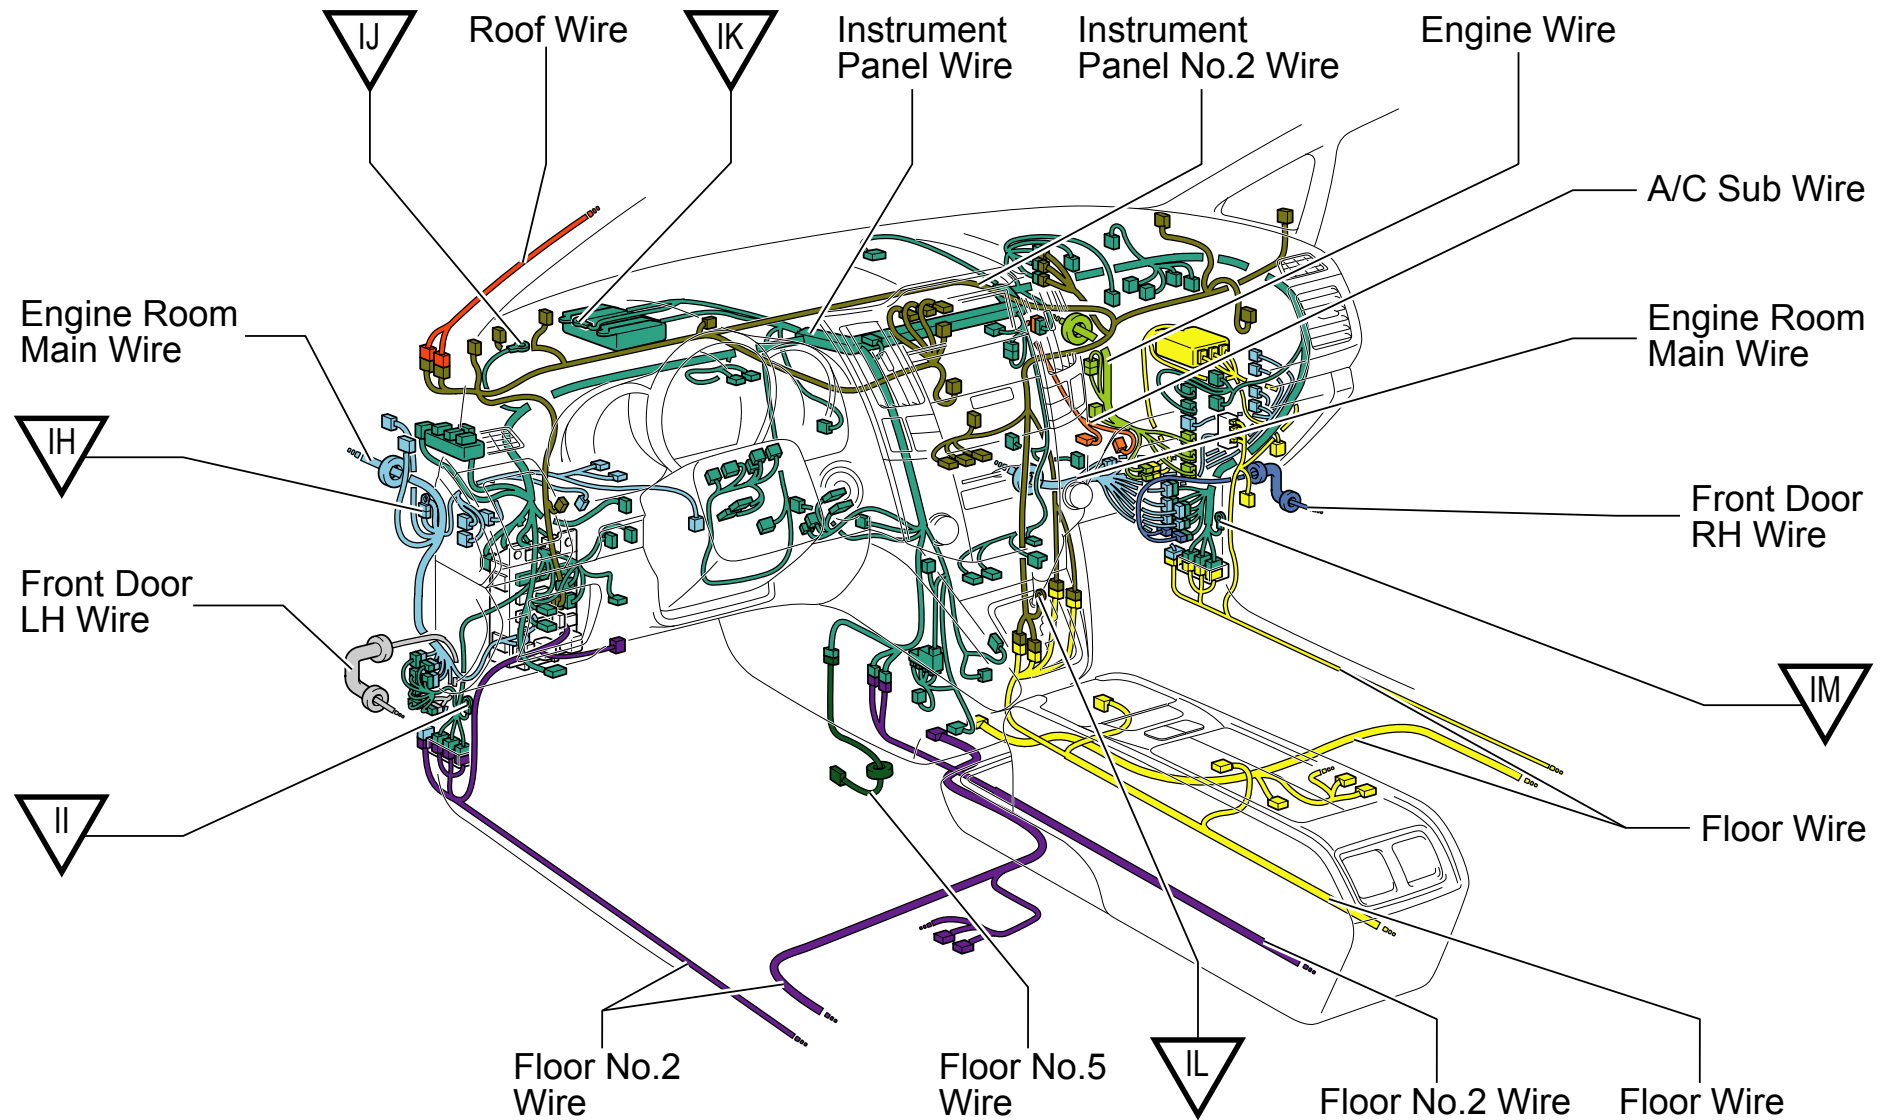




















 
Position of Parts in Instrument Panel <LHD>

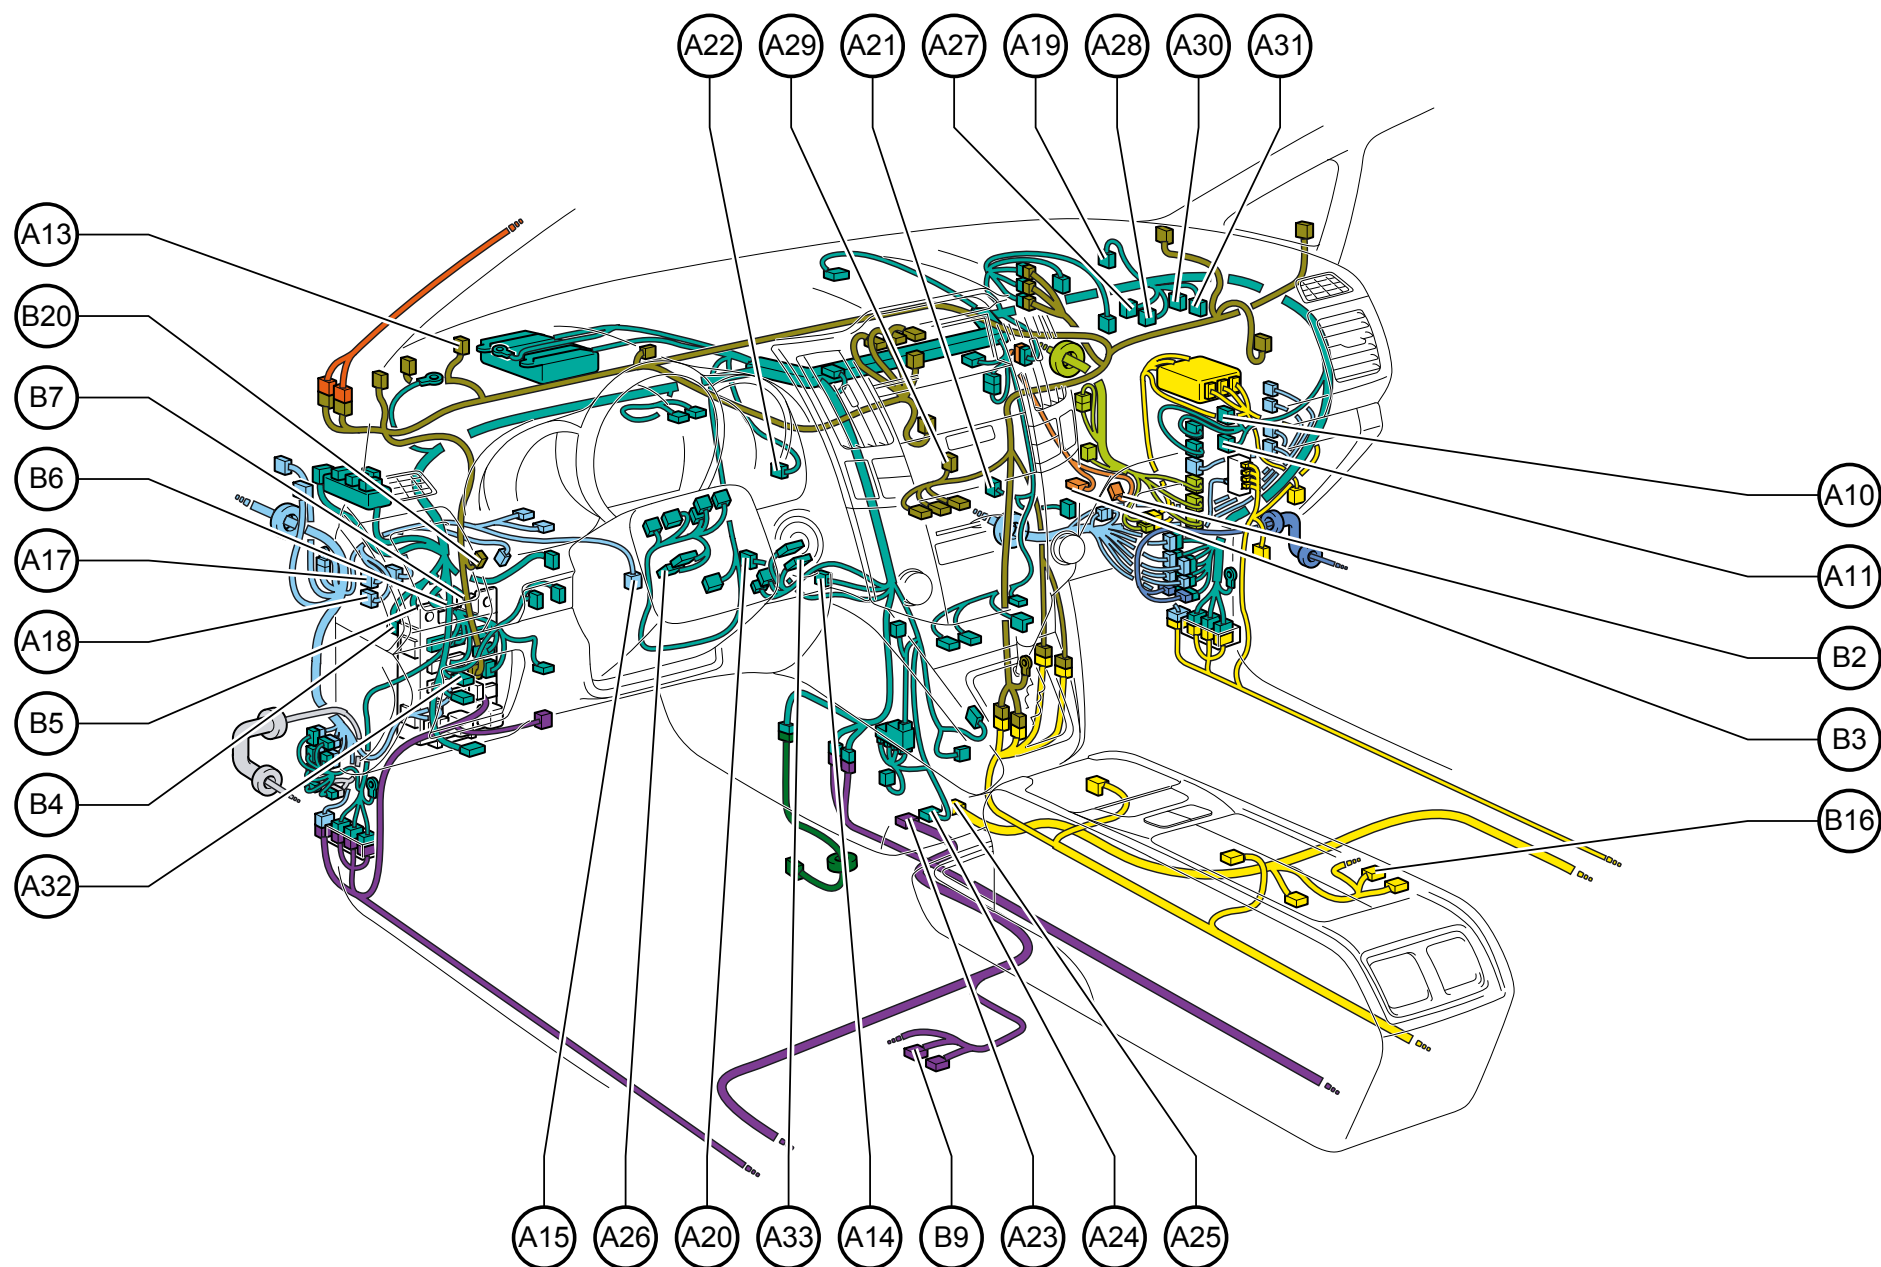









- A 10 A/C Amplifier
- A 11 A/C Amplifier
- A 13 A/C Solar Sensor , Automatic Light Control Sensor
- A 14 A/C Thermistor
- A 15 Accel Position Sensor
- A 17 AFS ECU
- A 18 AFS ECU
- A 19 Air Inlet Control Servo Motor
- A 20 Air Mix Control Servo Motor (Driver Side)
- A 21 Air Mix Control Servo Motor (Front Passenger Side)
- A 22 Air Vent Mode Control Servo Motor
- A 23 Airbag Sensor Assembly
- A 24 Airbag Sensor Assembly
- A 25 Airbag Sensor Assembly
- A 26 Airbag Squib (Steering Wheel Pad)
- A 27 Airbag Squib (Front Passenger Airbag Assembly)
- A 28 Airbag Squib (Front Passenger Airbag Assembly)
- A 29 Antenna Amplifier
- A 30 Auto Wiper ECU
- A 31 Auto Wiper ECU
- A 32 AFS Off SW
- A 33 A/C Room Temp. Sensor , Humidity Sensor

- B 2 Blower Motor (LHD)
- B 3 Blower Motor Controller
- B 4 Body ECU
- B 5 Body ECU
- B 6 Body ECU
- B 7 Body ECU
- B 9 Buckle SW (Driver's Side) , Seat Position Airbag Sensor
- B 16 Buckle SW (Front Passenger's Side) , Occupant Detection Sensor
- B 20 Brake Pedal Stroke Sensor

                    
Position of Parts in Instrument Panel <LHD>

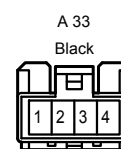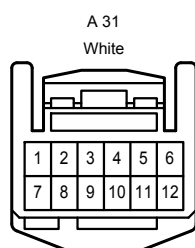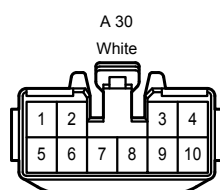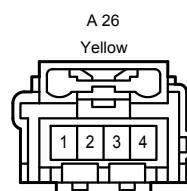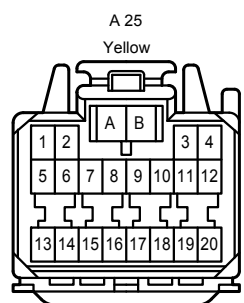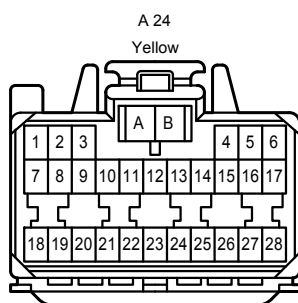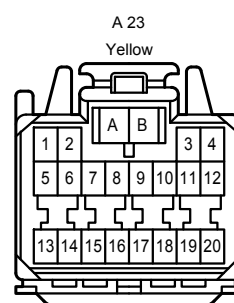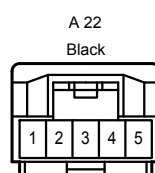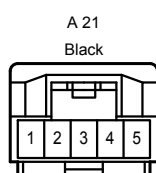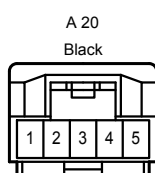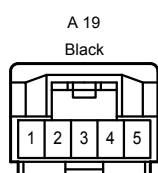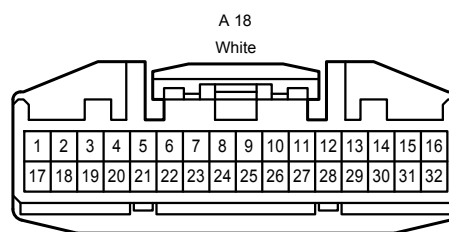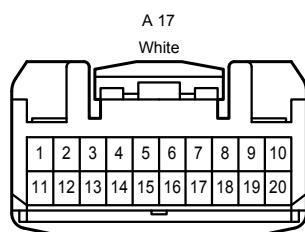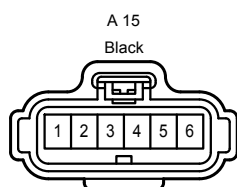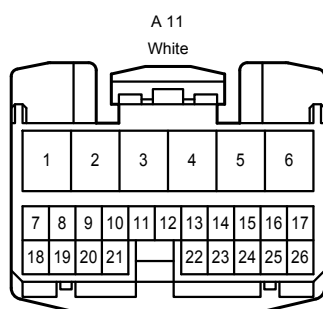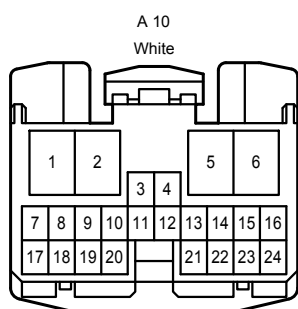

        Position of Parts in Instrument Panel <LHD>

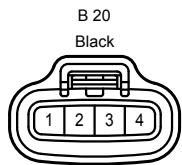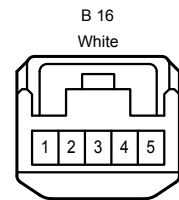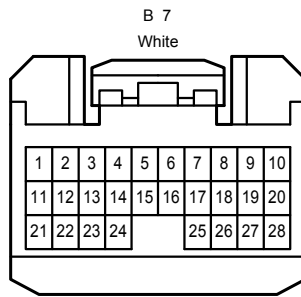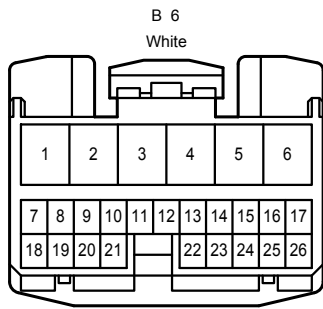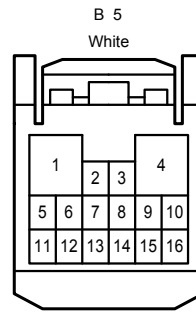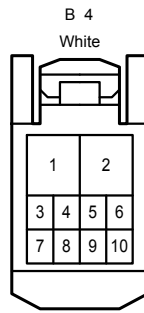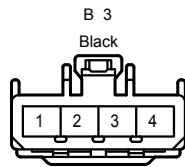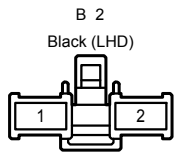

 Position of Parts in Instrument Panel <LHD>

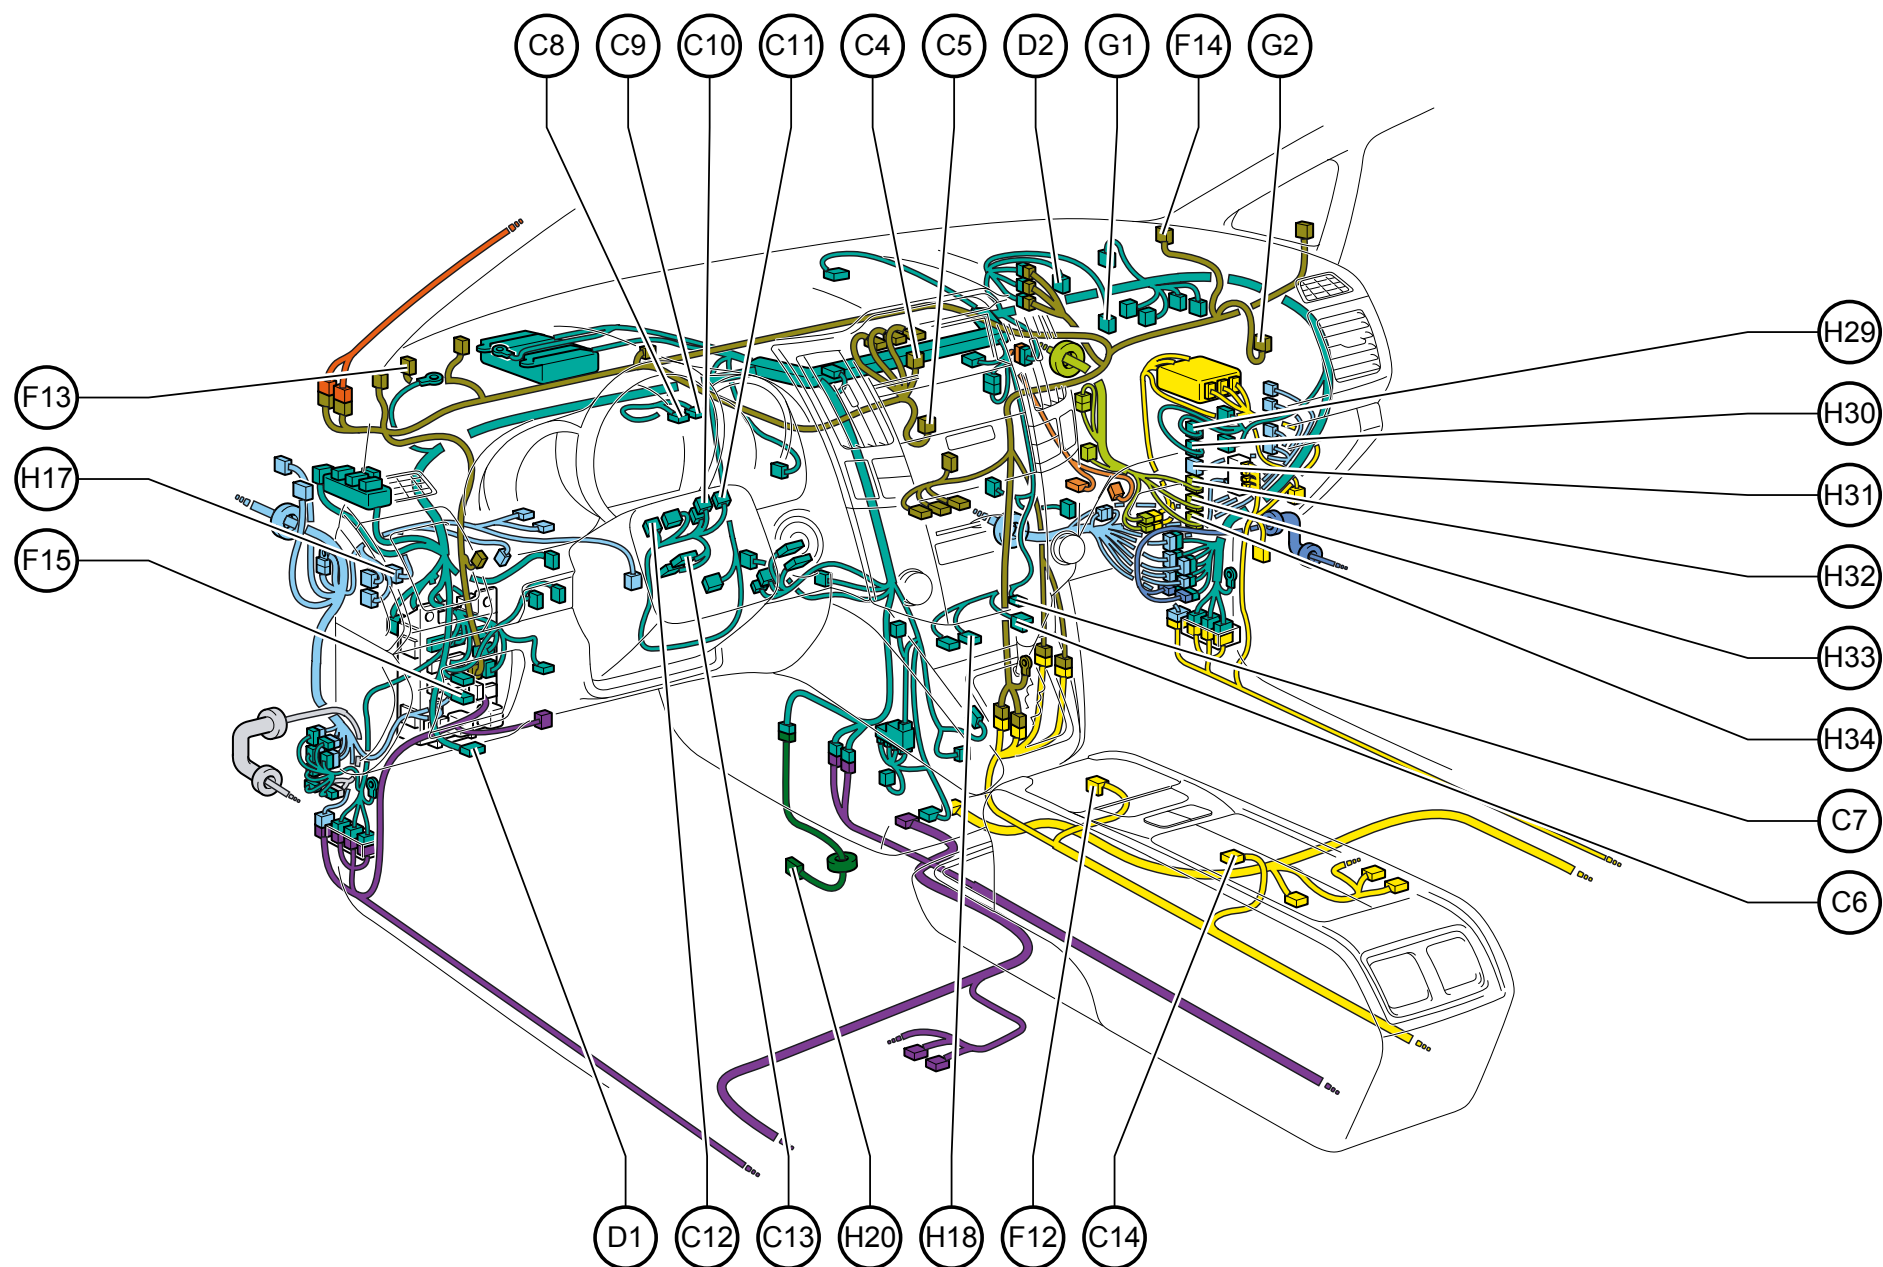

- C 4 Center Cluster Integration Panel
- C 5 Center Speaker
- C 6 Cigarette Lighter
- C 7 Cigarette Lighter Illumination
- C 8 Combination Meter
- C 9 Combination Meter
- C 10 Combination SW
- C 11 Combination SW
- C 12 Combination SW
- C 13 Combination SW
- C 14 Console Box Illumination

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- D 1 DLC3
- D 2 Double Door Lock ECU

- F 12 Front Power Outlet
- F 13 Front Squawker LH
- F 14 Front Squawker RH
- F 15 Fuel Lid Opener SW







- G 1 Gateway ECU
- G 2 Glove Box Light

- H 17 Headlight Beam Level Control ECU
- H 18 Headlight Cleaner SW
- H 20 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 29 Hybrid Vehicle Control ECU
- H 30 Hybrid Vehicle Control ECU
- H 31 Hybrid Vehicle Control ECU
- H 32 Hybrid Vehicle Control ECU
- H 33 Hybrid Vehicle Control ECU
- H 34 Hybrid Vehicle Control ECU


Position of Parts in Instrument Panel <LHD>

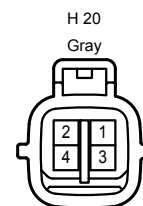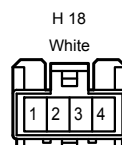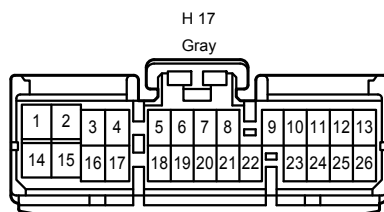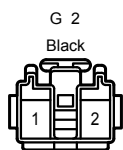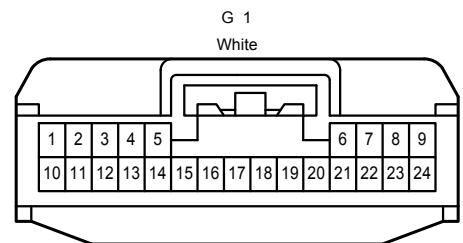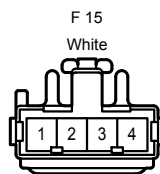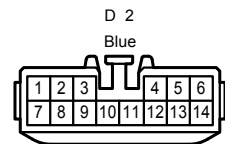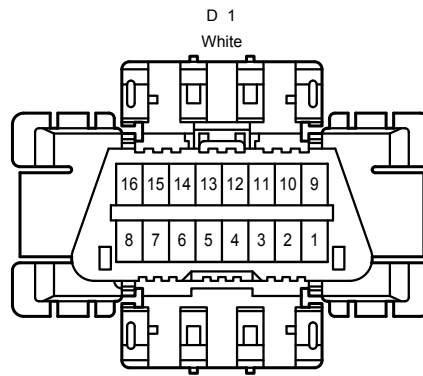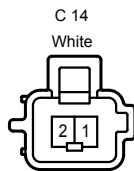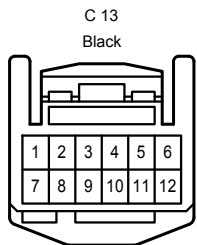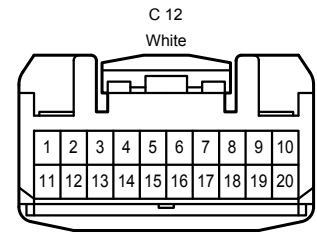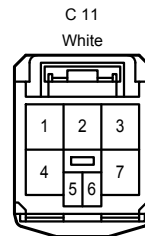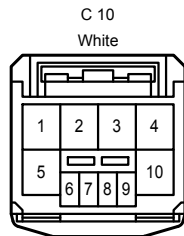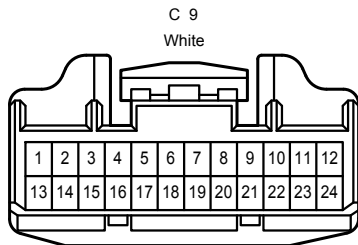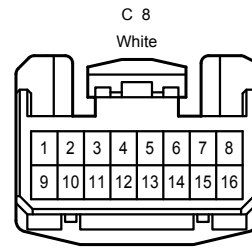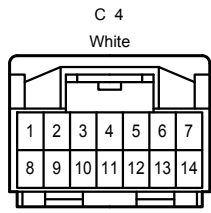

      Position of Parts in Instrument Panel <LHD>

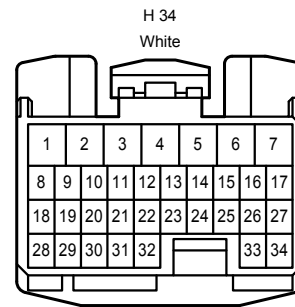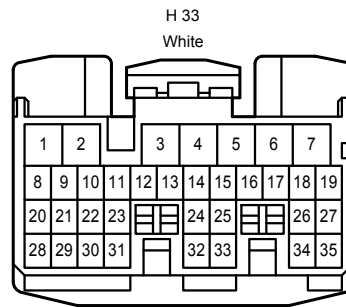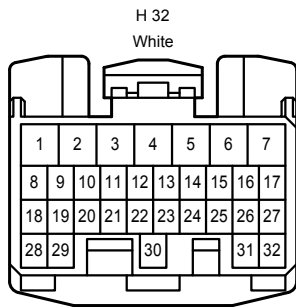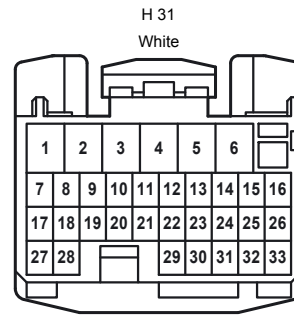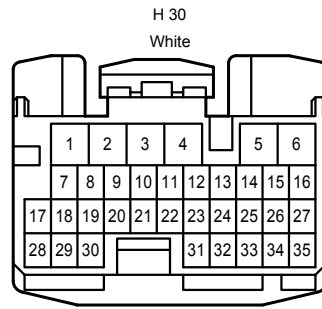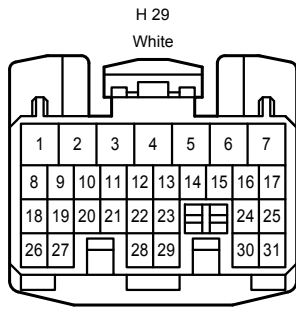

 Position of Parts in Instrument Panel <LHD>

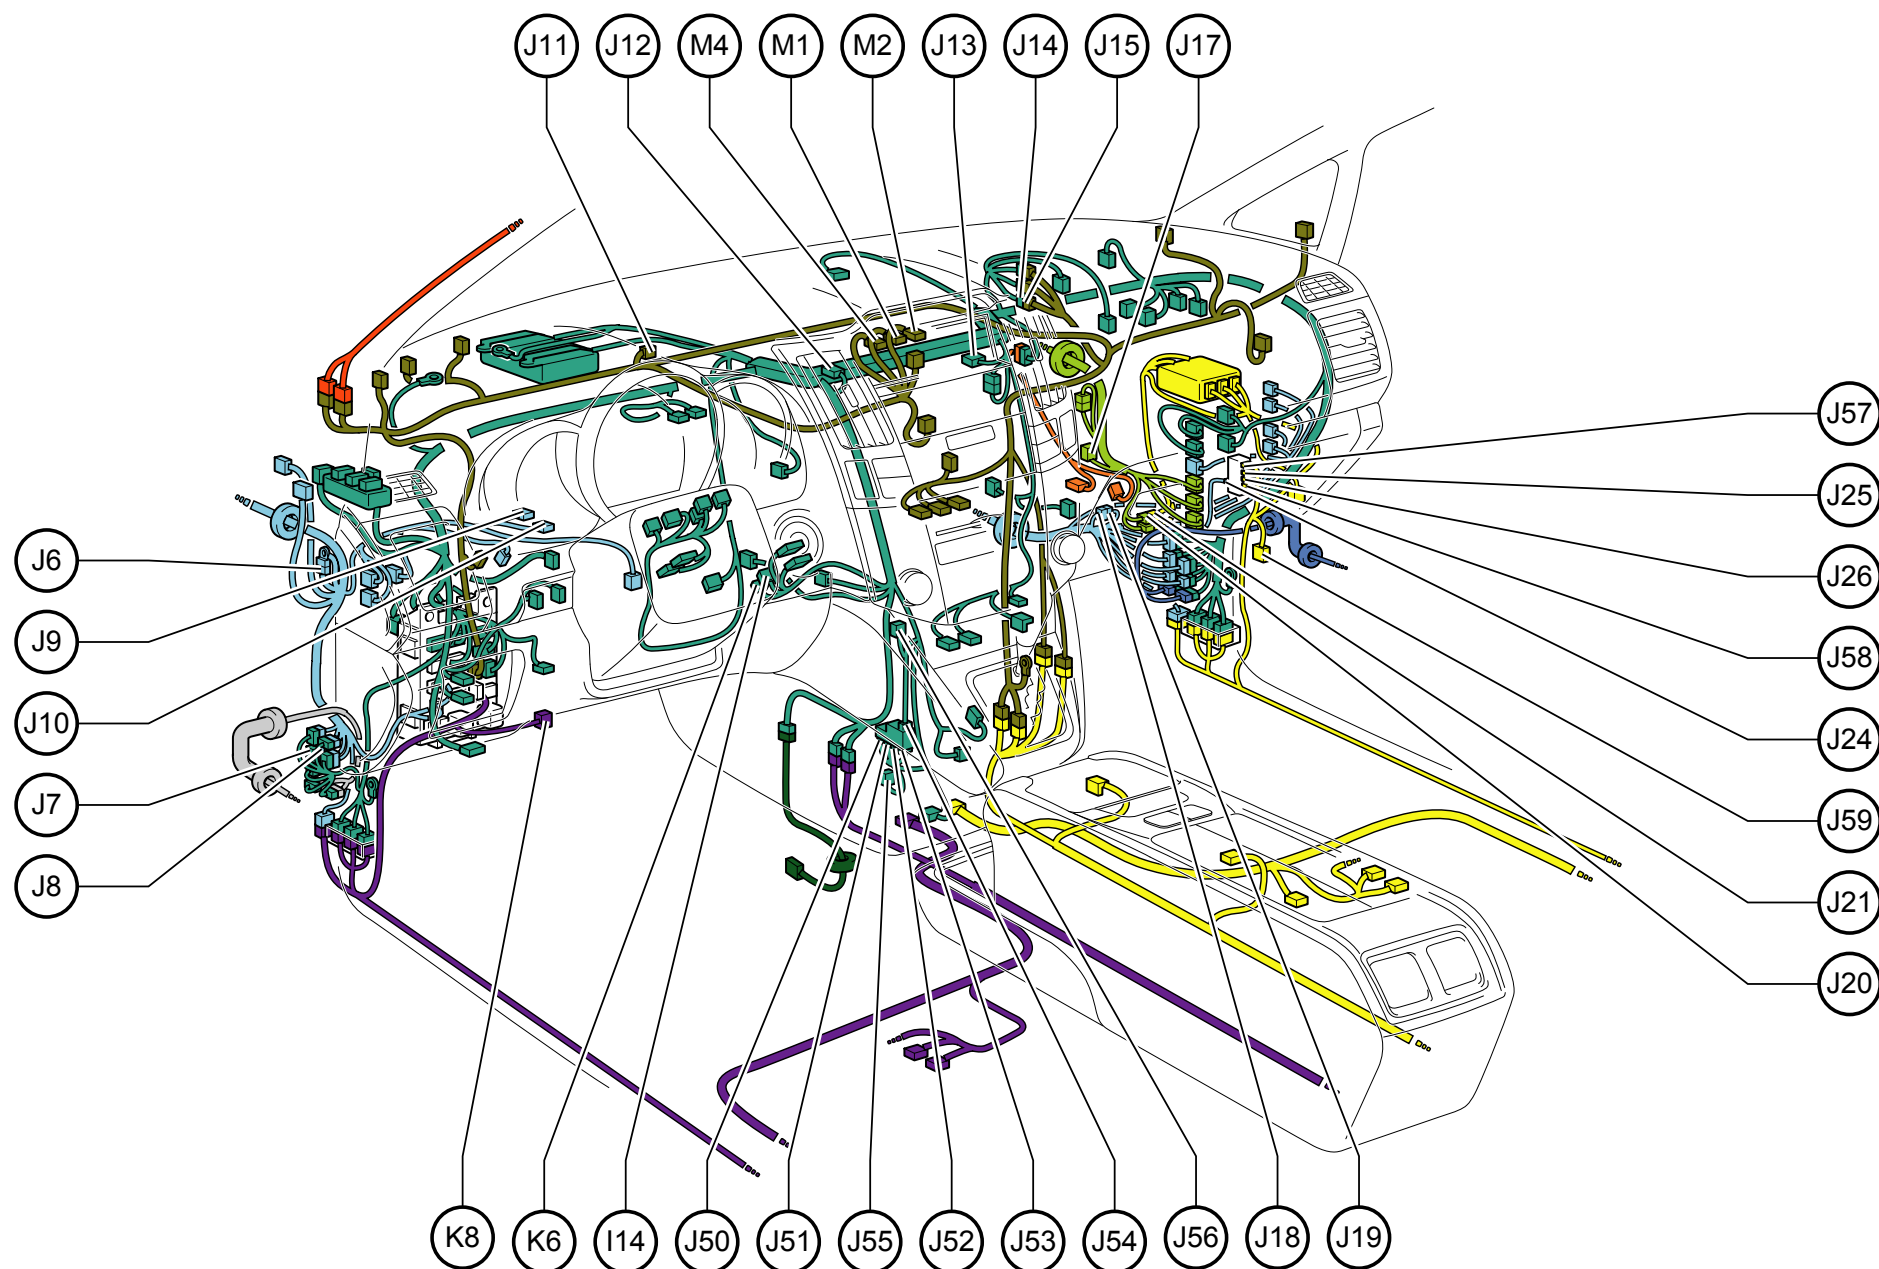



















- I 14 Ignition SW

- J 6 Junction Connector
- J 7 Junction Connector
- J 8 Junction Connector
- J 9 Junction Connector
- J 10 Junction Connector
- J 11 Junction Connector
- J 12 Junction Connector
- J 13 Junction Connector
- J 14 Junction Connector
- J 15 Junction Connector
- J 17 Junction Connector
- J 18 Junction Connector
- J 19 Junction Connector
- J 20 Junction Connector
- J 21 Junction Connector
- J 24 Junction Connector
- J 25 Junction Connector
- J 26 Junction Connector
- J 50 Junction Connector
- J 51 Junction Connector
- J 52 Junction Connector
- J 53 Junction Connector
- J 54 Junction Connector
- J 55 Junction Connector
- J 56 Junction Connector
- J 57 Junction Connector
- J 58 Junction Connector
- J 59 Junction Connector







- K 6 Key Interlock Solenoid , Unlock Warning SW
- K 8 Knee Airbag Squib


- M 1 Multi Display
- M 2 Multi Display
- M 4 Multi Display

                  Position of Parts in Instrument Panel <LHD>

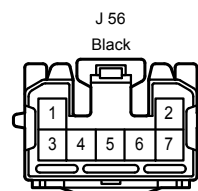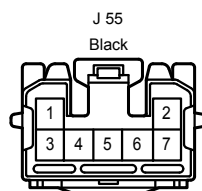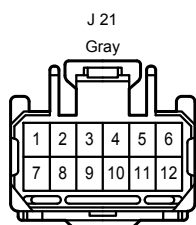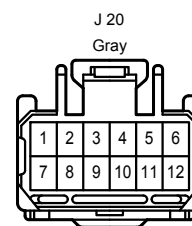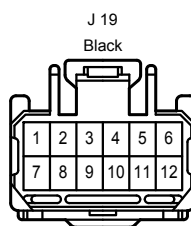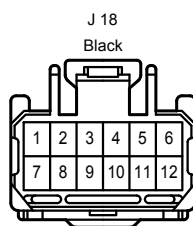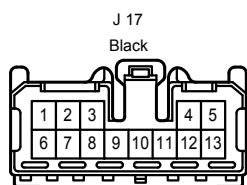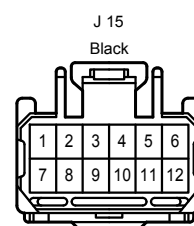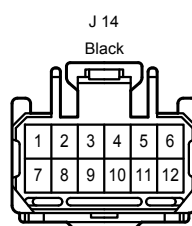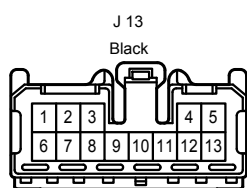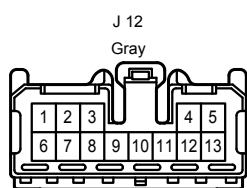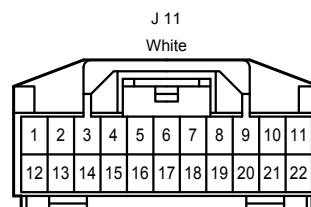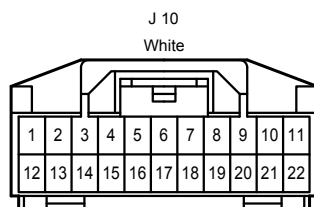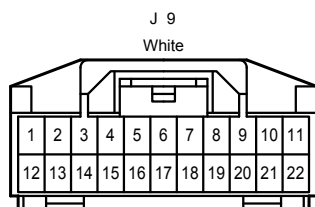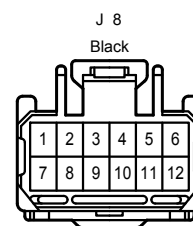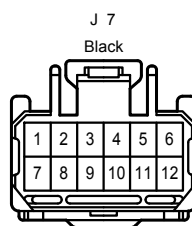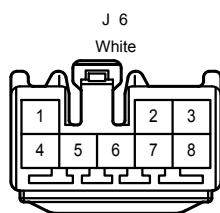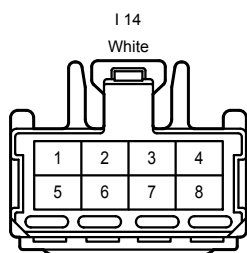

       Position of Parts in Instrument Panel <LHD>

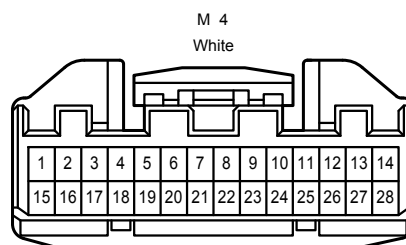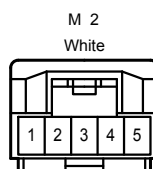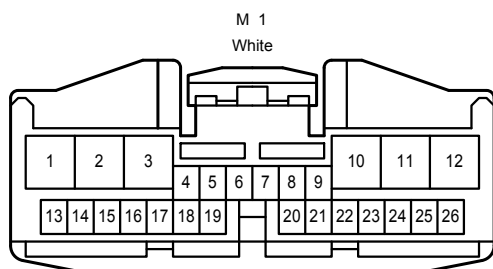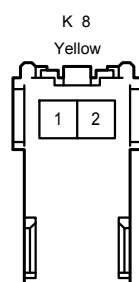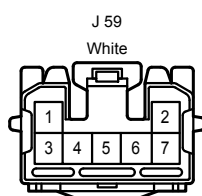

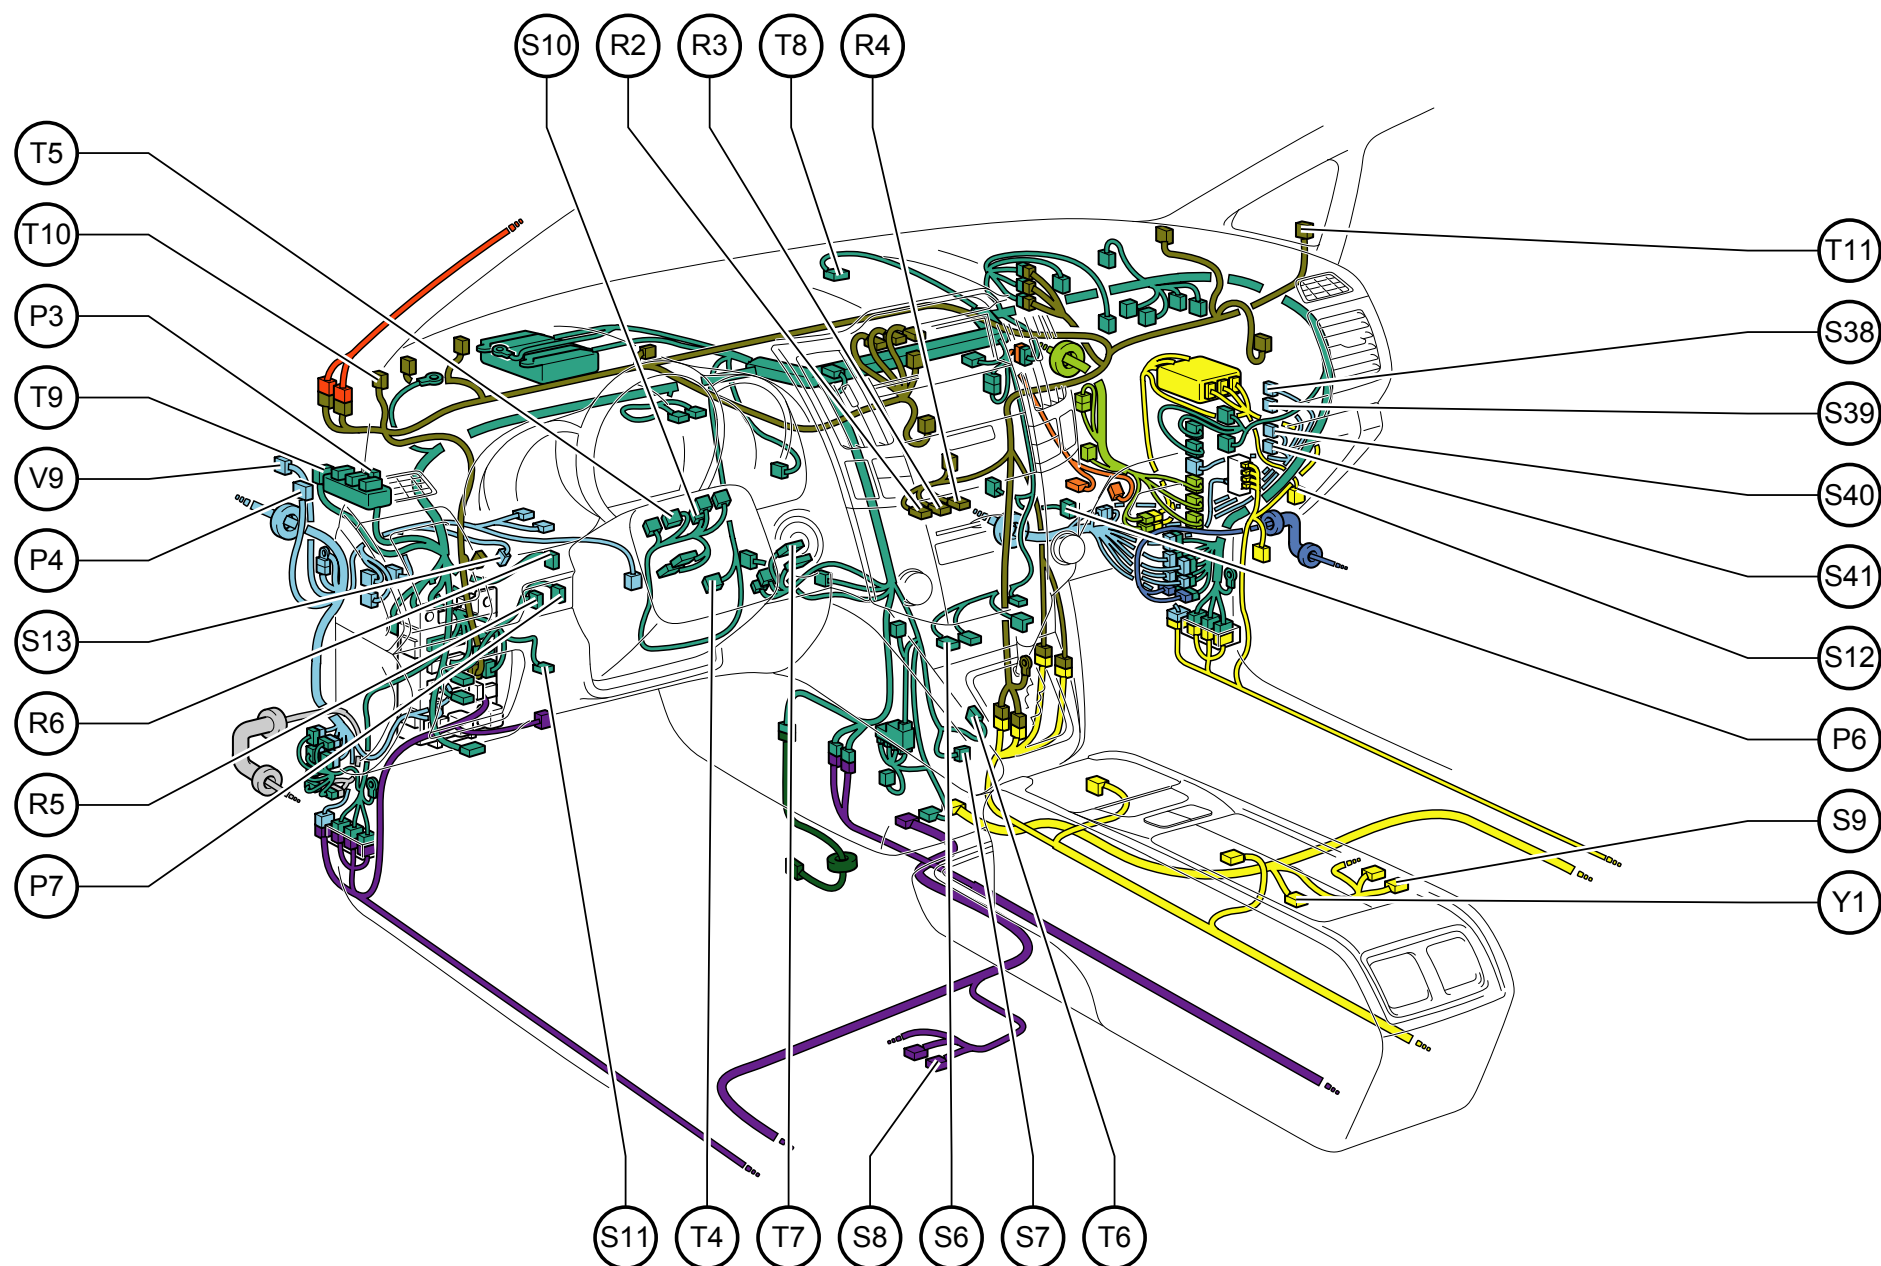

- P 3 Panel Relay
- P 4 Parking Brake SW
- P 6 Power Back Door Off SW
- P 7 Power Back Door Opener/Closer SW

- R 2 Radio and Player
- R 3 Radio and Player
- R 4 Radio and Player
- R 5 Remote Control Mirror SW (w/o Driving Position Memory)
- R 5 Remote Control Mirror SW (w/ Driving Position Memory)
- R 6 Rheostat , Trip SW

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- S 6 Seat Heater SW
- S 7 Shift Lock ECU
- S 8 Side Airbag Squib LH
- S 9 Side Airbag Squib RH
- S 10 Steering Angle Sensor
- S 11 Step Light LH
- S 12 Step Light RH
- S 13 Stop Light SW
- S 38 Skid Control ECU
- S 39 Skid Control ECU
- S 40 Skid Control ECU
- S 41 Skid Control ECU

- T 4 Tilt and Telescopic ECU
- T 5 Tilt Motor
- T 6 Transmission Control SW
- T 7 Transponder Key Amplifier
- T 8 Transponder Key Computer
- T 9 Turn Signal Flasher
- T 10 Tweeter LH
- T 11 Tweeter RH

- V 9 VSC Warning Buzzer


- Y 1 Yaw Rate Sensor

Position of Parts in Instrument Panel <LHD>

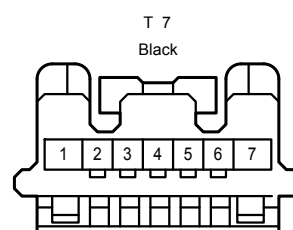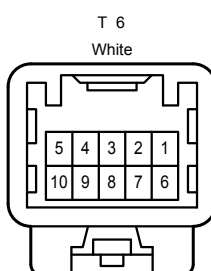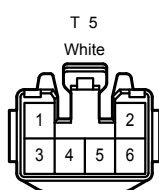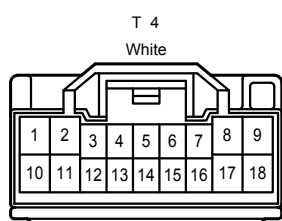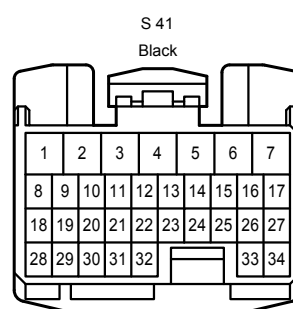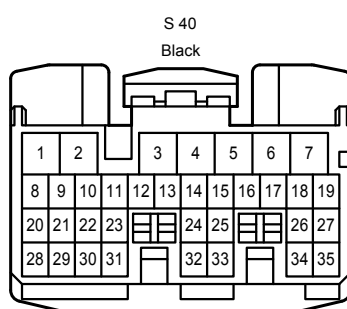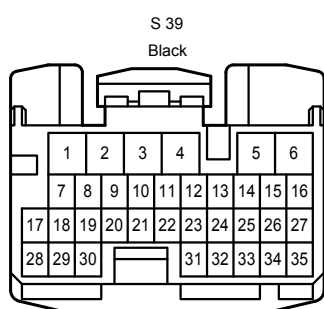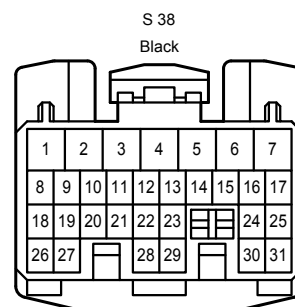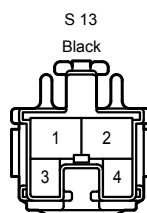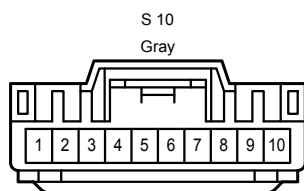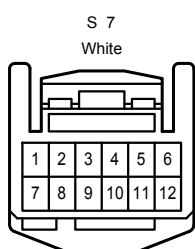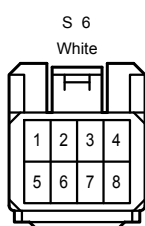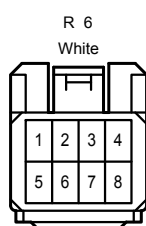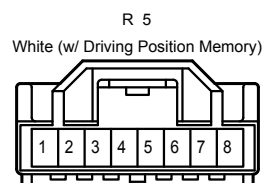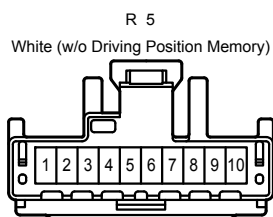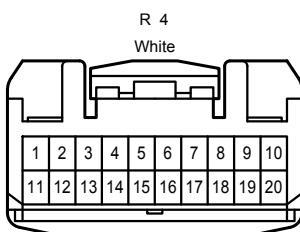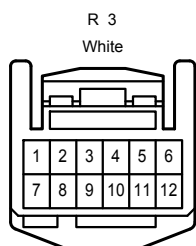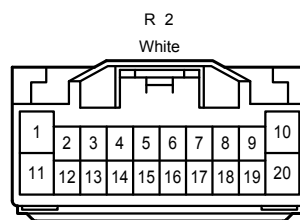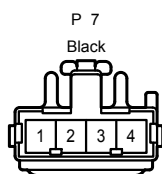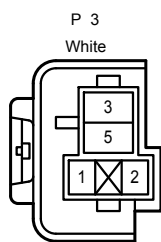

Position of Parts in Instrument Panel <LHD>

 
T 8
White

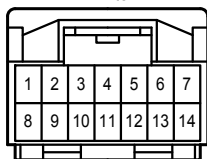


T 9
White



 
T 10
White




T 11
White

 







V 9
Black

 



Y 1
Black







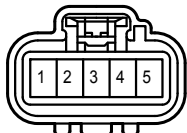 


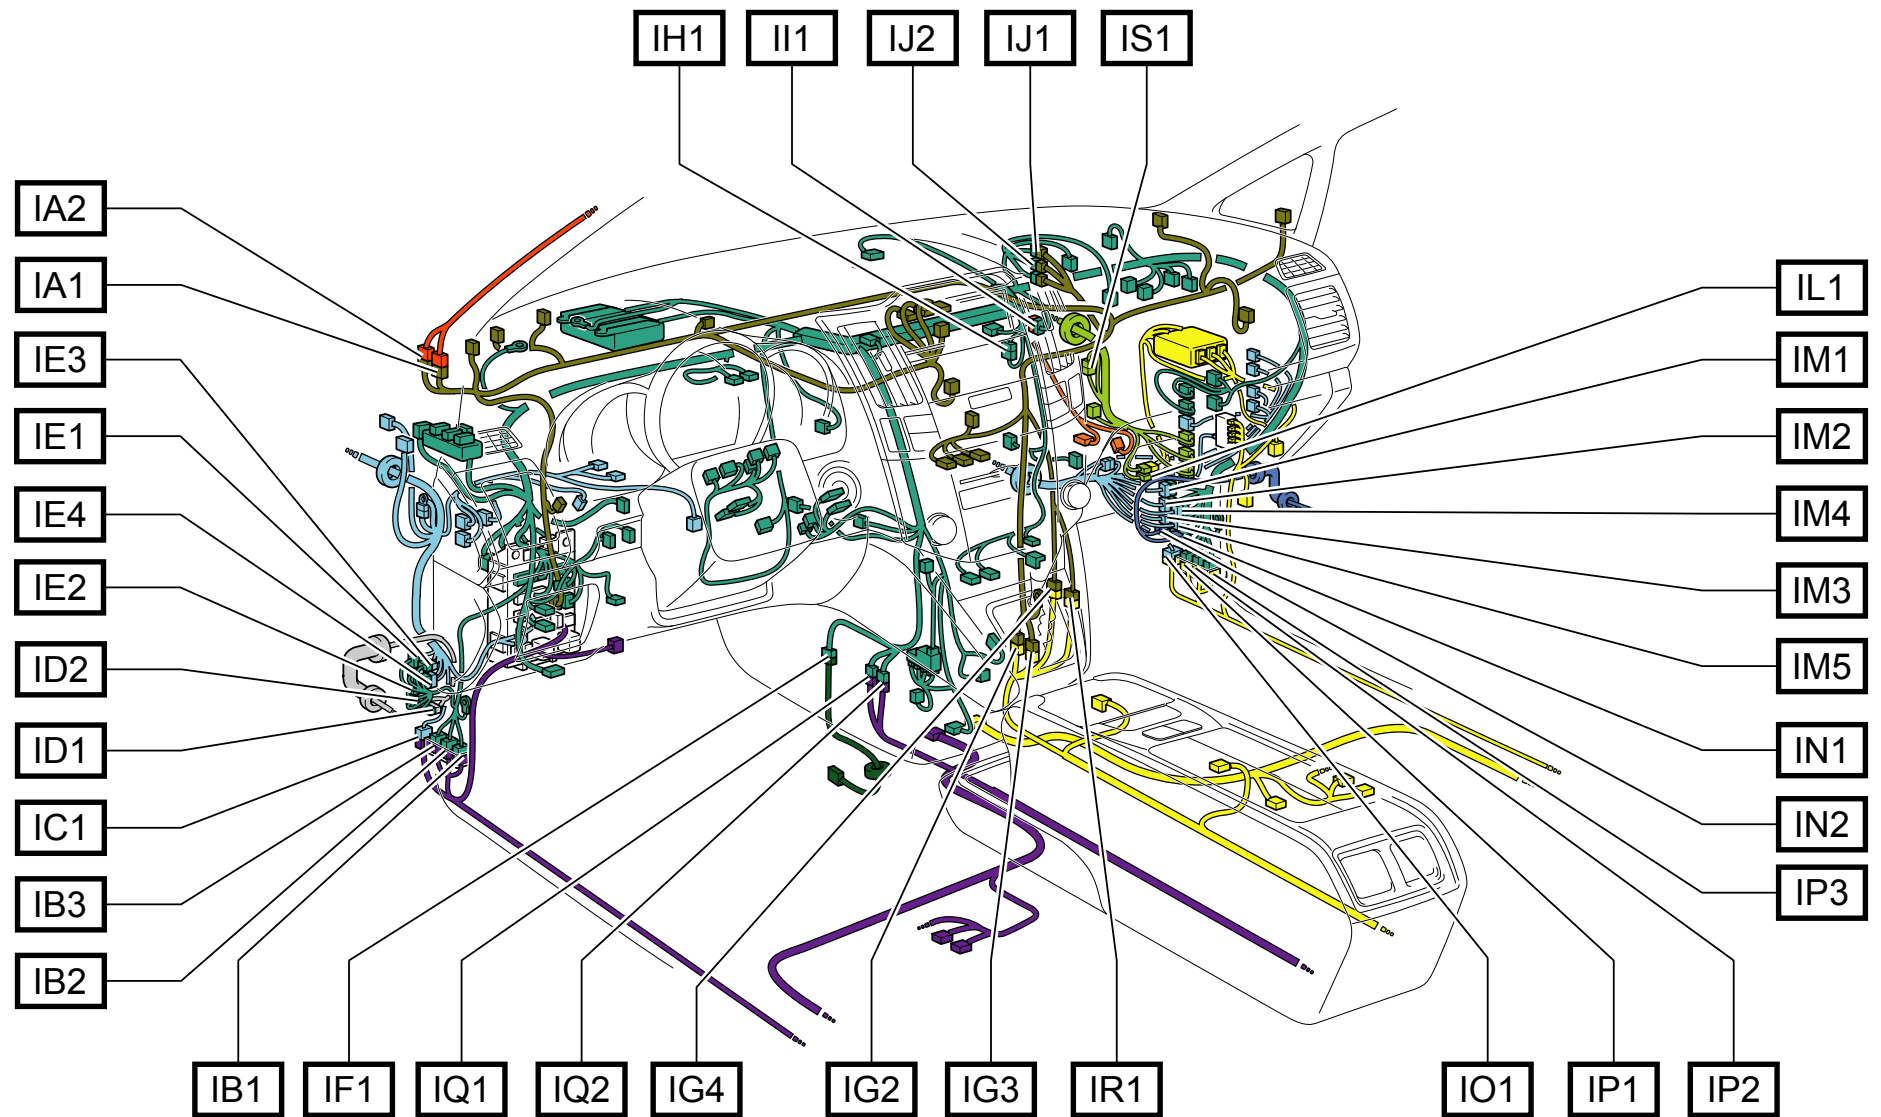 


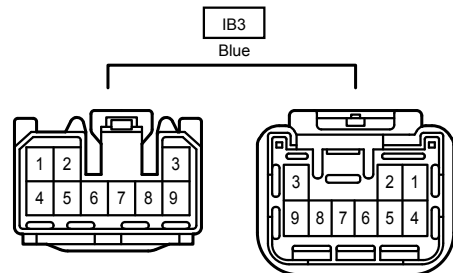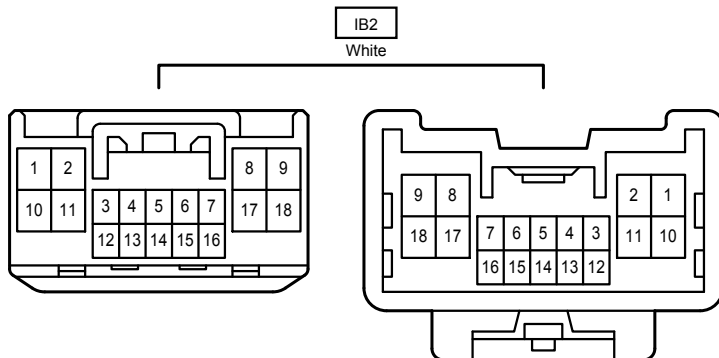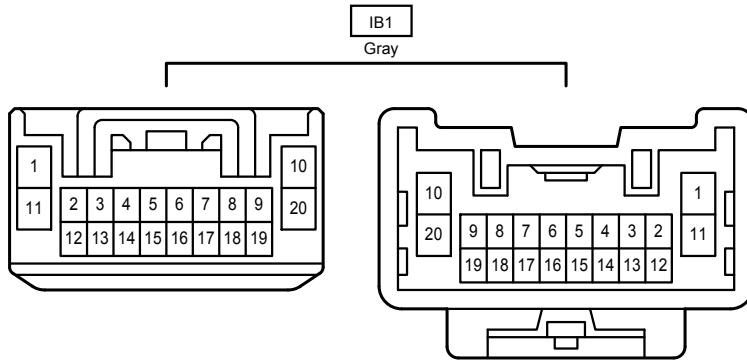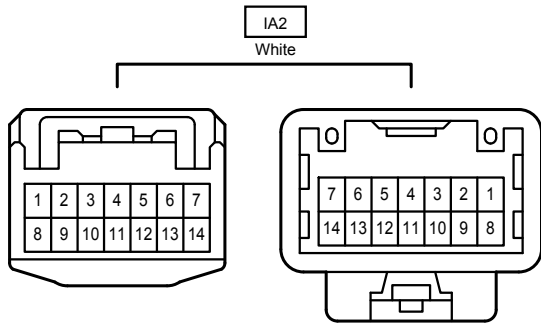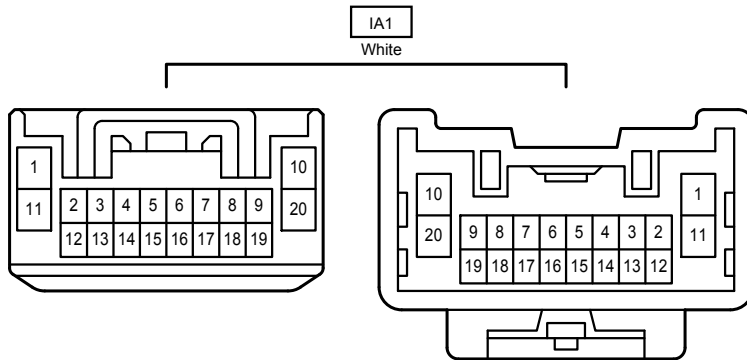     


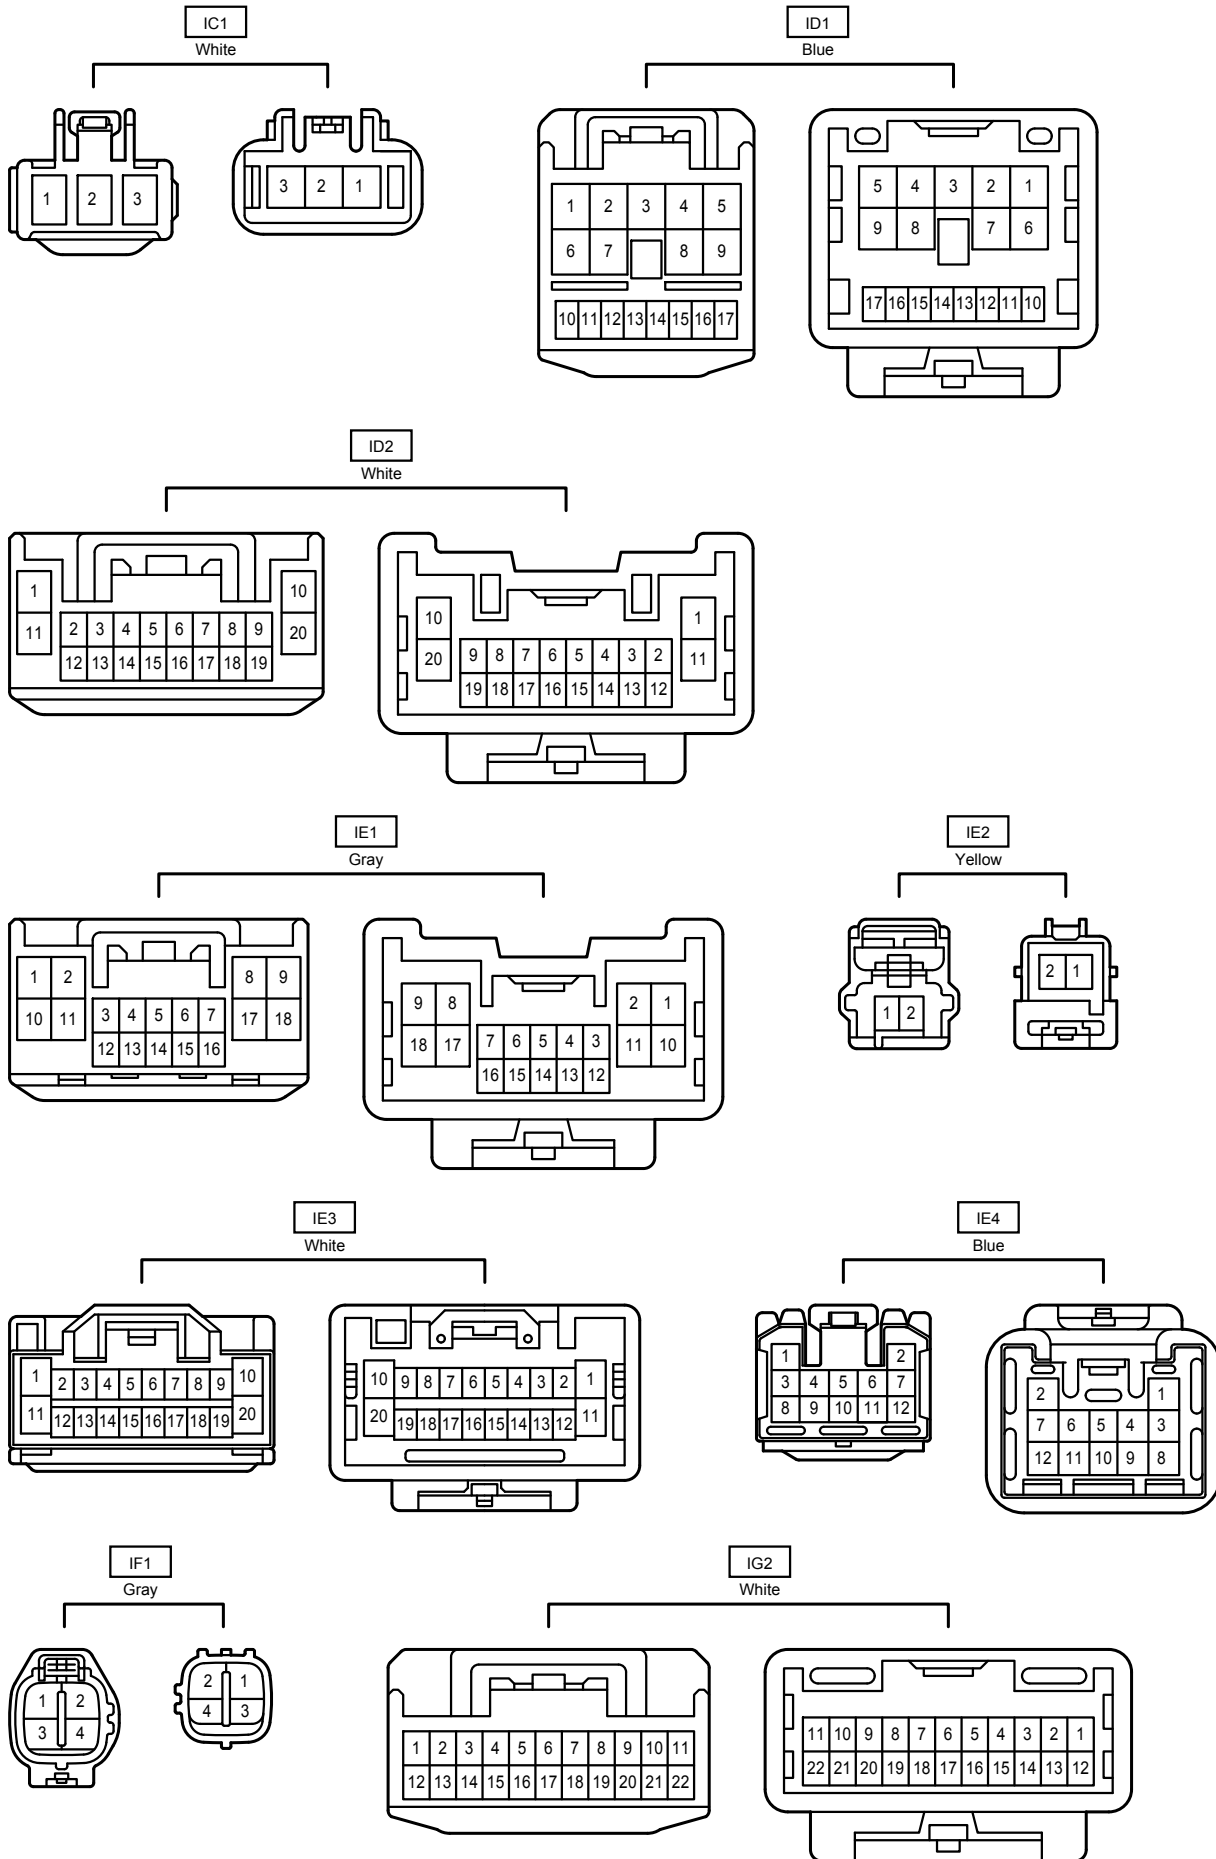 


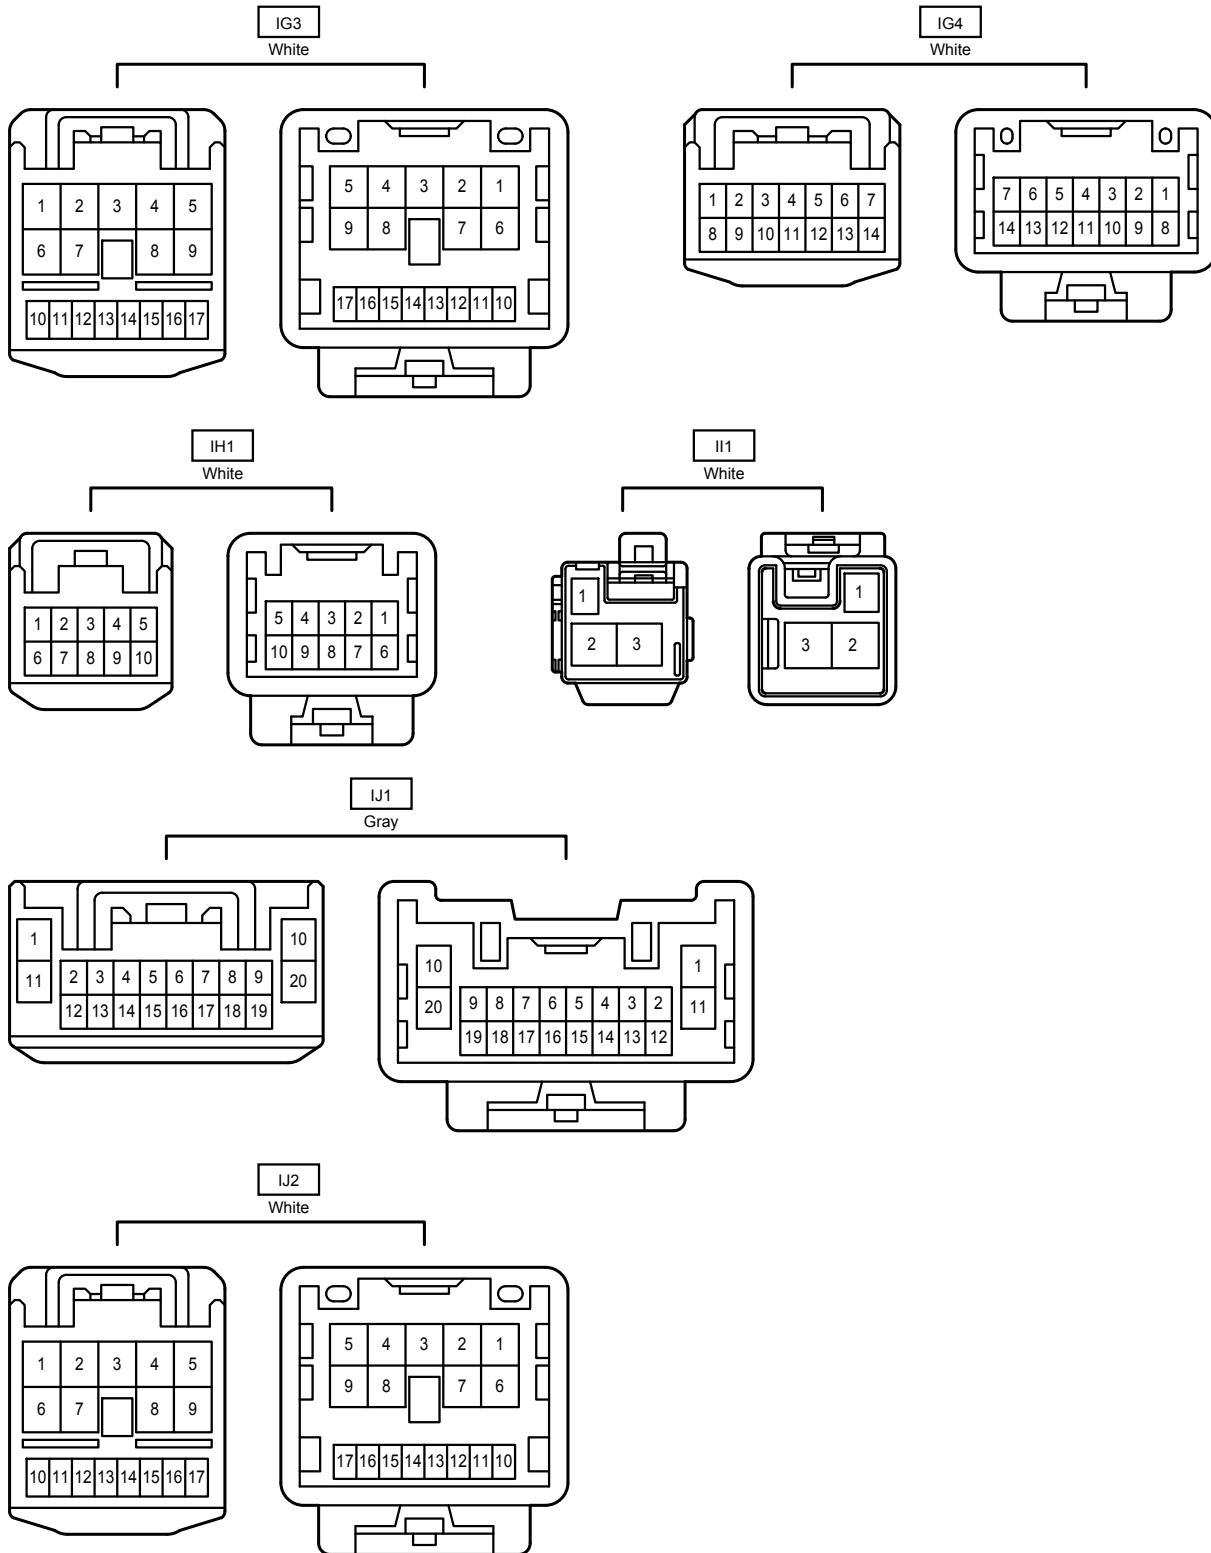           

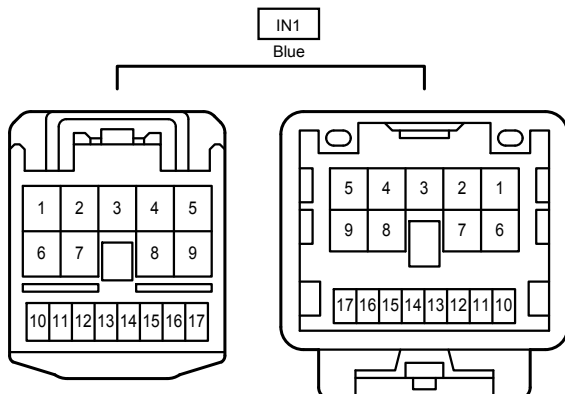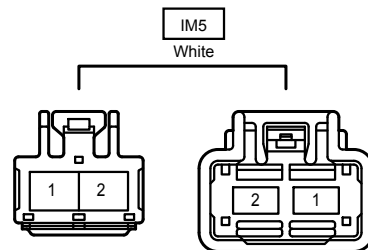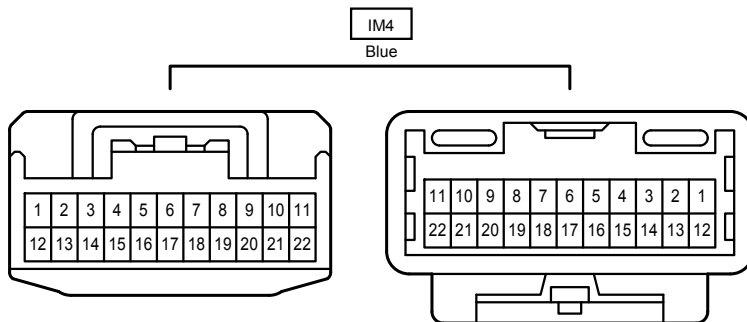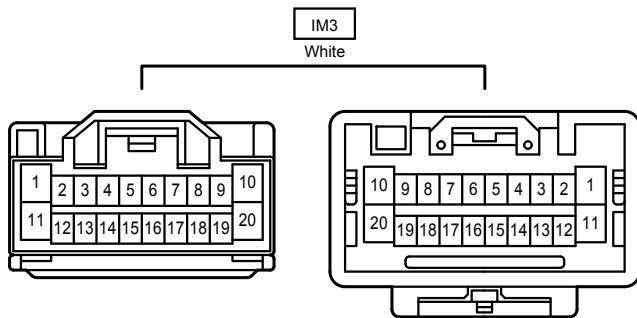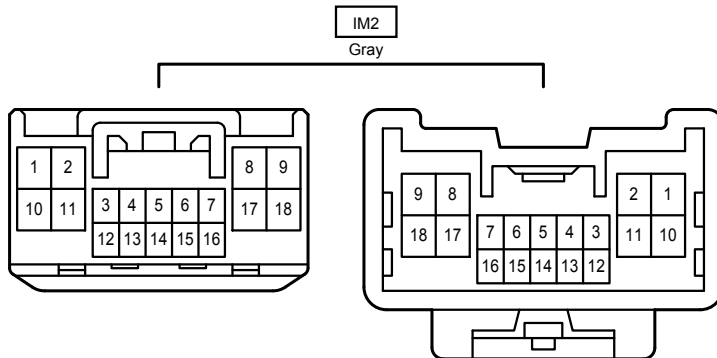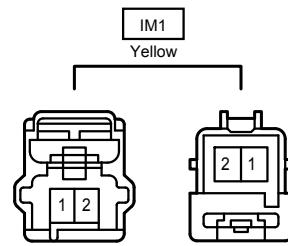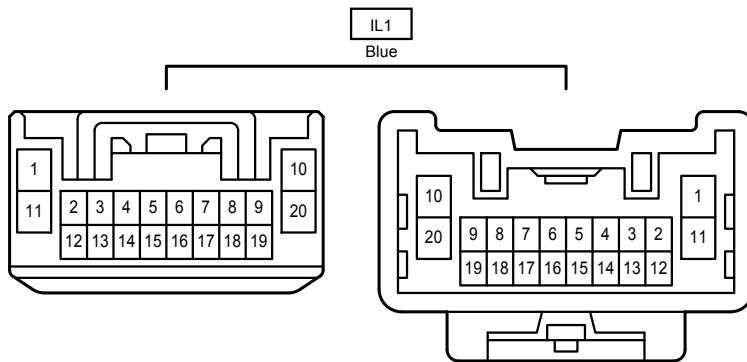


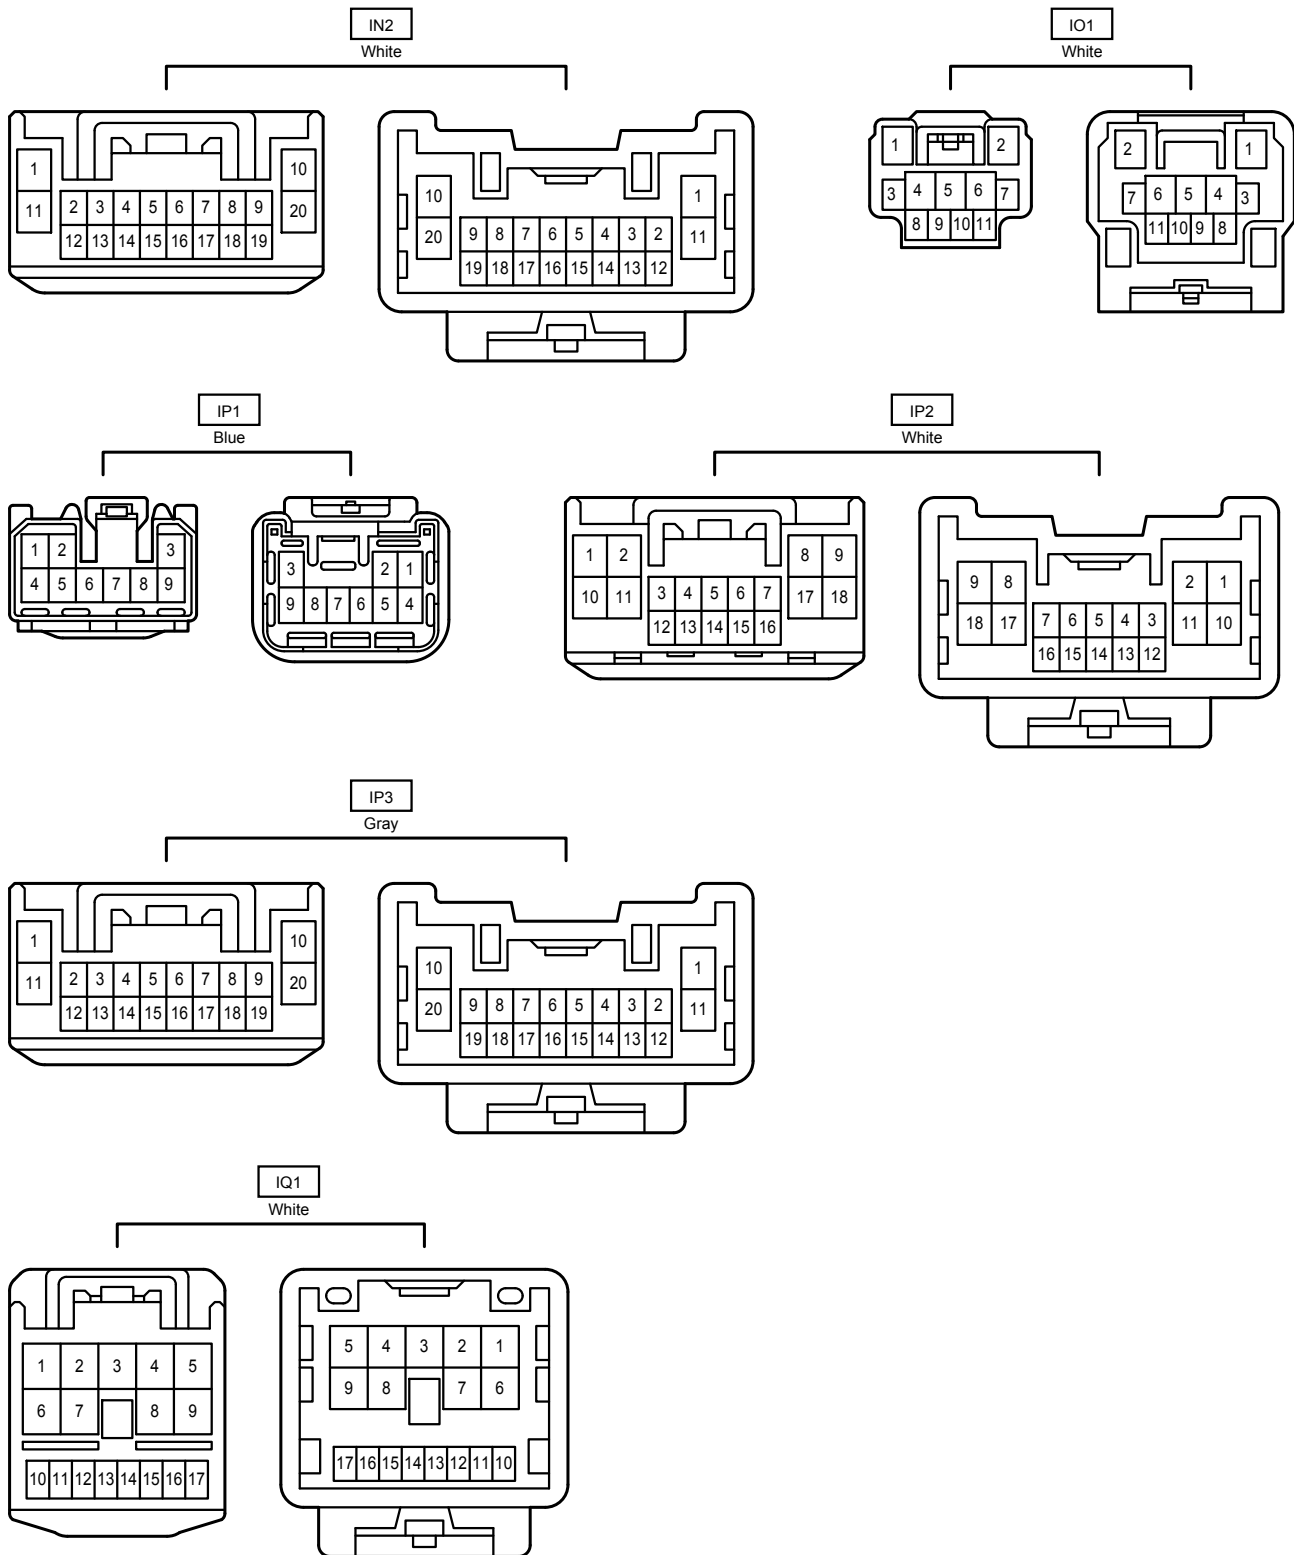

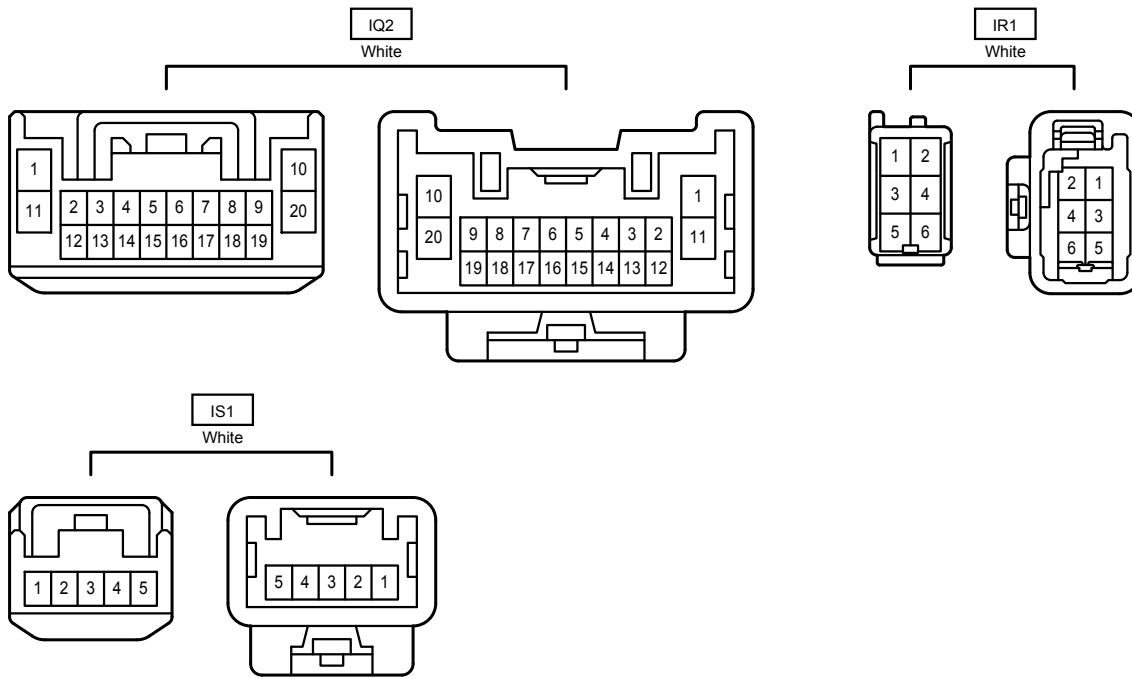

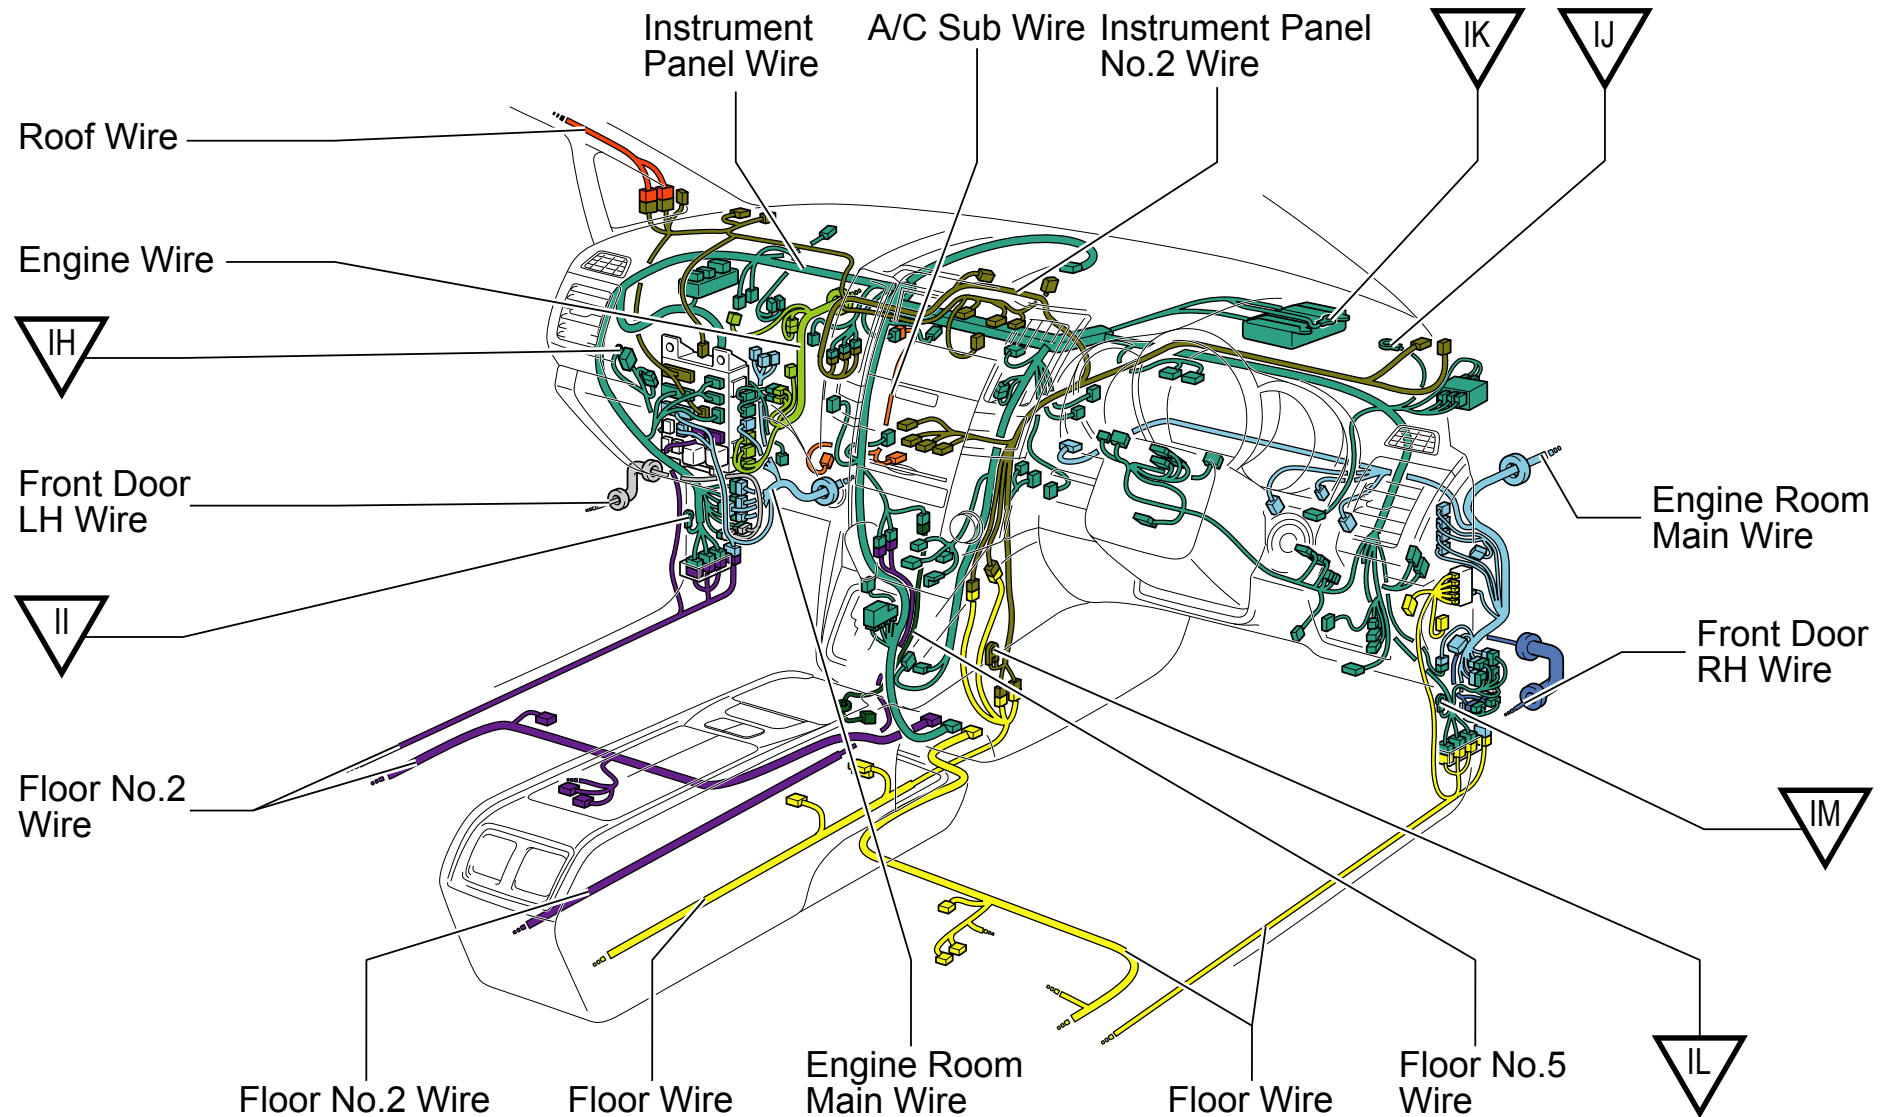





















 
Position of Parts in Instrument Panel <RHD>








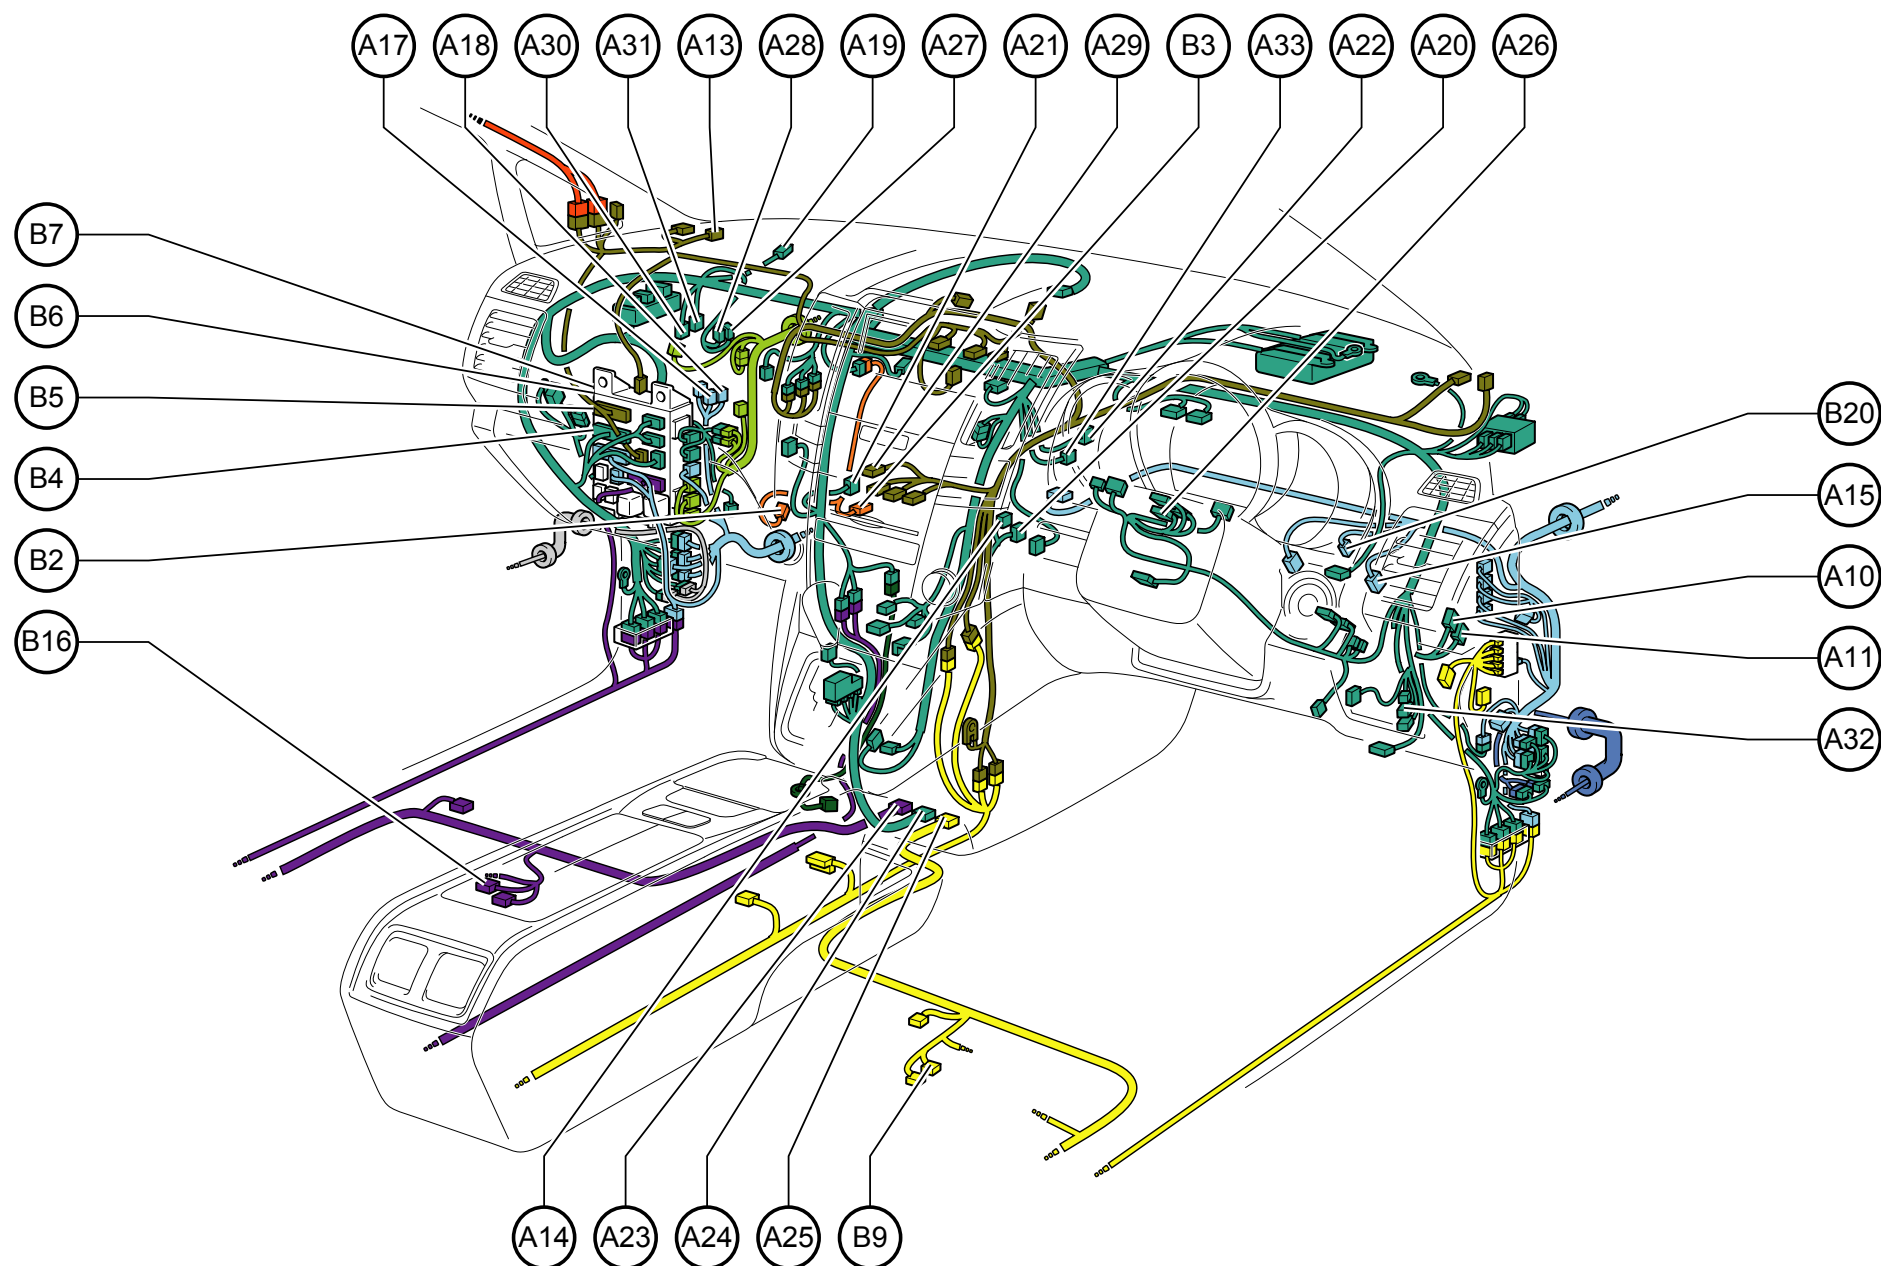



- A 10 A/C Amplifier
- A 11 A/C Amplifier
- A 13 A/C Solar Sensor , Automatic Light Control Sensor
- A 14 A/C Thermistor
- A 15 Accel Position Sensor
- A 17 AFS ECU
- A 18 AFS ECU
- A 19 Air Inlet Control Servo Motor
- A 20 Air Mix Control Servo Motor (Driver Side)
- A 21 Air Mix Control Servo Motor (Front Passenger Side)
- A 22 Air Vent Mode Control Servo Motor
- A 23 Airbag Sensor Assembly
- A 24 Airbag Sensor Assembly
- A 25 Airbag Sensor Assembly
- A 26 Airbag Squib (Steering Wheel Pad)
- A 27 Airbag Squib (Front Passenger Airbag Assembly)
- A 28 Airbag Squib (Front Passenger Airbag Assembly)
- A 29 Antenna Amplifier
- A 30 Auto Wiper ECU
- A 31 Auto Wiper ECU
- A 32 AFS Off SW
- A 33 A/C Room Temp. Sensor , Humidity Sensor

- B 2 Blower Motor (RHD)
- B 3 Blower Motor Controller
- B 4 Body ECU
- B 5 Body ECU
- B 6 Body ECU
- B 7 Body ECU
- B 9 Buckle SW (Driver's Side) , Seat Position Airbag Sensor
- B 16 Buckle SW (Front Passenger's Side) , Occupant Detection Sensor
- B 20 Brake Pedal Stroke Sensor

                              Position of Parts in Instrument Panel <RHD>

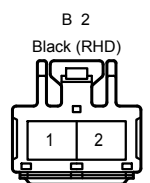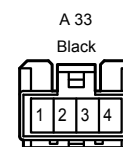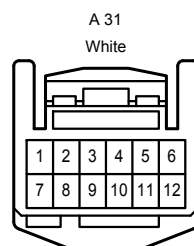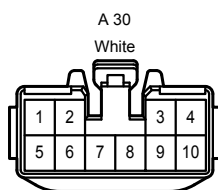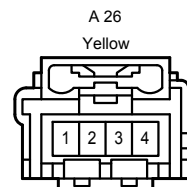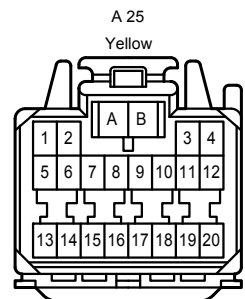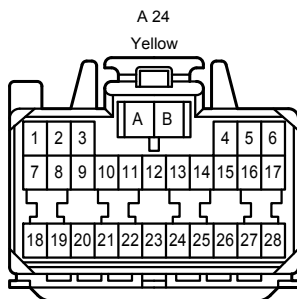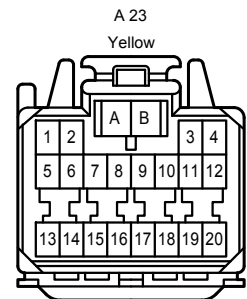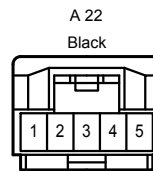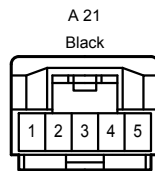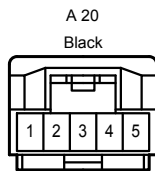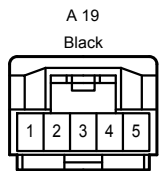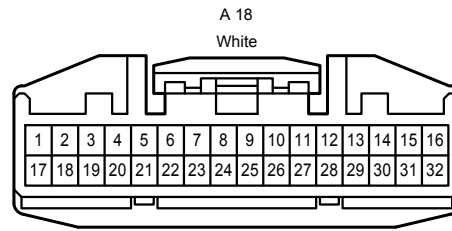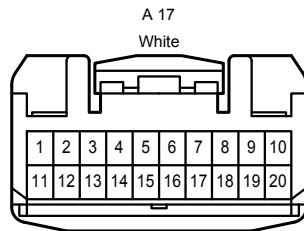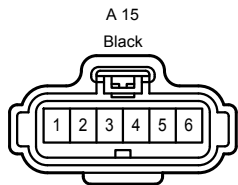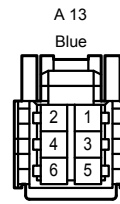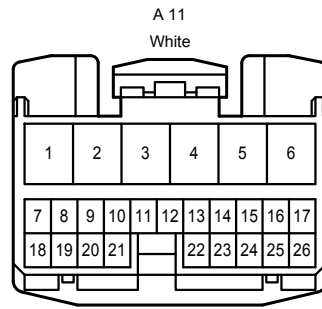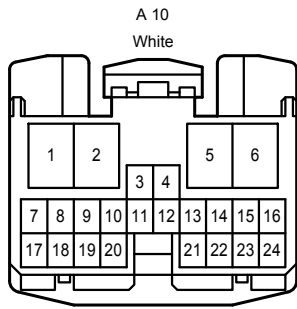

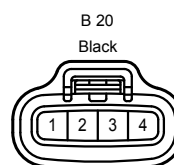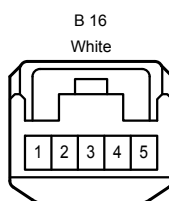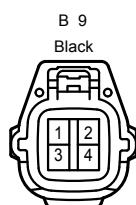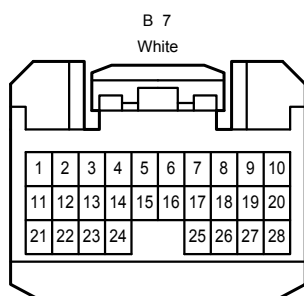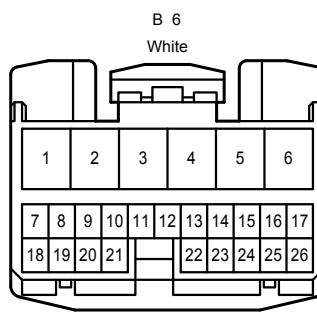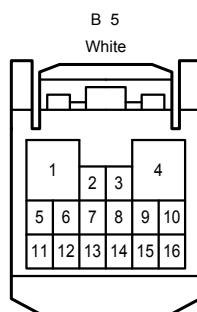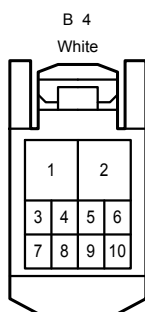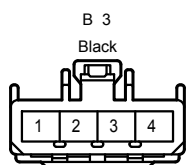

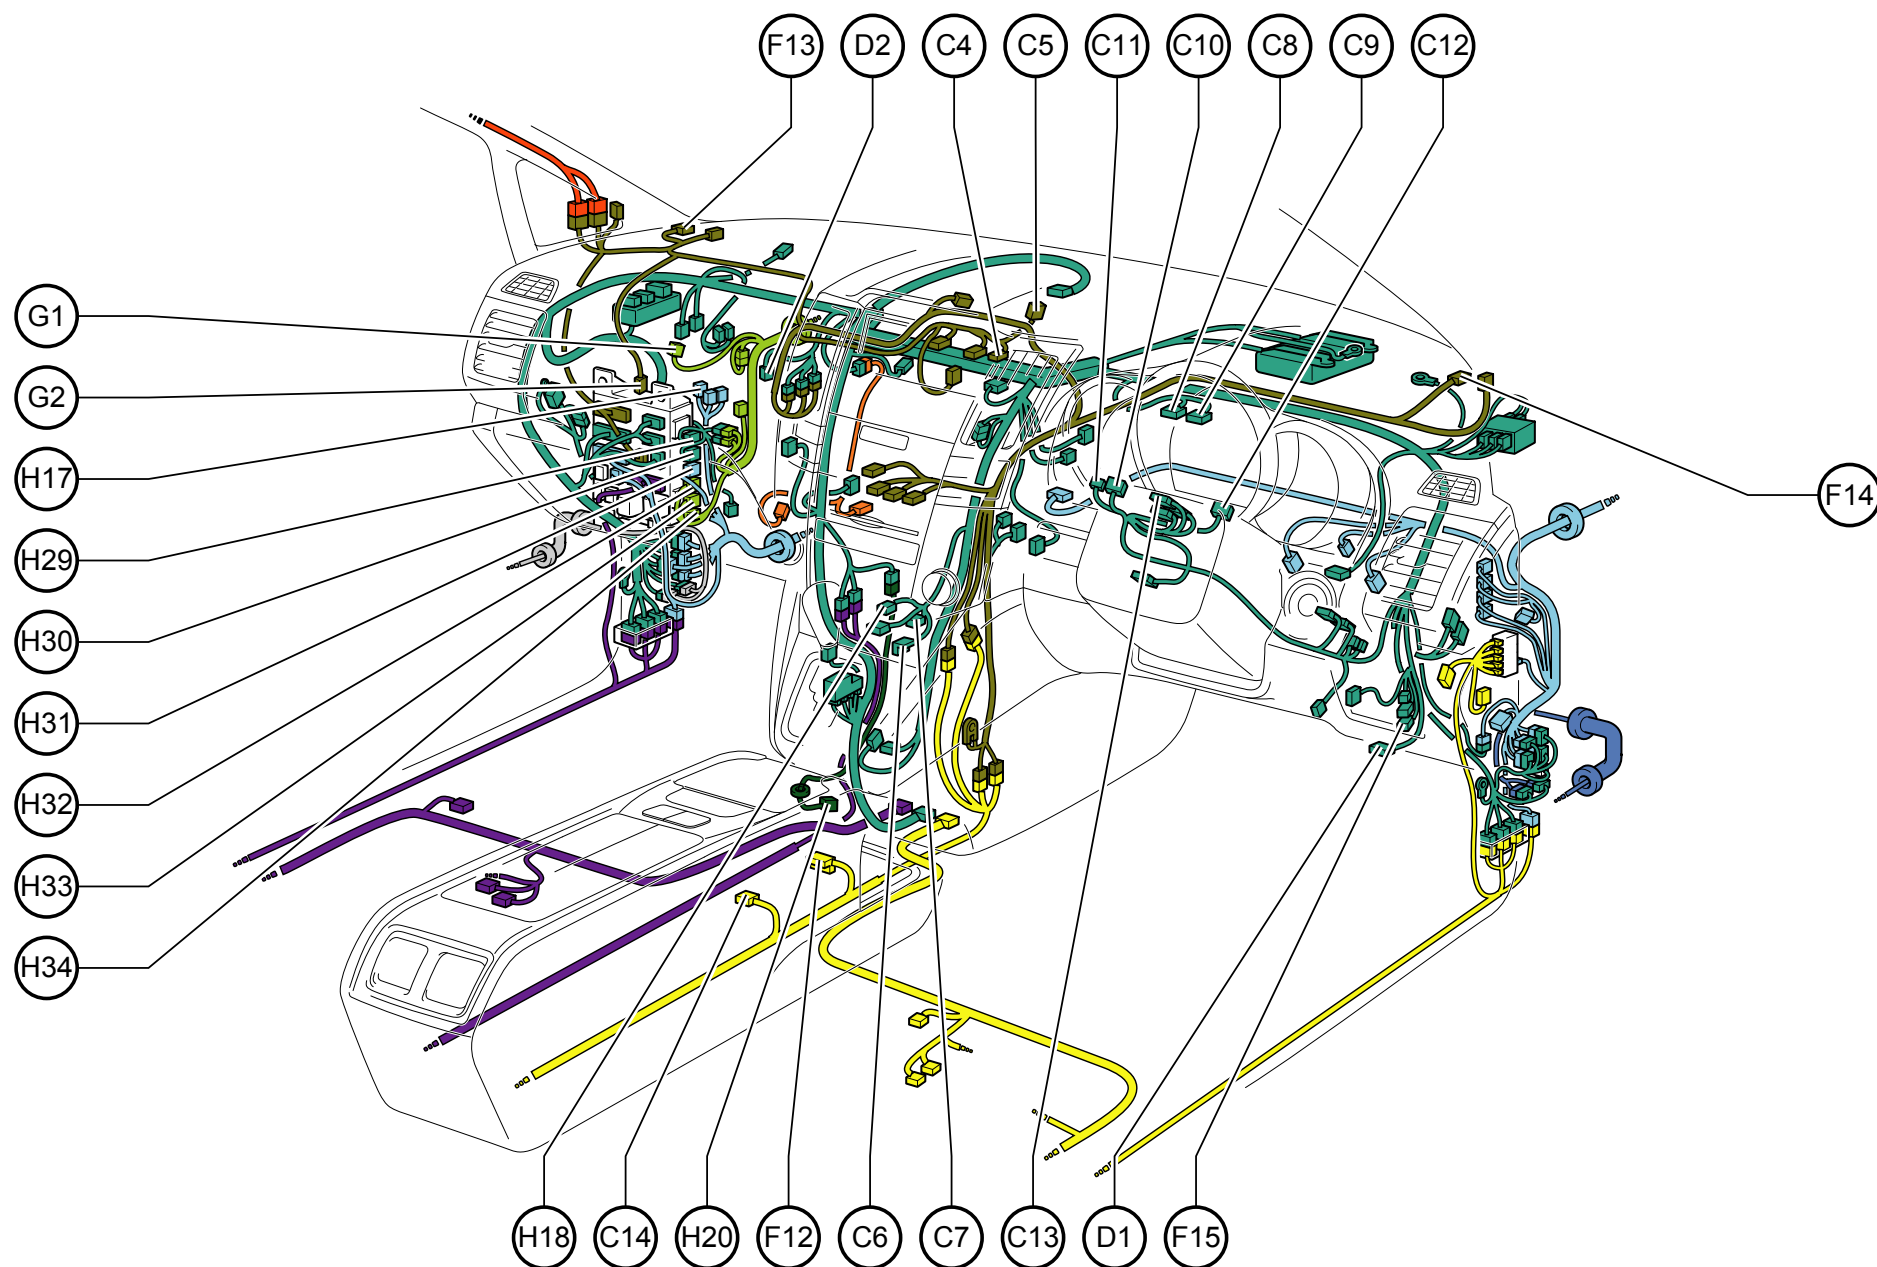

- C 4 Center Cluster Integration Panel
- C 5 Center Speaker
- C 6 Cigarette Lighter
- C 7 Cigarette Lighter Illumination
- C 8 Combination Meter
- C 9 Combination Meter
- C 10 Combination SW
- C 11 Combination SW
- C 12 Combination SW
- C 13 Combination SW
- C 14 Console Box Illumination

- D 1 DLC3
- D 2 Double Door Lock ECU

 
- F 12 Front Power Outlet
- F 13 Front Squawker LH
- F 14 Front Squawker RH
- F 15 Fuel Lid Opener SW

- G 1 Gateway ECU
- G 2 Glove Box Light

- H 17 Headlight Beam Level Control ECU
- H 18 Headlight Cleaner SW
- H 20 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 29 Hybrid Vehicle Control ECU
- H 30 Hybrid Vehicle Control ECU
- H 31 Hybrid Vehicle Control ECU
- H 32 Hybrid Vehicle Control ECU
- H 33 Hybrid Vehicle Control ECU
- H 34 Hybrid Vehicle Control ECU

Position of Parts in Instrument Panel <RHD>

C 4
White

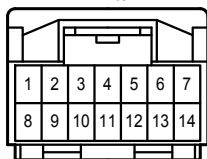

C 5
White



 
C 6
White




C 7
Gray




C 8
White

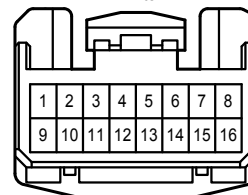


C 9
White

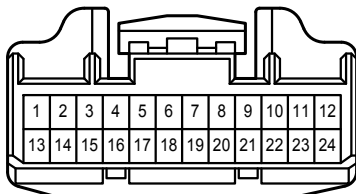 


C 10
White

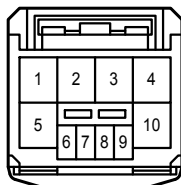 


C 11
White

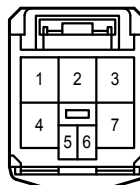 

C 12
White

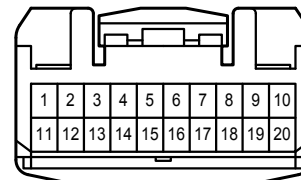 


C 13
Black

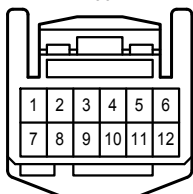 


C 14
White



 D 1
White

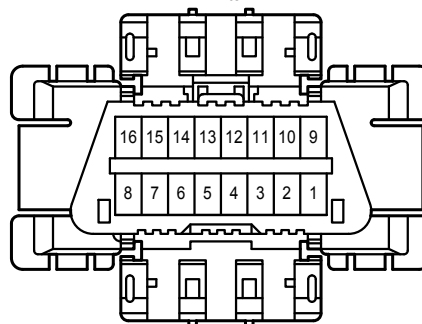

D 2
Blue

 

F 12
White



 
F 13
White




F 14
White



F 15
White




G 1
White

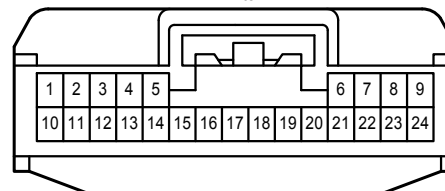 

G 2
Black



 H 17
Gray

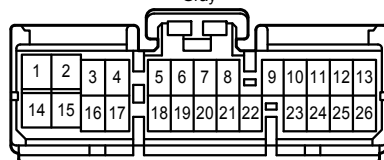

H 18
White

 


H 20
Gray




Position of Parts in Instrument Panel <RHD>


H 29
White

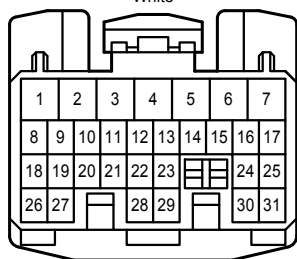


H 30
White

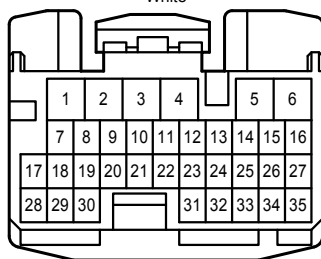 


H 31
White

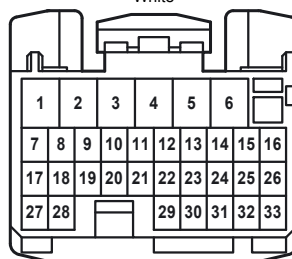 


H 32
White

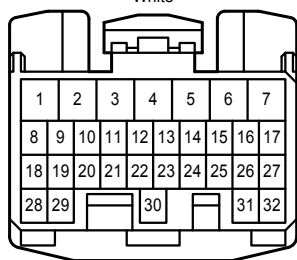 


H 33
White

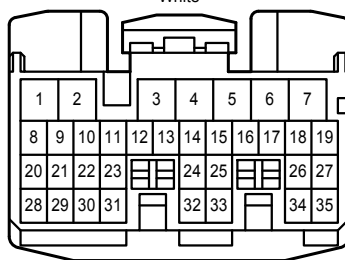 

H 34
White

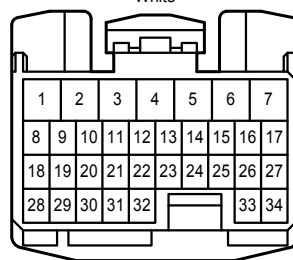 

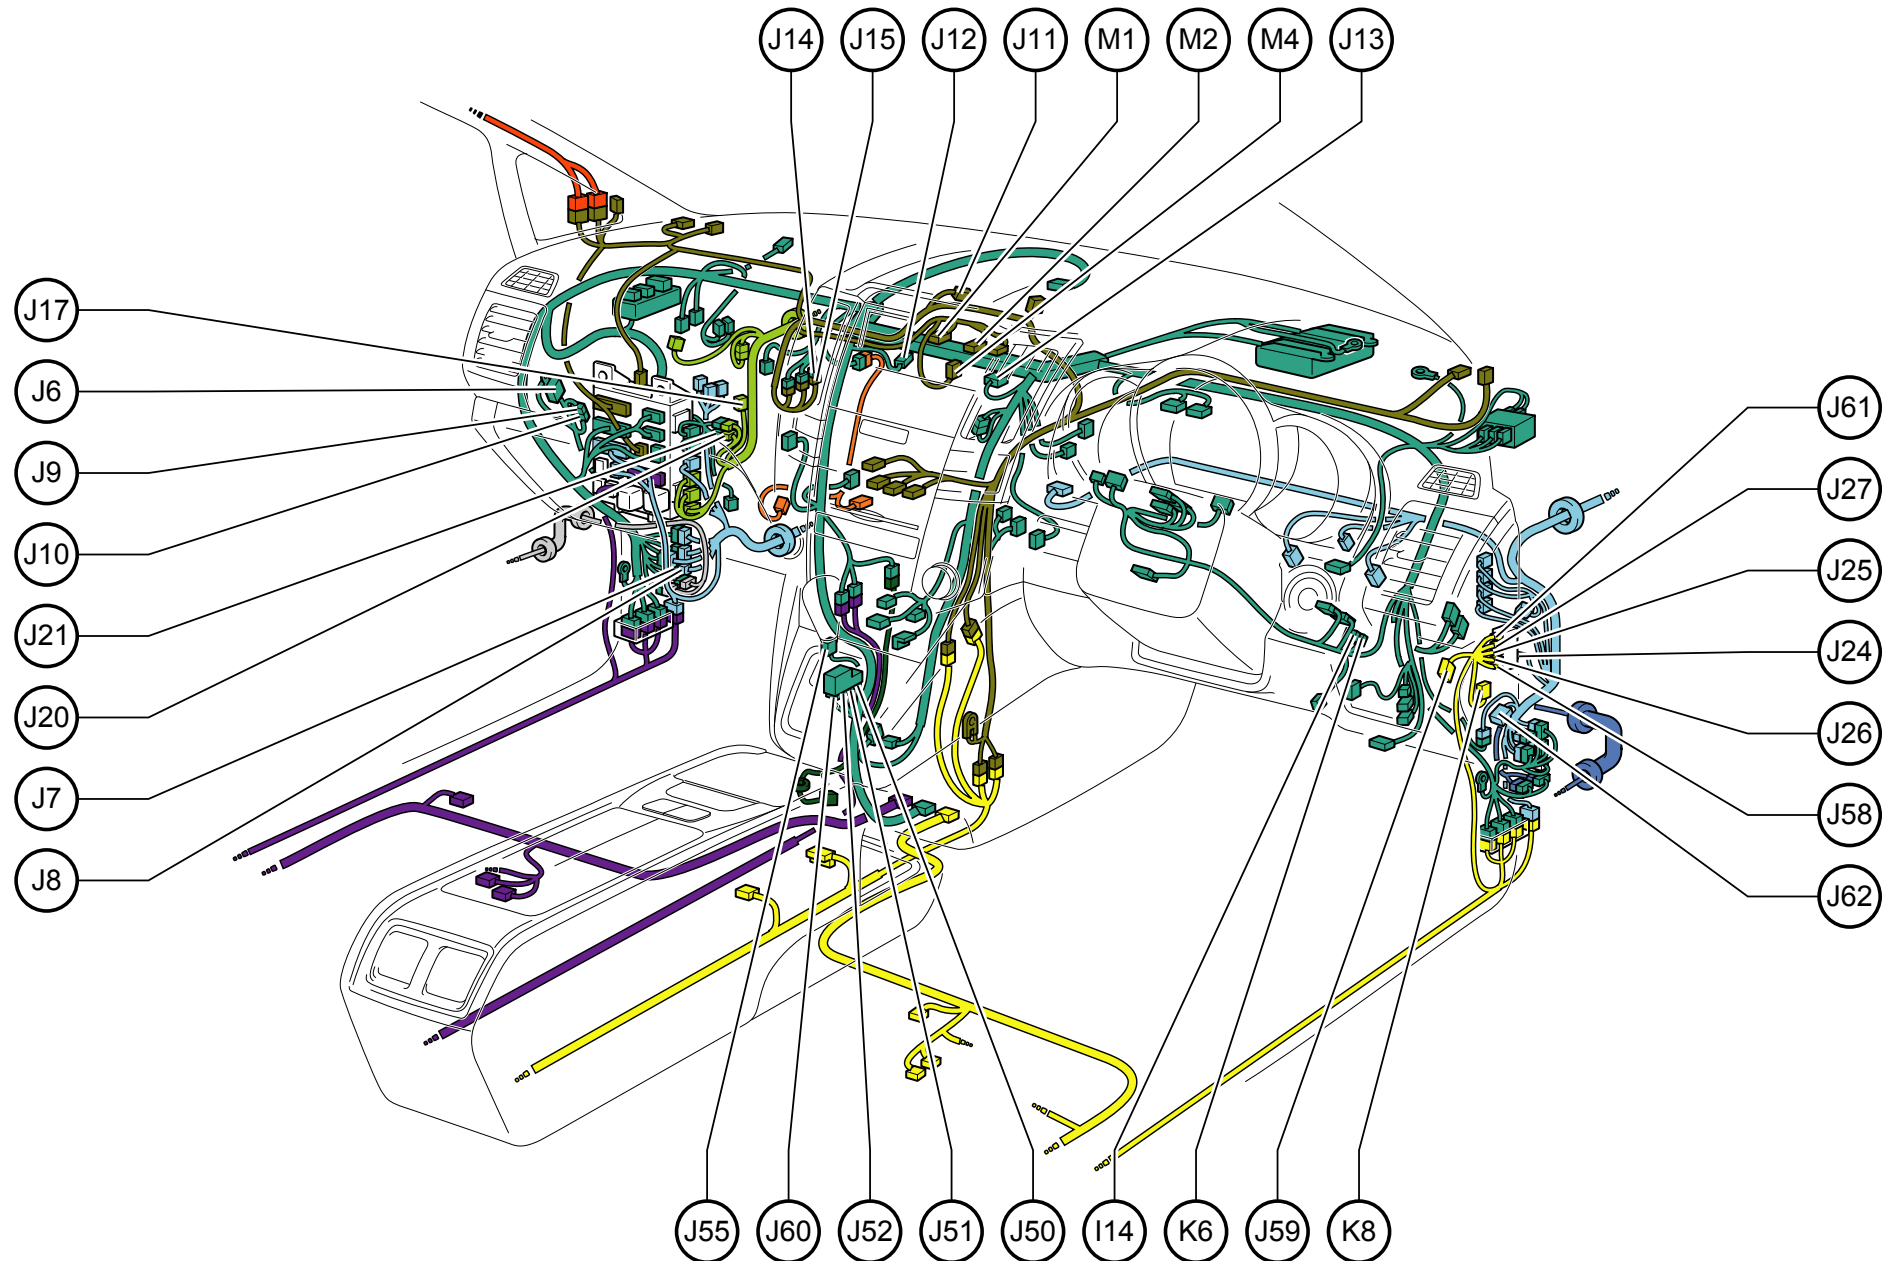 



















- I 14 Ignition SW

- J 6 Junction Connector
- J 7 Junction Connector
- J 8 Junction Connector
- J 9 Junction Connector
- J 10 Junction Connector
- J 11 Junction Connector
- J 12 Junction Connector
- J 13 Junction Connector
- J 14 Junction Connector
- J 15 Junction Connector
- J 17 Junction Connector
- J 20 Junction Connector
- J 21 Junction Connector
- J 24 Junction Connector
- J 25 Junction Connector
- J 26 Junction Connector
- J 27 Junction Connector
- J 50 Junction Connector
- J 51 Junction Connector
- J 52 Junction Connector
- J 55 Junction Connector
- J 58 Junction Connector
- J 59 Junction Connector
- J 60 Junction Connector
- J 61 Junction Connector
- J 62 Junction Connector





- K 6 Key Interlock Solenoid , Unlock Warning SW
- K 8 Knee Airbag Squib


- M 1 Multi Display
- M 2 Multi Display
- M 4 Multi Display

                  Position of Parts in Instrument Panel <RHD>

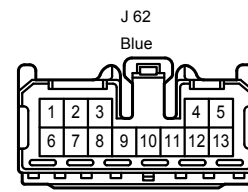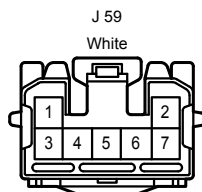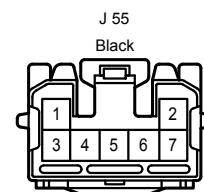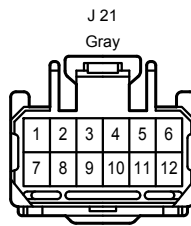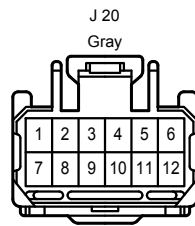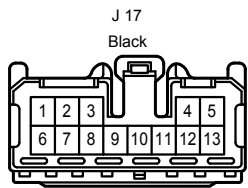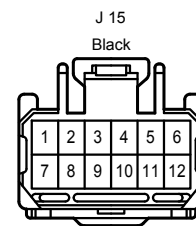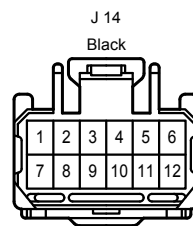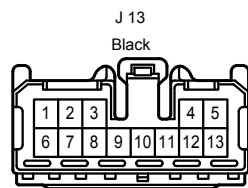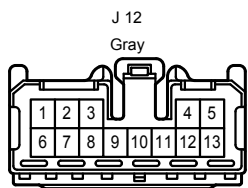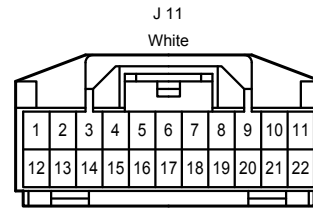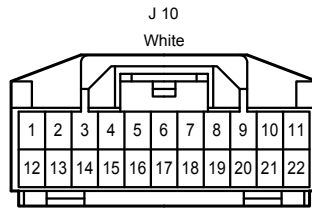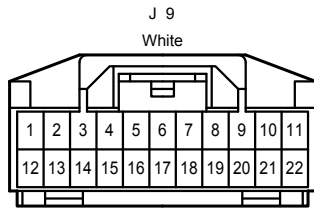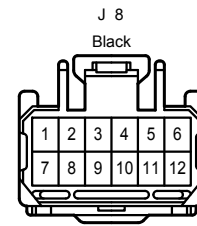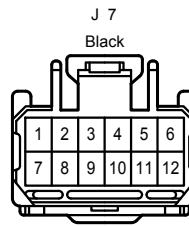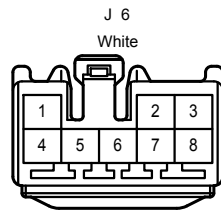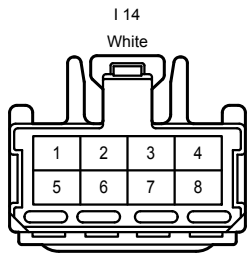

     Position of Parts in Instrument Panel <RHD>

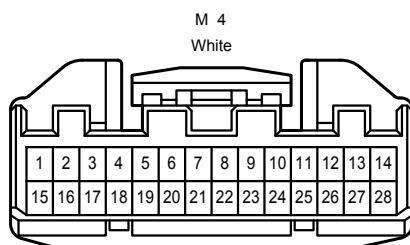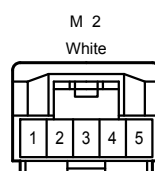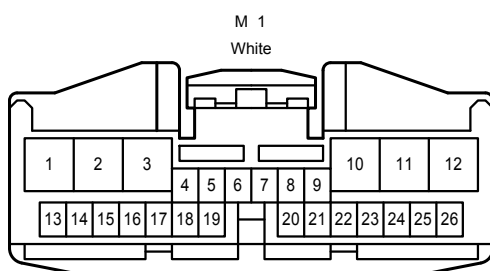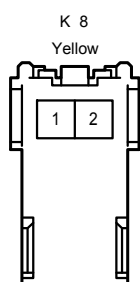

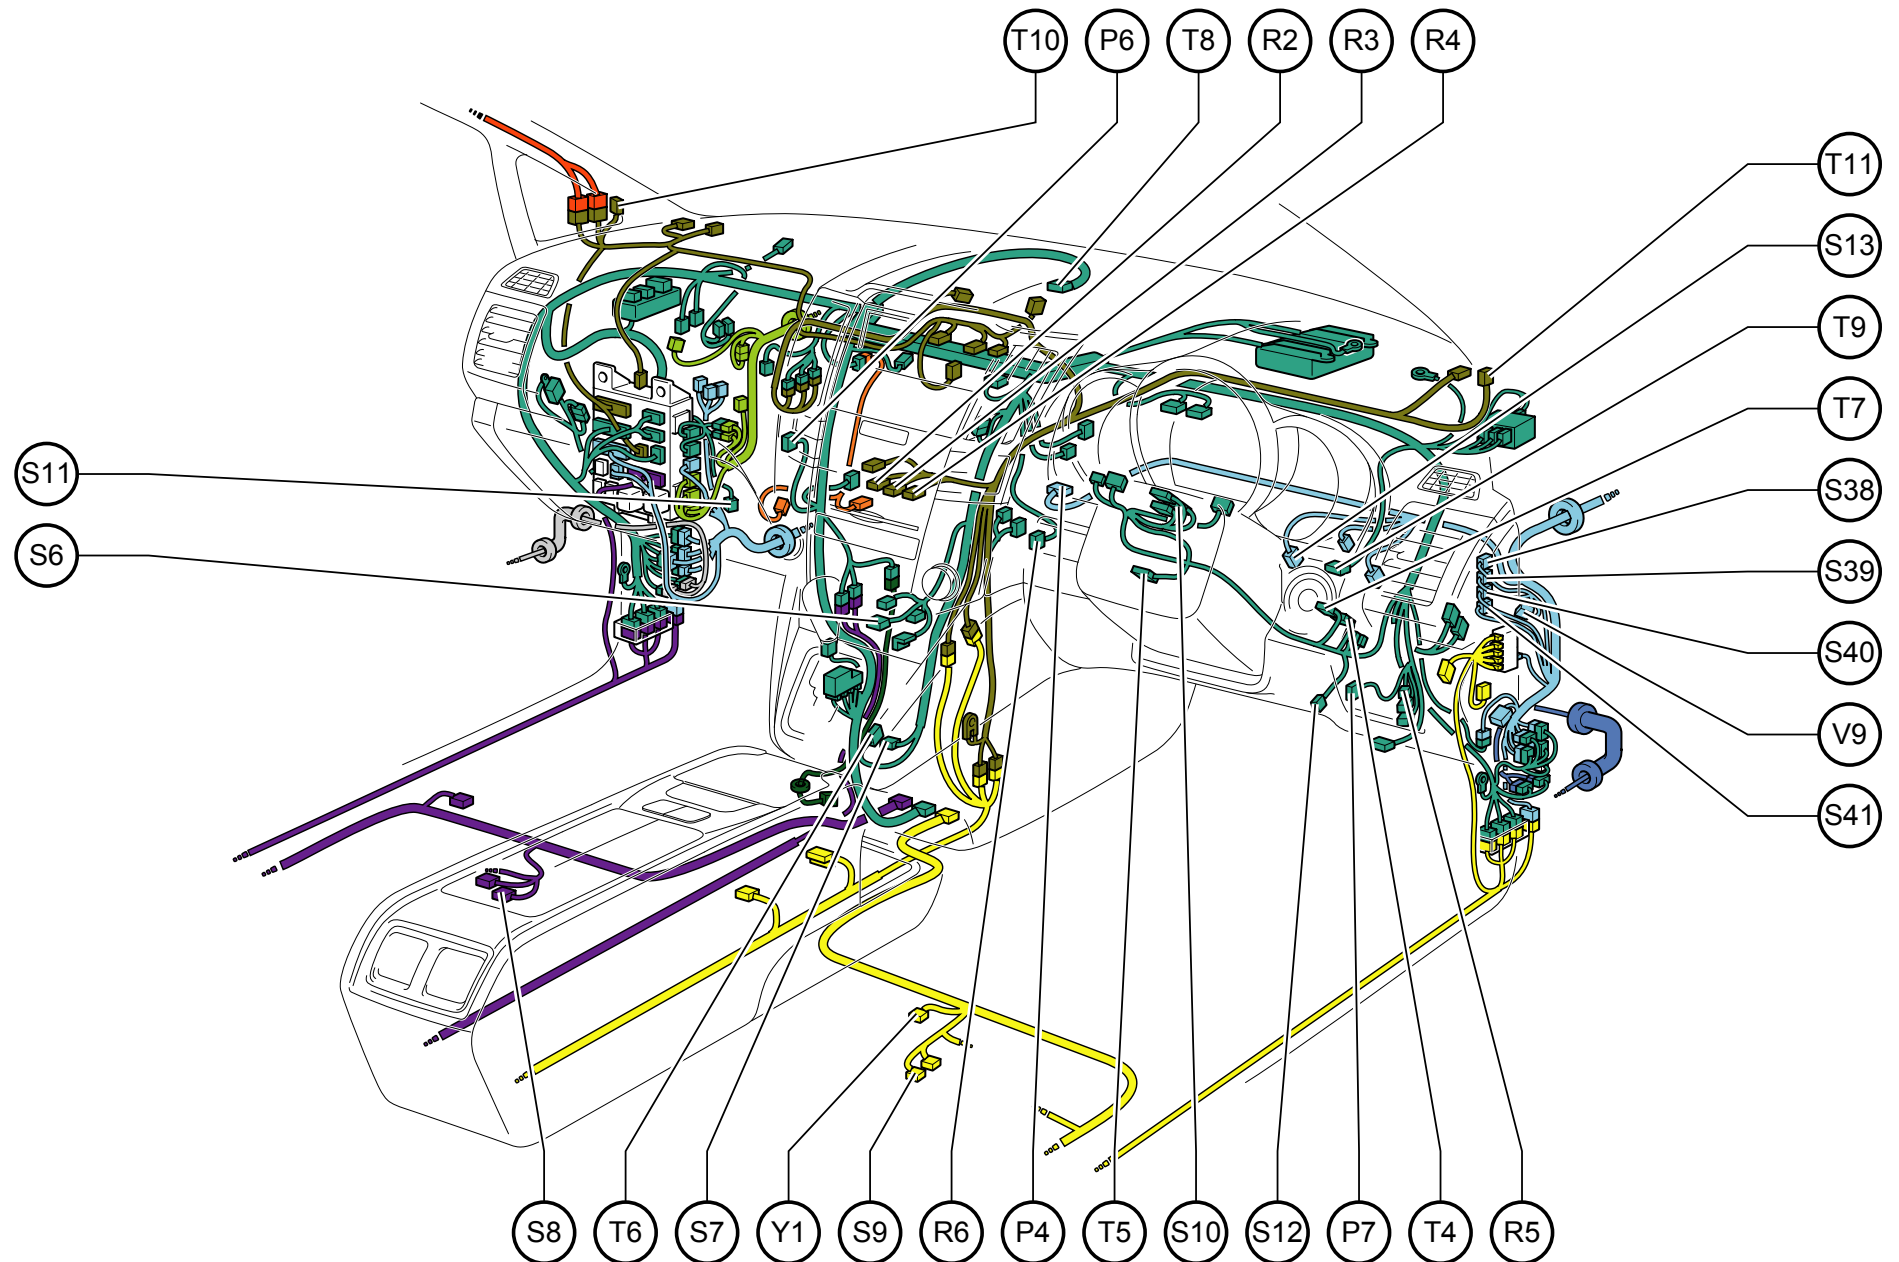

P 4 Parking Brake SW
P 6 Power Back Door Off SW
P 7 Power Back Door Opener/Closer SW

R 2 Radio and Player
R 3 Radio and Player
R 4 Radio and Player
R 5 Remote Control Mirror SW (w/ Driving Position Memory)
R 5 Remote Control Mirror SW (w/o Driving Position Memory)
R 6 Rheostat , Trip SW

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
S 6 Seat Heater SW
S 7 Shift Lock ECU
S 8 Side Airbag Squib LH
S 9 Side Airbag Squib RH
S 10 Steering Angle Sensor
S 11 Step Light LH
S 12 Step Light RH
S 13 Stop Light SW
S 38 Skid Control ECU
S 39 Skid Control ECU
S 40 Skid Control ECU
S 41 Skid Control ECU

 
 
 
 
 
 
 
 
 
T 4 Tilt and Telescopic ECU
T 5 Tilt Motor
T 6 Transmission Control SW
T 7 Transponder Key Amplifier
T 8 Transponder Key Computer
T 9 Turn Signal Flasher
T 10 Tweeter LH
T 11 Tweeter RH

 
V 9 VSC Warning Buzzer

 
 
 
 
 
Y 1 Yaw Rate Sensor

 
Position of Parts in Instrument Panel <RHD>

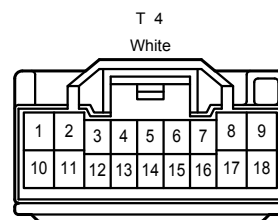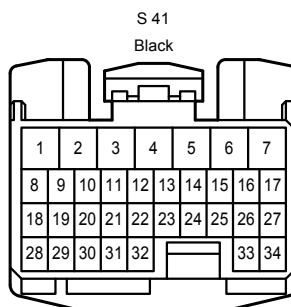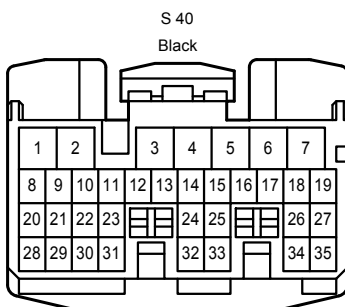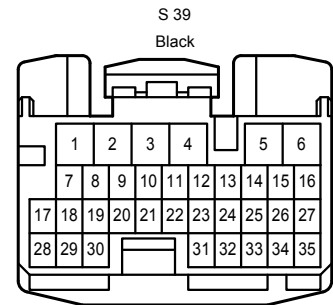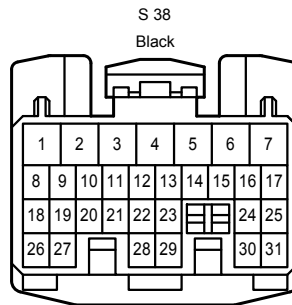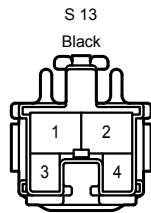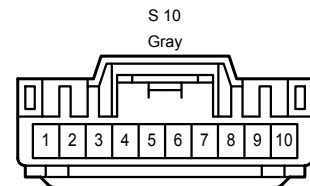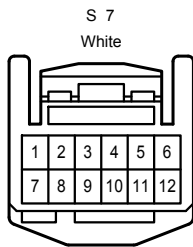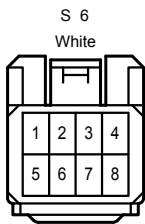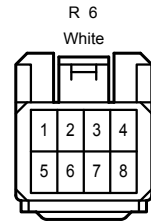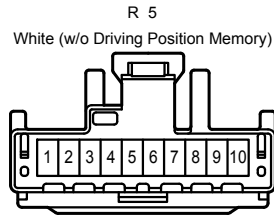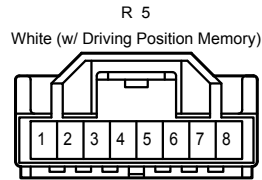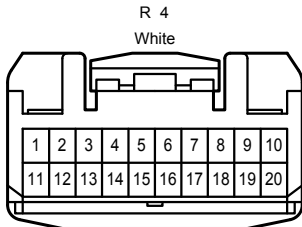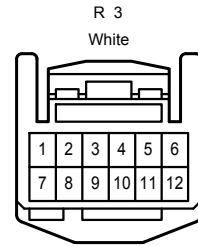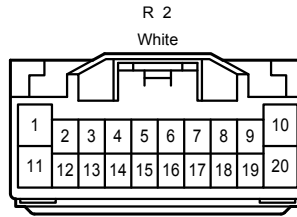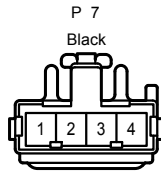 


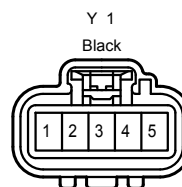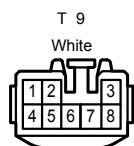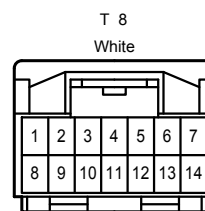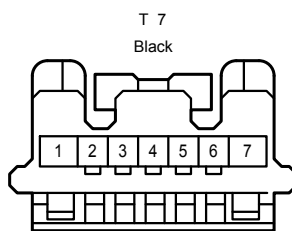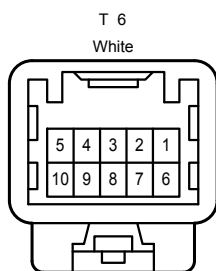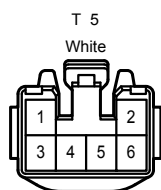 


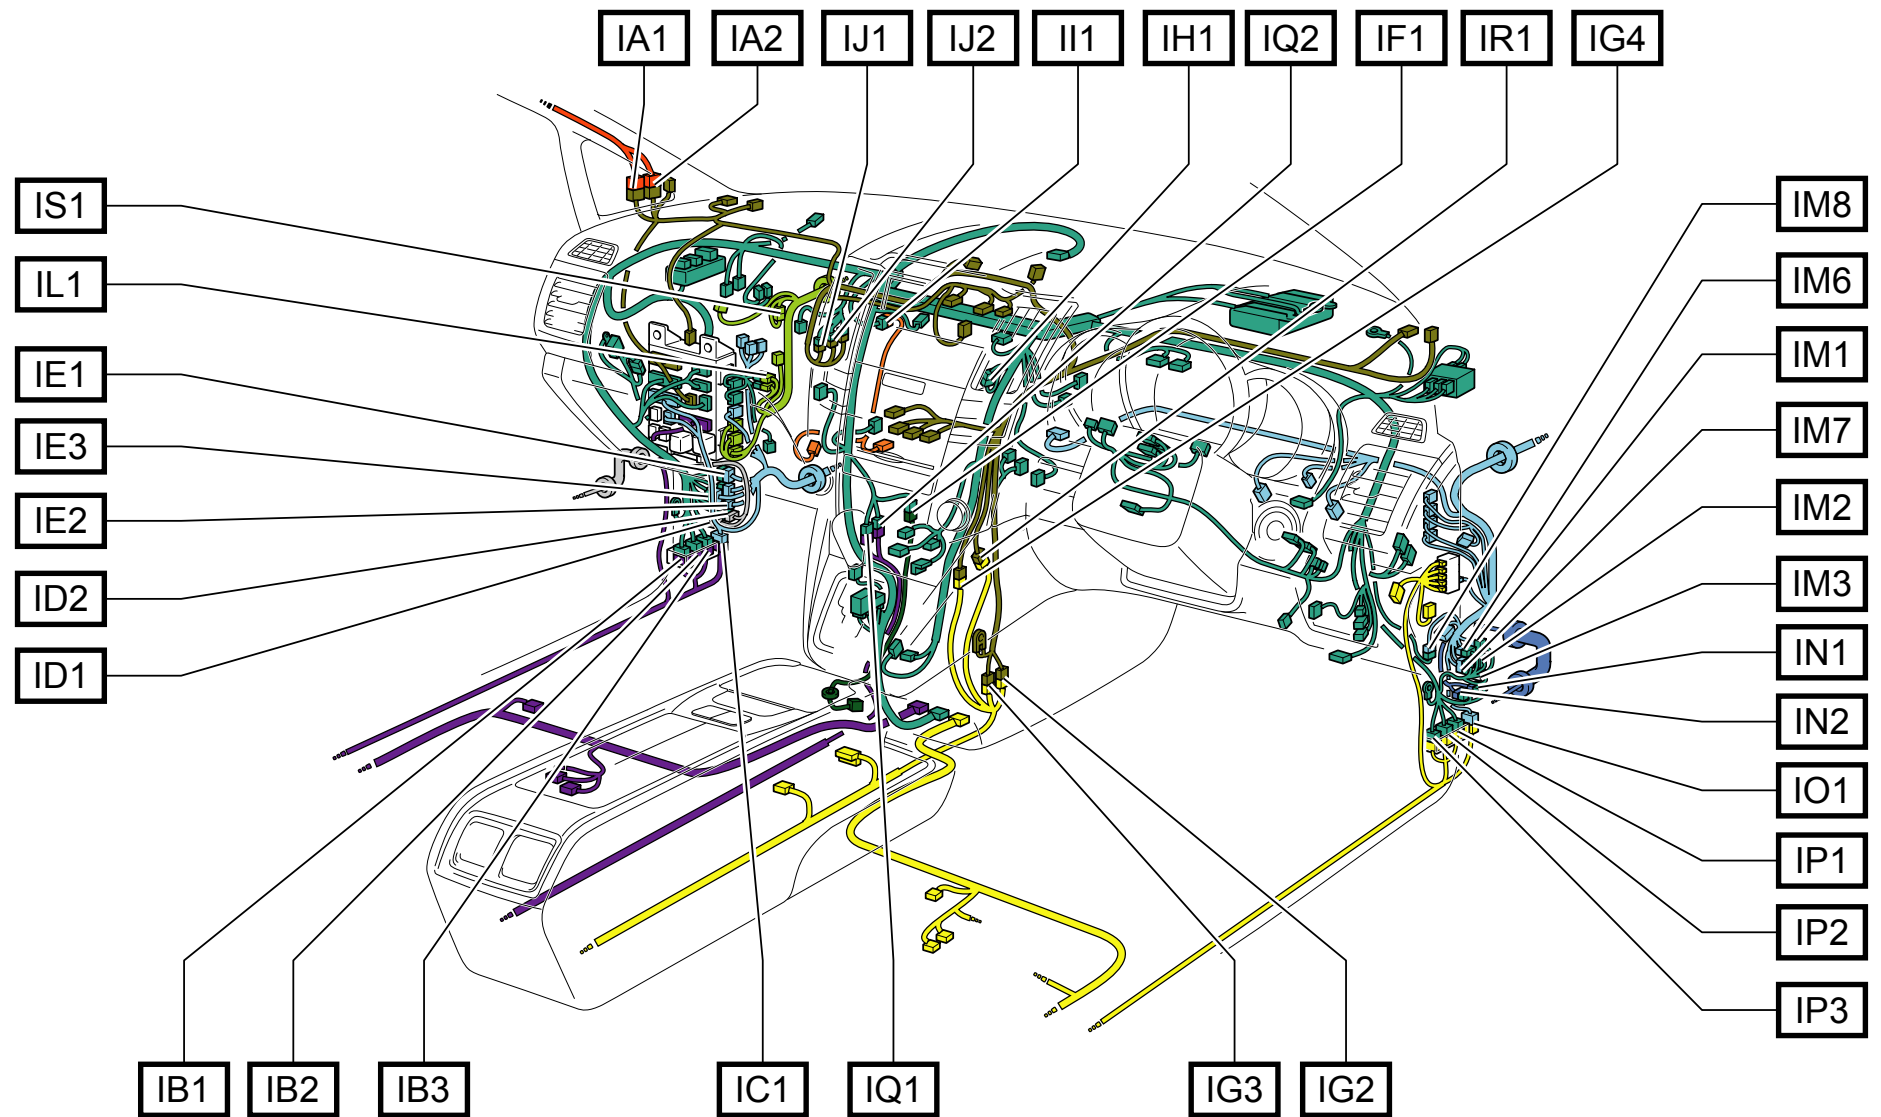 


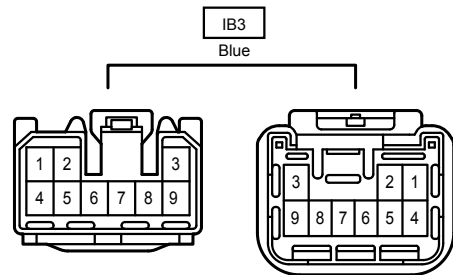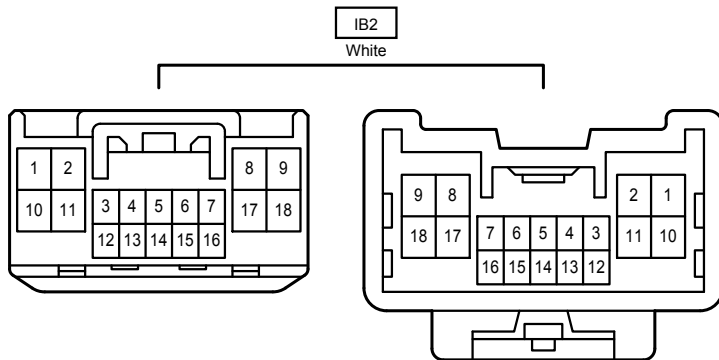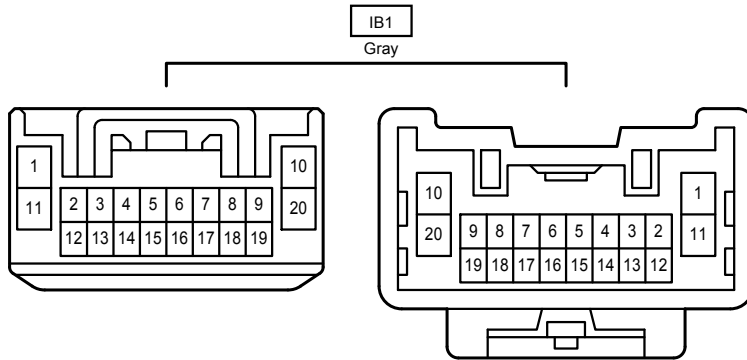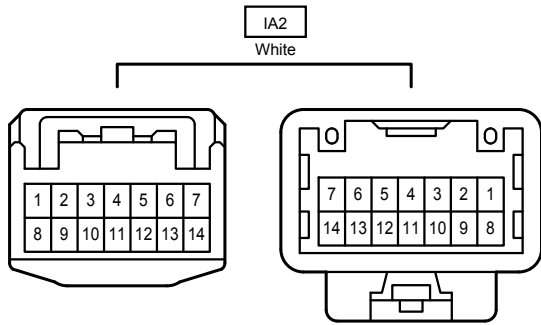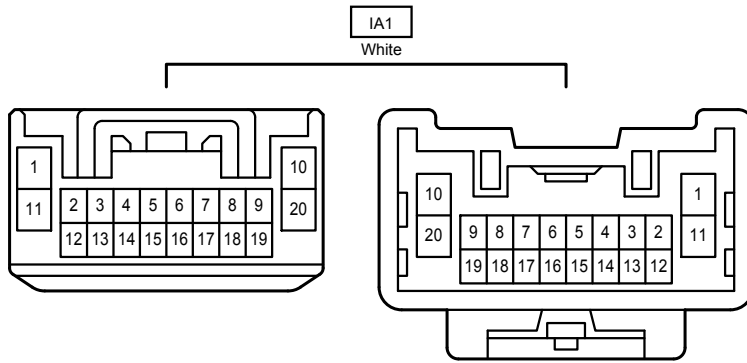 


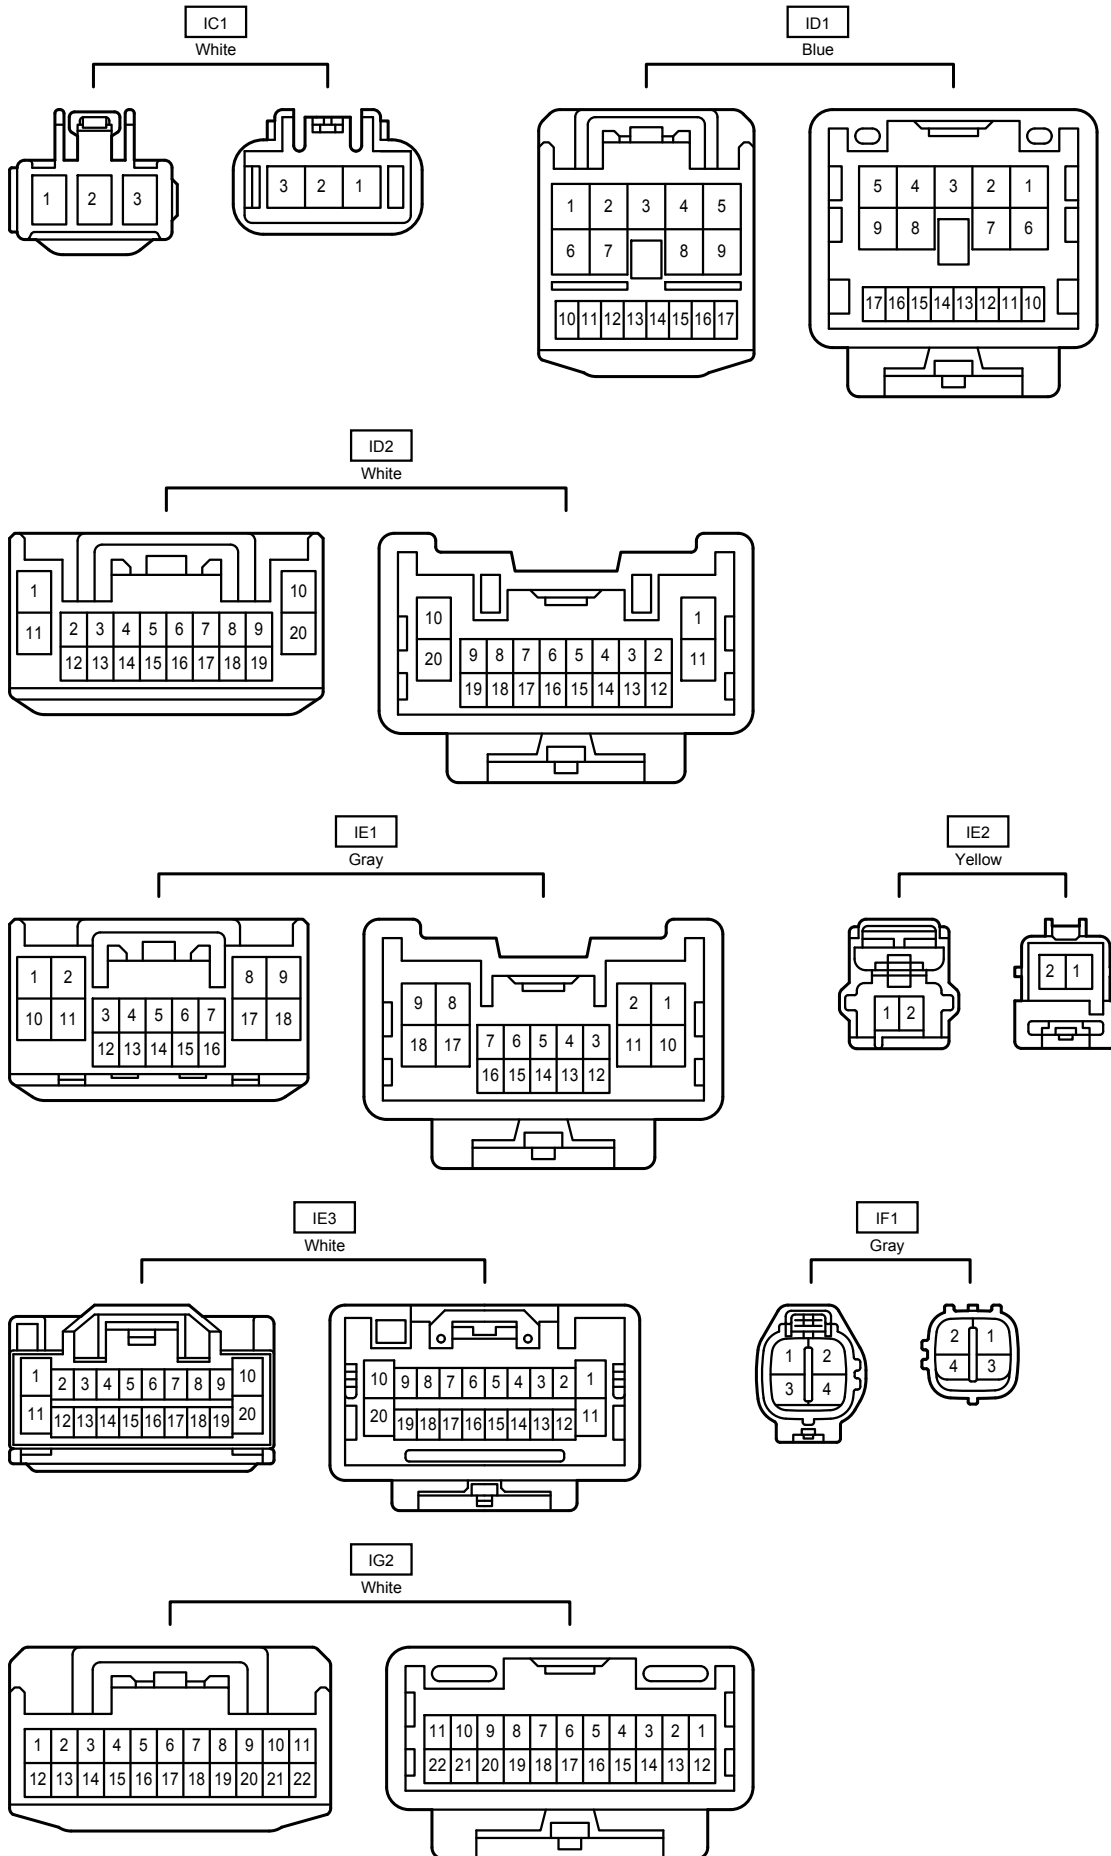 


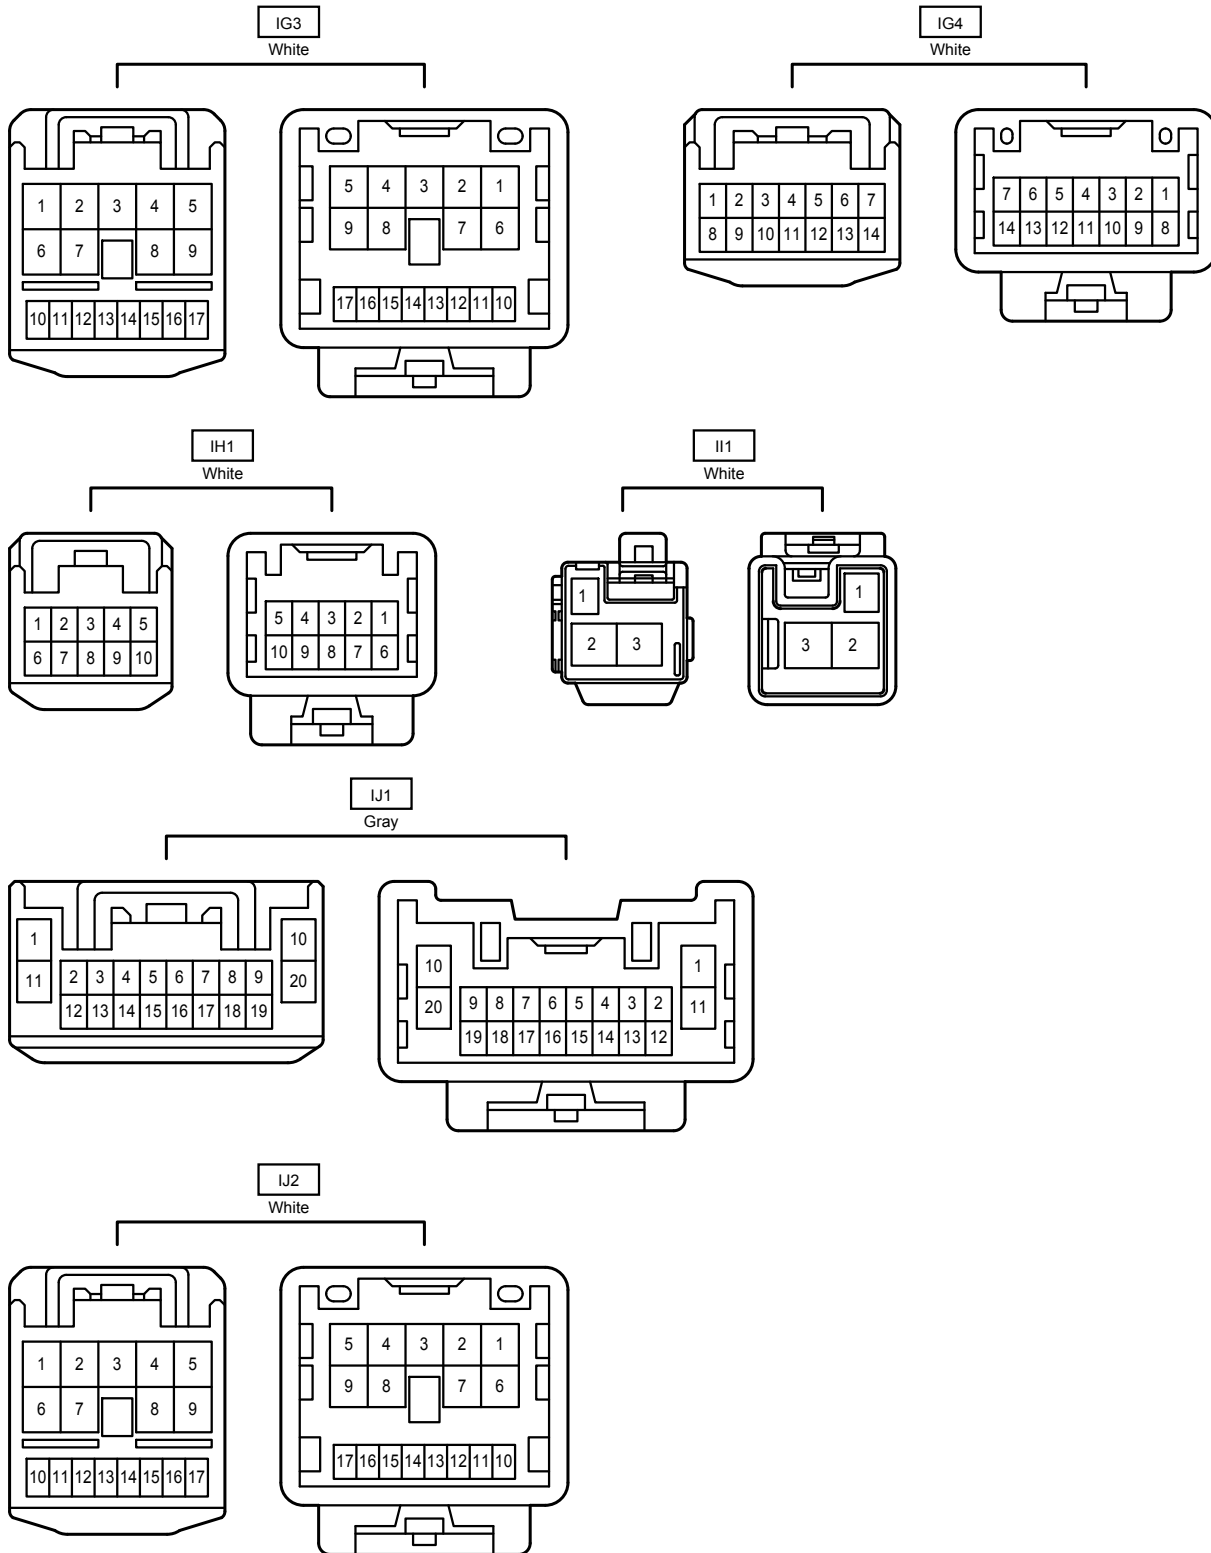

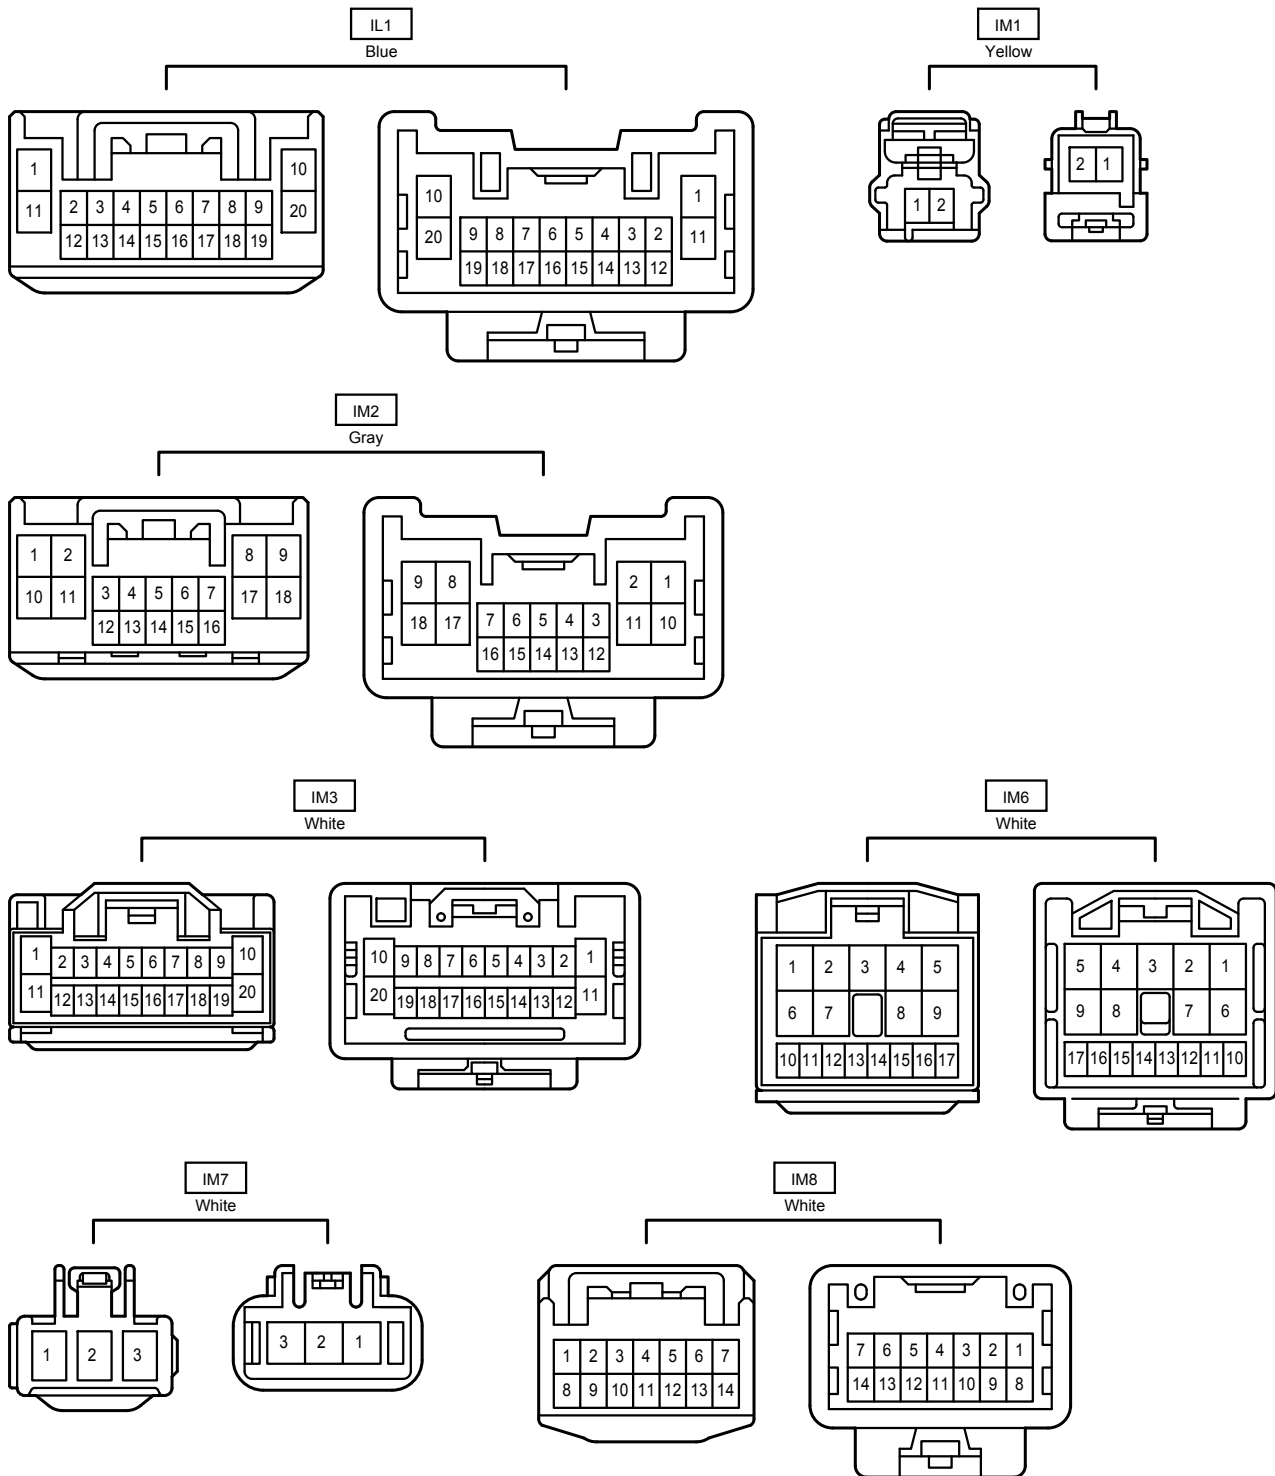

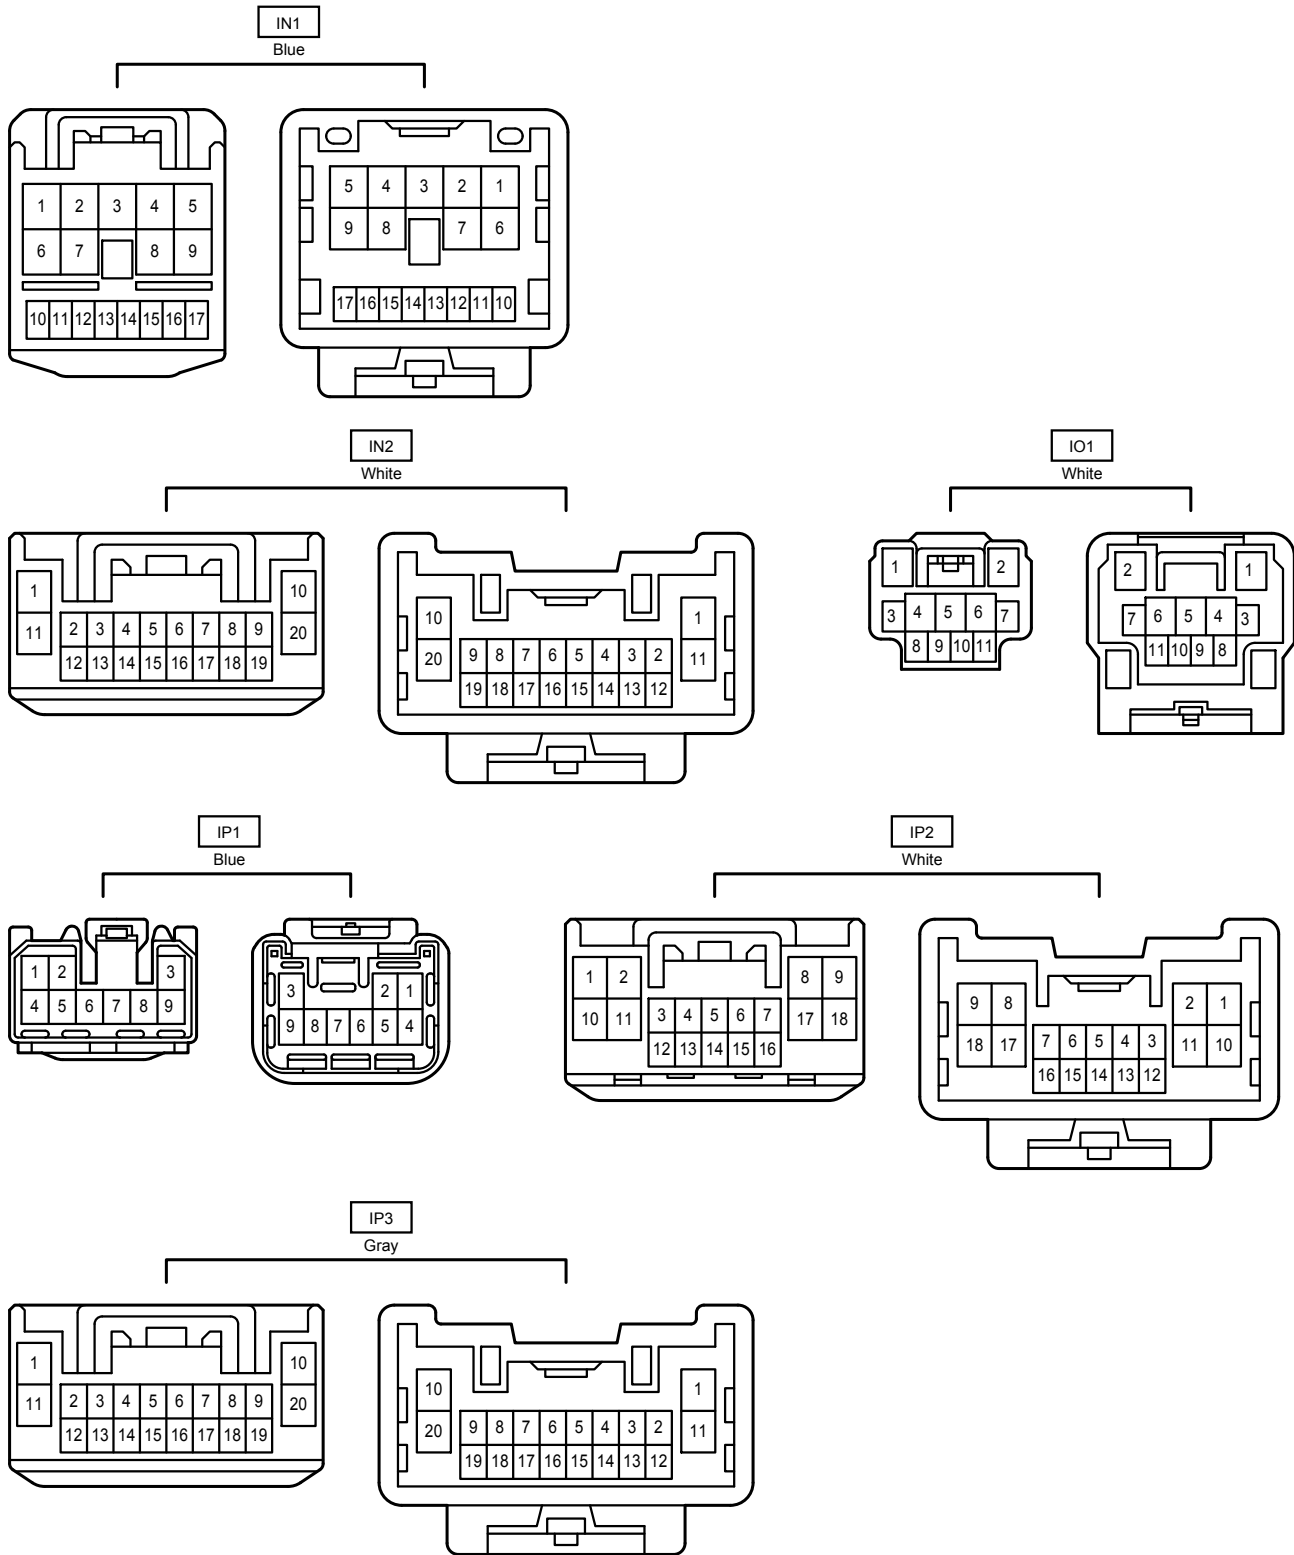




















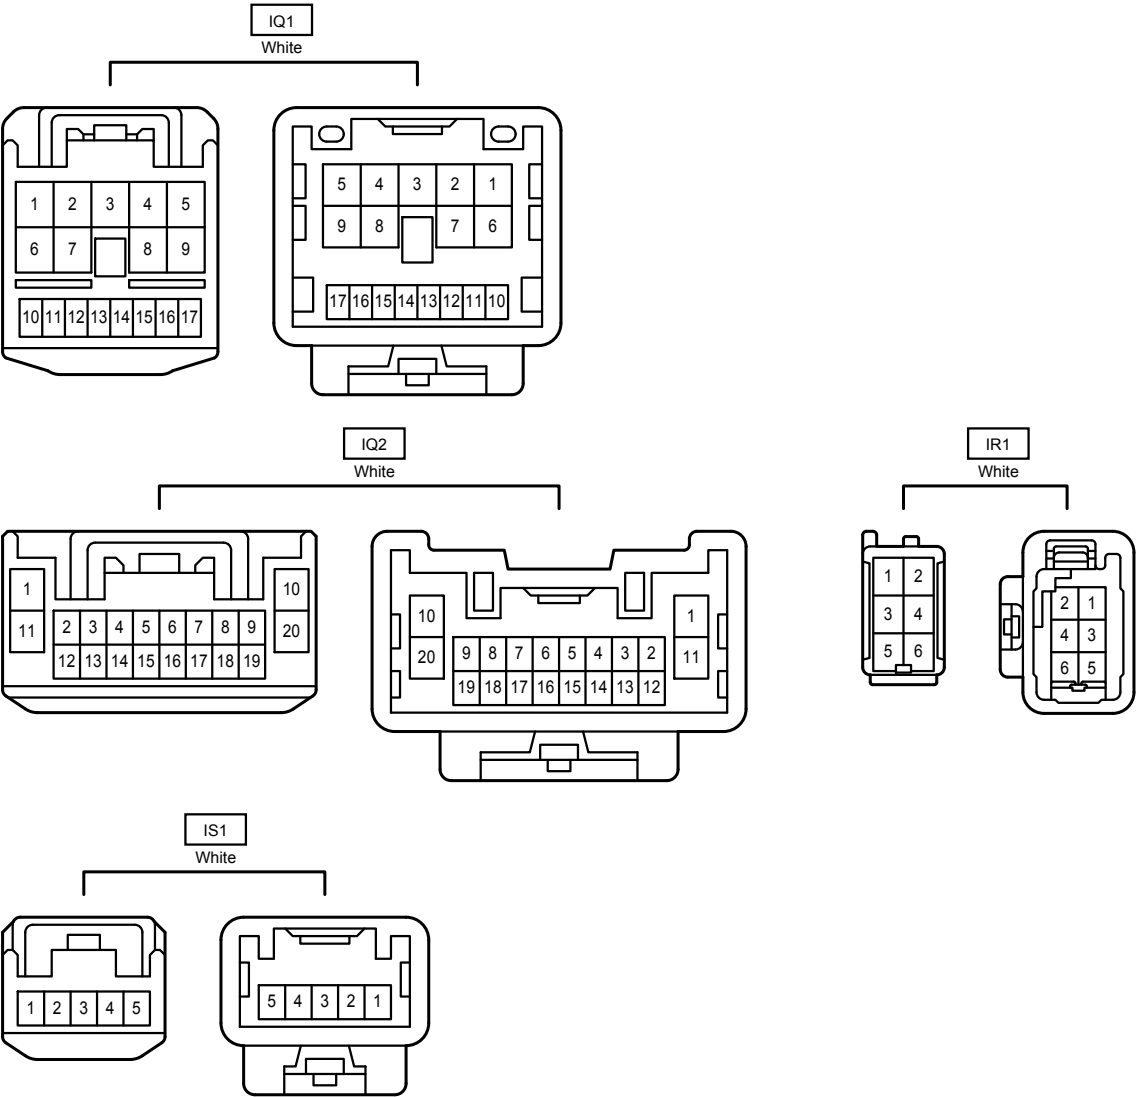


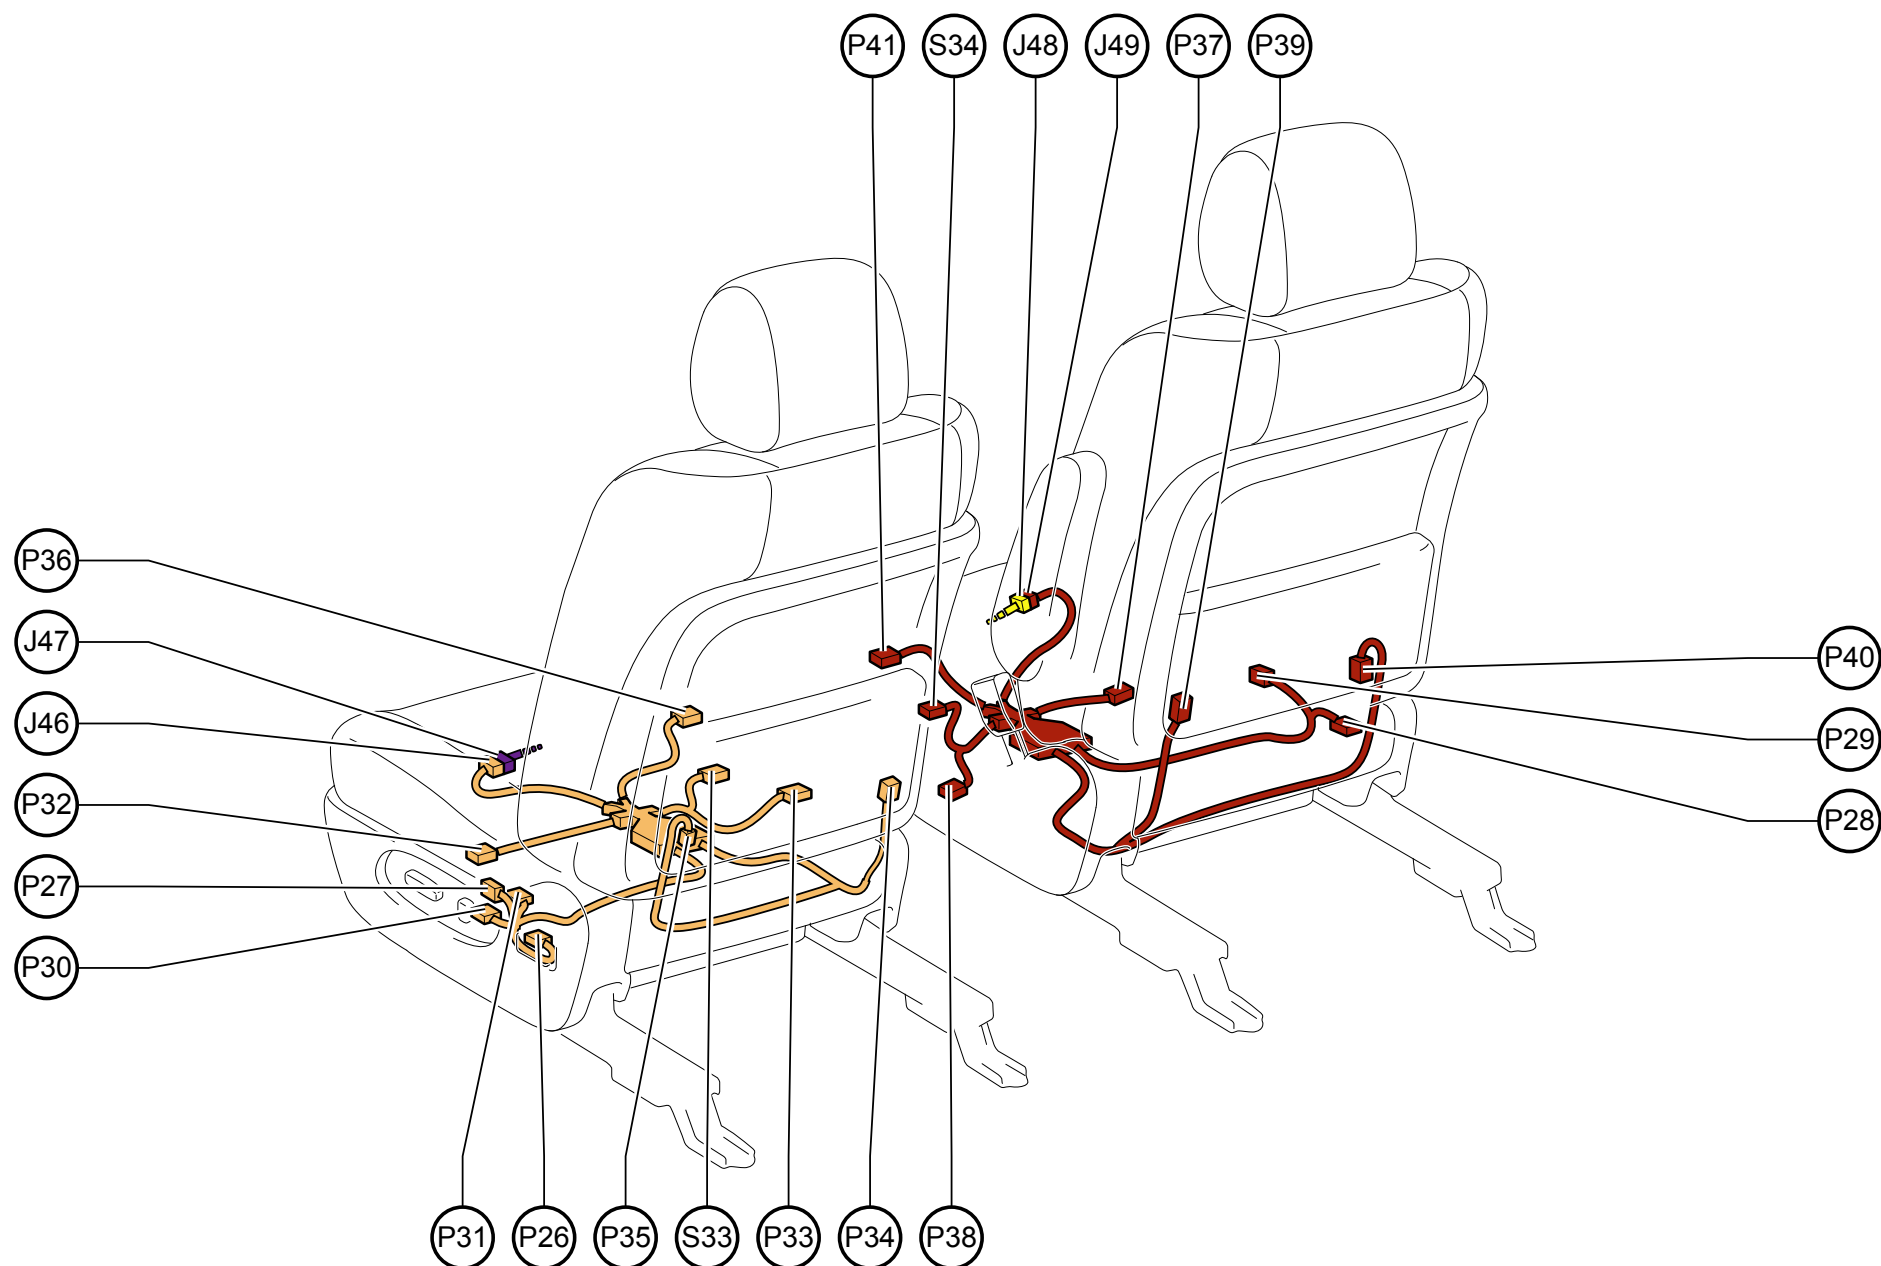


- J 46 Junction Connector
- J 47 Junction Connector
- J 48 Junction Connector
- J 49 Junction Connector

- P 26 Power Seat Control SW (Driver's Seat Lumbar Support Control)
- P 27 Power Seat Control SW (Driver's Seat)
- P 28 Power Seat Control SW (Front Passenger's Seat Lumbar Support Control)
- P 29 Power Seat Control SW (Front Passenger's Seat)
- P 30 Power Seat Control SW and ECU (Driver's Seat)
- P 31 Power Seat Control SW and ECU (Driver's Seat)
- P 32 Power Seat Motor (Driver's Seat Front Vertical Control)
- P 33 Power Seat Motor (Driver's Seat Lifter Control)
- P 34 Power Seat Motor (Driver's Seat Lumbar Support Control)
- P 35 Power Seat Motor (Driver's Seat Reclining Control)
- P 36 Power Seat Motor (Driver's Seat Slide Control)
- P 37 Power Seat Motor (Front Passenger's Seat Front Vertical Control)
- P 38 Power Seat Motor (Front Passenger's Seat Lifter Control)
- P 39 Power Seat Motor (Front Passenger's Seat Lumbar Support Control)
- P 40 Power Seat Motor (Front Passenger's Seat Reclining Control)
- P 41 Power Seat Motor (Front Passenger's Seat Slide Control)

                     - S 33 Seat Heater (Driver's Seat)
- S 34 Seat Heater (Front Passenger's Seat)

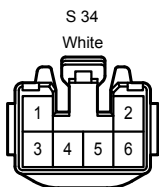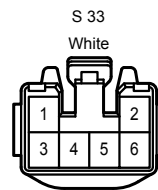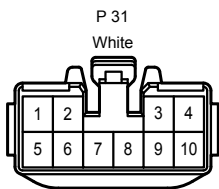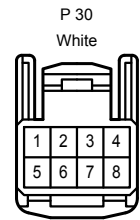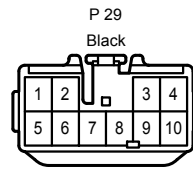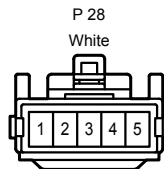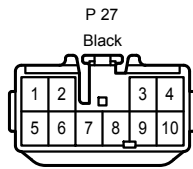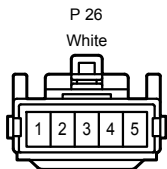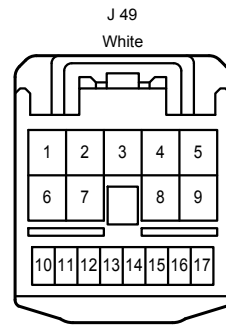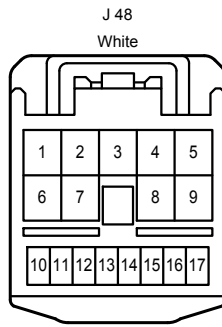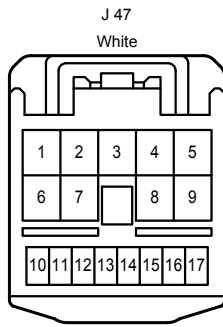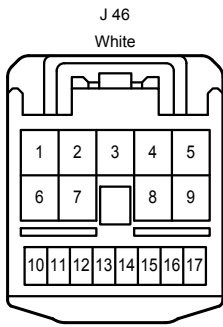

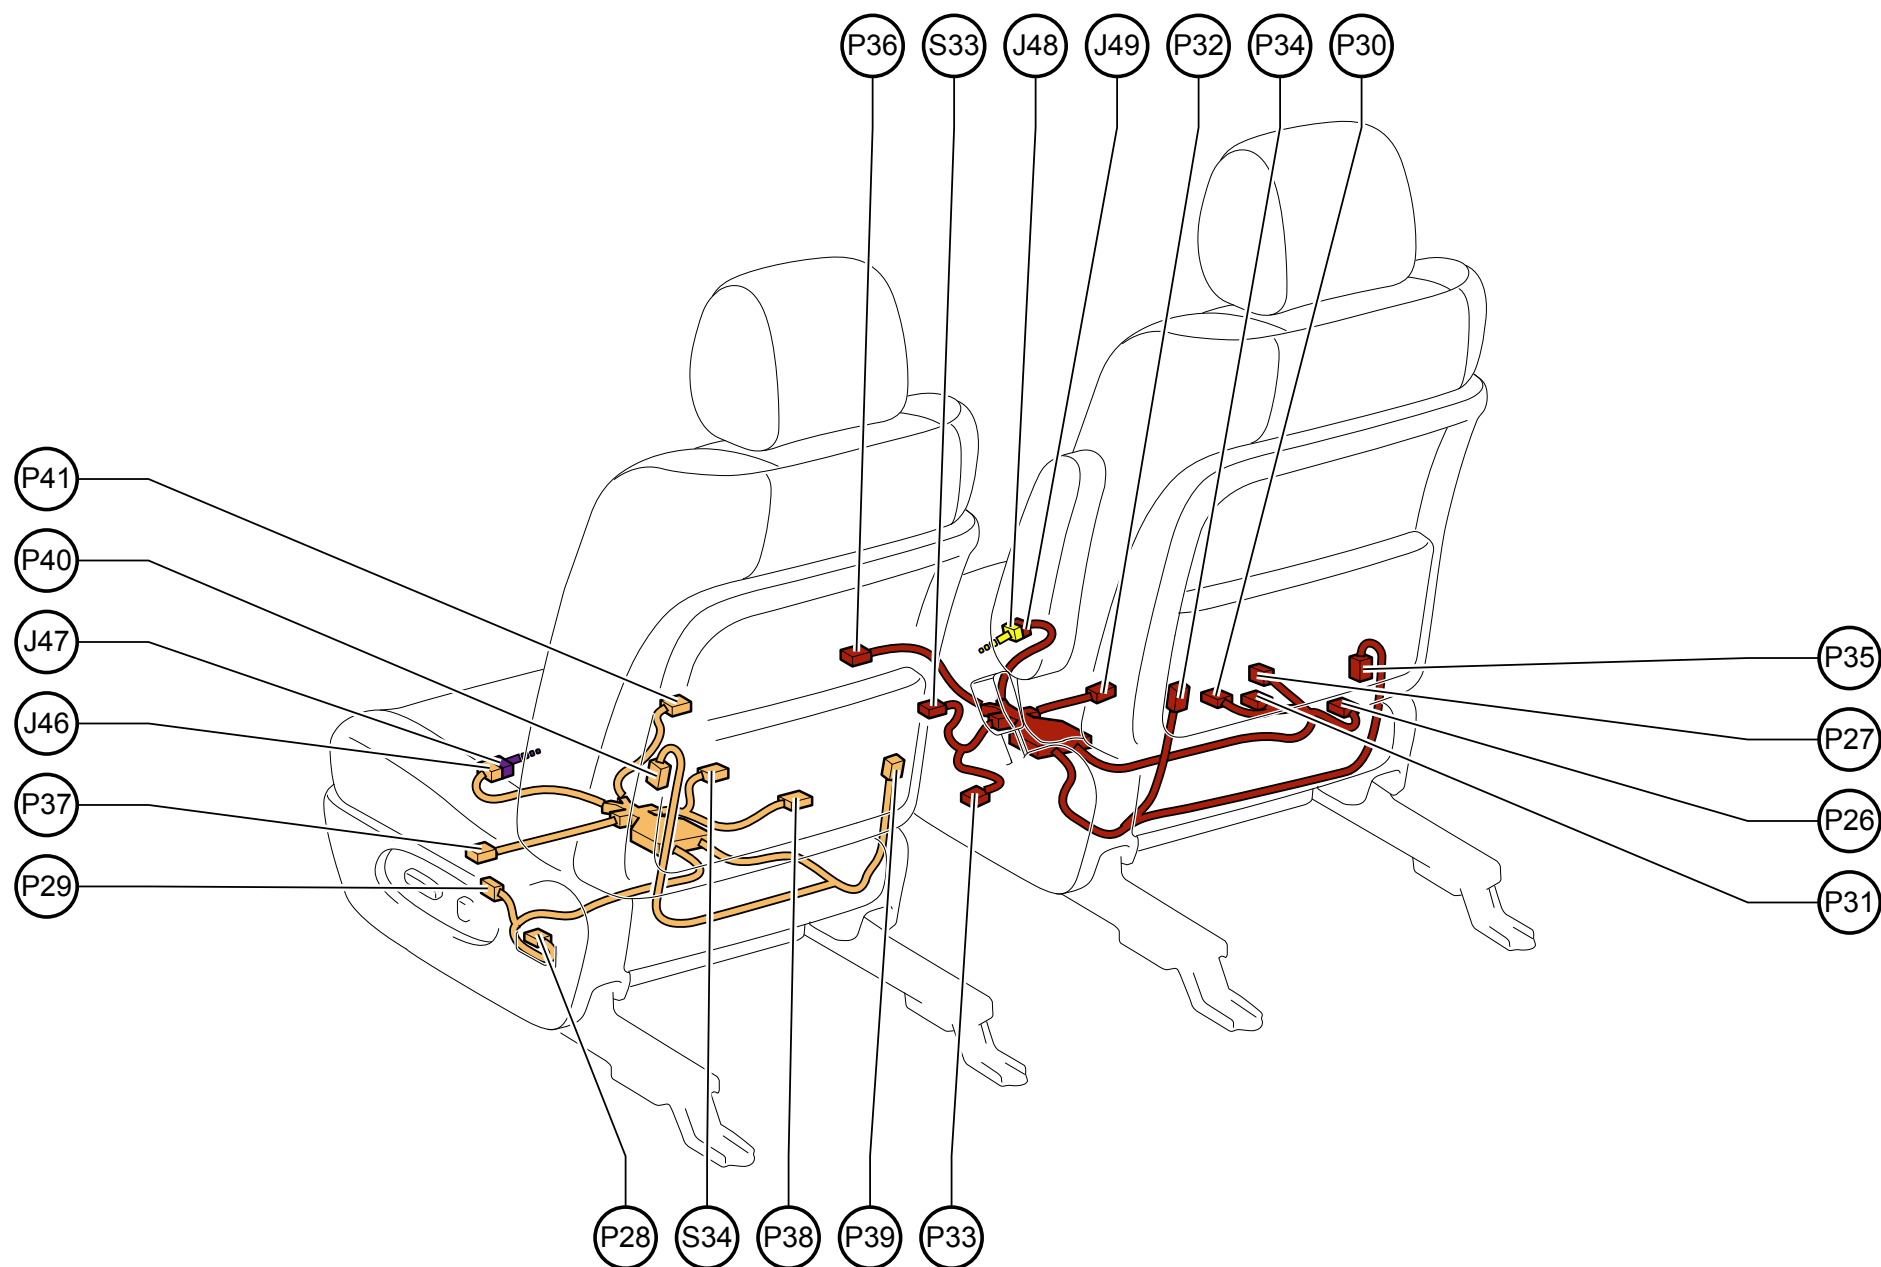


- J 46 Junction Connector
- J 47 Junction Connector
- J 48 Junction Connector
- J 49 Junction Connector


- P 26 Power Seat Control SW (Driver's Seat Lumbar Support Control)
- P 27 Power Seat Control SW (Driver's Seat)
- P 28 Power Seat Control SW (Front Passenger's Seat Lumbar Support Control)
- P 29 Power Seat Control SW (Front Passenger's Seat)
- P 30 Power Seat Control SW and ECU (Driver's Seat)
- P 31 Power Seat Control SW and ECU (Driver's Seat)
- P 32 Power Seat Motor (Driver's Seat Front Vertical Control)
- P 33 Power Seat Motor (Driver's Seat Lifter Control)
- P 34 Power Seat Motor (Driver's Seat Lumbar Support Control)
- P 35 Power Seat Motor (Driver's Seat Reclining Control)
- P 36 Power Seat Motor (Driver's Seat Slide Control)
- P 37 Power Seat Motor (Front Passenger's Seat Front Vertical Control)
- P 38 Power Seat Motor (Front Passenger's Seat Lifter Control)
- P 39 Power Seat Motor (Front Passenger's Seat Lumbar Support Control)
- P 40 Power Seat Motor (Front Passenger's Seat Reclining Control)
- P 41 Power Seat Motor (Front Passenger's Seat Slide Control)

- S 33 Seat Heater (Driver's Seat)
- S 34 Seat Heater (Front Passenger's Seat)

 
J 46
White

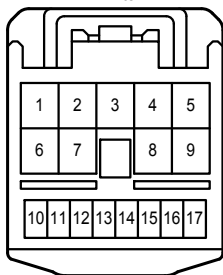


J 47
White

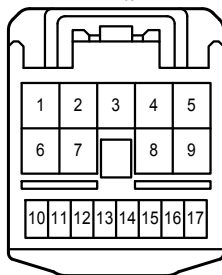 


J 48
White

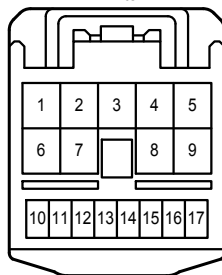 


J 49
White

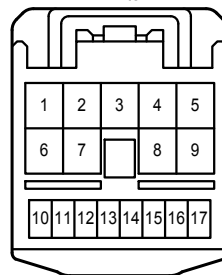 


P 26
White

 


P 27
Black

 


P 28
White

 


P 29
Black

 

P 30
White

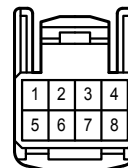 

P 31
White

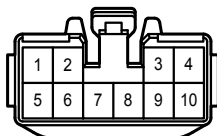 

P 32
White



 
P 33
White




P 34
White



P 35
White




P 36
White

 


P 37
White



 
P 38
White




P 39
White

 


P 40
White

 

P 41
White

 

S 33
White

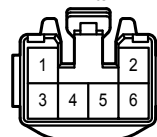 

S 34
White

