



F RELAY LOCATIONS

[Engine Compartment]

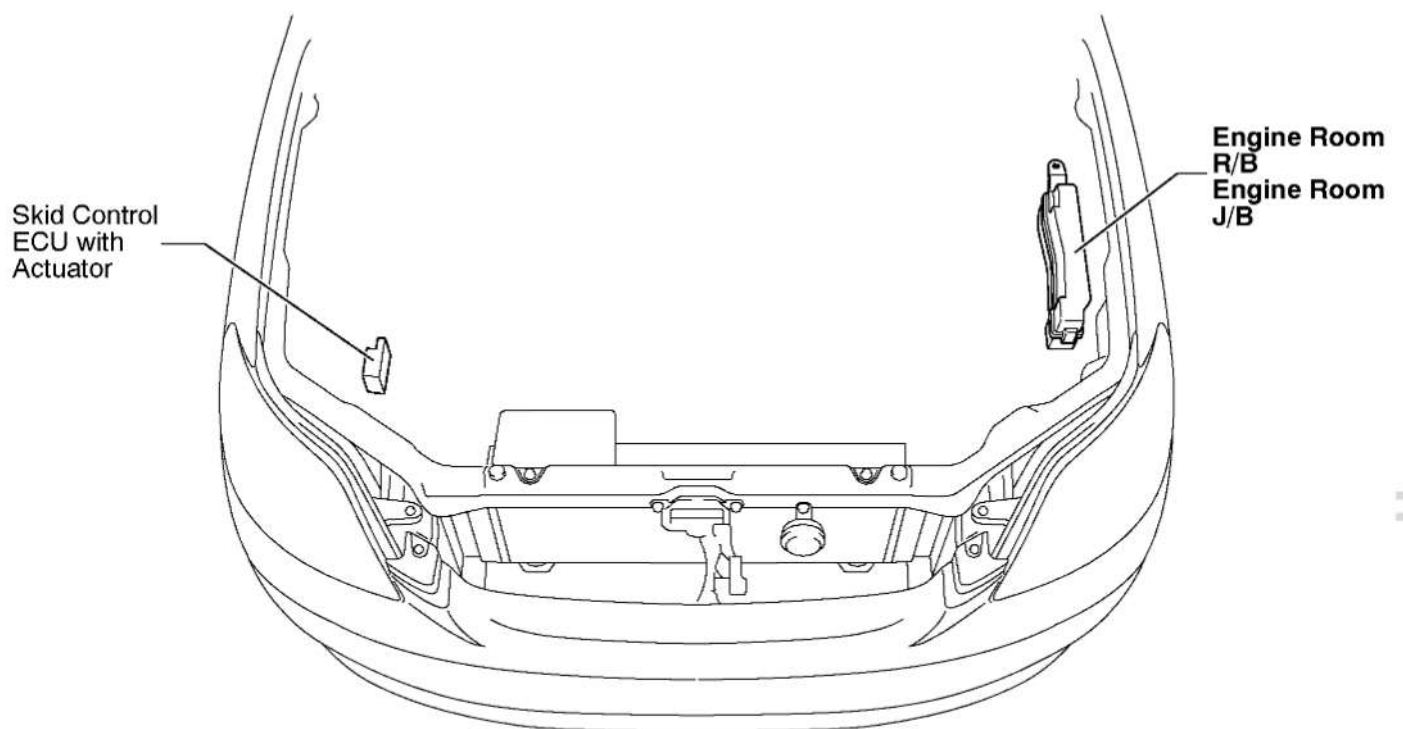


[Instrument Panel]

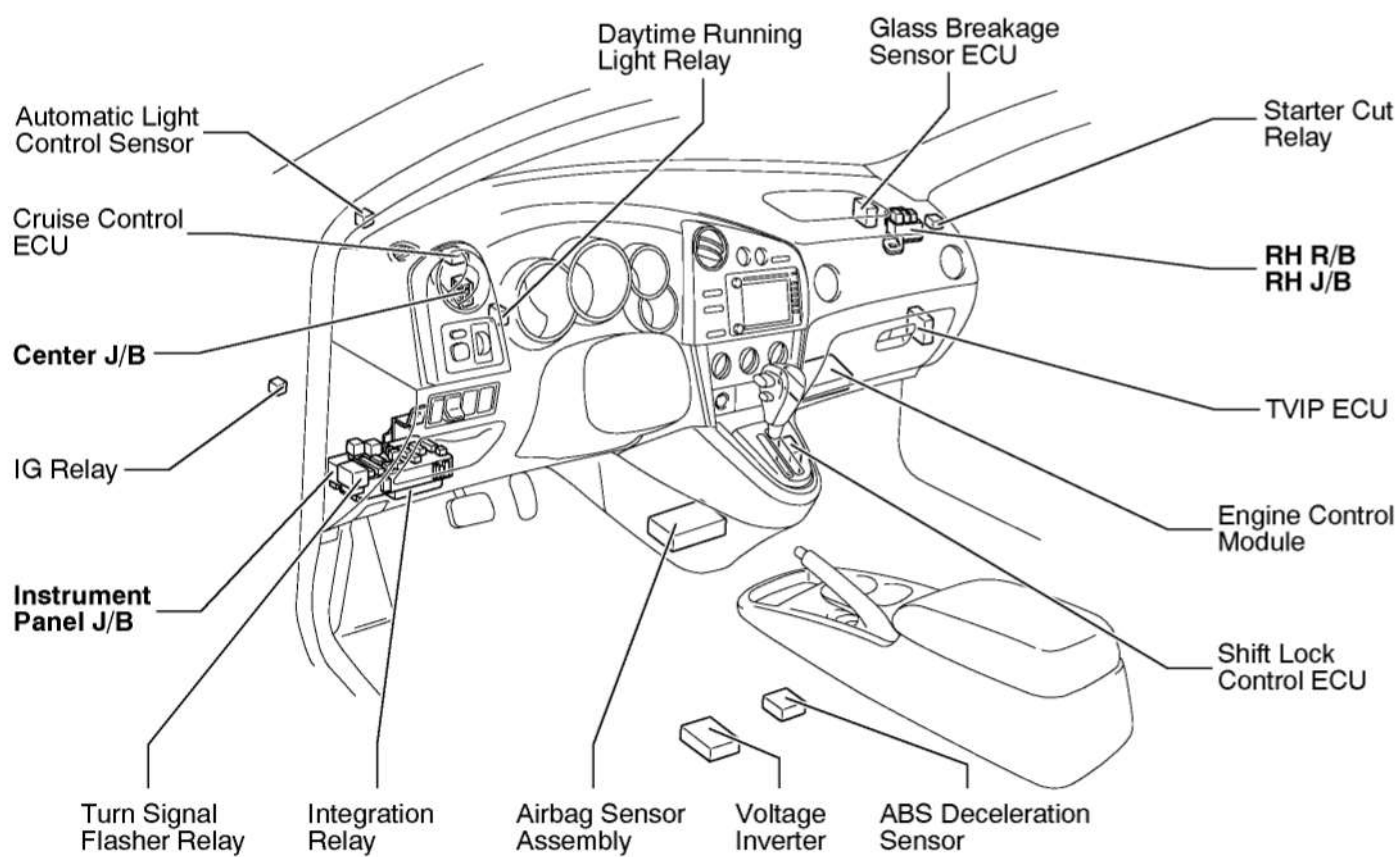


F RELAY LOCATIONS

[Body]

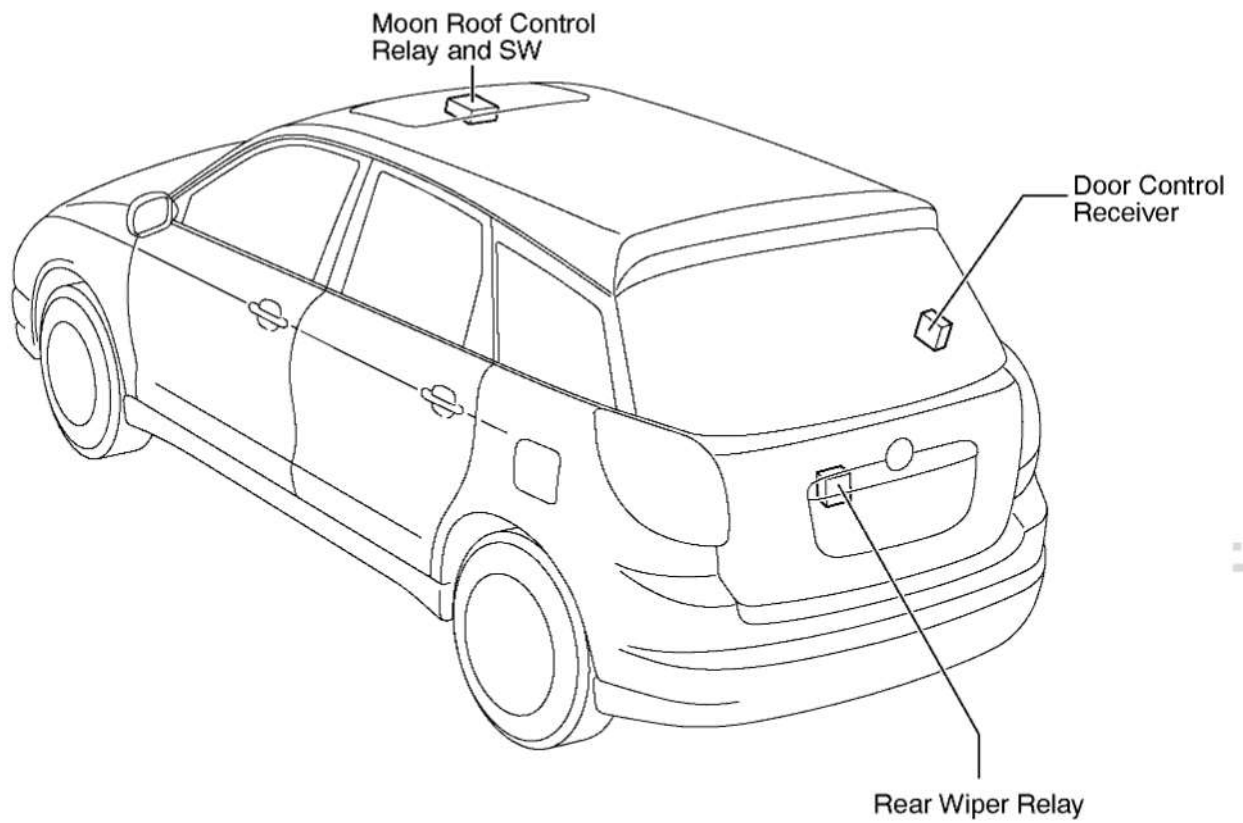


① : Engine Room R/B


○ : Engine Room J/B

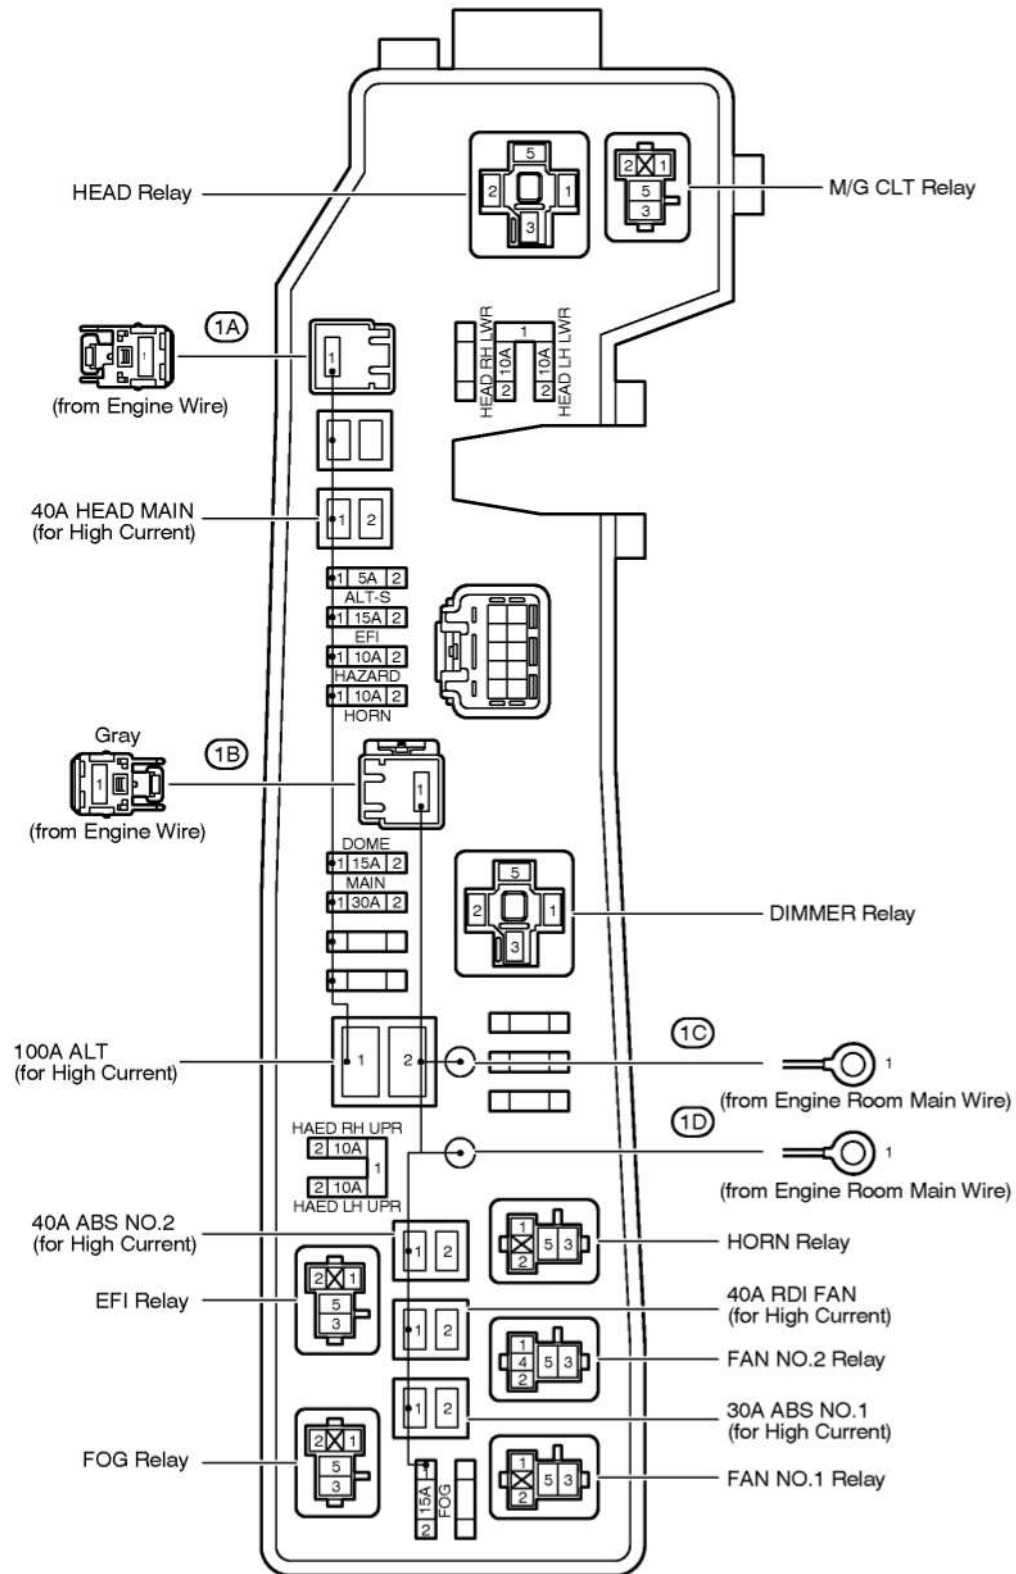

F RELAY LOCATIONS


 : Instrument Panel J/B

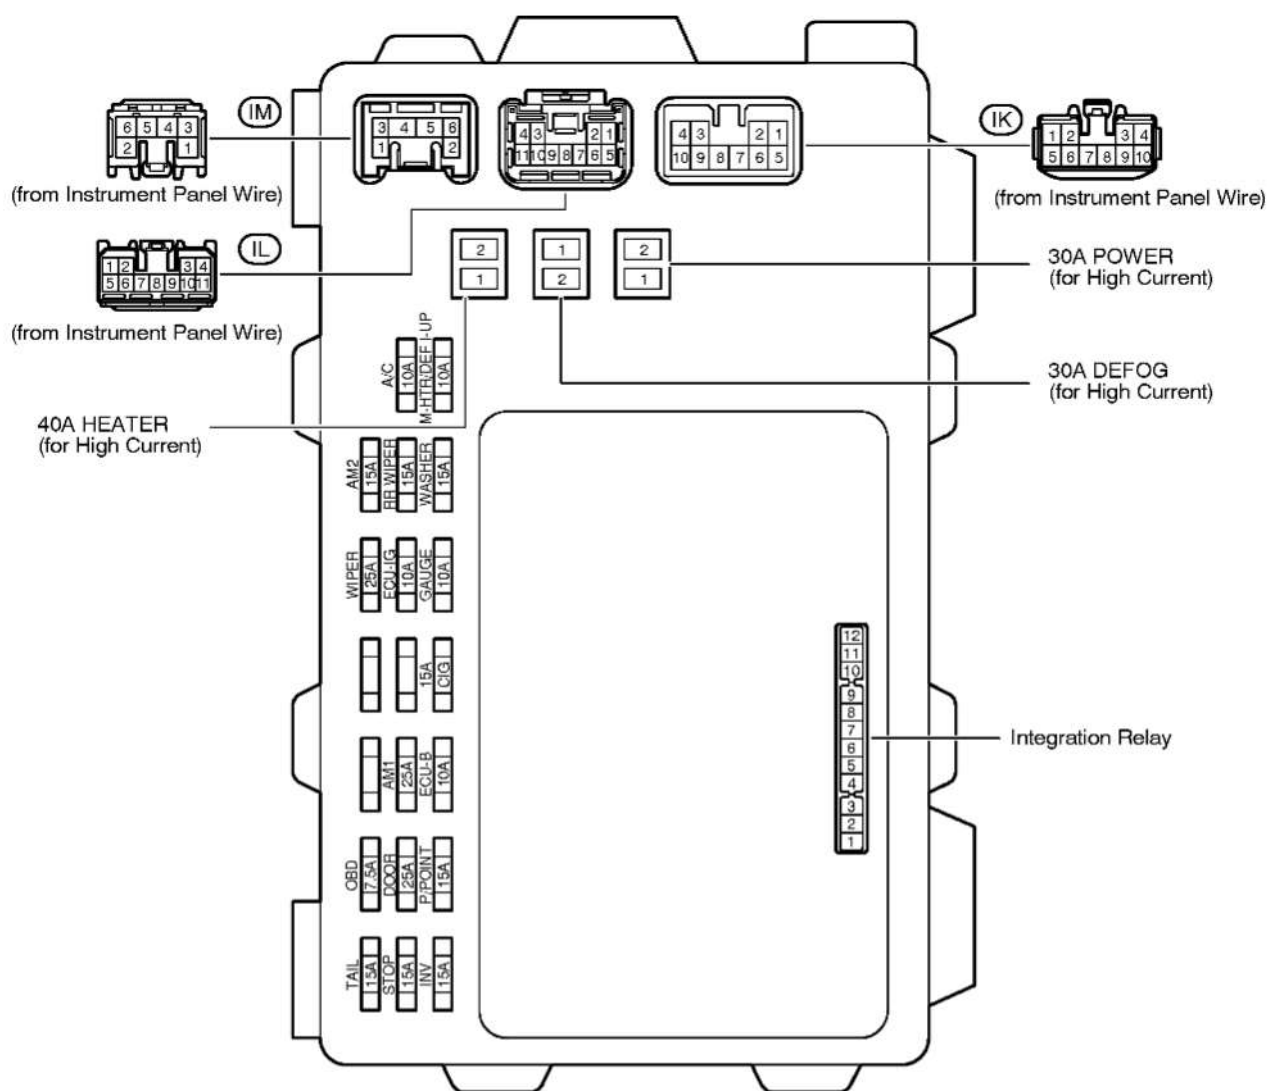

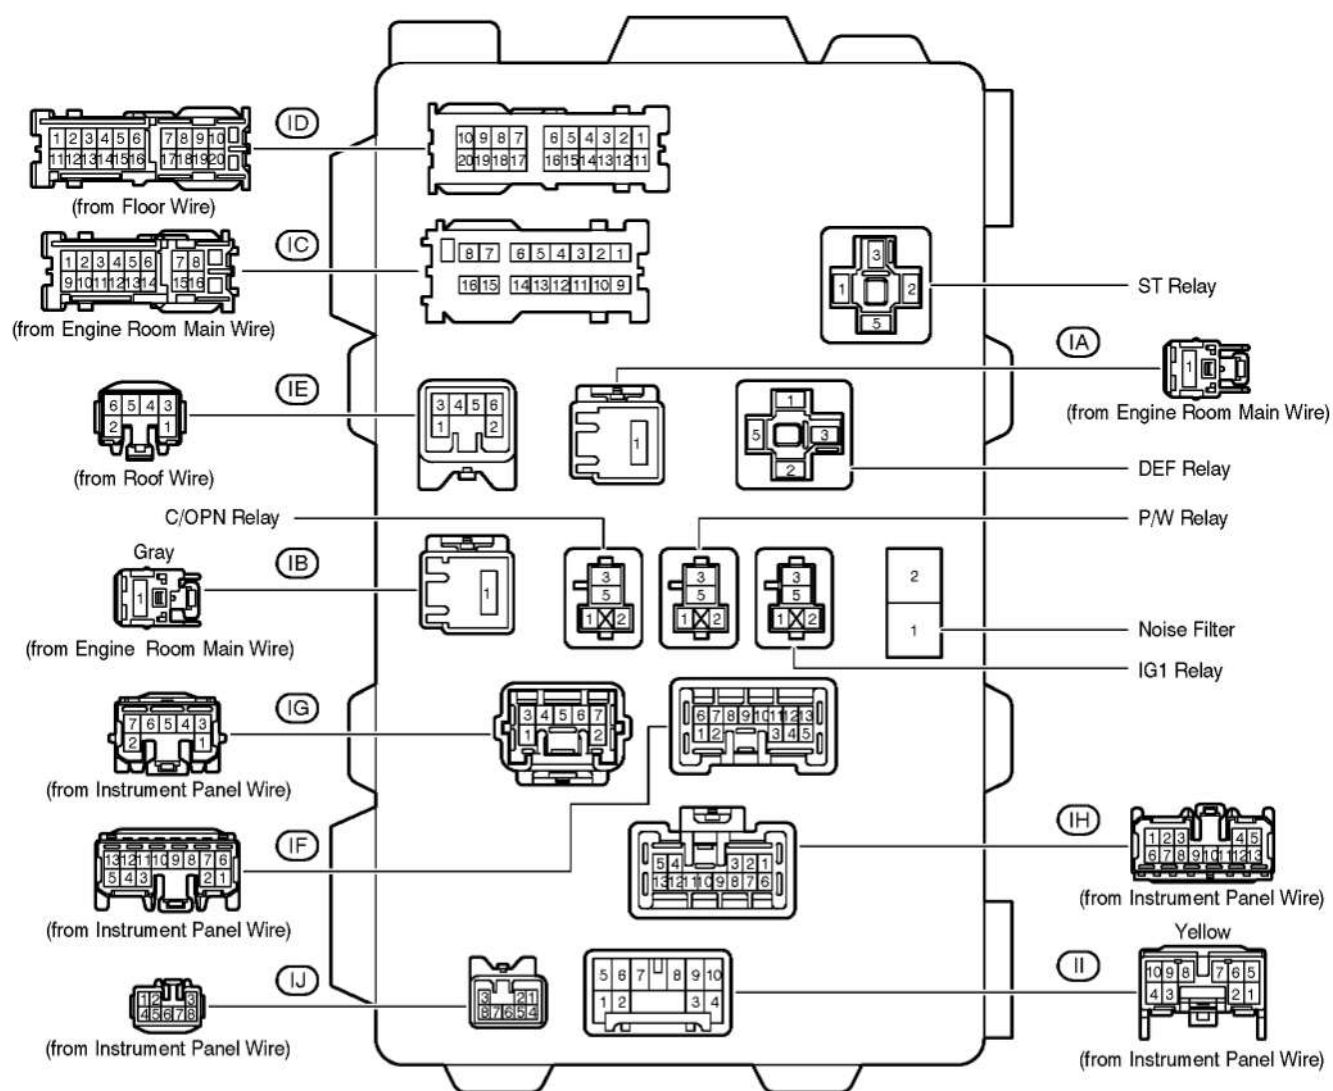


F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

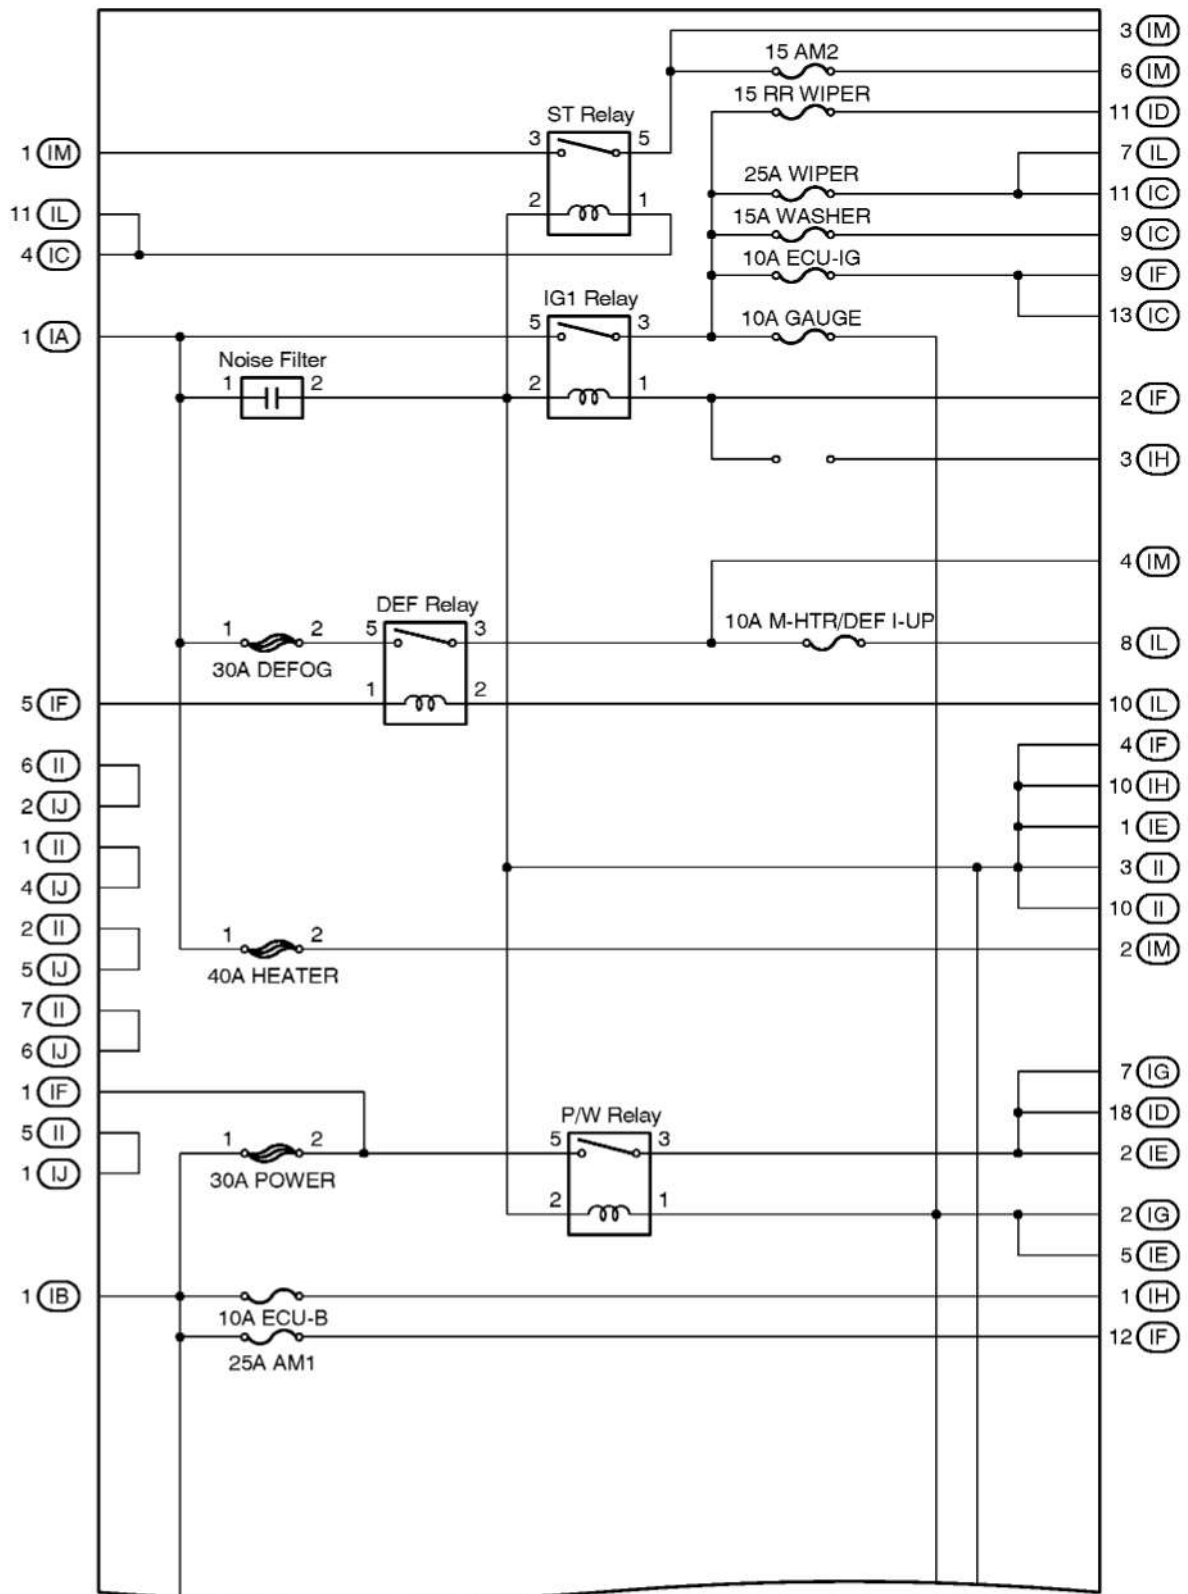


(Cont. Next Page)


(Cont'd)

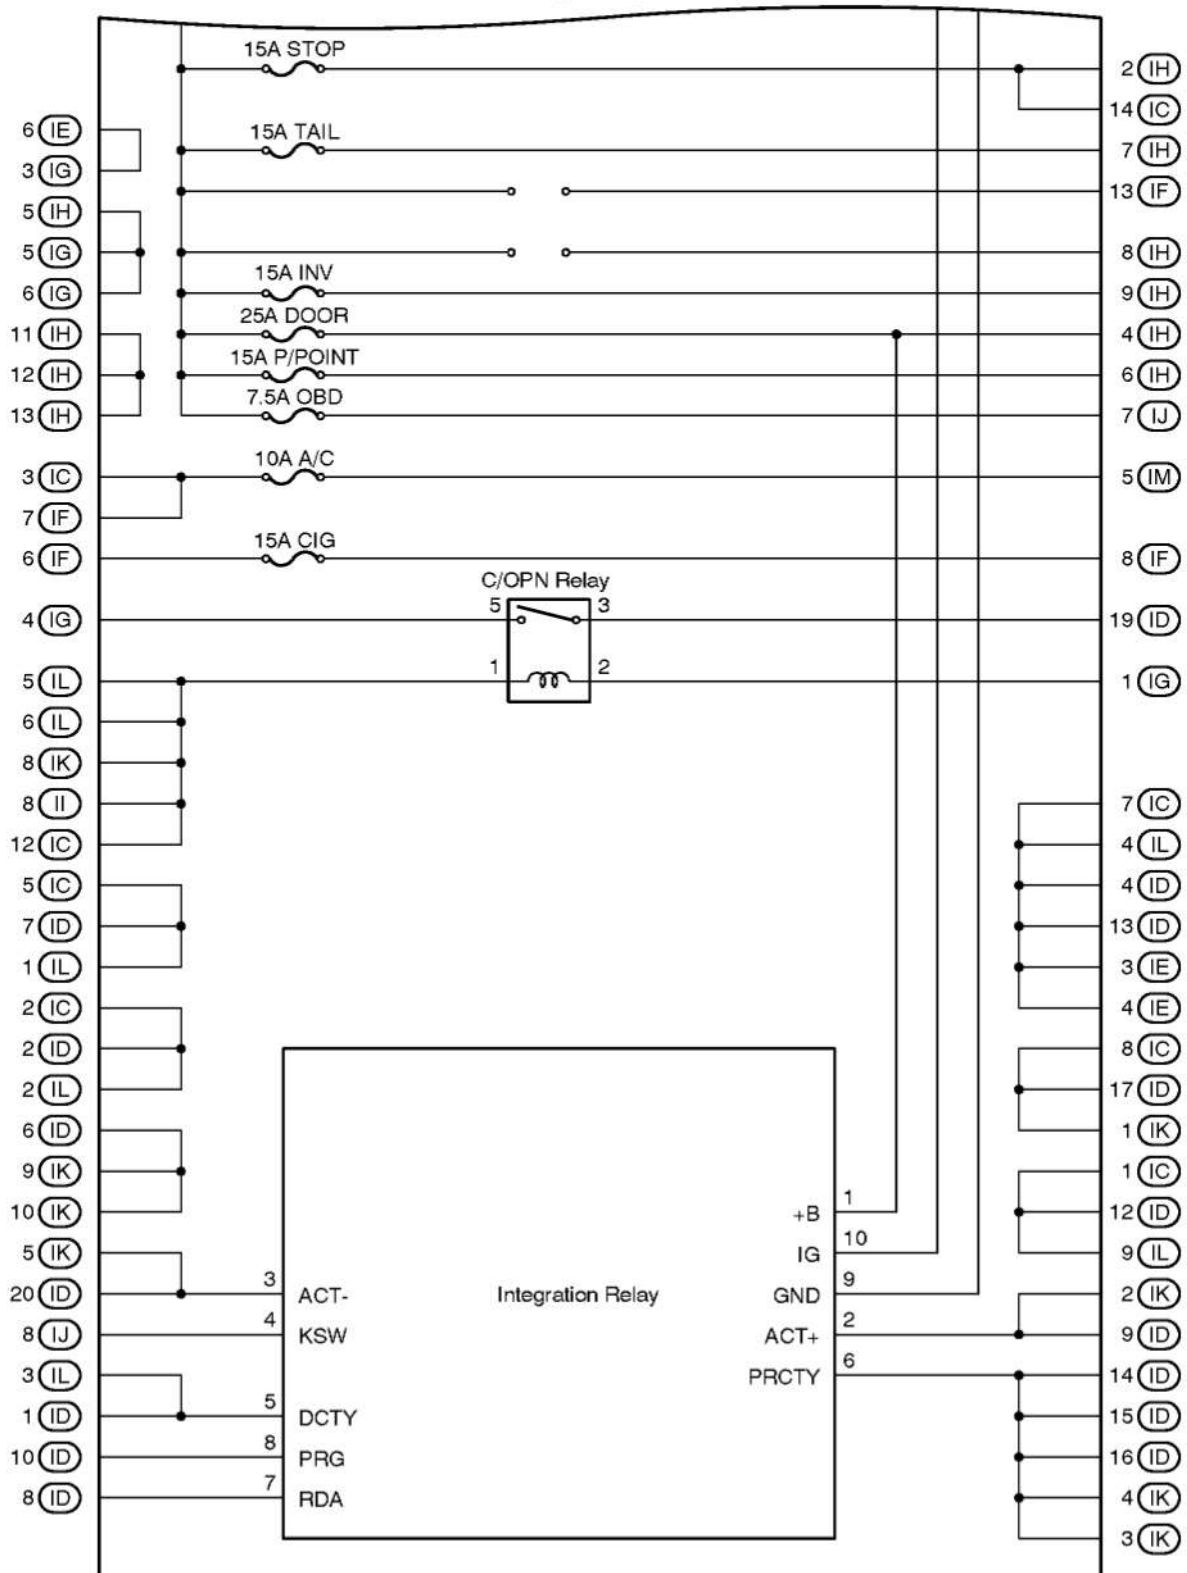

F RELAY LOCATIONS


③ : RH R/B	
○ : RH J/B	Right Side of the Instrument Panel Assembly (See Page 11)

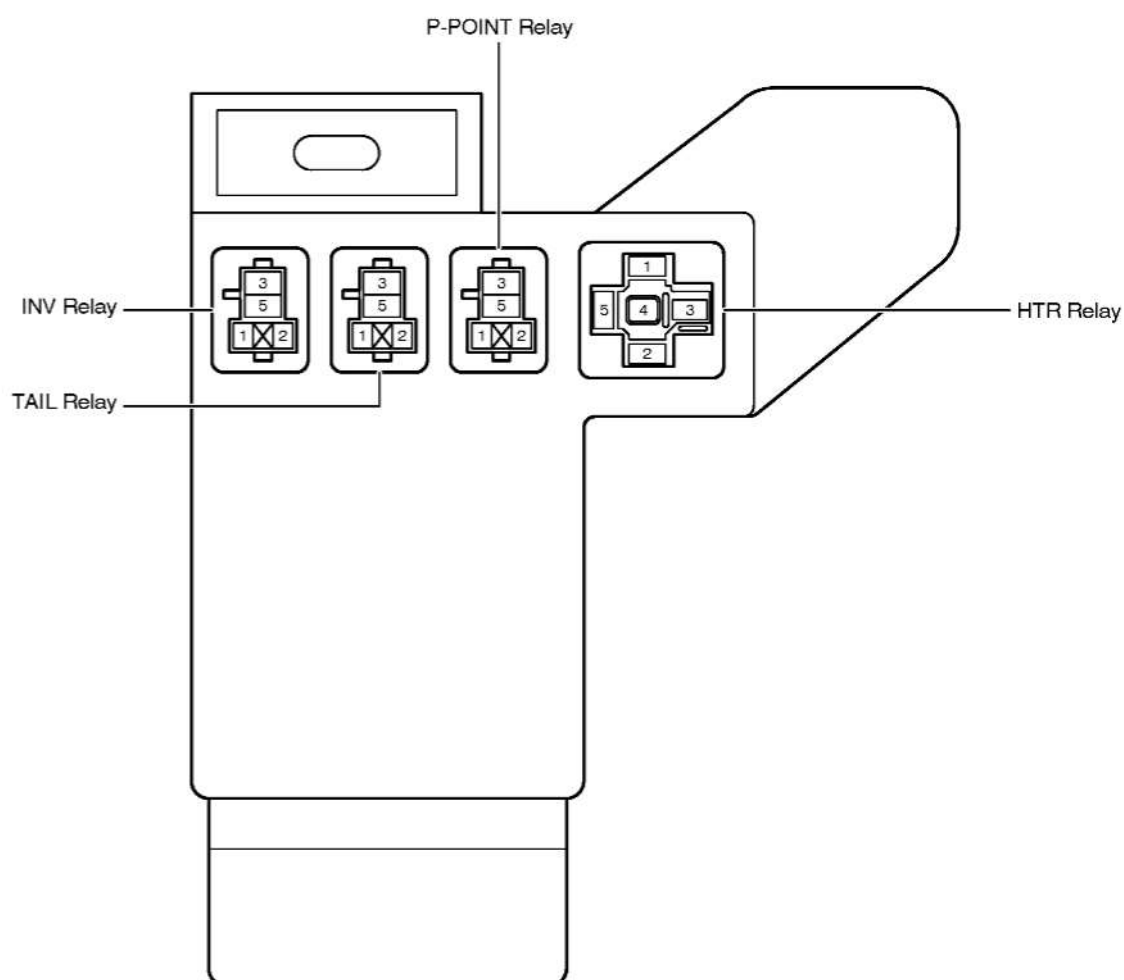

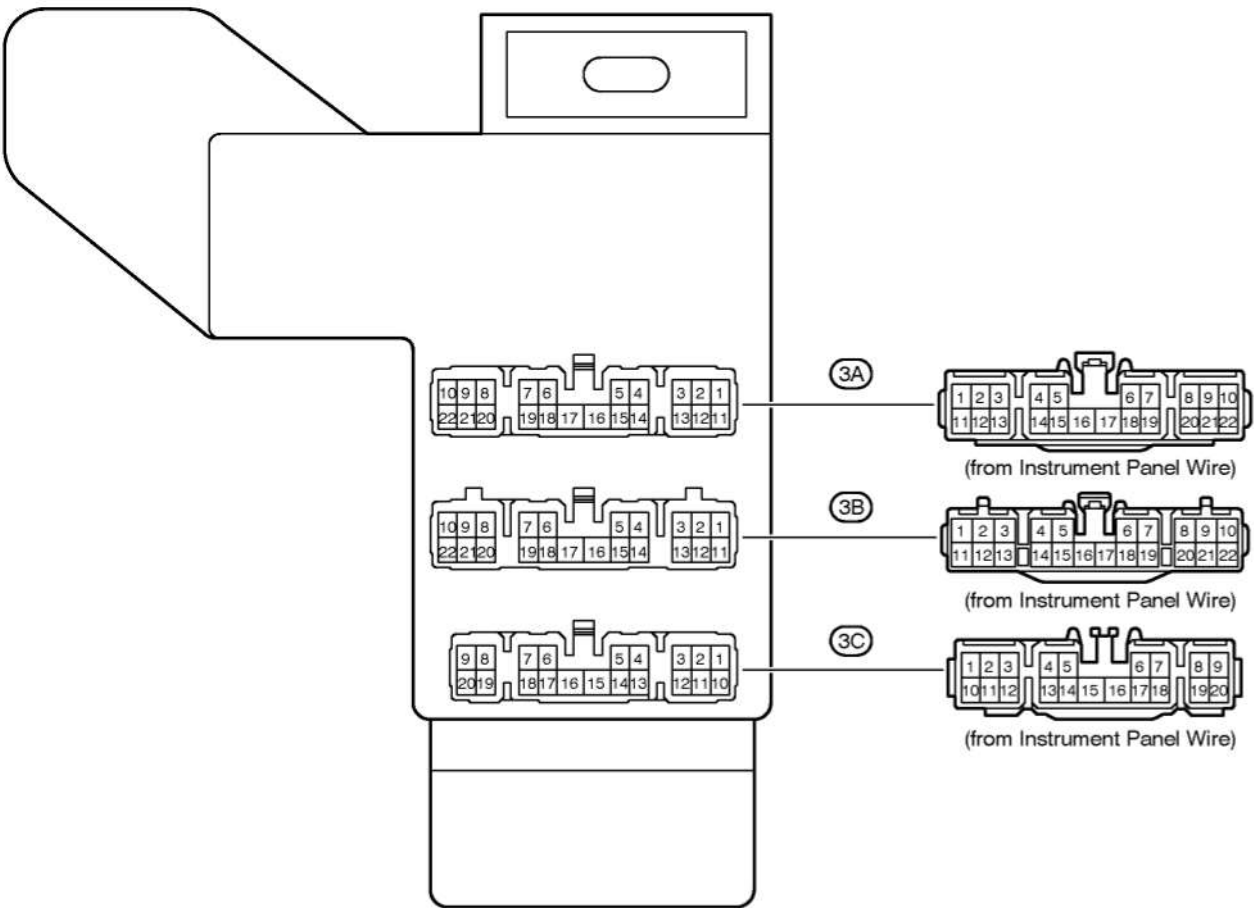

F RELAY LOCATIONS


[RH J/B Inner Circuit]

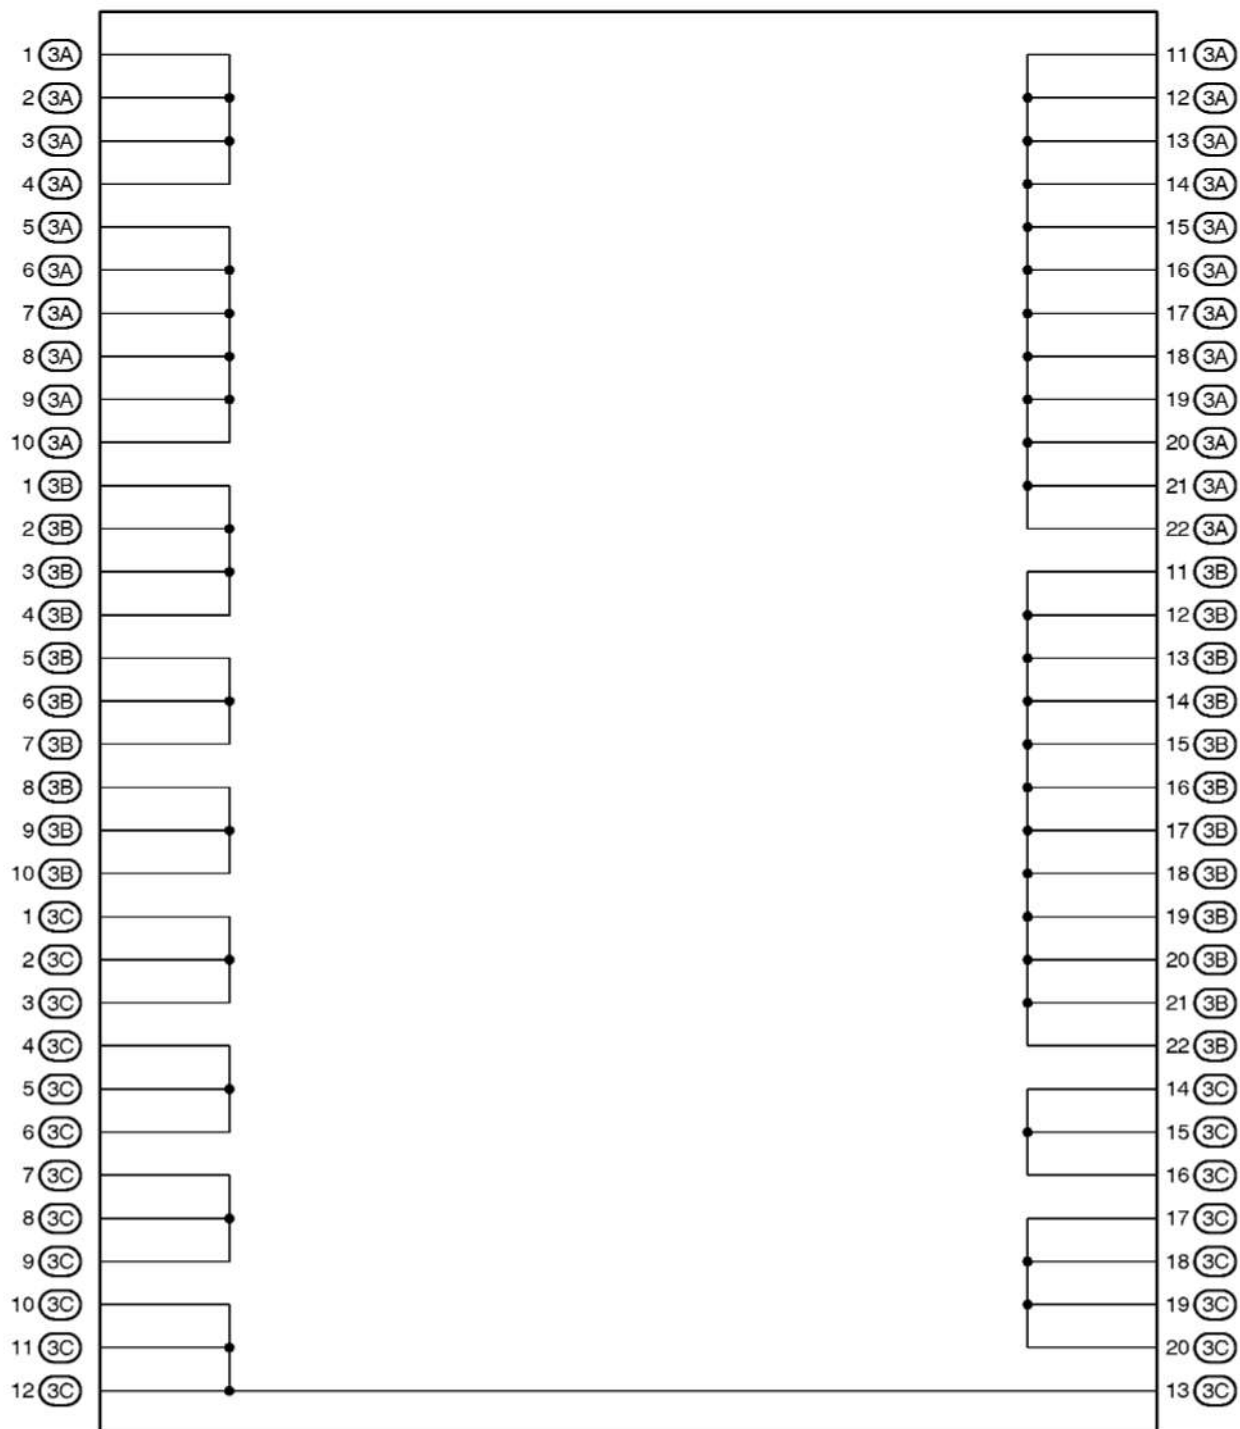

F RELAY LOCATIONS

○ : Center J/B

Relay/Control Panel (Relay)

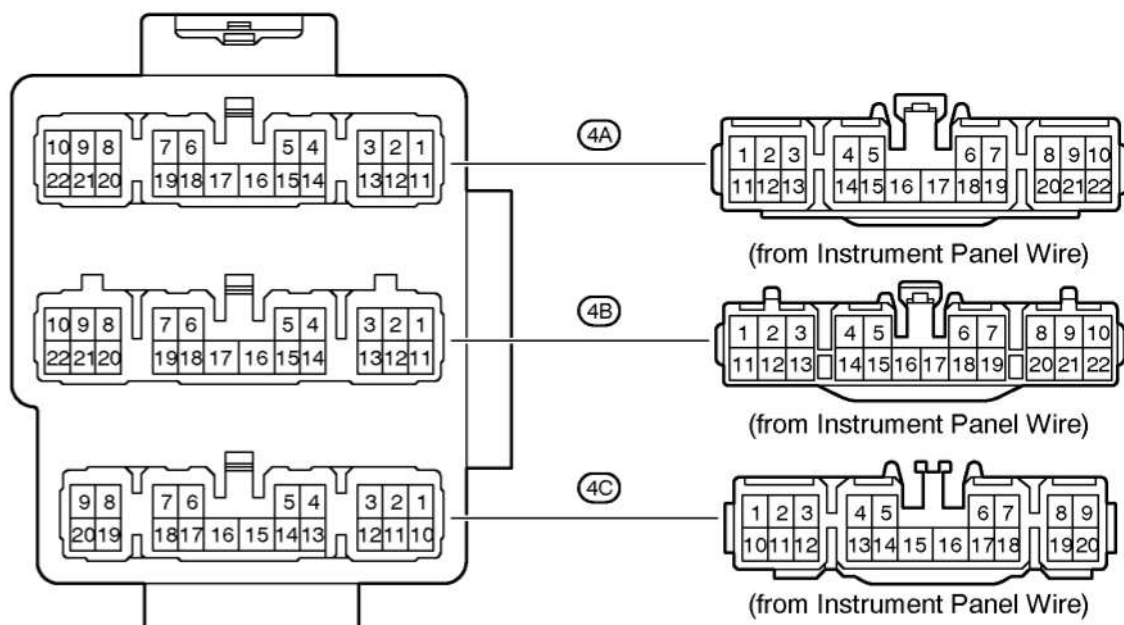

[Center J/B Inner Circuit]