

Citroën Jumpy (2007 – 2016) – fuse box diagram

Year of production: 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015, 2016

Location

The three fuse boxes are placed:

– in the fascia panel on the right-hand side (behind the storage compartment, retractable)

Tilt the storage compartment then pull it firmly to access the fuses.


– in the passenger compartment (battery compartment)

Unclip the battery compartment cover, remove the red battery terminal (+).

– under the bonnet

After opening the bonnet, slide the screenwash support to make access easier; unclip and tilt the box to access the fuses.

Dashboard fuse box

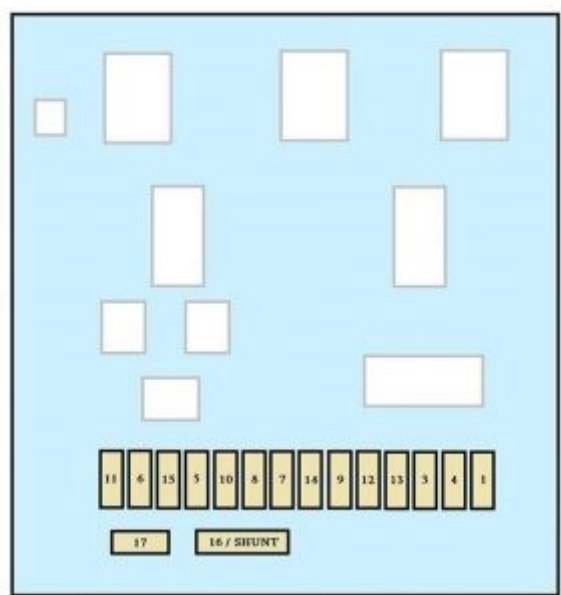


Citroen Jumpy – fuse box diagram – dashboard

Fuses	A	Protected component
1	15	Rear wiper
2	–	Free
3	5	Airbag control unit
4	10	Steering wheel angle sensor, Diagnostic socket, ESP sensor, Manual ventilation, Clutch switch, Headlamp beam height, Particle emission filter pump

5	30	Electric mirrors, Passenger electric window motor
6	30	Front electric windows supply
7	5	Courtesy lamps and glove box lamp
8	20	Multifunction screen, Anti-theft alarm siren, Audio equipment, Compact disc changer, Audio/telephone, Trailer fusebox (accessory), Coachbuilder/vehicle converter unit (platform cab)
9	10	Load space accessory socket
10	30	Rear ride height corrector, Steering wheel switching, Instrument panel
11	15	Diagnostic socket, Ignition switch
12	15	Hands-free kit, Airbag control unit, Parking sensors control unit
13	5	Engine fusebox, Trailer fusebox
14	15	Rain sensor, Digital air conditioning, Instrument panel
15	30	Locking/unlocking/deadlocking
16	–	Free
17	40	Heated rear screen, Heated mirrors
17	10	Heated mirrors only

Passenger compartment fuses

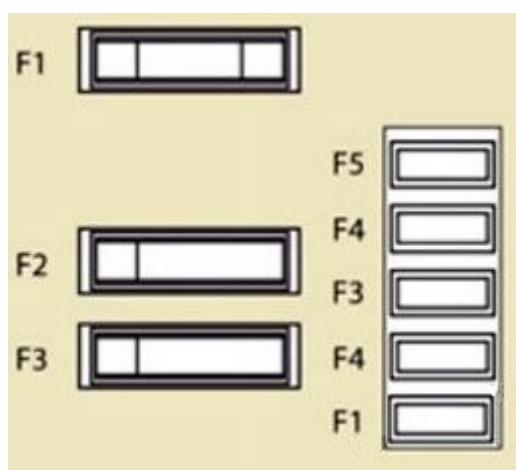


Citroen Jumpy – fuse box diagram – passenger compartment

Fuses	A	Protected component
1	30	Heated seats
2	20 /-	Battery state of charge unit/Free
3	40/50	Trailer fuse box (accessory) / Coachbuilder/vehicle modifier unit (platform cab)

4	–	Free
36	15	Hinged door locks
37	10	Hinged door locks
38	20	Hinged door rear wiper
39	–	Free
40	5	Folding door mirrors


Fuse box diagram (towing/towbar/coachbuilders/platform CAB fuses)

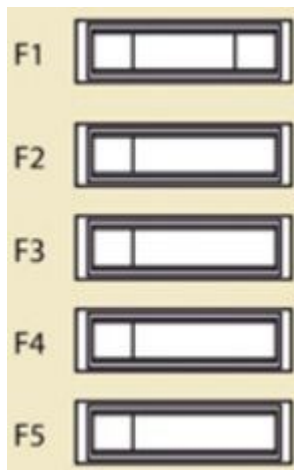

Citroen Jumpy – fuse box diagram – passenger compartment
(towing/towbar/coachbuilders/platform CAB fuses)

Fuses	A	Protected component
1	15	Free
2	15	Ignition relay and optional generator
3	15	Trailer 12V supply
4	15	Permanent supply for vehicle converters
5	10	Hazard warning lamps

Engine compartment fuse box

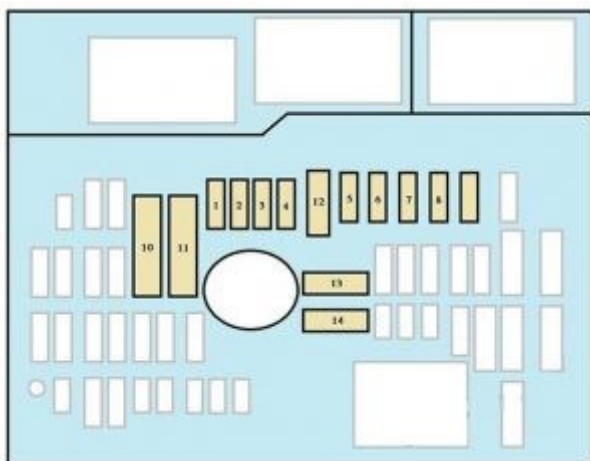

Citroen Jumpy – fuse box diagram – engine

compartment

Fuses	A	Protected component
1	20	Engine control unit, Fuel supply and air supply systems, Fan assembly
2	15	Horn
3	10	Front and rear screenwash pump
4	20	Headlamp wash pump
5	15	Fuel supply system
6	10	Power steering, Secondary brake pedal switch
7	10	Braking system (ABS/DSC)
8	20	Starter motor control
9	10	Main brake pedal switch
10	30	Fuel supply and air supply systems, Emissions control systems
11	40	Front ventilation
12	30	Windscreen wipers
13	40	Built-in systems interface
14	30	Free

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.