


Seat Belt Warning

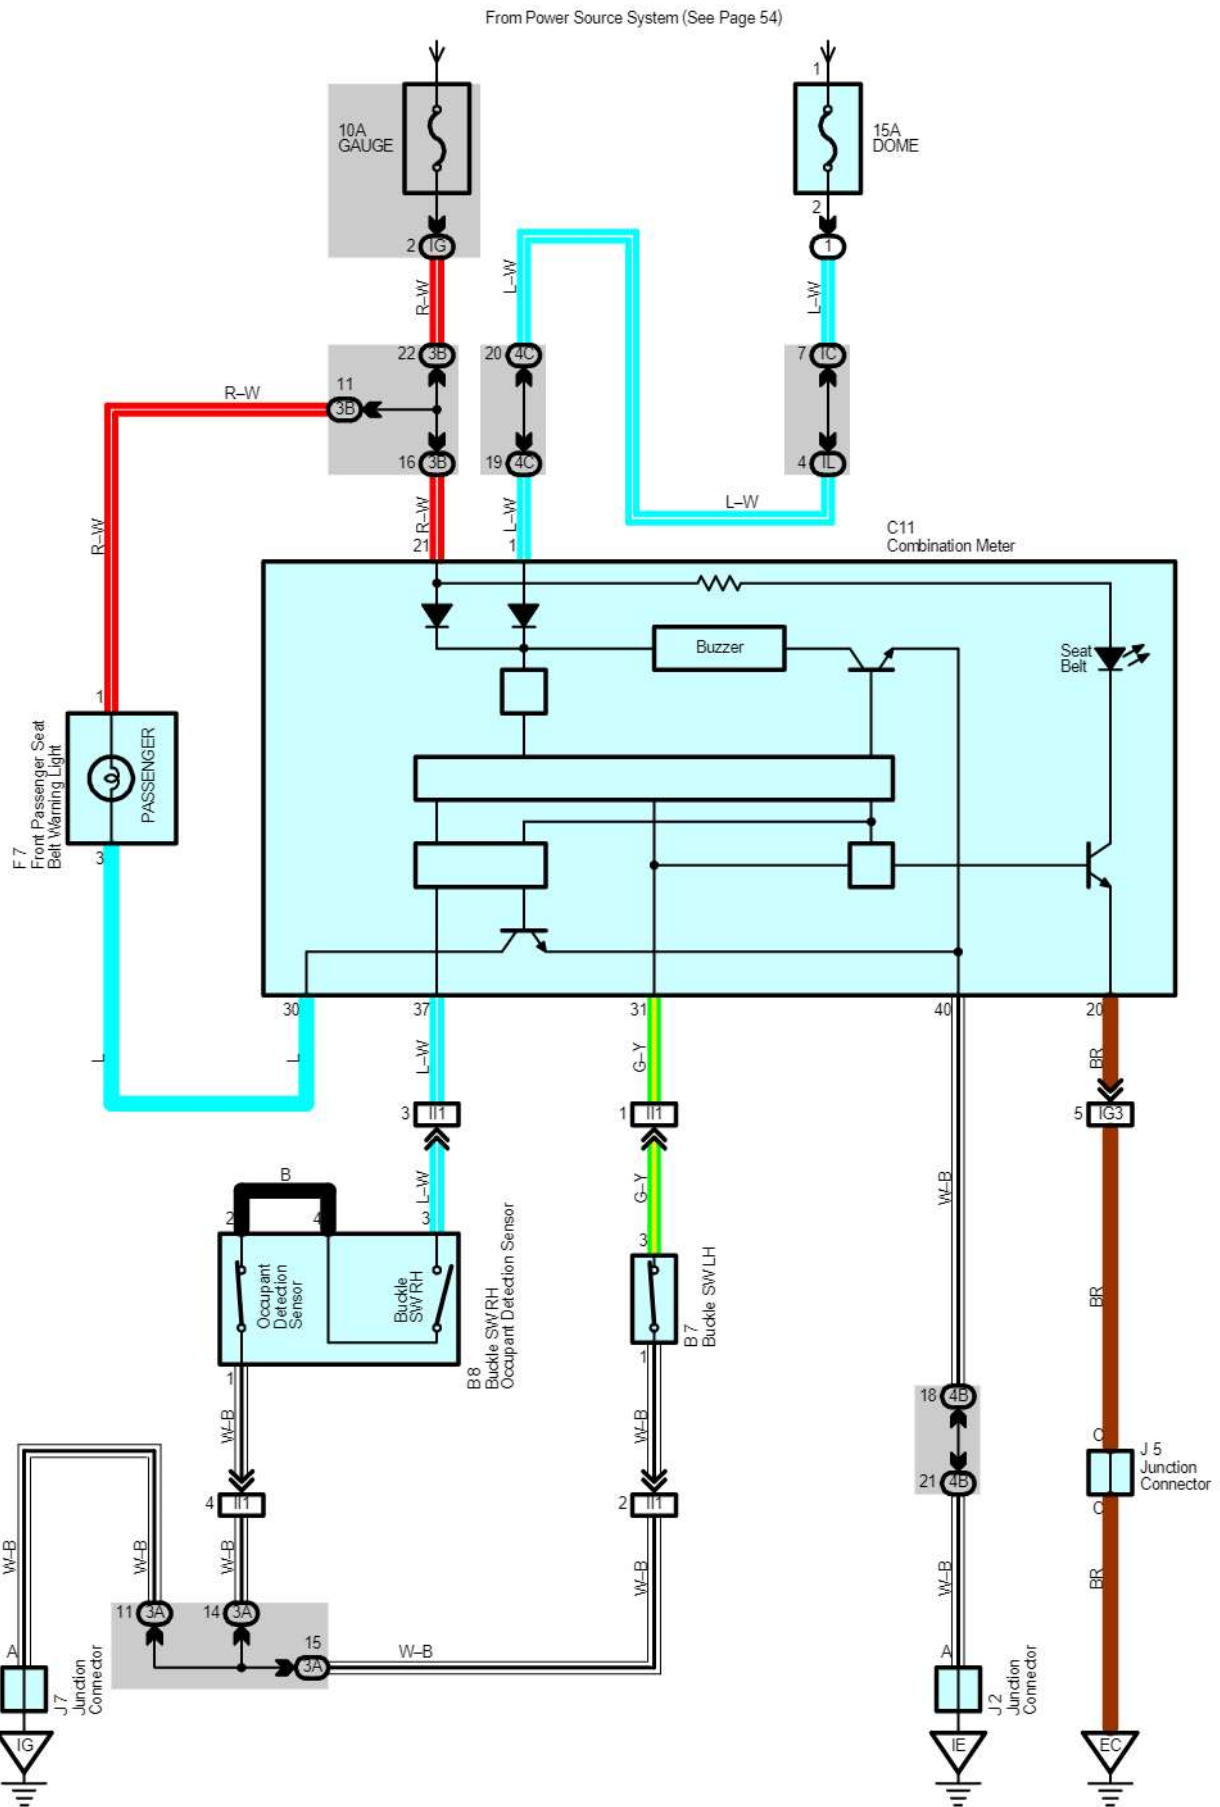

System Outline

Current is always applied from the DOME fuse to TERMINAL 1 of the combination meter. When the ignition SW is turned to ON position, the current from the GAUGE fuse flows to TERMINAL 21 of the combination meter and flows to TERMINAL 1 of the front passenger seat belt warning light.

Seat Belt Warning System

When the ignition SW turned on, a signal is input to the combination meter. To determine whether the driver has fastened the seat belt, a signal is input from the buckle SW LH to TERMINAL 31 of the combination meter. When the seat belt is not fastened, the seat belt warning light in the combination meter blinks, and emits a warning sound.

In addition, the front passenger is recognized by a sensor (Occupant detection sensor) is installed in the front passenger seat, and determines whether the seat belt is fastened. When not fastened, the signals from the occupant detection sensor is input to TERMINAL 37 of the combination meter, and the front passenger seat belt warning light blinks.

Service Hints

B7 Buckle SW LH

3-1 : Open with the driver's seat belt in use

C11 Combination Meter

1-Ground : Always approx. 12 volts

21-Ground : Approx. 12 volts with the ignition SW at ON position

20, 40-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B7	40	F7	39	J7	39
B8	40	J2	39		
C11	38	J5	39		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IL	24	
3A	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3B		
4B	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
4C		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG3	48	Engine Wire and Instrument Panel Wire (Blower Unit RH)
II1	48	Instrument Panel Wire and Instrument Panel No.3 Wire (Under the Instrument Panel Center)

▽ : Ground Points

Code	See Page	Ground Points Location
EC	42 (2ZZ-GE)	Left Side of the Cylinder Head
	44 (1ZZ-FE)	
IE	46	Behind Combination Meter
IG	46	Right Kick Panel